




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF U1422N0GB. You'll find the answers to all your questions on the NEFF U1422N0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF U1422N0GB
User guide NEFF U1422N0GB
Operating instructions NEFF U1422N0GB
Instructions for use NEFF U1422N0GB
Instruction manual NEFF U1422N0GB

**How to connect up,
build-in, set up, use and
look after your
U1422 oven**

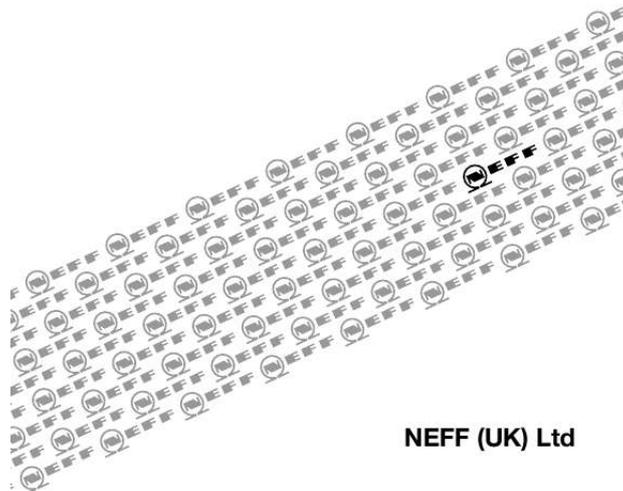

NEFF (UK) Ltd



[You're reading an excerpt. Click here to read official NEFF U1422N0GB user guide](http://yourpdfguides.com/dref/3549192)
<http://yourpdfguides.com/dref/3549192>

Manual abstract:

..... 3 Packaging and old appliances ..
... 3 Before installation ..
.....
..... 4 Safety information ...
.....
... 4 Reasons for damage
.....
... 5 Your new cooker
..... 6 The control panel ...
.....
.....
.. 6 Temperature selector main oven .. 6 Temperature selector mini oven .. 7 Function selector mini oven
.....
... 7 Press-down switches
... 7 Shelf positions ...
.....
..... 8 Accessories .
.....
.....
.. 9 Before using your Appliance for the first time ...
.....
.....
.. 10 Preliminary cleaning
.....
10 Initial burn-in
.....
... 10 Subsequent cleaning
.....
10 Time of day
.....
.... 10 Electronic clock
.....
.... 11 The control panel .
.....
.... 11 Minute timer
.....
.....
.. 11 Automatic timer
.....
..... 12 Special functions ..
.....
.....
... 13 Description of Oven Features 14 main oven ...
.....
.....
... 14 mini oven
.....
.....
..... 15 Switching the oven ON and OFF . 16 Inhaltsverzeichnis Baking main oven
.....
... 17 Cooking Tips and Helpful Hints ..
... 18 Roasting main oven
.....
.. 19 Grilling main oven
.... 21 Roasting mini oven .
.....
..... 21 Grilling mini oven

.....	22 Surface grilling . . .
.....
.....
....	22 Defrosting and Cooking
..	23 Defrosting with circotherm
	23 Cleaning and Care
.....
...	25 Important cleaning basics

.	25 Catalytic oven surfaces
.	27 AquaCleanse (Oven cleaning system)
.....
.	28 Removing/installing the oven door
.....
.....	30 Shelf supports
.....
.....
.....	31 Service and Repair information
.....	32 Trouble-shooting Guide

..... @@

35 Installation of the built-in oven . . . @@@@@The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

Please keep the operating and installation instructions in a safe place; this important documentation may also be of use to a possible subsequent owner. Packaging and old appliances Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environmentally friendly and can be recycled. Please make a contribution to protecting the environment by disposing of the packaging appropriately. Old appliances are not worthless rubbish.

Environmentally-conscious recycling can reclaim valuable raw materials. Before disposing of your old appliance, please make sure that it is unusable, or label it with a sticker stating „Caution, scrap". This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. Up-to-date information on how to dispose of your old appliance and the packaging from the new one can be obtained from your retailer or local authority. 3 Before installation Transport damage Check the appliance after unpacking it. Do not connect the appliance if it has been damaged in transport. The cooker may only be connected by an approved specialist. Losses resulting from damage caused by incorrect connection will invalidate warranty claims. This appliance is intended for domestic use only.

Only use the cooker for food preparation. Open the oven door carefully. Hot steam may escape. Never touch the internal surfaces of the oven or the heating elements. There is a risk of burning. Children must be kept at a safe distance from the appliance. Never store combustible items in the oven. Risk of fire. Never place flammable objects onto the hot plates. Fire hazard! Never place cables of electronic devices onto the hot plates.

Never clamp leads of electrical appliances in the hot oven door. The insulation on the leads could melt. There is a risk of short-circuiting. Remove all packaging remnants, e.g.

polystyrene parts, from the oven. Electrical connection Safety information Hot oven Repairs Incorrectly done repairs are dangerous. There is a risk of electrocution. Repairs may only be carried out by after-sales service technicians who have been fully trained by BSH. If there is a fault, switch off the oven fuse at the fuse box.

Call the after-sales service. 4 Reasons for damage Baking tray, aluminium foil or dishes on the oven floor Do not place the baking tray on the oven floor. Do not cover it with aluminium foil. Do not place dishes on the oven floor. This will cause heat accumulation. The baking and roasting times will no longer be correct and the enamel will be damaged. To avoid damage, insert slide-in accessories carefully. If using hot air functions, do not place greaseproof paper loosely in the oven (e.g. when heating the oven).

The hot-air fan could draw in the paper which may damage the heater and fan. Never pour water directly into a hot oven. This could damage the enamel. When baking very moist fruit cakes, do not put too much on the baking sheet. Fruit juice dripping from the baking sheet leaves stains that cannot be removed. It is recommended that you use the deeper universal pan. Only leave the oven to cool with the door closed. Do not allow anything to become trapped in the oven door. Even if you only leave the oven door open slightly, the fronts of adjacent units may become damaged over time. If the oven seal is very dirty, the oven door will no longer close properly when the oven is in use.

The fronts of adjacent units could be damaged. Keep the oven seal clean. Do not stand or sit on the oven door. Do not use high-pressure cleaners or steam jets. Slide-in accessories Baking paper Water in the oven Fruit juice Cooling with the oven door Very dirty oven seal Using the oven door as a seat Care and cleaning 5 Your new cooker Here you will learn more about your new oven.

The control panel and its switches and indicators are explained here. The heating modes and the accessories included with your oven will be explained here. The control panel Main oven Electronic timer controls Mini oven Temperature selector with control lamp Function selector Temperature selector with control lamp Main oven (circotherm) Temperature selector Settings \$ 50 200 e d Oven light Circotherm temperature in °C. Defrost AquaCleanse (Oven cleaning system) 6 Mini oven Temperature selector Settings 50 275 Temperature in °C. Function selector Use the function selector to select the type of heating for the oven.

Settings \$ / () Oven light Top/bottom heat (conventional heating system) Large area grill Small area grill Press-down switches To engage and disengage, depress the switch, making sure that it is in OFF position. 7 Shelf positions Mini oven Your oven features 2 shelf positions. The shelf positions are counted from bottom to top. The numbers are marked in the oven. Main oven Your oven features 4 shelf positions.

[You're reading an excerpt. Click here to read official NEFF U1422N0GB user guide](#)



<http://yourpdfguides.com/dref/3549192>

The shelf positions are counted from bottom to top. The numbers are marked in the oven. When using hot air function, do not use shelf position »2«, in order not to block air circulation. 8 Accessories Universal pan with wire shelf Your appliance is supplied with: 3 Wire shelves Additional accessories can be obtained from a specialist dealer. Before ordering, please check the Neff sales literature to confirm which of the following items are available in the UK: Universal pan Universal pan, non-stick Glass pan Soufflé pan Baking tray, aluminium Baking tray, enamelled Baking tray, non-stick Pizza tray Wire shelf, high/low Wire shelf, close mesh Upgrade set Clou, 3 pieces for main oven Upgrade set Clou, 4 pieces for main oven Pizza stone Universal oval roaster enamelled Note: Order no.

Z 1232 X0 Z 1233 X0 Z 1262 X0 Z 1272 X0 Z 1332 X0 Z 1342 X0 Z 1343 X0 Z 1352 X0 Z 1432 X0 Z 1442 X0 Z 1742 X0 Z 1752 X0 Z 1912 X0 Z 9930 X0 The baking tray or universal pan may distort while the oven is operating. This is caused by major temperature differences on the utensil. These differences may occur if only one part of the utensil was covered or if deep-frozen food, e.g. pizza, was placed on the utensil. The distortion will subside again during baking, roasting or grilling. 9 Before using your appliance for the first time Preliminary cleaning Take the accessories out of the oven. Remove all packaging remnants, e.g. polystyrene parts, from the oven.

1. Clean the appliance exterior with a soft moistened cloth. 2. Remove the shelf supports from the oven. 3.

Clean the oven and the accessories with a hot detergent solution. Please observe the operating instructions furnished with the hob. Initial burn-in Before using the appliance for the first time, you must set the time on the electronic clock. Preheat the empty oven for about 30 minutes. Select heat for the main and mini oven at a setting of 190 °C.

Subsequent cleaning Time of day Setting the time Clean the oven with a hot detergent solution. Install the shelf supports. After connecting to the mains, or after a power failure, the display 0:00 will blink. Press the > button and set the current time with the rotary knob (e.g. 15:00 hours). To correct the time, press the symbol flashes. Then set the time. > button until the Note: The time cannot be corrected if an automatic function has been set (see Electronic clock for cancelling automatic function). 10 Electronic clock The electronic clock can be operated with one hand; after pressing the button, set the time with the rotary knob.

Settings can be made for as long as the function display flashes (~4 seconds). The control panel Minute timer Function selector Time of day Rotary knob To engage and disengage, depress gently OFF time Set cooking time Minute timer 1. Press the > button and set the cooking time (e.g. 5 minutes). When the timer switches on, the remaining time is displayed. 2. When the time has elapsed, a signal is emitted and the press the ,symbol flashes. To stop the signal, > button.

11 Automatic timer for the main oven Automatic switch off You can switch the oven on and off via the electronic clock.

If you wish to bake or roast food immediately, it is only necessary to set the cooking time. 1. Select the heating system and the oven temperature. 2. Press the > button until the ? symbol flashes and set the cooking time with the rotary knob (example: 1 hour and 30 minutes).

When the setting has been made, the current time is displayed after approx. 4 seconds. The ? symbol signals automatic mode. 3. When the time has elapsed (example: 1 hour and 30 minutes), a signal is emitted and the ! display flashes.

The oven switches off automatically. To stop the signal, press the > button. 4. Switch the oven off. 5. To end automatic mode, press the > button again. Automatic switch on and switch off If the food is to be baked or roasted later on, both the cooking time and OFF time must be set. 1. Select the heating system and the oven temperature. 2.

Press the > button until the ? symbol flashes and set the cooking time with the rotary knob (example: 1 hour and 30 minutes). 3. Press the > button until the ! symbol flashes and set the OFF time with the rotary knob (example: 12:30). When the setting has been made, the current time is displayed after approx. 4 seconds. The ! symbol signals automatic mode. 12 4. The oven is automatically switched on and off at the preset times (e.g. 11:00 and 12:30).

5. When the time has elapsed, a signal is emitted and the ! symbol flashes. To stop the signal, press the > button. 6. Switch the oven off.

7. To end automatic mode, press the > button. Checking, correcting and cancelling settings 1. To check your settings, press thilled automatically. The oven temperature control lamp illuminates when the oven is first switched on, and extinguishes when the required temperature has been reached.

Switching the oven OFF: To switch the oven OFF, turn both the temperature selector and functions selector to the »0« position. Notes: The appliance features a cooling fan which runs until the oven has cooled down. 16 Baking main oven Using baking tins Always place baking tins in the centre of the baking wire shelf. We recommend dark metallic baking tins. Notes Light coloured baking tins made from thin-wall materials lead to longer baking times and uneven browning of the cake. You can influence the degree of browning by changing the temperature setting. If a cake collapses after removing it from the oven, consider using a longer baking time, or use a slightly lower temperature setting. Using tinplate baking tins Shelf position 1 If the cake bottom gets too dark: Check the shelf position. Shorten the baking time, and possibly use a lower baking temperature. If the cake bottom stays too light: Check the shelf position.

Increase the baking time, select a lower temperature, or use a dark metal baking tin. Do not place baking forms or high cakes too close to the rear oven wall. 17 Cooking Tips and Helpful Hints The bottom of a cake baked on a baking sheet stays too light The bottom of a cake baked in a tin stays too light The bottom of cake or cookies gets too dark The cake gets too dry The cake is too moist on the inside Remove from the oven all baking sheets or universal pan currently not in use. Use a wire shelf and not a baking sheet to support the cake tin during baking. Set cake or cookies into a higher set of shelf position. Select a slightly higher oven temperature, and shorter baking time. Choose a slightly lower baking temperature. Note: Higher temperatures do not shorten baking times (done on the outside, raw on the inside). Choose a slightly longer baking time, allow the dough to rise slightly longer. Add less liquid to the dough.

When baked with circotherm, Avoid blocking the air vents at the rear wall of the cake baked in round or oven cavity with the cake tins.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3549192)

[U1422N0GB user guide](http://yourpdfguides.com/dref/3549192)

<http://yourpdfguides.com/dref/3549192>

square tins gets too dark at the rear Very moist cake dough (e.g. fruit cake) causes a lot of steam to generate in the oven that condenses on the oven door. Very uneven browning when using circotherm Cake collapses when taken out of the oven To save energy You can let the steam escape from the oven and thereby reduce the forming of water droplets by briefly and carefully opening the oven door (once or twice, in case of longer baking times more often). Check the shelf position. Use less liquid. Preheat only if expressly required by the recipe. Dark baking tins have a higher degree of heat absorption. Residual

heat: In the case of longer baking times, you can switch off the oven 5-10 minutes before the full baking time has elapsed.

18 Roasting main oven Place the wire shelf into the universal pan and slide them together into the same shelf position. Meat can be roasted in the oven in a particularly economical fashion if the weight of the cut exceeds 750 grams. Roasting in an uncovered pot Rinse the universal pan and/or the roaster with water, and place the meat into it. With fat meat and poultry, pour 125 to 250 ml of water (to suit the size and kind of roast) into the universal pan. At your discretion, baste lean meat with fat, or cover it with bacon strips. The roast drippings collecting in the universal pan make a tasty gravy. Dissolve the drippings with hot water, bring to a boil, thicken with corn starch, season to taste and, if required, pass it through a strainer. No preheating is required. Save energy by putting the roast into the oven while it is still cold. Roasting in a covered pot Place the meat into the roasting pot (or Dutch oven), cover it with a matching lid, and place it on the wire shelf in the oven.

We recommend that beef roast be prepared in a covered roasting pot. 19 Tips Big, high roasts, goose, turkey, duck = Long roasting times, low temperatures Medium sized, low roasts = Medium roasting times, medium temperatures Small, flat roasts = Short roasting times, high temperatures Roasting time per cm of meat height without bones app. 13-15 minutes Roasting time per cm of meat height with bones app. 15-18 minutes We recommend using the lower of the stated temperatures first. In general, the lower temperature ensures a more even browning. We recommend turning the roast after half or two thirds of the roasting time have elapsed. For roasting, use only cookware with oven-proof handles. Prepare large roast directly in the universal pan, without using the wire shelf. Smaller cuts of meat can be roasted on aluminium foil. To do so, bend the edges of the foil upward, as if to form a dish, and place it on the wire shelf.

After the end of the selected roasting time and with the oven switched OFF, leave the roast in the closed oven for approx. 10 minutes. The roast is not done on the inside Use a lower roasting temperature. Note: Higher temperatures do not shorten roasting times (done on the outside, raw on the inside). Choose slightly longer roasting times.

You can let the steam escape from the oven and thereby reduce the forming of water droplets by briefly and carefully opening the oven door (once or twice, in case of longer roasting times more often). Very moist roasts (e.g. roasts prepared with water) cause a lot of steam to generate in the oven that condenses on the oven door. 20 Grilling main oven Circotherm grilling Use this method for small cuts of meat steaks, chops, sausages, bacon, chicken joints and fish. Use the shelf and roasting pan together. Season meat as required. Place on shelf. Do not turn food over the hot air will circulate around the food cooking all sides. Use a temperature of 180/190 °C. Roasting mini oven Roasting with conventional heat Follow the steps above. With fatty meat 125 250 ml (4 8floz) of water can be poured into the roasting pan. Baste the meat if desired. Place in a cold oven to save energy or pre-heat if desired. Casseroling or pot-roasting in a covered dish Some meats should be prepared in liquid in a covered casserole.

This type of cooking is suitable for less tender cuts of meat. Place the casserole on the wire shelf at a suitable shelf position. Cooking tips Only use ovenproof cookware. Extra large turkeys and joints can be placed directly in the roasting pan and not on the wire shelf. Cover large turkeys with foil during cooking. @@Always keep children at a safe distance. Notes on grilling Always close the oven door when grilling. The grilling temperatures are variable. Always use the wire shelf and the universal pan. Always place food to be grilled in the centre of the wire shelf.

@@The radiator will be reactivated after a short period of time. @@Always use the wire shelf and universal pan together. Turn the food after approx. two-thirds of the grilling time has elapsed. @@@@Use only approximately half of the liquid specified in the recipe.

Use fat only for adding flavour. @@Higher defrosting temperatures may cause the food to dry out. @@@@Cover the pot and defrost at 130 140° C.

Attention: Pot handles must be oven-proof. Defrost and warm up deep-frozen baked goods at 100 140° C.

@@@@@@@@Turn the function selector switch to the eposition. @@@@Cleaning products we particularly recommend can be purchased from our customer service. Appliance exterior Stainless steel/ aluminium front Use commercially available detergents applied to a soft, moistened cloth or a chamois. Do not use aggressive cleaning agents, abrasive sponges, or coarse cleaning cloths. On heavy soiling use commercial cleaning agents on matted stainless steel/aluminium surfaces. Please observe the manufacturer's instructions. Enamel and glass Oven door pane Use commercially available detergents applied to a soft, moistened cloth or a chamois. The temperature of the pane inside the oven door is reduced by a heat-reflecting coating. The reduced temperature ensures that visibility through the oven door window is not impaired. When the oven door is open, this coating may have a bright appearance.

This is quite normal and does not indicate a quality defect. Oven interior Clean the oven after each use, especially after roasting or grilling. Food remnants burn in when the oven is reheated. The baked in remnants are very difficult to remove once burnt in. 25 Note: To prevent soiling use: · the universal pan to bake very moist cakes. · suitable utensils (frying pan) for frying. For easier cleaning you can switch on the oven lamp and take off the oven door. For cleaning the mating surface of the oven door at the front of the oven, the door should be removed. Enamel areas in the oven Use hot soapy water or a vinegar solution.

It is best to use oven cleaner if the oven is very dirty.

Only use oven cleaner in a cold oven. We recommend cleaning gels because these can be applied with greater precision. Do not clean the warm oven with any of the cleaning products specifically designed for this purpose.



[You're reading an excerpt. Click here to read official NEFF](#)

[U1422N0GB user guide](#)

<http://yourpdfguides.com/dref/3549192>

Leave the oven open so that it can dry after cleaning. Note: Enamel is baked on at very high temperatures.

This can cause some slight colour variation. This is normal and does not affect the function. Do not use coarse scouring pads or strong cleaning agents to remove such discolorations. The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough.

Anti-corrosion protection is guaranteed. 26 Catalytic oven surfaces Cleaning the catalytic surfaces of the oven The rear wall of the oven and the oven ceiling is coated with self-cleaning enamel. The surface cleans itself while the oven is in operation. Large splashes sometimes only disappear after the oven has been used several times. Never use oven cleaner on the back wall of the oven. Should the enamel become slightly stained, this will not affect its self-cleaning properties. 27 AquaCleanse main oven d The oven cleaning function featured in your oven is intended to help you keep your oven neat and tidy. An amount of cleaning solution is vaporised automatically. The combined effects of heat and steam soften the soil deposits on the oven wall enamel and facilitate their removal. Caution: Never pour cold water into the oven while it is still hot.

The cleaning system can only be activated when the oven has cooled down completely (room temperature). Use normal water only, and no distilled water.

Activate oven cleaning: 1. Remove the baking sheet and the universal ^ pan from the oven. The wire shelf may remain in the oven. 2. Pour approx. 400 ml of water mixed with a little dish washing liquid detergent into the floor pan of the oven cavity. In the case of heavy soil build-up, you may wish to allow the cleaning solution to soak in for a while before you activate the cleaning function. 3.

Close the oven door. 4. Turn the function selector to the d position. The oven cleaning and the oven temperature control lamp are illuminated. After the initial heating time (approx.

4 minutes) the oven temperature control lamp extinguishes. After a further 17 minutes the program cycle is completed. A buzzer sounds. Switching the oven OFF: Turn the function selector to the 0 position. The oven cleaning control lamp extinguishes.

28 After deactivating the oven cleaning function Cleaning tips: Never leave the residual water in the oven for any length of time, e.g. overnight. 1. Open the oven door and pick up the remaining water with a large absorbent sponge cloth. 2. Using the detergent-soaked sponge cloth, a soft brush or a plastic pot scrubber, wipe of the oven interior. Stubborn soil remnants can be removed with a cleaning scraper for glass-ceramic. Caution: Use the scraper carefully, and do not apply the tool at too flat an angle, because the enamel could be scratched! 3. Calciferous deposits may be removed with a cloth soaked in vinegar.

4. Wipe clean with clear water and dry with a soft cloth (do not forget to wipe under the oven door seal). Cleaning tips: If the oven is heavily soiled, the procedure may be repeated after the oven has cooled. If the oven is heavily soiled with grease, e.g. after roasting or grilling, we would recommend rubbing any stubborn dirt with detergent before activating the oven cleaning function. After cleaning, leave the oven door in its slanted detent position, i.e., at a 30-degree angle, to allow the interior enamel surfaces to dry thoroughly. Rapid drying 1.

Place the oven door into the slanted detent position, at an angle of approximately 30 degrees. 2. Turn the function selector to the 50° C. Allow oven to heat for 5 minutes. 3.

Afterwards return the function selector and the temperature selector to the »0« position. 29 Removing/installing the oven door Oven door Note: To make the manual cleaning steps following the automatic oven cleaning function more convenient, the appliance features the following options. Removing the oven door 1. Fully open the oven door. 2.

Move the catch levers on the right and left-hand sides to the fully open position. 3. Placing the door at an upward angle toward you, grasp the door with both hands and lift it out of the hinges toward you. When pulling the door out, make sure that you do not reach into the hinge. There is a risk of injury. Hanging the oven door 1. Set both hinges into their respective receptacles on the left and right, and swing the oven door downward. 2. Close the catch levers on the left and right. 3.

Close the oven door. 30 Shelf supports Removing You can remove the shelf supports for cleaning. 1. At the front, press the shelf support up and detach the front clip. 2. At the back, pull the shelf support forward and take it off. Clean the shelf support using washing-up liquid and pan scrapers or brushes.

Replacing The shelf supports fit on the left and right side. When installing the shelf supports, do not twist them, otherwise the shelf positions for the accessories will not correspond. For the main oven: The indentation (a) must always be at the bottom.

For the mini oven: The extension (a) must always be at the top. 1. At the back, put the shelf support in as far as it goes. 2. Press the shelf support backwards until it clicks into place in the front.

31 Service and Repair Information In the event of problems or repairs that you cannot solve or perform yourself, our customer service will be happy to help.

Check the customer service directory for a customer service facility in your area. Caution: Calling the customer service because of an operator error can be very costly! E No and FD No You can find this information on the appliance's nameplate. The nameplate is located on the appliance, behind the oven door, on the left bottom edge of the oven. In the event of a customer service request, please have the following information handy: E-Number Replacing the oven light FD Caution: Unplug the appliance or remove the fuse! By actuating the miniature circuit-breaker or by unscrewing the fuses in the fuse box in your house.

1. To prevent damage, place a towel into the cold oven. 2. Unscrew the lamp cover by turning it counter-clockwise. 3. Replace the lamp. Type: Incandescent bulb E 14, 220 240 V, 40 W, heat-resistant to 300° C You may obtain this bulb from your customer service or from your appliance dealer. Replacing the oven door seat Remove the defective oven door seal by simply unhooking it. You may obtain the new oven door seal from your customer service. 32 Trouble-shooting Guide Calling the customer service is not always really necessary.

In some cases, you can remedy the situation yourself. The following table may contain some helpful tips. Important general safety guidelines: Service or repair work on the electronic components may only be performed by a qualified expert. Without exception, prior to starting such repairs, the appliance must be disconnected from the mains. This may be accomplished by tripping the automatic fuse or by removing the fuse from the fuse box that controls your flat or apartment.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3549192)

[U1422N0GB user guide](http://yourpdfguides.com/dref/3549192)

<http://yourpdfguides.com/dref/3549192>

Problem Possible cause Remedy Check the fuse in the fuse box, and replace if required. . . . if there is a general failure of Defective fuse all electrical functions, i. e., the control lamps have suddenly ceased to function. . . .

if liquids or thin viscous dough are distributed at a visibly uneven thickness? . . . if the oven suddenly stop functioning? The appliance has not been placed or installed plumb-and-level. The electronic clock is set to an automatic timing cycle.

The power supply was briefly interrupted. Energy pulses (e.g. lightning flash). Level the appliance using the leveling feet, or check the installation. Set electronic clock to operation without automatic timer: 1. Press the : button. 2. Reset ON time ? to 0:00. Reset the time of day.

. . . if the oven suddenly stop functioning and the electronic clock flashes 0:00? . . . if electronically control functions fail? . . . if the oven cleaning control lamp fails to illuminate after the function has been activated? Reset the relevant functions.

Temperature inside oven Prior to using the oven cleaning cavity is still too high, i.e. function, the oven must be allowed to after prolonged use of cool completely. the hotplates. Defective control lamp.

Replacement only by an authorised expert. 33 Problem Possible cause Remedy . . . if smoke is generated during Roasting temperature roasting or grilling? to high.

Wire shelf or universal pan slid in incorrectly. . . . if enamelled slide-in parts show mat bright stains? . . . if the glass pane or window of the oven door become clouded? Normal occurrence due to dripping meat juices. Normal occurrence, due to existing temperature difference. Place wire shelf into universal pan and insert together in shelf position.

Not available. Switch on the oven for app. 5 minutes at 100° C. . . . @@@e.g. @@(fruit) or roasts. .

. . if the panes of the oven Normal soiling. door are dirty on the inside after some time of use? @@@@Press in the retaining clip with your thumb on one side and disengage the inner door glass e.g.

with the spatula, then repeat on the other side. Installation after cleaning: Insert inner door glass into the holder. First engage the right side and then the other side. Hang door glass and press down next to the hinges until it clicks into place. 34 Assembly Instructions For the installer and kitchen expert!

Important installation notes Properly dispose of packaging materials.

Do not use oven door handle for transporting or handling the unit during installation. WARNING: Connection and first start of the appliance may only be performed by an authorised specialist. Connection have to be made using a mains connection cable not lighter than H05RR-F 300 V / 500 V Rubber Flexible Cable or H05VV-F 300V / 500V PVC Flexible Cable. Rated consumption, rated voltage and type no. of the appliance: See appliance nameplate behind the oven door to the left beneath the side edge of the oven. The unit's nameplate is located at on the sidewall of the unit. Electrical safety of the appliance can be ensured only if the equipment earth in the building installation has been installed according to regulations. A separator must be installed in the household circuit. A suitable separator is a switch that has a contact gap of more than 3 mm and interrupts all poles. Other examples are LS switches, fuses and contactors.

In the case of repairs interrupt all power connections to the unit. The properly installed appliance must be covered on all sides in such a fashion that not even components with rough insulation are exposed to the touch. The cover must be removable with tools only. The connection diagramm is located on the rear panel of the appliance. 220-240V ~ L N 35 Installation of the built-in oven Push the oven into the cabinet aperature and align the unit until it is in a level position. Open the oven door and, using one screw on each side, fasten the built-in oven to the side strips of the conversion cabinet. When screwing in the two screws (enclosed in a bag with the built-in oven), ensure that they are pointing outwards at a slight angle. Please use these screws only. Verify that the built-in oven is positioned securely and in a level position, and that the required installation dimensions have been maintained. In units featuring AquaCleanse, after filling 0,4 l of cleaning solution into the recess in the oven floor, the liquid must not spill toward the front.

Furniture requirements Oven housings from virtually all lines of kitchen furniture are suitable for installing the built-in oven. However, the veneers or plastic laminates on the conversion cabinets must be applied with heat-resistant adhesive (90 C). If plastic laminates or cement are not sufficiently heat-resistant, warping, bubbling or detachment of the finish may result. 36 Notes 37 Notes 38 Notes 39 NEFF (UK) Ltd. Grand Union House, Old Wolverton Road, Old Wolverton Milton Keynes, MK12 5PT Tel: 01908 328300 Fax: 01908 328399 9000 024 175 Printed in Germany 0806 Es.



[You're reading an excerpt. Click here to read official NEFF U1422N0GB user guide](http://yourpdfguides.com/dref/3549192)
<http://yourpdfguides.com/dref/3549192>