




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF U1721N2GB. You'll find the answers to all your questions on the NEFF U1721N2GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF U1721N2GB
User guide NEFF U1721N2GB
Operating instructions NEFF U1721N2GB
Instructions for use NEFF U1721N2GB
Instruction manual NEFF U1721N2GB

**How to connect up,
build-in, set up, use and
look after your
U1721 oven**

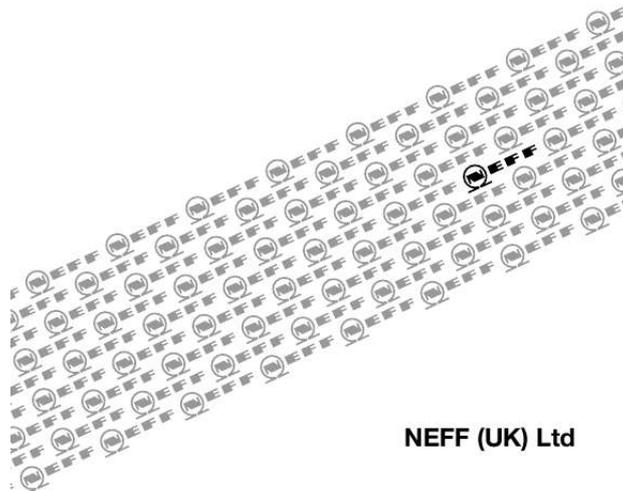

NEFF (UK) Ltd



[You're reading an excerpt. Click here to read official NEFF U1721N2GB user guide](http://yourpdfguides.com/dref/3656649)
<http://yourpdfguides.com/dref/3656649>

Manual abstract:

An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again. Before you dispose of your old appliance, make sure that it has been rendered inoperable. Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environment-friendly and suitable for recycling. Please make a contribution to protecting the environment by disposing of the packaging appropriately. Up-to-date information concerning options for disposing of your old appliance and the packaging from the new one can be obtained from your retailer or local government office. Before connecting your new appliance Before using your new appliance, please read these Instructions for use carefully. They contain important information concerning your personal safety as well as on use and care of the appliance. The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

@@ Do not use the appliance if it is damaged in any way. @@@@ Repairs must only be performed by service engineers trained by the manufacturer. Repairs carried out by incompetent service agents can make the appliance unsafe. 3 Important Information Appliance safety considerations The appliance should only be used for the preparation of food. If using hot air v. do not place greaseproof paper loosely in the oven (e.g. when heating the oven). The hot-air fan could draw in the paper which may damage the heater and fan. Do not clean the oven with steam or high-pressure cleaners. Do not insert a baking sheet at the bottom of the oven, or cover the base of the oven with aluminium foil, as this would result in heat build up. Roasting and baking times would change, and the enamel would be damaged. Never pour water directly into the hot oven. Damage to the enamel could result. Dripping juices may leave spots on the oven lining. Always place a baking tray below to prevent this from happening. Never stand or sit on the open oven door. The oven door must close properly. Keep the door seal surfaces clean. Open the oven door carefully. Hot steam may escape.

The surfaces of heating and cooking appliances get hot during operation. The interior oven walls and the heating elements get extremely hot. Always keep children away from the appliance. Never leave the appliance unattended when cooking with fat or oil. They can catch fire if overheated. Clean the oven regularly. Fatty or oily remnants could ignite when the oven is switched on. Make sure that the power cord does not get caught in the hot oven door. The plastic insulation could melt. In the case of a defect, switch off (or remove) the mains fuse in the building electrical system. Do not store combustible items in the oven. They could ignite if the oven is switched on accidentally. 4 Introducing: Your new Oven Main oven 0 Mini oven 0 50 50 100 100 250 150 150 200 200 Control lamp for oven temperature Electronic timer controls Function selector Control lamp for oven temperature Temperature selector Temperature selector Main oven (circotherm) Temperature selector Mini oven Function selector Temperature selector 0 0 50 50 100 100 250 150 Setting: e Conventional top and bottom heat Z Radiant grill 200 Setting: 150 200 Setting: 50250 temperature in °C a 50200 k Oven light Circotherm temperature in °C Defrosting position 5 Introducing: Your new Cooker Accessories Your appliance is supplied with: 2 Wire shelves 1 Roasting/grill pan with grid The following accessories can be obtained from the supplier of your oven: Deep roasting pan Baking tray, aluminium Baking tray, enamelled Small grill-set Supplementary equipment set Telescopic for Main oven Note: The baking tray or roasting pan may distort while the oven is operating. This is caused by major temperature differences on the utensil. These differences may occur if only one part of the utensil was covered or if deep-frozen food, e.g. pizza, was placed on the utensil. Note: Order no. Z 1270 X2 Z 1330 X0 Z 1340 X2 Z 1240 X2 Z 1760 X0 Note: The distortion will already subside again during baking, roasting or grilling. Shelf positions Your oven features 3 shelf positions.

The shelf positions are counted from bottom to top. The numbers are marked in the oven. Mini oven Main oven Your oven features 3 shelf positions. The shelf positions are counted from bottom to top. The numbers are marked in the oven. When using circotherm, do not use shelf position »2«, in order not to block air circulation. 6 Before Using Your Appliance for the First Time Time of day Before you use your appliance for the first time, it is necessary to set the current time on the electronic timer. After connecting to the mains, or after a power failure, the display 0.00 will blink. To set the time of day: 1.

Press the E button. 2. Set the correct time of day with the or + button. (example: 15.00 hrs., see illustration). Note: Any incorrect settings that were made accidentally must be reset to zero before setting the time of day (see the section "Electronic timer"). 1. 2. Initial burn-in 1. Preheat the empty oven for about 30 minutes. Select heat for the main and mini oven at a setting of 190 °C. During the initial burn-in phase, please open the kitchen windows to dissipate unpleasant odours. Preliminary cleaning: 1. Clean the appliance exterior with a soft damp cloth. 2. Clean the oven interior and the accessories with a hot detergent solution. 7 Electronic Timer Minute timer Cooking time Off time Automatic timer OFF Timer knobs The timer knob is designed for onehand operation. To use this function, the required cooking time must be set by turning the timer knob within 4 seconds of pressing the appropriate function button. Setting the time of day: Follow the steps described in the preceding section "Before Using Your Appliance for the First Time". Minute timer: 1. Press the t button. 2. Set the length of time required for the alarm with the + button. (The example in the illustration shows a time of 5 minutes.) After setting, the time of day is displayed again. Press the t button to display the time remaining.

After the time has elapsed, an alarm signal sounds. To switch off the alarm, briefly press the t button. The settings can be corrected at any time. To cancel a setting before the time has elapsed: Press the t button and set the time in the display to 0.00. Setting the timer: 1. 2. 8 Electronic Timer Automatic timer for the main oven You can use the automatic timer functions to switch the oven ON or OFF. Automatic OFF: If you want cooking to start immediately, simply use the timer knob to set the required total cooking time.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3656649)

[U1721N2GB user guide](http://yourpdfguides.com/dref/3656649)

<http://yourpdfguides.com/dref/3656649>

Replacing the oven door: 1. Set both hinges into their respective receptacles on the left and right, and swing the oven door downward. 2. Close the catch levers on the left and right. 3. Close the oven door. Switch on the oven light Main oven: Turn the temperature selector to the a position. Mini oven: Set the function selector to a random position. Removing the shelf railings Main oven: 1.

On both left and right sides, remove the one milled screws. 2. Carefully remove the suspended grids. Mini oven: On both left and right sides, remove two milled screws each. Carefully remove the shelf railings.

2. 1. 19 Service and Repair Information In the event of problems or repairs that you cannot solve yourself, our customer service will be happy to help. Check the customer service directory for an office facility in your area. You can find this information on the appliance`s nameplate.

The nameplate is located on the appliance, behind the oven door, on the left bottom edge of the oven. Replacing the oven light Caution: Disconnect the appliance or remove the fuse! Main and Mini oven: 1. To prevent damage, place a tea cloth into the cold oven. 2. Remove the glass cover by inserting a knife or similar object between the glass and the frame. 3. Replace the lamp. Type: Incandescent bulb E 14, 230 240 V, 25 W, heat-resistant to 300 °C. You may obtain this bulb from our spares department. Replacing the oven door seal: 1.

Remove the defective oven door seal by simply unhooking it. You may obtain the new oven door seal from our spares department. Caution: Calling customer service because of an operator error can be very costly! In the event of a service request, please have the following information handy: E-Number FD 20 Trouble-shooting Guide Calling the customer service is not always really necessary. In some cases, you can remedy the situation yourself. The following table may contain some helpful tips. Important general safety guidelines: Service or repair work on the electronic components may only be performed by a qualified expert. Without exception, prior to starting such repairs, the appliance must be disconnected from the mains. This may be accomplished by tripping the automatic fuse or by removing the fuse from the fuse box that controls your flat or apartment. Problem There is a general failure of all electrical functions, i.e.

, the control lamps have suddenly ceased to function. @@The electronic timer display suddenly shows a blinking 0.00. The oven suddenly stop functioning. Possible cause Defective fuse.

Remedy Check the fuse in the fuse box, and replace if required. @@@@The power supply was briefly interrupted. The electronic timer is set to an automatic timing cycle. This is a normal condition. It is caused by the occurrence of temperature differences.

This condition is normal with moist cakes or with very large roasts. @@Press the E key. Heat the oven at 100 °C for about 5 minutes. During baking or roasting, open the oven briefly several times; wipe up condensation after use. Remove the oven door, and put aside with the handle facing upward. For cleaning, remove the two screws at the door handle moulding with a screwdriver. Caution: During reassembly, install both the door handle and the door seal in their original positions. The oven door window pane fogs up. A considerable amount of water condensation occurs in the oven. After prolonged use, the oven window panes are soiled from the inside.

21 Note 22 Note 23 NEFF (UK) Ltd. Grand Union House, Old Wolverton Road, Old Wolverton Milton Keynes, MK12 5PT Tel: 01908 328300 Fax: 01908 328399 5750 197 710 Printed in Germany 1103 Es. .



[You're reading an excerpt. Click here to read official NEFF](#)

[U1721N2GB user guide](#)

<http://yourpdfguides.com/dref/3656649>