



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF V6320X0GB. You'll find the answers to all your questions on the NEFF V6320X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF V6320X0GB
User guide NEFF V6320X0GB
Operating instructions NEFF V6320X0GB
Instructions for use NEFF V6320X0GB
Instruction manual NEFF V6320X0GB



en Installation and operating instructions

WASHER-DRYER



[You're reading an excerpt. Click here to read official NEFF V6320X0GB user guide](http://yourpdfguides.com/dref/3656381)
<http://yourpdfguides.com/dref/3656381>

Manual abstract:

.....
.....
.....
.....

.....
.....
..... 7 Detergents and Care Products.
.....
.....

.....
.....
.....
.....

..... 9 Programmes.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....11 Washing and drying options

.....
.....
.....
.....

.....
.....

13 Washing and drying

.....
.....

.....
.....
.....
.....

.....
.....
.....

.15 Cleaning and care

.....
.....
.....
.....

.....
.....
.....
.....

.17 What to do if... ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
19 After-sales service

.....
.....
.....
.....

.....
.....
.....
.....22 Installation instructions .

.....
.....
.....
.....

.....
.....
.....
.....23 Installation instructions Appendix Table of programmes.....

.....
.....
.....
.....

.....
.....
.....
.....

28 Consumption rates.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
29 Index

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....30 Please read the Installation and operating instructions and all the other information supplied and handle the appliance accordingly.

Keep all documents in a safe place for future reference, or to pass on to the next owner. For further information and a selection of our products, visit our website: www.neff-international.com 2 General safety information Intended use The washer-dryer is designed for: domestic use only. washing machine-washable fabrics in detergent solution and drying these fabrics.

operation with cold drinking water and commercially available detergents and care products that are suitable for use in washing machines. This washer-dryer complies with the relevant safety regulations. Hazard warnings Keep packaging and packing materials out of the reach of children. Risk of suffocation from plastic film and collapsible boxes. When an appliance is worn out, unplug it from the mains. Cut through the mains cable and remove it together with the plug. Destroy the lock on the door. This will prevent children from getting locked in and putting their lives in danger. Do not use the washer-dryer if the laundry: has been treated with solvents, oil, wax, fat or dye (e.g.

stain remover, cleaning solvent, hairspray, nail varnish remover). has come into contact with hairspray, nail varnish remover, or similar substances. Risk of fire or explosion! contains dust residues, e.g. coal dust or flour Risk of explosion! contains foam/rubber. Before using for the first time When washing and drying Set up the washer-dryer according to the installation instructions page 23. Remove the transport safety bolts and keep them in a safe place. Do not operate the washer-dryer if it has any visible damage. If you are in any doubt, please consult our after-sales service or your retailer. Remove all objects from pockets, particularly sources of ignition (e.g. lighters, matches, etc.). Do not leave children unsupervised near the washer-dryer. The washer-dryer must not be used by children or persons who have not been instructed in its use.

Keep pets away from the washer-dryer. Take care when emptying hot detergent solution. The door can become very hot during operation. Condensed water is not drinking water quality and may be contaminated with fluff. Do not climb onto the washer-dryer.

Do not lean on the door of the washer-dryer when it is open. Do not install the washer-dryer in areas that are at risk of frost. Do not transport the washer-dryer without the transport safety bolts in place. To protect the washerdryer WEEE) This appliance is labelled in accordance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment - WEEE. The directive provides an EU-wide framework for the return and recycling of used appliances. 3 Environmental protection/ economy tips Separate out the various waste materials of the packaging and take them to the nearest collection point. Always fill the appliance with the maximum amount of laundry for each programme. Wash normally soiled laundry without a prewash. Instead of Cottons 90 °C, choose the programme Cottons 60 °C, X Intensiv page 11. Similar cleaning performance with considerably lower energy consumption.

Measure the detergent according to the manufacturer's instructions and in line with the local water hardness. If the laundry is subsequently dried in a tumble drier, select the spin speed according to the tumble drier manufacturer's instructions. 4 Your new washer-dryer Description of the washer dryer The washer-dryer can be used in 3 ways page 15: washing only, drying only, successive washing and drying. The successive wash-dry programme shifts automatically from the wash cycle to the dry cycle without further intervention. Drying is achieved using the condensation principle. The condensate that is produced during drying runs via the drain hose into the drain tank. Caution: the water supply hose and water drain hose must be correctly connected during washing and drying page 26. The water hose must be open. Door A safety device prevents the door from being opened during operation. Before opening Make sure that there is no water in the drum and that the drum is not moving.

5 Control panel Indicator lamps Indicate the settings that have been selected for: Spin speed: \$ - 1400 rpm (depending on the model). Washing options / signal. Display panel Shows the settings that have been selected (e.g. spin speed, drying time), the progress of the current programme and the programme status.

Programme progress TN'B `Auxiliary displays Prewash, main wash, rinse, final spin, drying. Finished in Time, Start of the program, childproof lock, fluff-removal cycle, recommended load. 2 fE l kg Indicator lamps Display Buttons Washing and drying options page 13 Spin: individual adjustment of the spin speed. Options: setting the washing options. Set: activation/deactivation of the selected washing options.

Delay: delays the start of the programme. Dry: setting the drying time. Start/Pause: starts and stops the washing programme page 14. Programme selector Programme selector page 11 For switching the washer-dryer on and off and for selecting the programme, can be turned in both directions. Do not adjust the programme selector while washing/ drying is in progress. 6 Before washing for the first time The washer-dryer was tested before leaving the factory. To remove any water that may be left over from the test, do not load any laundry the first time that you run a wash programme. Make sure that the transport safety bolts on the rear of the washerdryer have been removed page 24. Do not load any laundry. Close the door.

Turn on the tap. Pull out the detergent drawer. Add ½ a measuring cup of detergent to compartment II page 9. i Do not use detergents for wool or delicates (these cause foam to be created). Close the detergent drawer. Turn the program selector to a 60°C programme. Press the Start button. At the end of the programme, set the programme selector to Off. Open the door. i Leave the door open to allow the inside of the washer-dryer to dry.

Preparing and sorting the laundry Sorting laundry for washing Sorting laundry according to the information on the care labels Wash white laundry separately from coloureds. Unhemmed or torn items should not be washed in the appliance, as they may fray. The laundry may be damaged if you do not observe the fabric care symbols.



[You're reading an excerpt. Click here to read official NEFF V6320X0GB user guide](http://yourpdfguides.com/dref/3656381)
<http://yourpdfguides.com/dref/3656381>

Only wash laundry with the following care labels: Care label Type of laundry Cottons 90°C Coloureds 60°C, 40°C, 30°C Easy-care 60°C, 40°C, 30°C Hand- and machine-washable silk and wool, cold, 40 °C, 30 °C. Do not wash.

<: :98 BA> uFAE> Laundry with care symbol 7 Sorting laundry for drying Sorting laundry according to the information on the care labels Only dry laundry that is labelled "suitable for tumble-drying" or which has the following care symbols: Care label Type of laundry Dry at normal temperature. Dry at low temperature (delicate drying). a Do not wash the following fabrics in the washer-dryer: Laundry with the care symbol b. Airtight fabrics (e.g. rubber-coated fabrics). Delicate materials (silk, curtains made from synthetic fabrics) - they may crease. Dripping-wet laundry - high energy consumption Wool or fabrics containing wool. Preparing laundry for washing Loose foreign bodies (e.g. coins, paper-clips, needles, nails) may damage the laundry and components of the washer-dryer (e.g. the drum). Empty the pockets of all items. Brush any sand out of pockets and collars.

Pretreat any stains. Close zips, do up cover buttons. Remove curtain fittings or place curtains in a laundry bag. Wash the following in a laundry bag/pillowcase: Delicates, e.g. tights, curtains, Small items, e.g. socks or handkerchiefs, Underwired bras (the underwiring may come loose during the washing process and cause damage). Turn trousers, knitwear and jersey fabrics, e.g. hosiery, T-shirts or sweatshirts, inside out. Only dry fabrics that have already been washed, rinsed and spun. Also spin delicate fabrics before drying. Sort the items for washing according to material and desired level of dryness to ensure even drying. Before loading the washer-dryer, make sure that there are no foreign bodies or pets in the drum.

Risk of explosion. Items that have been treated with cleaning agents containing solvents, e.g. stain removers, must be carefully rinsed out by hand before they are loaded into the washer-dryer. Unfold the laundry and place it loosely in the drum.

Load a mixture of small and large items. Observe the maximum drum loads, Programme table page 28. Take care not to trap items of laundry between the door and the rubber seal. Close the door. You will hear it click shut. Measure out and add detergent and care products for just a washing programme or a combined washing and drying programme. Turn on the tap. Preparing laundry for drying Loading the laundry 8 Detergents and Care Products Detergent drawer The detergent drawer is divided into three compartments Compartment I : detergent for prewash. Compartment II : detergent for main wash, Compartment i : Liquid additives, such as starch or fabric softener. Additives are automatically dispensed during the final rinse cycle.

Do not exceed the maximum capacity, otherwise compartment i may be emptied too early. Dilute viscous additives with water to prevent blockages. Liquid detergent insert: this must be folded down before liquid detergents are used. To do this: Pull out the detergent drawer as far as the stop. Press on the zone labelled PUSH and take out the detergent drawer. Pull the insert in compartment II forwards as far as the stop and push it down. Insert the detergent drawer. Descaler Descaler can be added to compartments I and II according to the manufacturer's instructions. Add detergent first, followed by the descaler. Risk of poisoning Keep detergents and care products out of the reach of children.

Risk of chemical burns Take care when opening the detergent drawer. There may still be detergent residues in the drawer. Select the correct dosage for the detergent according to: the amount of laundry, the instructions of the detergent manufacturer, how dirty the laundry is, the water hardness. You can find out about water hardness in your area from your local waterworks. I II i Detergents and care products i i Using the correct dosage reduces the impact on the environment and gives a good washing result.

Only use pH-neutral wool detergent for woollens programmes. 9 Measuring washing powder Normally soiled laundry Set the programme. Do not select T (Prewash) page 14. Add all the detergent, according to the manufacturer's instructions, to compartment II of the detergent drawer. Heavily soiled laundry Set the programme.

Select T (Prewash) page 13. Add 1/4 of the rested. To choose the required washing option: press the Options button repeatedly until the required washing option is selected (indicator lamp flashes). Press the Set button to switch the washing option on or off (indicator lamp is lit/not lit). Options button Set button i Washing options T - (Prewash) If you press and hold the Options button, the appliance scrolls through all the washing options. Prewash at 35 °C. Suitable for heavily soiled laundry. Prolonged washing time. Suitable for heavily soiled laundry with dried-on stains. Cannot be combined with R Flexi Time.

Special spin sequence with subsequent fluffing. Gentle final spin at reduced speed. Slightly increased residual moisture in the laundry. Reduces creasing and laundry is easier to iron. Increased water level and additional rinse cycle. For regions with very soft water or for further improving the rinsing result. Any detergent residues are better removed. Sets the washing time: normal-medium-short. Activates or deactivates the audible signal. You can postpone the start of the programme before it begins.

Using the remaining time, you can determine when the selected programme is to end. The remaining time can be set in one-hour increments, up to a maximum of 24 hours. Press the Delay button repeatedly until the required number of hours is displayed. Then press the Start/Pause button. The programme will start after a delay according to the set remaining time.

The time required until the end of the programme is shown on the display. X - (Intensive) Q - (Easy-iron) Z - (Water Plus) R - Flexi Time C - Signal Delay button 13 Dry button The drying programmes page 11 can be individually adapted by selecting the drying time. Press the Dry button repeatedly until the required drying time is shown on the display panel. To deactivate, press the Dry button repeatedly until is shown on the display panel. Drying option Time-controlled drying The required drying time can be set to between 2:40 and 0:00 by repeatedly pressing the Dry button.

Press Start/Pause to start the selected programme. Start/Pause button i Programme progress The 2 (Remaining time) is shown on the display panel. The f (start of the programme) symbol is lit. The programme progress is shown on the display panel: T - Prewash N - Main wash ' - Rinse B - Final spin ` - Drying Changing the programme To change the programme: Select a new programme.



[You're reading an excerpt. Click here to read official NEFF](#)

[V6320X0GB user guide](#)

<http://yourpdfguides.com/dref/3656381>

Press Start/Pause. i Pausing the programme The new programme starts from the beginning. Press and hold the Start/Pause button while the programme is in progress until appears on the display panel. and 2 (Remaining time) appear alternately while the programme is paused. Press Start/Pause to continue with the programme. Cancelling the programme Press and hold Start/Pause until is displayed.

For washing programmes at high temperatures: Cooling down laundry: choose Rinse + Spin. Press Start/Pause. For programmes at low temperatures: choose Drain + Spin. Press Start/Pause. Caution! if you cancel the drying programme, the laundry may still be very hot. 14 Washing and drying Washing only Set the programme selector to the desired programme, e.g. Cottons 60°C. 2 (Remaining time) and the recommended load in kg are shown alternately on the display panel. The Start/Pause symbol flashes.

If necessary, adjust the spin speed and select any washing options for your individualised programme page 13. The Dry function must not be activated. Load the laundry page 8. Observe the maximum load, Programme table page 28. Press the Start/Pause button.

2 (Remaining time) is shown in the display. The f (Programme start) symbol lights up. The washing programme starts. i Drying only Set the programme selector to the desired drying programme. The display panel alternately shows 2 (remaining time) and the recommended load in kg.

Press the Dry button to set the drying time page 14. Load the laundry page 8. Observe the maximum load, Programme table page 28. Press the Start/Pause button. 2 (Remaining time) is shown on the display panel and the 5 and f symbols light up. The drying programme starts. Washing and drying Successive washing and drying. Set the programme selector to the desired programme, e.g. Cottons 60°C.

2 (Remaining time) and the recommended load in kg are shown alternately on the display panel. The f symbol flashes. If necessary, adjust the spin speed and select any washing options for your individualised programme page 13. Press the Dry button to set the drying time page 14. Load the laundry page 8. Observe the maximum load in kg, Programme table page 28. Press the Start/Pause button. i The drying programme that is carried out is automatically determined by the washing programme, see the Programme table page 28. 15 End of the programme The washing and drying programmes are ended automatically. appears on the display panel.

Set the program selector to Off. Remove the washing from the drum. Leave the door open so that the inside of the washer-dryer can dry out. Turn off the tap (not necessary on models with Aqua-Stop). Rinse If the spin function was deactivated at the start of the wash cycle, \$ (no final spin = laundry remains in last rinsing water), the washing programme is automatically stopped after the final rinse.

The display panel shows alternating with . In order to drain the rinsing water and, if required, spin the laundry: Press the Spin button repeatedly until the required spin speed is set. The water is drained and the washer-dryer spins the laundry. The programme is completed when appears in the display field. The maximum spin speed depends on the selected wash programme.

If you do not wish to spin the laundry: Set the spin speed to \$ (Rinse hold) . The water is drained, but the washer-dryer does not spin the laundry. The programme is ended when appears in the display field. Set the program selector to Off. Remove the laundry. Leave the door open so that the inside of the washer-dryer can dry out. Turn off the tap (not necessary on models with Aqua-Stop). i Childproof lock For preventing the washer-dryer functions that you have set from being changed inadvertently. Activate/Deactivate: Press the Options and Set buttons at the same time to activate or deactivate the childproof lock. @@Never clean the washer-dryer with a water jet! Risk of explosion.

Never clean the washer-dryer with solvents. @@Remove detergent and cleaning agent residue immediately. @@@@If any remaining metal objects (e.g. @@@@ Press on the zone labelled PUSH and take out the detergent drawer. Clean the detergent drawer guide in the washer-dryer. Remove the fabric softener compartment insert. @@ Insert the fabric softener compartment insert. @@ Use a screwdriver to release the lock pins. @@ Remove the plug from the drain hose and release the washing water.

@@ When no more water runs out, replace the plug. @@ Clean the pump housing and remove any foreign objects. Make sure that the impeller can turn freely. Replace the pump cover and screw firmly in place. @@ Choose any programme (except Rinse + Spin / Drain + Spin).

Press the Start/Pause button. Allow the programme to run for approximately 40 seconds. Set the program selector to Off. Unplug the mains plug from the socket. Unscrew the water supply hose from the tap.

Clean the filter with a small brush. Reconnect the hose. Turn on the tap. Check whether water comes out of the end of the hose. If water is escaping, check that the filter is correctly seated. @@@@Disconnect the washer dryer from the power supply. Turn off the tap. @@Close the door. The water control system has been activated. @@The washing water is not entering the appliance.

See the fault Water is not flowing in. The water is not drained. See the fault Water is not drained. Maximum or minimum drying load not taken into account. HI/End or LO/End flash alternately in the display. @@Make a note of the fault code to inform the after-sales service. Fault Programme does not start.

Possible cause The Start/Pause button has not been pressed. A delayed start time has been selected. Remedial action Press the Start/Pause button.

Washer dryer starts on completion of the delay period. If required, change the remaining time page 13. Reselect the delayed start time or start the programme immediately. Press the Start/Pause button. Close the door.

Insert plug correctly. Change programme as required. Fit the drain hose correctly. Clean the drain pump page 18. Clean and dry the detergent drawer page 17.

Use the measuring aid for liquid detergent. 19 Power failure. The delayed start time that was selected has been cleared. The door is not properly closed. Plug not inserted properly into socket. The maximum spin speed cannot be set. The water is not drained. The maximum spin speed depends on the programme selected. Drain hose is twisted. Detergent pump is blocked.

Detergent residues in the detergent drawer. Damp or lumpy detergent. Water is not flowing in. The mains plug is not correctly plugged in. The door is not properly closed. The tap is not turned on. The filter in the water supply hose is blocked. The water supply hose is pinched or kinked. Plug in the mains plug correctly. Close the door.

Turn on the tap. Clean the filter in the water supply hose page 18. Check the water inlet hose. Level the washer-dryer page 25.



[You're reading an excerpt. Click here to read official NEFF V6320X0GB user guide](http://yourpdfguides.com/dref/3656381)
<http://yourpdfguides.com/dref/3656381>

Remove the transport safety bolts page 24.

Fit the drain hose correctly page 27. Intense vibrations during spinning. The washer-dryer is not correctly levelled. The transport safety bolts have not been removed. Washer dryer fills with water Drain hose fitted too low. and continuously drains it away. No water can be seen in the drum. Water leaks from the bottom of the appliance. Not a fault. Supply hose screw connection is leaking. Drain hose is leaking. Foam escapes from detergent drawer. Too much detergent has been used. During certain programmes the water level is below the visible range. Tighten the screw connection.

Have the drain hose replaced by the after-sales service. Only use detergent which is correct for textiles, and suitable for use in automatic washing machines. Make sure that you use the correct dosage. Always wash large and small items together. Several attempts to start spinning. Not a fault. The unbalanced load detection system attempts to redistribute an unbalanced load by starting to spin several times. Large items of laundry are not evenly distributed in the drum.

The spin speed is automatically reduced for safety reasons. Washing is not spun properly.

Always wash large and small items together. Washing results not satisfactory. Uncleaned areas worse than expected. Select a suitable programme, e.g. a programme with prewash. Pretreat stains if necessary. Too little or incorrect detergent used. Use the correct dosage of a suitable detergent, in accordance with the manufacturer's instructions. Select the correct load for the programme.

Rinse the laundry again or change to using liquid detergent. Brush the laundry after it has dried. Wash the laundry using the maximum detergent dosage and the maximum permissible temperature see the care label. 20 Maximum load exceeded. Detergent residues on the washing. Grey residues on the washing.

Some phosphate-free detergents contain water-insoluble residues which appear on washing as light specks. Soiling caused by ointments, grease or oil.

Programme terminated unexpectedly. Spinning during drying The Start/Pause button has been pressed accidentally.

No fault Press the button again to restart the programme. "Thermo spin", which is for energy-efficient drying, starts after a drying time of approx. 10 minutes.

Loosen up the laundry by hand; start the drying programme page 15. Turn on the tap. Reduce the load for the programme accordingly page 28. Select the drying time according to the load and the type of fabric. Once the programme has ended: adjust the load quantity, select a suitable drying programme and restart. Drying result not satisfactory. The laundry clings to the sides of the drum after being spun.

Closed tap Maximum load exceeded. Drying time selected too short. Maximum or minimum load not taken into account page 28 The fabric softener is not completely flushed in or too much water remains in the compartment i The laundry is not dried. The fabric softener compartment insert Clean the fabric softener compartment is not correctly attached or is blocked. insert and fit it correctly in the compartment i page 17.

The tap is turned off. The laundry load is too large. The drying time is too short. Turn on the tap. Reduce the amount of laundry.

Select a suitable drying time. The programme continues when power is restored. If you wish to remove the laundry during a power cut, you must first drain out the water page 18. Check whether: the plug is plugged into the socket correctly. the circuit breaker (fuse) has tripped; if it has, call the after-sales service page 22. No messages on the display panel. Power failure. The door cannot be opened. (Rinse stop) is selected. The programme is running or the door is locked for safety reasons.

Power failure. Select the programme Drain + Spin and press Start/Pause. Wait until display panel. appears on the Unlock the door mechanically. Emergency unlock. In order to unlock the door mechanically in the event of a power failure, you will have to: turn the programme selector to Off and unplug the mains plug from the socket. open the base panel and drain out the water page 18. pull the emergency release downwards and open the door at the same time. Before opening the door, make sure that there is no water or hot detergent solution in the washer dryer. Under no circumstances open the door with the emergency release while the drum is still turning.

If you cannot correct a fault yourself (switching on/off) or a repair is required: Turn the programme selector to Off and unplug the mains plug from the socket. Turn off the tap and call the after-sales service page 22. 21 After-sales service Before you call the after-sales service, please check whether you can correct the fault yourself page 19. You will be charged if a technician is called out, even during the warranty period. You can find information about your nearest after-sales service here or in the After-sales service directory (depending on the model).

Please give the after-sales service the product number (E-Nr.) and production number (FD) of the appliance. Enter the number of your appliance here. You can find this information on the rating plate in the frame of the door. Please help us to avoid unnecessary call-outs by quoting the product and production numbers.

This will also save you the associated additional costs. You can rely on the competence of the manufacturer. Please contact us. This way, you can ensure the repair is carried out by trained service technicians who are equipped with genuine spare parts. 22 Installation instructions Safety information The washer-dryer is very heavy. Take care when lifting it. Do not operate the washer-dryer if it has any visible damage. If you are in any doubt, please consult our after-sales service or your retailer. Do not install the washer-dryer outdoors or in areas exposed to frost. Frozen hoses can crack or burst.

As a result, the washer-dryer could be damaged. Do not stand the washer-dryer upside down or on its side. Do not lift the washer-dryer by protruding parts (e.g. door). Do not place the washer-dryer behind a door or a sliding door which could obstruct the dryer door or prevent it from being opened. This will prevent children from locking themselves in and putting their lives in danger. Remove the transport braces and cross connectors and store in a safe place. In addition to the instructions provided in this document, special regulations from the relevant water and electric utility companies may apply. If in doubt, have a technician connect the appliance.

23 Included with the appliance Number 4 1 1 1 2 Description Covers for openings left after removing the transport bolts. Spanner 24-40 mm dia. hose clamp for connection to a siphon. Door template Door hinges with screws On the back of the washer dryer: Water drain hose Water supply hose Mains cable with plug Instruction manual and booklet containing after-sales service addresses Moisture may remain in the drum following the final inspection which every washer-dryer undergoes before leaving the factory.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3656381)

[V6320X0GB user guide](http://yourpdfguides.com/dref/3656381)

<http://yourpdfguides.com/dref/3656381>

Removing the transport safety bolts Unscrew all four screws using the spanner supplied.

Remove all 4 transport safety bolts completely and take the mains cable out of the retainers. Before using the appliance for the first time, ensure that all transport safety bolts have been removed and kept safe for any subsequent transport. If you need to transport the appliance at a later date, always refit the transport safety bolts to prevent damage to the washer-dryer. Insert the protective covers. Positioning and levelling Appliance stability is essential to ensure that the washer-dryer does not "creep" during spin cycles.

The installation area must be firm, clean and level. Parquet floors and soft floor coverings, e.g. carpets or foam-backed floor coverings, are unsuitable. 24 Positioning Slide sheets facilitate the insertion of the washer-dryer into the installation space. These can be ordered from the after-sales service, spare part no. 66 1827. Moisten the slide sheets with a mixture of water and washing-up liquid before sliding the washer-dryer into place. Do not use grease and/or oil. Levelling Intense noise, vibrations and "wandering" may be the result of incorrect levelling.

All four appliance feet must stand firmly on the ground. The washer-dryer must not wobble. Check the levelness of the washer-dryer with a spirit level and correct if necessary. The washer-dryer must not rest against the sides of the installation recess. The lock nuts of the front appliance feet must be screwed tightly against the housing. . 25 Dimensions Width x depth x height Weight 595 mm x 584 mm x 820 mm 85 kg Hose and cable lengths Left-hand connection or Right-hand connection approx. 1350 approx. 1400 approx. 1000 approx.

760 min. 500 max. approx. 1400 900 approx. 950 min.

500 max. 900 Dimensions in mm Water connection To prevent leaks or water damage, you must observe the instructions in this section. If in doubt, have a technician connect the appliance. The water supply and drain hoses can be routed to the left of right, depending on installation conditions. Do not use a used inlet hose.

Only use the inlet hose supplied or one which was purchased from an authorised specialist retailer. Water supply Do not allow the water supply hose to be: kinked or squashed, altered or cut (strength no longer guaranteed). Note the water pressure in the mains supply: The water pressure should be between 50-900 kPa (0.5-9 bar) (at least 8 litres of water flow out per minute when the tap is turned on). If the water pressure is higher, a pressure reducing valve must be fitted. * depends on the model Connect the cold-water supply hose (blue union nut) to the cold water tap with 3/4" (3/4" = 26,4 mm) pipe thread. Only tighten plastic screw connections by hand. Do not remove the filter from the supply hose. After connecting the water supply hose: Turn the tap on fully. Check the connections for leaks.

26 Water drainage Drainage into a siphon Do not kink the drain hose or pull it lengthways. Height difference between the installation surface and the drain: max. 90 cm, min. 50 cm. Secure the connection with the 24-40 mm hose clamp (included with the appliance). The washer-dryer must only be connected to an alternating current supply via a properly installed earthed socket. If a residual current circuit breaker is used, only use a type which displays this symbol: .

Only this symbol guarantees compliance with the currently applicable regulations. The mains voltage must match the voltage specifications on the washer-dryer (rating plate). The connected load and fuse required are shown on the rating plate.

Make sure that: the the the the the mains plug fits the socket. cable cross-section is adequate. earthing system is properly installed. appliance is not standing on the mains cable. mains plug is accessible at all times.

Electrical connection Changes to the mains cable may only be carried out by an electrician. Do not use multiple plugs/adapters or extension cables. Do not plug in or unplug the mains plug with wet hands. Only pull the mains plug out by the plug itself. Fitting the door hinges to the washer-dryer Once the washer-dryer has been installed in a kitchen unit, it can be concealed with a door.

If you wish to do this, you must fit the hinges supplied to the washer-dryer. 27 Table of programmes Observe the information on care labels, fabric type and load quantity. Type of laundry Programmes* °C 30-90 max. 6 kg/ 4 kg** Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen. Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics. Fabrics made from cotton or easy-care fabrics. For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g.

curtains). Suitable for hand or machine-washable fabrics made from wool or a wool blend. T G X G Options* Q G Z G R G Drying ^ G A Cottons Easy-Care Mix Delicates/ Silk Wool - 40 3 kg 30 30 2 kg cold-30 G G A G G A G G G A G G G A A A A A A A A A A A *Programmes and options depend on the model **Reduced load quantity for successive washing and drying programme 28 Consumption rates Washing Programme Load Power*** 0,40 kWh 6 kg 0,80 kWh 1,02 kWh 0,35 kWh 0,45 kWh 0,11 kWh 2 kg 0,05 kWh 0,20 kWh 6 kg/3 kg 4,85 kWh Water*** 60 l 60 l 45 l 40 l 40 l 35 l 49 l 49 l 83 l Programme duration*** 1:52 h 1:52 h 2:09 h 0:49 h 1:31 h 0:36 h 0:47 h 0:47 h 6:03 h Cottons 30 °C Cottons 40 °C Cottons 60 °C X Intensiv** Mix 30 °C Easy-Care 40 °C** Delicates/Silk 30 °C Wool - cold Wool - 30 °C Cottons 60 °C X Intensiv, intensive dry (2 cycles)* 3 kg *Programme setting for testing and energy labelling in accordance with EU Directive EN50229, EU 96/60/EC. **Programme setting for testing in accordance with currently applicable EN60456 standard. Note on comparative tests: For testing the test programmes, wash the specified load using the maximum spin speed with the "intensive" option selected. As a short programme for coloureds, select the Easy-Care 40 °C programme with the maximum spin speed. ***The values may deviate from the indicated values depending on water pressure, water hardness and supply temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and which additional functions are selected. Drying* Programme Load 1.5 kg 2 kg Intensive Dry ^ 2.5 kg 3

kg 3. 5 kg 4 kg 1.5 kg 2 kg Gentle Dry 2.5 kg 3 kg Cupboard dry 1:30 h 1:30 h 1:40 h 1:50 h 2:10 h 2:40 h 1:30 h 1:40 h 1:50 h 2:10 h Iron dry 1:00 h 1:00 h 1:30 h 1:40 h 1:50 h 2:10 h 1:00 h 1:00 h 1:30 h 1:40 h *)The values may diverge from those specified depending on over and undervoltage, fabric type, composition of the laundry to be dried, residual moisture in the fabric and the amount of the load.



[You're reading an excerpt. Click here to read official NEFF](#)

[V6320X0GB user guide](#)

<http://yourpdfguides.com/dref/3656381>

.....

.... 17 End of the programme

.....

16 -Description

.....

.....

..9 Environment Energy consumption ...

.....

... 8 Dimensions

.....

.....

.....

.... 26 Environmental Display -protection

.....

.....

.....

... 4 -Fault message

.....

. 19 Cleaning -Control panel

.....

.....

. 17 -Detergent drawer

.... 17 -Drain pump .

.....

.....

..... 18 -Drum ...

.....

.....

.....

. 17 -Housing

.....

.....

.....

17 Door

.....

.....

.....

.....

....5, 16 -Water supply hose .

.....

.....

18 Door hinges

.....

.....

.....

27 Connection fittings

.....

... 26 Drain ..

.....

.....

.....

.....

.....

12 Consumption rates
.....
... 29 Drain pump Fabric softener -Cleaning ..
.....
.....
.....
. @17 Draining the water
.....

..... @15 Final spin -Display
.....
.....
.....
.....6 -Display .
.....
.....
.....

... 6 -Options ..
.....
.....

... 14 -Synthetics ..
.....
.....

..8 First wash ...
.....
.....

... 7 -Woollens ..
.....
.....

...8 Fluff Clean .
.....
.....
.....

..12 -Display
.....
.....
.....

..... 6 Drying programmes

.. 11 Foam ...
.....
.....

..... 3 G Gentle Dry

.....
.....

.....
.....11 30 H P T Hazard information .

.....
.....
.....

3 Positioning Time-controlled drying Hazard warnings -Washer-dryer

.....
25 -Drying options

.....
.....14 -Detergent .

.....
.....
.....
.....9 Power .

.....
.....
.....
.....

..... 29 Transport safety bolts .

.....
.....
..24 Housing Pre-wash -Cleaning

.....
.....
.....
17 -Display

.....
.....
.....
....6 Prewash

.....
.....
.....
.....

13 Unbalanced load detection Programme -Cancelling

.....
.....
..... 14 system

.....
.....
.....
.....

.....13 -Changing

.....
.....
.....
.. 14 Use

.....
.....
.....
.....

..15 Included with the appliance .. 24 -Pausing .

.....

.....
.....
.... 14 -Progress .
.....

.....
.....
.. 14 Installation surface ...
.....

..... 23 Intensive
.....
.....

.....
. 13 Programme selector
.....
..6, 11 Intensive Dry

.....
.....
.....
. 11 Washer-dryer U I W L R Remaining time -Button

.....
.....
.....
.....6 Positioning and levelling ..25 Washing ..

.....
.....
.....
.....

.....15 -and drying
.....
.....
.....

.15 -Washing options
.....
.13 Washing options -LED indicators
.....

..... 6 Washing programmes ...
.....
....11 Water .
.....

.....
.....
.....
.....

.29 Water drainage
.....
.....
.....27 Water Plus

.....
.....
.....
.....13 Water supply .
.....

.....
.....
.....
.....26 Water supply hose -Cleaning ..

.....
.....
.....
.....18 Laundry -Creasing ...

.....
.....
.....
.....8 -Loading ..

.....
.....
.....
.....

.8 Remedial action

.....
.....
.....
... 19 -Preparing for drying

....8 Rinse -Preparing for washing

..8 -Display ...

.....
.....

.....
.....
.....
.6 -Sorting for drying
.....

..8 -Sorting for washing

....7 Rinse Hold .

.....
.....

..... 13, 16 Rinse stop .

.....
.....
.....

.....
.....
.....
. 13 Levelling

.....
.....

.....
.....
.....
.. 25 Rubber ...

.....
.....

.....3 -Washer-dryer ..

.....
.....

... 25 Liquid detergent insert ..

.....
.....

..9 S M Safety information 3, 17, 19, 23 Wool

.....
.....

.....

..... 11, 29 set ...

.....

.....

.....

.....

.....

.....

.....6 Main wash Signal -Display

.....

.....

.....

.....

.....

6 -LED indicators

.....

.....

.6 Mixed Load

.....

.....

.....

.. 11 Solvents

.....

.....

.....

.....

.....

.3 Special programmes

.....

12 Spin speed -LED indicators

.....

.....

.....6 option

.....

.....

.....

.....

.....

.....

6 Start of a programme Options

.....

.....

.....

.....

.....

.....

.6 -Display

.....

.....

.....

.....6 -Drying options

.....

.....

... 14 -Washing options

.....

..... 13 Start/Pause ...

.....

.....

.....



[You're reading an excerpt. Click here to read official NEFF
V6320X0GB user guide
http://yourpdfguides.com/dref/3656381](#)