



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF V6540X0GB. You'll find the answers to all your questions on the NEFF V6540X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF V6540X0GB
User guide NEFF V6540X0GB
Operating instructions NEFF V6540X0GB
Instructions for use NEFF V6540X0GB
Instruction manual NEFF V6540X0GB



en Installation and operating instructions

WASHER-DRYER



[You're reading an excerpt. Click here to read official NEFF V6540X0GB user guide](http://yourpdfguides.com/dref/3656374)
<http://yourpdfguides.com/dref/3656374>

Manual abstract:

.....
.....
.....
.....

.....
.....
..... 7 Detergents and Care Products.
.....
.....

.....
.....
.....
.....

..... 9 Programmes.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....11 Washing and drying options

.....
.....
.....
.....

.....
.....

13 Washing and drying

.....
.....

.....
.....
.....
.....

.....
.....
.....

.15 Cleaning and care

.....
.....
.....
.....

.....
.....
.....
.....

.17 What to do if... ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
19 After-sales service

.....
.....
.....
.....

.....
.....
.....
.....22 Installation instructions .

.....
.....
.....
.....

.....
.....
.....
.....23 Installation instructions Appendix Table of programmes.....

.....
.....
.....
.....

.....
.....
.....
.....

28 Consumption rates.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
29 Index

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....30 Please read the Installation and operating instructions and all the other information supplied and handle the appliance accordingly.

Keep all documents in a safe place for future reference, or to pass on to the next owner. For further information and a selection of our products, visit our website: www.neff-international.com 2 General safety information Intended use The washer-dryer is designed for: domestic use only. machine-washable fabrics in detergent solution and drying these fabrics.

operation with cold drinking water and commercially available detergents and care products that are suitable for use in washing machines. This washer-dryer complies with the relevant safety regulations.. Hazard warnings Keep packaging and packing materials out of the reach of children. Risk of suffocation from plastic film and collapsible boxes. When an appliance is worn out, unplug it from the mains. Cut through the mains cable and remove it together with the plug. Destroy the lock on the door. This will prevent children from getting locked in and putting their lives in danger. Do not use the washer-dryer if the laundry: has been treated with solvents, oil, wax, fat or dye (e.

g. stain remover, cleaning solvent, hairspray, nail varnish remover). has come into contact with hairspray, nail varnish remover, or similar substances. Risk of fire or explosion! contains dust residues, e.g. coal dust or flour Risk of explosion! contains foam/rubber. Before using for the first time When washing and drying Set up the washer-dryer according to the installation instructions > page 23. Remove the transport safety bolts and keep them in a safe place. Do not operate the washer-dryer if it has any visible damage. If you are in any doubt, please consult our after-sales service or your retailer.

Remove all objects from pockets, particularly sources of ignition (e.g. lighters, matches, etc.). Do not leave children unsupervised near the washer-dryer. The washer-dryer must not be used by children or persons who have not been instructed in its use. Keep pets away from the washer-dryer. Take care when Draining hot detergent solution. The washing machine door can become very hot during operation. Condensed water is not drinking water quality and may be contaminated with fluff.

Do not climb onto the washer-dryer. Do not lean on the open door of the washer-dryer. Do not install the washer-dryer in areas that are at risk of frost. Do not transport the washer-dryer without the transport safety bolts in place. To protect the washer-dryer 3 Environmental protection/economy tips Separate out the various waste materials of the packaging and take them to the nearest collection point. Always fill the washer-dryer with the maximum load for the relevant programme. Wash normally soiled laundry without a prewash. Instead of Cottons 90 °C, select the Cottons Eco 60 °C programme. This gives comparable results, but uses less energy. Measure the detergent according to the manufacturer's instructions and in line with the local water hardness.

WEEE) This appliance is labelled in accordance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment - WEEE. The directive provides an EU-wide framework for the return and recycling of used appliances. 4 Your new washer-dryer Description of the washer-dryer The washer-dryer can be used in 3 ways > page 15: washing only drying only successive washing and drying. The successive wash-dry programme automatically shifts from the wash cycle to the dry cycle without further intervention. Drying is achieved using the condensation principle. The condensate that is produced during drying runs via the Drain hose into the Drain tank. Caution: the water supply hose and water Drain hose must be correctly connected during washing and drying > page 26. The tap must be open. Door A safety device prevents the door from being opened during operation. Before opening Make sure that there is no water in the drum and that the drum is not moving.

Emergency release In the event of a power cut, the door can be released mechanically > page 21. 5 Control panel Display panel Shows the settings that have been selected (e.g. spin speed, drying time), the progress of the current programme and the programme status. Indicator lamp Indicates the settings that have been selected for: Temperature: Z - 90°C.

Spin speed: S - 1400 rpm. Options/signal. Programme progress TN' B 5 2 `Pre-wash, Main wash, Rinse, Final spin, Drying. Time-controlled drying, Iron-damp, Cupboard-dry, Extra-dry. Finished in time, Programme start, Childproof lock, Fluff-removal cycle, recommended load.

Drying options P e e: %E l kg Auxiliary displays Indicator lamp Display panel Buttons Washing and drying options > page 13 Temp.: individual adjustment of the washing temperature. Spin: individual adjustment of the spin speed. Options: sets washing options. Set: activation/deactivation of the selected washing options. Delay: delays the Programme start. Dry: sets the drying options Start/Pause: starts and stops the washing programme > page 14.

Programme selector Programme selector > page 11 For switching the washer-dryer on and off and for selecting the programme, can be turned in both directions. Do not adjust the programme selector while washing/drying is in progress. 6 Before washing for the first time The washer-dryer was tested before leaving the factory.

To remove any water that may be left over from the test, do not load any laundry the first time that you run a wash programme. Make sure that the transport safety bolts on the rear of the washer-dryer have been removed > page 24. Do not load any laundry. Close the door. Turn on the tap. Pull out the detergent drawer. Add ½ a measuring cup of detergent to compartment II > page 9. i Do not use detergents for wool or delicates (these cause foam to be created).

Close the detergent drawer. Turn the programme selector to the 60°C programme.

Press the Start/Pause button. At the end of the programme, turn the programme selector to Off. Open the door. i Leave the door open to allow the inside of the washer-dryer to dry. Preparing and sorting the laundry Sorting laundry for washing Sorting laundry according to the information on the care labels Wash white laundry separately from coloureds.

Unhemmed or torn items should not be washed in the washer-dryer, as they may fray.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3656374)

[V6540X0GB user guide](http://yourpdfguides.com/dref/3656374)

<http://yourpdfguides.com/dref/3656374>

The laundry may be damaged if you do not observe the fabric care symbols. Only wash laundry with the following care labels: Care label Type of laundry
Cottons 90 °C. Coloureds 60 °C, 40 °C, 30 °C. Easy-care 60 °C, 40 °C, 30 °C.

Hand- and machine-washable silk, 40 °C, 30 °C, cold. Do not wash. <:98 BA> uFAE> Laundry with care symbol 7 Sorting laundry for drying Sorting laundry according to the information on the care labels Only dry laundry that is labelled "suitable for tumble-drying" or which has the following care symbols: Care label Type of laundry Dry at normal temperature. Dry at low temperature (delicate drying). a `Do not wash the following fabrics in the washer-dryer: Do not machine dry laundry with the b care symbol. Airtight fabrics (e.g. rubber-coated fabrics). Delicate materials (silk, curtains made from synthetic fabrics) they may crease. Dripping-wet laundry - high energy consumption Wool or fabrics containing wool.

Preparing laundry for washing Loose foreign bodies (e.g. coins, paper-clips, needles, nails) may damage the laundry and components of the washer-dryer (e.g. the drum). Drain the pockets of all items. Brush any sand out of pockets and collars. Pretreat any stains. Close zips, do up cover buttons. Remove curtain fittings or place curtains in a laundry bag.

Wash the following in a laundry bag/pillowcase: Delicates, e.g. tights, curtains, Small items, e.g. socks or handkerchiefs, Underwired bras (the underwiring may come loose during the washing process and cause damage).

Turn trousers, knitwear and knitted fabrics, e.g. jerseys, T-shirts or sweatshirts inside out. Only dry fabrics that have already been washed, rinsed and spun. Also spin easy-care fabrics before drying.

Sort the items for washing according to material and desired level of dryness to ensure even drying. Before loading the washer-dryer, make sure that there are no foreign bodies or pets in the drum. Risk of explosion. items that have been treated with cleaning agents containing solvents, e.g. stain remover or, must be carefully rinsed out before they are loaded into the washer-dryer, otherwise there is the risk of an explosion. Unfold the laundry and place it loosely in the drum. Load a mixture of small and large items. Observe the maximum drum loads, Programme table > page 28. Take care not to trap items of laundry between the door and the rubber seal.

Close the door. You will hear it click shut. Measure out and add detergent and care products for only a washing programme or a combined washing and drying programme. Turn on the tap. Preparing laundry for drying Loading the laundry 8 Detergents and Care Products Detergent drawer The detergent drawer is divided into three compartments Compartment I : detergent for pre-wash. Compartment II : detergent for main wash, Compartment i : Liquid additives, such as starch or fabric softener. Additives are automatically dispensed during the final rinse cycle. Do not exceed the maximum capacity, otherwise compartment i may be emptied too early. Dilute viscous additives with water to prevent blockages. Liquid detergent insert: this must be inserted before liquid detergents are used.

To do this: Pull out the detergent drawer as far as the stop. Press on the zone labelled PUSH and take out the detergent drawer. Pull the insert in compartment II forwards as far as the stop and push it down. Insert the detergent drawer. Descaler Descaler can be added to compartments I and II according to the manufacturer's instructions.

Add detergent first, followed by the descaler. Risk of poisoning Keep detergents and care products out of the reach of children. Risk of chemical burns Take care when opening the detergent drawer. There may still be detergent residues in the drawer. Select the correct dosage for the detergent according to: the size of the load, the instructions of the detergent manufacturer, how dirty the laundry is, the water hardness.

You can find out about water hardness in your area from your local waterworks. I II i Detergents and care products i i Using the correct dosage reduces the impact on the environment and gives a good washing result. Only use pH-neutral wool detergent for woollens programmes. 9 Measuring washing powder Normally soiled laundry Set the programme. Do not select ! (Pre-wash) > page 13. Add all the detergent, according s to be removed dripping wet, set the Spin speed to \$ (Rinse hold) before Programme start > page 13. Drain the rinsing water following a programme with \$ (Rinse hold) > page 13. Drain + Spin: Turn the programme selector to Drain + Spin. Set the spin speed to \$ (Rinse hold). Press the Start/Pause button.

or Drain and spin at the desired spin speed: Turn the programme selector to Drain + Spin. Press the Spin button repeatedly until the desired spin speed is set. Press the Start/Pause button. 12 Washing and drying options Temp. button Spin speed button Rinse hold Unbalanced load detection system The temperature can be adjusted individually for each programme. To adjust it, press the Temp. button repeatedly until the required temperature is displayed. The spin speed can be individually adjusted for each programme. To set the spin speed, press the Spin button repeatedly until the required spin speed is displayed. \$ (Rinse hold) deactivates the spin function.

The laundry remains in the rinsing water. The automatic unbalanced load detection system ensures that the laundry is evenly distributed using several initial spins. If the laundry is extremely unevenly distributed, the speed of the final spin is reduced or the spin cycle is not performed for safety reasons. The set programmes can be individually adjusted. To choose the required option: Press the Option button repeatedly until the required option is selected (indicator lamp flashes).

Press the Set button to switch the option on/off (indicator lamp lights up/does not light up). Option button Set button i T Pre-wash X Intensive P Easy-iron If you press and hold the Option ~ button, all the options scroll through. Options (symbols on the display panel) Prewash at 35 °C. Suitable for heavily soiled laundry. Prolonged washing time.

Suitable for particularly heavily soiled laundry with dried-on stains. Cannot be combined with RFLexi Time Special spin sequence with subsequent fluffing. Gentle final spin at reduced speed. Slightly increased residual moisture in the laundry. Reduces creasing and laundry is easier to iron. Increased water level and additional rinse cycle. For regions with very soft water or for further improving the rinsing result. Any detergent residues are removed. Sets the washing time. normal-medium-short.

Activates or deactivates the audible signal. You can postpone Programme start before it begins. Using the Remaining time, you can determine when the selected programme is to end.



[You're reading an excerpt. Click here to read official NEFF V6540X0GB user guide](http://yourpdfguides.com/dref/3656374)
<http://yourpdfguides.com/dref/3656374>

The remaining time can be set in one-hour increments, up to a maximum of 24 hours. Press the Delay button repeatedly until the required number of hours is displayed. Then press the Start/Pause button, the programme will start after a delay according to the set 2 (Remaining time). The required time to the end of the programme is shown on the display panel. Z Water Plus R Flexi Time C Signal Delay button 13 Dry button The drying programmes > page 12 can be individually adapted by selecting the drying options. Press the Dry button repeatedly until the required drying option is shown on the display panel. To deactivate, press the Dry button repeatedly until is shown on the display.

Drying options (symbols on the display panel) 0 Time-controlled drying P Iron-damp e Cupboard-dry e: Extra-dry The drying time can be set to between 2:40 and 0:00 by repeatedly pressing the Dry button. The residual moisture in the washing is increased. Enables easier ironing. The laundry is dry and ready to put away. The laundry is dried intensively.

Suitable for laundry that is hard to dry. Press the Start/Pause button to start the selected programme. Start/Pause button Programme progress i The 2 (Remaining time) is shown on the display panel. The % (Programme start) symbol is lit. The programme progress is shown on the display panel: ! - Pre-wash N - Main wash ' - Rinse B - Final spin ` - Drying Changing the programme To change the programme: Select a new programme.

Press the Start/Pause button. i Pausing the programme The new programme starts. Press and hold the Start/Pause button while the programme is in progress until appears on the display panel. and the (Remaining time) 2 appear alternately on the display while the programme is paused. Press the Start/Pause button to continue with the programme. Cancelling the programme Press and hold button Start/Pause until For washing programmes at high temperatures: Cooling down laundry: choose Rinse + Spin. Press the Start/Pause button. For programmes at low temperatures: choose Drain + Spin. Select the Start/Pause button. is displayed.

If you cancel the Dry programme, the laundry may still be very hot. 14 Washing and drying Washing only Turn the programme selector to the desired programme, e.g. Cottons 60°C. The display panel alternately shows 2 (Remaining time) and the recommended load in kg. The % symbol flashes. If necessary, adjust the temperature and the spin speed and select any options for your individualised programme, > page 13. The Dry function must not be activated.

Load the laundry > page 8. Observe the maximum load, Programme table > page 28.

Press the Start/Pause button. 2 (Remaining time) is shown on the display panel. The % (Programme start) symbol lights up. The washing programme starts. i Drying only Turn the programme selector to the desired drying programme.

The display panel alternately shows 2 (Remaining time) and the recommended load in kg. Press the Dry button to set the drying options > page 14 If you do not make a selection, the e (Cupboard-dry) option is set. Load the laundry > page 8. Observe the maximum load, Programme table > page 28. Press the Start/Pause button.

2 (Remaining time) is shown on the display panel and the 5 and % (Programme start) symbols light up. The drying programme starts. i Washing and drying Successive washing and drying. Set the programme selector to the desired programme, e.g. Cottons 60°C. 2 (Remaining time) and the recommended load in kg are shown alternately on the display panel. The % symbol flashes. If necessary, adjust the temperature and the spin speed and select any options for your individualised programme, > page 13. Press the Dry button to set the drying options > page 14 Load the laundry > page 8.

Observe the maximum load in kg, Programme table > page 28. Press the Start/Pause button. i The drying programme that is carried out is automatically determined by the washing programme, see the Programme table > page 28. 15 End of the programme The washing and drying programmes are ended automatically. appears on the display panel. Turn the programme selector to Off. Remove the washing from the drum. Leave the door open to allow the inside of the washer-dryer to dry out. Turn off the tap (not necessary on models with Aqua-Stop). Rinse hold If the spin function was deactivated at the start of the wash cycle, \$ (no final spin = laundry remains in last rinsing water), the washing programme is automatically stopped after the final rinse.

The display panel shows alternating with . In order to Drain the rinsing water and, if required, spin the laundry: Press the Spin button repeatedly until the required spin speed is set. The water is Drained and the washer-dryer spins the laundry. The programme is completed when appears in the display field. i The maximum spin speed depends on the selected wash programme.

If you do not wish to spin the laundry: Press the Spin button (remaining time for Draining is displayed). The water is Drained, but the washer-dryer does not spin the laundry. The programme is complete when appears on the display panel. Set the programme selector to Off. Remove the laundry.

Leave the door open to allow the inside of the washer-dryer to dry out. Turn off the tap (not necessary on models with Aqua-Stop). Childproof lock For preventing the washer-dryer functions that you have set from being changed inadvertently. Activate/Deactivate: Press the Option and Set buttons at the same time to activate or deactivate the Childproof lock. When the childproof lock is activated, E lights up on the display. 16 Cleaning and care Safety information Risk of electric shock You must disconnect the appliance from the mains first. Never clean the washer-dryer with a water jet. Risk of explosion. Never clean the washer-dryer with solvents. @@ Remove detergent and cleaning agent residue immediately.

Do not clean with a jet of water. Remove any foreign bodies from the drum and rubber seals. @@@@If any remaining metal objects (e.g. @@@@

Clean the detergent drawer guide. Remove the blue fabric softener compartment insert. @@ Insert the fabric softener compartment insert. @@ Use a screwdriver to release the lock pins. @@ Remove the plug from the Drain hose and release the washing water. @@ When no more water runs out, replace the plug.

@@ Clean the pump housing and remove any foreign objects. Make sure that the impeller can turn freely. Replace the pump cover and screw firmly in place. @@ Press the Start/Pause button. Allow the programme to run for approximately 40 seconds.

Set the programme selector to Off. Unplug the mains plug from the socket. Unscrew the water supply hose from the tap. Clean the filter with a small brush.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3656374)

[V6540X0GB user guide](http://yourpdfguides.com/dref/3656374)

<http://yourpdfguides.com/dref/3656374>

Reconnect the hose.

Turn on the tap. Check whether water comes out of the end of the hose. @@@@ Disconnect the washer-dryer from the power supply. Turn off the tap. @@ Close the door. The water control system has been activated. @@ Water is not entering the appliance. See the fault Water is not flowing in. The water is not Drained. See the fault Water is not Drained.

Maximum or minimum drying load not taken into account. HI/End or LO/End flash alternately in the display. See the fault Drying result not satisfactory. Other fault codes are only for use by the after-sales service. Make a note of the fault code to inform the aftersales service. Fault Programme does not start. Possible cause The Start/Pause button has not been pressed. A delayed start time has been selected. Remedial action Press the Start/Pause button. Washer dryer starts on completion of the delay period.

@@ Reselect the delayed start time or start the programme immediately. Press the Start/Pause button. Close the door. Insert plug correctly. Change programme as required.

Fit the Drain hose correctly. Clean the Drain pump > page 18. Clean and dry the detergent drawer > page 17. Use the measuring aid for liquid detergent. Power cut.

The delayed start time that was selected has been cleared. The door is not properly closed. Plug not inserted properly into socket. The maximum spin speed cannot be set. The water is not Drained. The maximum spin speed depends on the programme selected. Drain hose is twisted. Detergent pump is blocked. Detergent residues in the detergent drawer. @@ The door is not properly closed.

The tap is not turned on. The filter in the water supply hose is blocked. The water supply hose is pinched or kinked. Plug in the mains plug correctly. Close the door. Turn on the tap. Clean the filter in the water supply hose > page 18. Check the water inlet hose. Level the washer-dryer > page 25. Remove the transport safety bolts > page 24.

Fit the Drain hose correctly > page 26. During certain programmes the water level is below the visible range. Tighten the screw connection. Have the Drain hose replaced by the after-sales service. Only use detergent which is correct for textiles, and suitable for use in automatic washing machines.

Make sure that you use the correct dosage. Always wash large and small items together. Intense vibrations during spinning. The washer-dryer is not correctly levelled. The transport safety bolts have not been removed.

Washer-dryer fills with water and continuously Drains it away. No water can be seen in the drum. Water leaks from the bottom of the appliance. Drain hose fitted too low. Not a fault. Supply hose screw connection is leaking. Drain hose is leaking. Foam escapes from detergent drawer. Too much detergent has been used. Several attempts to start spinning.

Not a fault. The unbalanced load detection system attempts to redistribute an unbalanced load by starting to spin several times. Large items of laundry are not evenly distributed in the drum. The spin speed is automatically reduced for safety reasons. Washing is not spun properly. Always wash large and small items together. Washing results not satisfactory. Uncleaned areas worse than expected. Select a suitable programme, e.g. a programme with Pre-wash. Pretreat stains if necessary. Too little or incorrect detergent used. Use the correct dosage of a suitable detergent, in accordance with the manufacturer's instructions. Select the load appropriate for the programme.

Rinse the laundry again or change to using liquid detergent. Brush the laundry after it has dried. Wash the laundry using the maximum detergent dosage and the maximum permissible temperature see the care label. 20 Maximum load exceeded. Detergent residues on the washing.

Grey residues on the washing. Some phosphate-free detergents contain water-insoluble residues which appear on washing as light specks. Soiling caused by ointments, grease or oil. Programme terminated unexpectedly. Spinning during drying The Start/Pause button was selected accidentally. No fault Press the button again to restart the programme. "Thermo spin", which is for energy-efficient drying, starts after a drying time of approx. 10 minutes. Loosen up the laundry by hand; start the drying programme > page 15. Turn on the tap.

Select the drying time according to the Load. Once the programme has ended: adjust the load quantity, select a suitable drying programme and restart. Drying result not satisfactory. The laundry clings to the sides of the drum after being spun. Closed tap Selected drying time too short. Maximum or minimum load not taken into account > page 28 The fabric softener is not completely flushed in or too much water remains in the compartment i. The laundry is not dried. The fabric softener compartment insert If necessary, clean the fabric softener is not correctly attached or is blocked. compartment insert and fit it correctly in compartment i > page 17. The tap is turned off.

The load is too large. The drying time is too short. Turn on the tap. Reduce the load size. Select a suitable drying time.

The programme continues when power is restored. If you wish to remove the laundry during a power cut, you must first Drain out the water > page 18. Check whether: the plug is plugged into the socket correctly. the circuit breaker (fuse) has tripped; if it has, call the after-sales service > page 22. No display on the display panel.

Power cut. The door cannot be opened. \$ (Rinse hold) has been selected. The programme is running or the door is locked for safety reasons. Power cut.

Emergency release Select the programme Drain + Spin and press the Start/Pause button. Wait until display panel. appears on the Unlock the door mechanically. To release the door mechanically in the event of a power cut: turn the programme selector to Off and unplug the mains plug from the socket. open the base panel and Drain out the water > page 18.

pull the emergency release downwards and open the door at the same time. Before opening the door, make sure that there is no water or hot detergent solution in the washer dryer. Under no circumstances open the door with the emergency release while the drum is still turning. If you cannot correct a fault yourself (switching on/off) or a repair is required: Turn the programme selector to Off and unplug the mains plug from the socket. Turn off the tap and call the after-sales service > page 22. 21 After-sales service Before you call the after-sales service, please check whether you can correct the fault yourself > page 19. You will be charged if a technician is called out, even during the warranty period. You can find information about your nearest after-sales service here or in the After-sales service directory (depending on the model). Please give the after-sales service the product number (E-Nr.) and production number (FD) of the appliance.



[You're reading an excerpt. Click here to read official NEFF](#)

[V6540X0GB user guide](#)

<http://yourpdfguides.com/dref/3656374>

Enter the number of your appliance here. You can find this information on the rating plate in the frame of the door. Please help us to avoid unnecessary calls by quoting the product and production numbers. This will also save you the associated additional costs. You can rely on the competence of the manufacturer.

Please contact us. This way, you can ensure the repair is carried out by trained service technicians who are equipped with genuine spare parts. 22 Installation instructions Safety information The washer-dryer is very heavy. Take care when lifting it. Do not operate the washer-dryer if it has any visible damage.

If you are in any doubt, please consult our after-sales service or your retailer. Do not install the washer-dryer outdoors or in areas exposed to frost. Frozen hoses can crack or burst. As a result, the washer-dryer could be damaged. Do not stand the washer-dryer upside down or on its side. Do not lift the washer-dryer by protruding parts (e.g. door). Do not place the washer-dryer behind a door or a sliding door which could prevent the washer-dryer door from being opened. This will prevent children from locking themselves in and putting their lives in danger.

Remove the transport braces and cross connectors and store in a safe place. In addition to the instructions provided in this document, special regulations from the relevant water and electric utility companies may apply. If in doubt, have a technician connect the appliance. Included with the appliance Number 4
1 1 1 2 Description Covers for openings left after removing the transport bolts. Spanner 24-40 mm dia. hose clamp for connection to a siphon. Door template Door hinges with screws On the back of the washer-dryer: Water Drain hose Water supply hose Mains cable with plug Instruction manual and booklet containing after-sales service addresses Moisture may remain in the drum following the final inspection which every washer-dryer undergoes before leaving the factory. 23 Removing the transport safety bolts Unscrew all four screws using the spanner supplied. Remove all 4 transport safety bolts completely and take the mains cable out of the retainers. Before using the appliance for the first time, you must make sure that all 4 transport safety bolts have been removed and kept safe for any subsequent transport.

If you need to transport the appliance at a later date, always refit the transport safety bolts to prevent damage to the washer-dryer. Insert the protective covers. Positioning and levelling Positioning Appliance stability is essential to ensure that the washer-dryer does not "creep" during spin cycles. The installation area must be firm, clean and level. Parquet floors and soft floor coverings, e.g. carpets or foam-backed floor coverings, are unsuitable. Slide sheets make it easier to slide the washing machine into the installation recess. Can be ordered from the after-sales service, spare part no. 66 1827.

Moisten the slide sheets with a mixture of water and washing-up liquid before sliding the washer-dryer into place. Do not use grease and/or oil. 24 Levelling Intense noise, vibrations and "wandering" may be the result of incorrect levelling. All four appliance feet must stand firmly on the ground. The washer-dryer must not wobble. Check the levelness of the washer-dryer with a spirit level and correct if necessary. The washer-dryer must not rest against the sides of the installation recess. The lock nuts of the front appliance feet must be screwed tightly against the housing. . Hose and cable lengths Left-hand connection or Right-hand connection approx.

1350 approx. 1400 approx. 1000 approx. 760 min. 500 max. approx. 1400 900 approx. 950 min. 500 max. 900 Dimensions in mm Dimensions Width x depth x height Weight 595 mm x 584 mm x 820 mm 85 kg 25 Water connection To prevent leaks or water damage, you must observe the instructions in this section. If in doubt, have a technician connect the appliance. The water supply and Drain hoses can be routed to the left or right, depending on installation conditions. Do not use a used inlet hose. Only use the inlet hose supplied or one which was purchased from an authorised specialist retailer. Water supply Do not allow the water supply hose to be: kinked or squashed, altered or cut (strength no longer guaranteed).

Note the water pressure in the mains supply: The water pressure should be between 50-900 kPa (0.5-9 bar) (at least 8 litres of water flow out per minute when the tap is turned on). If the water pressure is higher, a pressure reducing valve must be fitted. Connect the cold-water supply hose (blue union nut) to the cold water tap with 3/4" pipe thread (3/4" = 26,4 mm). Only tighten plastic screw connections by hand.

Do not remove the filter from the supply hose. After connecting the water supply hose: Turn the tap on fully. Check the connections for leaks. Water Drainage Drainage into a siphon Do not kink the Drain hose or pull it lengthways. Height difference between the installation surface and the Drain: max. 90 cm, min. 50 cm. Secure the connection with the 24-40 mm hose clamp (included with the appliance). 26 Electrical connection The washer-dryer must only be connected to an alternating current supply via a properly installed earthed socket. If a residual current circuit breaker is used, only use a type which displays this symbol: ..

Only this symbol guarantees compliance with the currently applicable regulations. The mains voltage must match the voltage specifications on the washer-dryer (rating plate). The connected load and fuse required are shown on the rating plate. Make sure that: the the the the the mains plug fits the socket. cable cross-section is adequate. earthing system is properly installed. appliance is not standing on the mains cable. mains plug is accessible at all times. Changes to the mains cable may only be carried out by an electrician. Do not use multiple plugs/adapters or extension cables.

Do not plug in or unplug the mains plug with wet hands. Only pull the mains plug out by the plug itself. Fitting the door hinges to the washer-dryer Once the washer-dryer has been installed in a kitchen unit, it can be concealed with a door. If you wish to do this, you must fit the hinges supplied to the washer-dryer. 27 Table of programmes Observe the information on care labels, fabric type and load quantity.

In order to select the most suitable programme for the laundry, observe the information on the labels that are attached to most items. Type of laundry Programmes* Cottons Cottons Eco Sensitive Night Wash Easy-Care Options* T Drying °C cold-30-40-60-75-90 cold-30-40-60 cold-30-40-60 cold-30-40-60 cold-30-40-60 max. Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3656374)

[V6540X0GB user guide](http://yourpdfguides.com/dref/3656374)

<http://yourpdfguides.com/dref/3656374>

X G A G G G P G G G G A Z G G G G G A G G G A G S G G G A A A A A G G G G 6 kg/4 kg** *Hard-wearing fabrics made of cotton or linen. 3 kg***

Quiet wash programme with a reduced final spin.

Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics. Fabrics made from cotton or easy-care fabrics. For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains). Suitable for hand or machine-washable fabrics made from wool or a wool blend.

Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics. Fabrics made from microfibre.

G G G 3 kg Mix Delicates/Silk cold-30-40 cold-30-40 G A G G G A G G G A A A G A : Wool cold-30-40 2 kg A A A A A A Rapid 15' cold-30 A A A A A A Sports cold-30-40 A G A G G A A *Programmes and options depend on the model **Reduced load quantity for successive washing and drying programme 28

*Consumption rates Washing Programme Cottons 40 °C Cottons 90 °C Cottons Eco 60 °C** Mix 40 °C** Easy-Care 40 °C Delicates/Silk (cold)*

*Delicates/Silk 30 °C 2 kg 3 kg 6 kg Load Energy*** 0.8 kWh 2.1 kWh 1,02 kWh 0.45 kWh 0.45 kWh 0.05 kWh 0.11 kWh 0.05 kWh 0.20 kWh 4,81 kWh 6 kg/3 kg Water*** 60 l 65 l 45 l 40 l 40 l 35 l 35 l 49 l 49 l 79 l Programme duration*** 1:52 h 2:22 h 2:10 h 0:49 h 1:31 h 0:36 h 0:36 h 0:47 h 0:47 h 6:03 h :*

*Wool (cold) : Wool 30 °C Cottons Eco 60 °C Intensive Dry S (2 cycles) *Programme setting for testing and energy labelling in accordance with EN50229, EU Directive 96/60/EC. **Programme setting for testing in accordance with valid standard EN60456.*

*Note on comparative tests: For testing the test programmes, wash the specified load using the maximum spin speed. As a short programme for coloureds, select the Mix 40 °C programme with the maximum spin speed. ***The values may deviate from the indicated values depending on water pressure, water hardness and supply temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions. Drying* Programme Load 1,5 kg 2 kg Intensive Dry S 2,5 kg 3 kg 3,5 kg 4 kg 1,5 kg Gentle Dry 2 kg 2,5 kg 3 kg Cupboard dry 90 min 90 min 100 min 110 min 130 min 150 min 90 min 100 min 110 min 130 min Iron dry 60 min 60 min 90 min 100 min 110 min 130 min 60 min 60 min 90 min 100 min *)The values may diverge from those specified depending on over and undervoltage, fabric type, composition of the laundry to be dried, residual moisture in the fabric and the amount of the load. 29 Index C D E Care information Delay .*

.....

.....

.....

.....

.....

.....

..... 6 Easy-iron -Drying

.....

.....

.....

.....8 Descaling ..

.....

.....

.....

.....

. 18 -Display panel

.....

.....

...6 -Washing

.....

.....

.....

...7 Detergent

.....

.....

.....

..... 9 Electrical connection ..

.....

...27 -Liquid detergent insert . 9, 10 Emergency release .

.....

.....

...21 Care product

.....

.....

.....

....9 Liquid detergent insert

10 Childproof lock

.....

.....

....16 End of the programme

.....

..16 -Display panel ...

.....

.....6 Detergent drawer Energy .

.....

.....

.....

.....

.....

.29 -Cleaning

.....

.....

... 17 Environment Cleaning -Description ..

.....

.....

..... 9 -Energy consumption ..

.....

..8 -Control panel ..

.....

.....17 -Protection ..

.....

.....

.....

.....4 -Detergent drawer

.....

....17 Dimensions .

.....

.....

.....

.... 25 -Drain pump .

.....

.....

..18 Display Extra-dry -Drum ...

.....

.....

.....

.....

.....

17 -Fault message

.....

.... 19 -Display panel

.....

.....

.....6 -Housing

.....

.....

.....

....17 -Drying options

.....

.....

..14 -Water supply hose ...

.....

.....

....18 Door

.....

.....

.....
.....
.....
5, 16 Connection fittings
.....
....26 Door hinges .
.....
.....
.....
... 27 Conservation information ..
.....4 Drain ..
.....
.....
.....
.....
..... 12 F Consumption rates ..
.....
.....
.....29 Drain pump Fabric softener compartment -Cleaning ...
.....
.....
.....
.... 18 insert
.....
.....
.....
.....
....17 Control panel
.....
.....
.....
...6 -Cleaning
.....
.....
.....
.17 Draining the water
.....
.....
18 Fault message
.....
.....
.19 Cupboard-dry
.....
.....
.....
6 Draining water
.....
.....
.....
.....
16 Faults
.....
.....
.....
.....
.....
....19 Filter -Drying options .

.....

.....14 Drum -Cleaning ...

.....
.....
.....

.... 17 -Water supply hose

.....
.18 Drying
.....

.....
.....

.. 14, 15 Final spin -Button ...

.....
.....

.... @@6 -Options .

.....
.....

... @@8 -Woollens ..

.....
.....

. @@@@24 -Button

.....
.....

....6 -Indicator lamp .

.....
.....

.....6 -Detergent .

.....
.....
.....

.....9 Pre-wash Housing -Display panel ...

.....
.....

..... 6 Time-controlled drying -Programme ..

.....
.....
.....

. 13 -Drying options

.....14 -Cleaning .

.....
.....
.....

.....17 Programme Transport safety bolts ...

.....
.....

.24 -Cancelling

.....
.....

14 I -Changing

.....

.....
14 U Included with the appliance
23 -Pausing
.....
.....
.....
14 -Progress

.....
... 14 Unbalanced load detection Installation surface ..
.....
.....

..23 Iron-damp Programme selector

.....
6, 11 system

.....
.....
.....
...13 -Drying options

.....
14 Programme start Use
.....
.....
.....
.....
.....
....15 L -Display panel

.....
.....
6 R Laundry Washer-dryer -Creasing

.....
.....
.....
8 Remedial action

..... 19 Positioning and levelling ..
24 -Loading
.....
.....

.....
..8 Rinse Washing ...
.....
.....
.....
.....

..15 -Preparing for drying ...
.....8 -Display panel ..

.....
.....
.... 6 -Preparing for washing .
.....8 and drying ...
.....
.....

.....	
...15 -Washing options	
.....13 -Sorting for drying ..	
.....	
.....	
...8 Rinse hold	
.....	
.....	
... 13, 16 -Sorting for washing ..	
.....	
7 Rubber	
.....	
.....	
.....	
..... 3 Washing options Levelling .	
.....	
.....	
.....	
...25 -Indicator lamp ..	
.....	
.....	
...6 -Washer-dryer	
.....	
.....	
...24 S Washing programmes	
.....	
.11, 12 Liquid detergent insert	
.....	
.9 Safety information ... 3, 17, 19, 23 Washing temperature .	
.....	
.....13 Set	
.....	
.....	
.....	
.....	
.....	
... 13 Water ..	
.....	
.....	
.....	
.....	
.....29 M -Button ...	
.....	
.....	
.....	
..... 6 Water drainage .	
.....	
.....	
.....	
...26 Water supply	
.....	
.....	
.....	
.26 Main wash Signal Water supply hose -Display panel	

.....
...6 -Indicator lamp ..
.....

... 6 -Cleaning

18 Solvents

..... 3 WEEE ...
.....

.....
..4 O Special programmes ...
.....

... 12 Option

.....
..13 Spin
.....

.....
.. 12 Options

.....
..6 Spin speed

.....
.. 13 -Button

.....
.... 6 -Drying options

.....
..14 -Indicator lamp

.....
.. 6 -Washing options ...

.....
.....13 Start/Pause ...
.....

.....
.....
.....

6 31 W Constructa-Neff Vertriebs-GmbH Carl-Wery-Straße 34 D-81739 München v6540x0gb 12.2010 19291005500 9000493021 .



[You're reading an excerpt. Click here to read official NEFF](#)

[V6540X0GB user guide](#)

<http://yourpdfguides.com/dref/3656374>