



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF V7446X0GB. You'll find the answers to all your questions on the NEFF V7446X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF V7446X0GB User guide NEFF V7446X0GB Operating instructions NEFF V7446X0GB Instructions for use NEFF V7446X0GB Instruction manual NEFF V7446X0GB

The diagram illustrates the structure of the user manual, showing the following sections and their interconnections:

- Your washer dryer:** Contains 'Contents' and 'Intended use'.
- Preparation:** Includes 'Check the machine', 'Insert mains plug', 'Turn on the tap', 'Provide good ventilation', and 'Check the environment'.
- Drying:** Includes 'Washing + Drying without interruption', 'Sort and load the laundry', and 'Sort and adjust the drying programme'.
- Remove laundry:** Includes 'Turn off the tap', 'Switch off', and 'Programme ended when...'
- Important information:** Includes 'Safety with children', 'Safety with pets', 'Safety with elderly people', 'Safety with disabled people', 'Safety with hearing-impaired people', 'Safety with visually-impaired people', 'Safety with people with reduced mobility', 'Safety with people with reduced dexterity', 'Safety with people with reduced vision', 'Safety with people with reduced hearing', 'Safety with people with reduced smell', 'Safety with people with reduced taste', 'Safety with people with reduced touch', 'Safety with people with reduced feeling', 'Safety with people with reduced thinking', 'Safety with people with reduced memory', 'Safety with people with reduced attention', 'Safety with people with reduced concentration', 'Safety with people with reduced motivation', 'Safety with people with reduced energy', 'Safety with people with reduced strength', 'Safety with people with reduced endurance', 'Safety with people with reduced speed', 'Safety with people with reduced accuracy', 'Safety with people with reduced precision', 'Safety with people with reduced reliability', 'Safety with people with reduced consistency', 'Safety with people with reduced stability', 'Safety with people with reduced balance', 'Safety with people with reduced coordination', 'Safety with people with reduced control', 'Safety with people with reduced awareness', 'Safety with people with reduced perception', 'Safety with people with reduced cognition', 'Safety with people with reduced emotion', 'Safety with people with reduced behavior', 'Safety with people with reduced performance', 'Safety with people with reduced results', 'Safety with people with reduced outcomes', 'Safety with people with reduced impacts', 'Safety with people with reduced consequences', 'Safety with people with reduced effects', 'Safety with people with reduced reactions', 'Safety with people with reduced responses', 'Safety with people with reduced actions', 'Safety with people with reduced interventions', 'Safety with people with reduced measures', 'Safety with people with reduced steps', 'Safety with people with reduced procedures', 'Safety with people with reduced processes', 'Safety with people with reduced operations', 'Safety with people with reduced activities', 'Safety with people with reduced tasks', 'Safety with people with reduced jobs', 'Safety with people with reduced roles', 'Safety with people with reduced responsibilities', 'Safety with people with reduced duties', 'Safety with people with reduced functions', 'Safety with people with reduced capabilities', 'Safety with people with reduced abilities', 'Safety with people with reduced skills', 'Safety with people with reduced competencies', 'Safety with people with reduced qualifications', 'Safety with people with reduced credentials', 'Safety with people with reduced certifications', 'Safety with people with reduced accreditations', 'Safety with people with reduced registrations', 'Safety with people with reduced memberships', 'Safety with people with reduced affiliations', 'Safety with people with reduced associations', 'Safety with people with reduced organizations', 'Safety with people with reduced institutions', 'Safety with people with reduced establishments', 'Safety with people with reduced organizations', 'Safety with people with reduced institutions', 'Safety with people with reduced establishments', 'Safety with people with reduced organizations', 'Safety with people with reduced institutions', 'Safety with people with reduced establishments'.
- Programme overview:** A table listing various programmes and their durations.



[You're reading an excerpt. Click here to read official NEFF V7446X0GB user guide](http://yourpdfguides.com/dref/3656372)
<http://yourpdfguides.com/dref/3656372>

.....
.....
.....
.....
.....
.....
.....
.....

13 Turn on the tap 1 4 5 6 * ** For further information and a selection of our products go to our web site: <http://www.neff-international.com> or contact our customer service centres Contents Door handle Before using for the first time For delicate, washable textiles, e.g.made of silk, satin, synthetic fibres or blended fabrics Add the appropriate dose according to: Amount of washing, soiling, water hardness (ask your water supply company) and manufacturer's instructions.



[You're reading an excerpt. Click here to read official NEFF V7446X0GB user guide](#)
<http://yourpdfguides.com/dref/3656372>

Models without insert for liquid detergent: pour liquid detergent into an appropriate dispenser and place in the drum. Use commercially available low foam detergents for washer dryer only. During operation: close the detergent drawer! ... Start/Stop indicator light goes out and or (if was selected, no final spin/drain) appears on the display field, the buzzer sounds. Set volume Page 10 of buzzer. If was selected, and is displayed, touch the Start/Stop button. The programme continues with draining the water and spinning the laundry (the default spin speed can be changed in advance). If you only want to drain the water, touch the Start/Stop button again when the spinning starts.

The programme is paused and the door lock is released. You can remove the laundry. high drum If appears and drying symbol flashes on the display field temperature. Cool-down programme is running until drum is cooled down. If and appears alternately. Page 11: Information on the display Easy-Care textiles made of cotton, linen, synthetic fibres or blended fabrics Observe the safety instructions on page 11. Add detergent and care product Programme ended when ... (see also the information on page 9,10) Read these instructions before switching on the washer dryer.

Also follow the separate installation instructions. Never switch on a damaged machine! Inform your customer service! Detergent drawer with compartments I, II, Control panel Observe the instructions in the Important information section. Page 6 Load both large and small items of washing. Close the washer dryer door. Take care not to trap any items of clothing between the loading door and rubber seal.

(Prewash), (Intensive) (Prewash), (Intensive) (Prewash), (Intensive) Check the machine Constructa-Neff-Vertriebs-GmbH Carl -Wery-Str.34 D-81739 Munich/Germany Observe the care information provided by the manufacturer. Sort according to the information on the care labels. Sort according to type, colour, soiling and temperature. Remove any foreign objects risk of rusting.

Do not exceed the maximum load. Page 7 If drying programme selected. Page 4: Sort and load the laundry (drying) Only dry laundry that is labelled with the following care symbols: = tumble-dry at normal heat setting (Intensive Dry). = tumble-dry at low heat setting (Gentle Dry). The following textiles should not be tumble-dried: = do not tumble-dry care symbol. Woollens or items containing wool. Risk of shrinking! Delicate fabric (silk, synthetic net curtain). Risk of creasing! Items containing foam rubber or similar material. Items which have been treated with flammable solvents, such as stain removers, petrol, paint thinners. Explosion hazard! Items still containing hair lacquer or similar substances.

Dangerous vapours! Do not exceed the maximum drying load. Page 7 Switch off The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load and select additional function, e.g. (Intensive). Max. load according to EN50229. Values in red: Max load for drying; Values in black: Max load for washing. If washing and drying without interruption is desired. The subsequent auto dry programme for Cottons, Cottons Eco and PowerWash 60' is Intensive Dry, for Easy-Care and Mixed Load is Gentle Dry.

ng laundry Important information 7 Drying table Cottons/Coloureds (textiles made of cotton or linen such as underwear, T-shirts, sweaters, trousers, kitchen towels) Dry weight in kg Cupboard dry 0,5 1,0 1,0 2,0 2,0 3,0 3,0 4,0 Estimated drying time in minutes < 60 60 80 80 110 110 150 < 65 65 90 90 130 Intensive Dry (auto) 130 160 0,5 1,0 2,0 2,5 Selectable drying time in minutes 30 60 90 120 Display and Option buttons Display symbols (Washing): On if wash process is running. (Rinse): On if rinse process is running. (Spin): On if spin process is active. (Drying): On if drying process is active. (Automatic load detection): Automatically detects the load size after water inlet phase and sets accurate remaining time.

Symbols indicate small, middle and full loads measured * according to the recommended max. load of the selected programme. * Automatic display of the detected load only for washing programmes with a max. load recommendation > 3.0 kg except for Rinse, Spin and Drain.

Different types of textiles with different water absorption rates may influence the load display. Flashing, tap not open or no water supply. On, if low water pressure. This will extend the programme. Additional functions and Individual settings (Finish in) When you select a programme, the respective programme duration is displayed. You can delay the start of the programme before it begins. The finish-in time indicates when the programme will be finished. It can be set in hour increments up to a maximum of 24 h. Press and hold the (Finish in) button until the required number of hours is shown (h=hour). Select Start/Stop, the door is locked.

Information on the display Please close the door immediately because of rising water level. In pause status and are displayed alternately. Door is locked for safety reasons (water level and/or temperature are too high). For washing programme: In pause status, and are displayed alternately. If you need to open the door, wait for the temperature to drop or drain the water (e.g. select Spin or Drain programme). For drying programme: If you need to open the door, wait for the temperature to drop or set drying programme for 15 minutes to cool down the laundry. If is frequently indicated when the drying programme ends: Clean the air inlet filter. Installation and maintenance instructions, Page 9 Run the Fluff Clean (cold) programme without laundry.

Door cannot be locked/unlocked due to high temperature of the door lock. Keep the machine switched on for about 1 minute. Then the machine can be locked/unlocked again. Door cannot be opened due to the high temperature after the drying programme. The cooling down process will continue until this display disappears and the door can be opened.

On (low water pressure): Flashing (no water supply): Tap turned on? Only information. No influence on the Inlet filter blocked? Clean filter. programme process. The programme Installation and maintenance instructions, Page 8 duration will be prolonged. Supply hose kinked or blocked? Clean drain pump. Installation and maintenance instructions, Page 8; outlet pipe/drainage hose blocked. Hold down the (Dry) button for 3 seconds to clear this display. Clean the air inlet filter. Installation and maintenance instructions, Page 9 Run the Fluff Clean (cold) programme without laundry. Switch off the appliance, wait 5 seconds and switch it back on. If the display appears again, call the customer service. What to do if... Water is leaking out.

No water supply. Detergent not dispensed.

Fit/refit drainage hose correctly.



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>

Tighten the screw connection of the supply hose. Start/Stop not selected? Tap not turned on? Filter blocked? Clean the filter. Installation and maintenance instructions, Page 8 Supply hose kinked or trapped? Safety function active. Programme stopped? Page 5 (no final spin/drain) selected? Page 5 Can be opened by emergency release only. Page 13 Childproof lock is activated? Page 10 Start/Stop or (Finish in) selected? Washer dryer door closed properly? Clean the drain pump. Installation and maintenance instructions, Page 8 Clean waste pipe and/or drainage hose. Not a fault water below the visible area.

Wash small and large items of laundry together. (Less Iron) selected? Page 10 Speed selected too low? Page 10 Not a fault unbalanced load detection system adjusts the imbalance. Remove the insert. Clean detergent drawer and insert it again. Installation and maintenance instructions, Page 7 Run the Fluff Clean (cold) programme without laundry.

Use standard detergents. Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II in the detergent drawer. Reduce detergent dosage for the next wash cycle. Use commercially available low foam detergents and care products which are suitable for use in washer dryer. Are the appliance feet fixed? Secure the appliance feet.

Installation and maintenance instructions, Page 5 Transportation safety devices removed? Remove transport bolts. Installation and maintenance instructions, Page 3 Power failure? Circuit breaker tripped? Reset the circuit breaker/change the fuse. If the fault occurs repeatedly, call the customer service. Not a fault unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry. Not a fault foam detection system active adds an additional rinse cycle. Occasionally, phosphate-free detergents contain waterinsoluble residues. Select Rinse or brush the laundry after washing. This is an innovative process called thermospinning to reduce energy consumption during drying. Run the Fluff Clean (cold) programme without laundry inside to remove fluff accumulated in the tub during tumble drying. What to do if.

.. According to the air cooling principle, higher environment temperature will result in poor drying performance, so the drying duration will be extended. Ensure a good ventilation to remove exhaust heat. Air inlet filter blocked? @@Drying programme does not start. Drying programme not selected? Page 10: (Dry) option start. @@ Pump is blocked? @@dry enough). @@ Machine overload: please follow the load recommendation in the programme table and load display, do not overload machine, because of maximum load amount for drying is lower than for washing unload the machine after washing with maximum load for washing and separate the load into two drying cycles. The line voltage of the power supply is too low (below 200 V) ensure suitable power supply. Air inlet filter blocked? Installation and maintenance instructions, Page 9: Clean the air inlet filter Thick multilayered textiles or textiles with thick fillings these textiles easily dry on the surface, but not inside. This equalization process may take longer.

Please use time drying programs to completely dry these kinds of textiles. Drying time is shortened with a small load. Some residual A small amount of water is moisture may remain in the drying system. Opening the door observed dripping on the quickly creates a suction effect which pulls moisture from the dried laundry load when the drying system. door is opened.

Open the door slowly. Avoid jerking the door open. If you cannot correct a fault yourself or a repair is required: Turn the programme selector to Off and pull the mains plug out of the socket. Turn off the tap and call customer services. Drying duration extended.

/ Recommended programme Intensive Dry (time) 0,5 1,0 1,5 2,0 Selectable drying time in minutes 30 60 90 120 (Spin speed) You can change the indicated spin speed. The maximum spin speed which can be selected depends on the chosen programme. If is selected, the load is held in the rinsing water. Quilt/Terry towel (big or thick textiles made of cotton such as terry towels, bed sheets, table cloths, jeans, workwear) Dry weight in kg Cupboard dry 0,5 1,0 1,0 2,0 2,0 3,0 3,0 4,0 Estimated drying time in minutes < 60 60 90 90 120 120 160 < 80 80 110 110 140 140 170 Intensive Dry (auto) Washer dryer door cannot be opened. Programme does not start. Detergent solution is not drained. (Dry) You can activate, deactivate and set the drying function by touching this option button. Mode of washing and drying without interruption is auto dry only; when single drying programme is selected, you can choose auto dry, or time dry with desired drying time. Page 8 / Recommended programme Intensive Dry (time) Additional functions (Prewash) (Water Plus) (Less Iron) Easy-Care (textiles made of synthetic or mixed fibres such as shirts, sportswear, delicate garments) 0,5 1,0 1,5 2,0 1,0 2,0 2,0 2,5 Selectable drying time in minutes Estimated drying time in minutes < 50 50 100 100 120 30 60 90 120 Cupboard dry < 60 60 110 110 130 / Gentle Dry (auto) Gentle Dry (time) Recommended programme Times are approximate and refer to standard load, spin programme and environment temperature. The maximum selectable drying time (time dry) is 120 minutes, if the load of the laundry to be dried is more than 2.

5 kg, please select auto dry function. Auto dry is recommended to achieve good drying result and save energy. 15 minutes time dry programme is for cooling down the laundry. Page 7 For heavily soiled laundry. Prewash at max. 30°C. High water level to achieve better rinse result. Special spin sequence with subsequent fluffing. Gentle final spin residual moisture in the laundry increased slightly. Extends the washing time for a more intensive washing of heavily soiled items.

See also Programme overview Dry weight in kg 0,5 1,0 (Overdosage): Foam detected. Maybe too much detergent. (Door): On if door can be opened. (Childproof lock): On, if childproof lock is activated. Flashing, if there is misoperation.

Activate/deactivate childproof lock. Page 10 (Intensive) Start/Stop For starting or pausing the washing/drying programme. Signal volume (for button signal and information signal) 1. Start signal mode other displays Display information kg, *: maximum load recommendation in kg for selected washing/drying programme. Page 7: Programme overview Water not visible in the drum.

Spin result not satisfactory. Spin cycle performed several times. Compartment not rinsed out completely. Odour formation in the washer dryer. Foam escapes from the detergent drawer. Consumption values Programme Cottons 30 °C** Cottons 40 °C** Cottons Eco 60 °C** Cottons 90 °C Easy-Care 40 °C** Mixed Load 40 °C ** Delicates Silk 30 °C Wool (cold) Wool 30 °C Intensive Dry Gentle Dry Fluff Clean (cold) Cottons Eco 60 °C + Intensive Dry (2 cycles)* Option Load 7 kg 7 kg 7 kg 7 kg 3,5 kg 3,5 kg 2 kg 2 kg 2 kg 4 kg 2,5 kg - Electricity consumption*** 0,49 kWh 0,57 kWh 1,19 kWh 2,10 kWh 0,48 kWh 0,54 kWh 0,15 kWh 0,08 kWh 0,16 kWh 2,55 kWh 1,55 kWh 0,04 kWh 5,67 kWh Water*** 74 l 74 l 51 l 84 l 58 l 52 l 28 l 42 l 42 l 31 l 31 l 29 l 57 l Programme duration*** 2:18 h 2:18 h 2:31 h 2:15 h 1:00 h 1:03 h 0:39 h 0:36 h 0:36 h 2:30 h 2:00 h 0:16 h 6:58 h Before starting a programme, the max.



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>

load for the selected programme is displayed when the door is open. The remaining time or finish-in time is displayed when the door is closed. Drying status (Auto dry mode/Time dry duration/OFF) ** * Display shown may vary depending on the model and selected programme. ** Only when the drying programme is available.

Time, e.g. *: programme remaining time, or * Finish-in time defined by user. Page 10 Dry, drying mode and drying time: : Auto dry, for washing/drying without interruption. :Auto dry mode 1, for solo drying programme. :Auto dry mode 2, extra dry for solo drying programme. : Drying programme is off; *: Time dry, drying time defined manually. Page 10: (Dry) button Set to 1 step clockwise Press and hold 1 step clockwise Release Safety instructions Read and follow the operating and Installation and maintenance instructions and all other information enclosed with the washer dryer. Retain documents for subsequent use. Risk of electric Never pull out the mains plug by tugging the power cord.

shock Never insert/pull out the mains plug with damp hands. For worn-out appliances: Pull out the mains plug. Sever the power cord and discard together with the plug. Risk of death Destroy the lock on the washer dryer door. This will prevent children from locking themselves in and risking their lives.

Keep packaging, plastic film and packaging parts out of the reach Risk of suffocation of children. Risk of poisoning Keep detergents and care products out of the reach of children. Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvents may lead to an explosion after being Risk of explosion loaded into the washer dryer.

Rinse items of laundry thoroughly by hand before. Washer dryer door may become very hot. Take care when draining hot detergent solution. Do not climb onto the washer dryer. Risk of injury Do not lean on the open washer dryer door. Do not touch the drum in case it is still spinning. Ensure that the pump cap is screwed on while the machine is running to prevent the escape of water and contact with moving pump parts. If a drying programme was interrupted, the washer dryer and the laundry may be very hot, select Intensive Dry or Gentle Dry and set 15 minutes programme to cool down the laundry, then remove the laundry. Button signals 2. Set volume for .

.. Information signals Excessive noise, vibrations and "wandering" during spin cycle. Display panel/indicator lamps do not function while the appliance is running. Programme sequence longer than usual. Detergent residues on the laundry. en OPERATING INSTRUCTIONS : On if programme is in pause.

:On if door can be opened when programme was paused. Set volume* *If required, set repeatedly direct 1 step clockwise Set volume* Set to WASHER DRYER : End of programme, or : end of programme with the *: Set volume of signals. *: Information on the display.

setting. Page 11 Page 10 Childproof lock Programme will not be changed by accidental operation. To activate the childproof lock: After the programme starts or finish in time being activated Page 10, press and hold the (Finish in) button for 5 seconds.; Release when the symbol lights up. If button signal is on, an acoustic signal will be heard.

When the programme ends, the Start/Stop indicator remains on to remind you to deactivate the childproof lock. To deactivate the childproof lock: Touch the (Finish in) button until the Release the button. symbol turns off. Emergency release e.g.

in the event of power failure The programme will continue to run when the power is restored. However, if the laundry has to be removed, the washing machine door can be opened as follows: Risk of scalding. The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not open the washer dryer door if water can be seen through the glass. Set the programme selector to Off and disconnect the mains plug. Drain the detergent solution. Installation and maintenance instructions, Page 8 Pull the emergency release with a tool and release. The washer dryer door can then be opened. Spinning noise during drying.

* 7/3,5 kg Option buttons You can change the spin speed and temperature even while the selected programme is running. The effects depend on the progress of the programme. * Programme setting for testing and energy labelling in accordance with EN50229, EU directive 96/60/EC.. ** Programme setting for testing according to the currently valid version of EN60456. Note for comparative testing: to test using the test programmes, wash using the specified load amount and maximum spin speed. Select the Mixed Load 40 °C programme and maximum spin speed as the short programme for coloureds. *** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambiente temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions. Temp. You can change the indicated washing temperature.

The maximum washing temperature which can be selected depends on the programme that has been chosen. Page 7 symbol flashes if the programme has been changed while childproof lock is activated. If the childproof lock is deactivated while the programme selector is in a different position from when the childproof lock was activated, the running programme will be halted. Differently coloured fluff from the previous drying cycle is redeposited to the laundry in the following washing cycle. The machine includes a self cleaning function to remove fluff Water inlet noise during that is released from laundry during drying.

This is done with drying, Water tap symbol help of a small amount of tap water. Open the water tap also is flashing during drying.

@@@ call set-up fee of up to 6 pence may apply. Read these instructions before switching on the washer dryer. Also follow the separate installation instructions.

@@@@@ Inform your customer service! @@@@@@ Keep the installation room well ventilated. Clean the air inlet filter regularly. Do not block the air inlet and/or air outlet. @@@@ Select Cottons Eco 60 °C and additional (Intensive) function to obtain good cleaning results with significantly lower energy consumption. Dose the detergent according to the manufacturer's instructions and water hardness. If the laundry is then to be dried in the appliance, select the highest selectable spin speed because the more water that is spun out of the appliance, the less time and energy is required to dry it. Keep the installation room well ventilated, clean the air inlet filter regularly. Installation and maintenance instructions. Page 9 Please do not dry dripping-wet laundry.



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>

Waste of time and energy! Display panel/ Display panel/ Option buttons/ Option buttons/ Additional functions Additional functions Programme selector Start/ Stop Intended use For domestic use only.

For the washing of machine-washable fabrics in a detergent solution. To be operated with cold mains water and commercially available low foam detergents and care products which are suitable for use in front loaded washer dryer. Do not leave children unattended near the washer dryer. Keep pets away from the washer dryer! The washer dryer is not to be used by children or persons not familiar with the operating instructions. Install and operate the washer dryer in a room with a drain. In order to ensure your safety, you must plug the cable into a socket which has a reliable earth connection. Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction. Detailed programme overview. Page 7/8 1 2 tion Sort and load the laundry Observe the care information provided by the manufacturer.

Sort according to the information on the care labels. Sort according to type, colour, soiling and temperature. Remove any foreign objects risk of rusting. Do not exceed the maximum load. Page 7 If drying programme selected.

Page 4: Sort and load the laundry (drying) el Observe the instructions in the Important information section. Page 6 Load both large and small items of washing. Close the washer dryer door. Take care not to trap any items of clothing between the loading door and rubber seal. Add detergent and care product le Add the appropriate dose according to: Amount of washing, soiling, water hardness (ask your water supply company) and manufacturer's instructions.

Models without insert for liquid detergent: pour liquid detergent into an appropriate dispenser and place in the drum. Use commercially available low foam detergents for washer dryer only. During operation: close the detergent drawer! Only dry laundry that is labelled with the following care symbols: = tumble-dry at normal heat setting (Intensive Dry). = tumble-dry at low heat setting (Gentle Dry). The following textiles should not be tumble-dried: = do not tumble-dry care symbol. Woollens or items containing wool. Risk of shrinking! Delicate fabric (silk, synthetic net curtain). Risk of creasing! Items containing foam rubber or similar material. Items which have been treated with flammable solvents, such as stain removers, petrol, paint thinners. Explosion hazard! Items still containing hair lacquer or similar substances.

Dangerous vapours! Do not exceed the maximum drying load. Page 7 m Set and adjust the drying programme 1 Turn the programme selector to Intensive Dry or Gentle Dry. Page 7: Programme overview p Compartment II: Detergent for the main wash, water softener, bleach, stain remover Compartment : Fabric softener Compartment I: Detergent for pre-wash 1 Set and adjust the programme Turn the programme selector to desired washing programme. Page 7: Programme overview Use option buttons and additional functions. Page 9/10 All buttons are sensitive and a gentle touch is adequate! (Finish in) or (Spin) option buttons, If you press and hold the (Temp.), the setting options automatically scroll through. If washing and drying without interruption is desired (only possible for Cottons, Cottons Eco, Mixed Load, Easy-Care and PowerWash 60'): Activate auto drying function by touching (Dry) button. Page 10 Do not exceed the maximum load for the drying function. Page 7 Select maximum selectable spin speed of washing programme to ensure the drying result. The default drying mode is , in this mode the drying time automatically adjusted to the load amount to obtain cupboard drier laundry ready to fold and stack in the cupboard.

You can change the drying mode to in order to obtain extra dry laundry, o time dry and define the drying time by touching the (Dry) butto to estimate or select drying duration. Page 8: Drying table All buttons are sensitive and a gentle touch is adequate! If you press and hold the (Finish in) option buttons, the setting options automatically scroll through. 2 Select Start/Stop ...

Drying 2 Select Start/Stop 3 ... Washing/Washing + Drying 4 Removing laundry Open washer dryer door and remove laundry. Leave the washer dryer door and detergent drawer open so that any residual water can evaporate! Important information Washing drying preparing/Protecting the laundry and the machine Empty pockets.

Look out for metal items (paperclips, etc.). Trousers, knitwear and knitted textiles, e.g. Jersey garments, T-shirts or sweatshirts should be turned inside out. Ensure that underwired bras are machine washable. Wash delicates in a net/bag (tights, curtains, underwired bras). Fasten zips, do up any buttons. Brush sand out of pockets and collars. Remove curtain hooks or place curtains in a net/bag.

Use only tumble-dry textiles if you select drying. Before tumble-drying, handwash items should be spun using the appropriate spin speed. Remove as much water as possible before tumble-drying. Recommended spin speed for cottons is more than 1000 rpm; for easy-care is more than 800 rpm. In order to ensure uniform drying, sort the items according to fabric type and degree of drying required. Items which require ironing do not have to be ironed immediately after being tumble-dried. It is a good idea to fold or roll them together for a while, so that any remaining moisture is evenly distributed. To achieve good drying performance, dry quilt covers, terry towels or other large textile items individually. Terry towels not more than 4 pieces (or 3 kg). Turn off the tap Not required for Aqua-Stop models.

Page 9 Installation maintenance instructions, Switch off Set programme selector to Off. Programme ended when

.. Start/Stop indicator light goes out and or (if was selected, no final spin/drain) appears on the display field, the buzzer sounds. Set volume Page 10 of buzzer. If was selected, and is displayed, touch the Start/Stop button.

The programme continues with draining the water and spinning the laundry (the default spin speed can be changed in advance). If you only want to drain the water, touch the Start/Stop button again when the spinning starts. The programme is paused and the door lock is released. You can remove the laundry. If appears and drying symbol flashes on the display field high drum temperature. Cool-down programme is running until drum is cooled down. appears alternately. Page 11: Information on the display If and Before using for the first time Do not put any laundry in the washer dryer. Turn on the tap, pour ½ measuring cup of detergent into dispenser II.



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>

Set the Fluff Clean 40 °C programme and select Start/Stop.

At the end of the programme, set the programme selector to Off. is d e r n, Laundry with different degrees of soiling Wash new items separately. Light Do not prewash. If required, pretreat stains. Select Cottons Eco programme or (intensive) additional function. Heavy Load less laundry. Prewash. If required, pretreat stains. Select Cottons Eco programme or (intensive) additional function. Load laundry of the same colour.

3 Change the programme ... If you have selected the wrong programme by mistake: Reselect the washing/drying programme. If required, adjust the programme setting and/or select additional functions.

Page 9/10 Select Start/Stop. Soaking Pause the programme ... Touch the Start/Stop button.

Follow the instructions in the display field: when lights up and appears in the display, the door can be opened. If required, add/remove a laundry item; If and are displayed alternately, the door cannot be opened due to a high water level in drum or a high temperature. Touch Start/Stop button to continue the programme. The pause function cannot be activated during drying phase. Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set Cottons 30 °C programme and select Start/Stop. After approx. 10 minutes, select Start/Stop. After the required soaking time, reselect Start/Stop if the programme is to be continued or change the programme. Starching Laundry must not be treated with fabric softener.

Starching is possible in all wash programmes using liquid starch. Pour the starch into the fabric softener compartment according to the manufacturer's instructions (if necessary clean it first). ... or terminate the programme Washing programmes with high temperature: Cool down laundry: Select Rinse, touch Start/Stop. Washing programmes at lower temperature: Select Spin, touch Start/Stop. Drying programme: Select Intensive Dry or Gentle Dry, touch (Dry) option button, set 15 minutes drying time, then touch Start/Stop button. Dyeing/bleaching Dye should only be used in normal household quantities. Salt may damage stainless steel.

Always follow the dye manufacturer's instructions. Do not bleach laundry in the washing machine. 5 6 Programme overview (see also the information on page 9,10) Additional functions; information (Water plus), (Water plus), (Less Iron), (Less Iron), (Prewash), (Intensive) (Prewash), (Intensive) Programmes °C Type of laundry Hard-wearing textiles, heat-resistant textiles made of cotton or linen Hard-wearing textiles made of cotton or linen Hard-wearing fabrics made of cotton or linen 90 60 7.0/4.0 ** max.

load (kg)* Cottons Cottons Eco Sensitive 60 7.0 4.0/4.0 ** Hard-wearing textiles made of cotton or blended fabric PowerWash 60' 60 Easy-Care textiles made of cotton, linen, synthetic fibres or blended fabrics (Prewash), (Prewash), (Intensive) for particularly sensitive skin, longer washing at the selected temperature, higher water level, extra rinse Time-controlled programme, 60 minutes. Short programme for normally soiled laundry. (Water plus), (Water plus), (Less Iron) (Less Iron), Easy-Care 60 3.5/2.5 ** Mixed Load Delicates Silk Wool Rapid 15' Fluff Clean 7.0 4.0 2.5 Textiles made of cotton and easy-care textiles For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics 40 2.0 different types of textiles which can be washed together (Prewash), (Water plus), (Less Iron) gentle spin between the rinse cycles only particularly gentle wash programme to prevent Hand or machine washable wool or rich-wool textiles shrinkage of laundry, longer breaks during the programme (fabrics rest in the detergent solution) Easy-Care textiles made of cotton, linen, synthetic fibres or blended short programme, approx. 15 minutes, suitable for lightly soiled laundry fabrics Drum clean programme.

90°C= antibacterial programme, pour no detergent; 40°C= antibacterial programme for use with special washing machine cleaning detergent; = fluff rinsing programme to remove fluff accumulated in the tub during tumble drying. (Water plus), (Less Iron) Washable textiles (Less Iron) Cotton/coloureds textiles, dry at normal heat setting Easy care textiles, dry at low heat setting, 40, 90 0 Rinse Spin Drain Intensive Dry Gentle Dry * ** The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load and select additional function, e.g. (Intensive). Max. load according to EN50229. Values in red: Max load for drying; Values in black: Max load for washing. If washing and drying without interruption is desired. The subsequent auto dry programme for Cottons, Cottons Eco and PowerWash 60' is Intensive Dry, for Easy-Care and Mixed Load is Gentle Dry.

V7446X0GB 7 For further information and a selection of our products go to our web site: <http://www.neff-international.com> or contact our customer service centres Constructa-Neff-Vertriebs-GmbH Carl -Wery-Str.34 D-81739 Munich/Germany 9000599956 1210 Drying table Cottons/Coloureds (textiles made of cotton or linen such as underwear, T-shirts, sweaters, trousers, kitchen towels) Dry weight in kg Cupboard dry 0,5 1,0 1,0 2,0 2,0 3,0 3,0 4,0 Estimated drying time in minutes < 60 60 80 80 110 110 150 < 65 65 90 90 130 Intensive Dry (auto) 130 160 0,5 1,0 2,0 2,5 Selectable drying time in minutes 30 60 90 120

Display and Option buttons Display symbols (Washing): On if wash process is running. (Rinse): On if rinse process is running.

(Spin): On if spin process is active. (Drying): On if drying process is active. (Automatic load detection): Automatically detects the load size after water inlet phase and sets accurate remaining time. Symbols indicate small, middle and full loads measured * according to the recommended max. load of the selected programme.

* Automatic display of the detected load only for washing programmes with a max. load recommendation > 3.0 kg except for Rinse, Spin and Drain. Different types of textiles with different water absorption rates may influence the load display. Flashing, tap not open or no water supply. On, if low water pressure. This will extend the programme. / Recommended programme Intensive Dry (time) 0,5 1,0 1,5 2,0 Selectable drying time in minutes 30 60 90 120 Quilt/Terry towel (big or thick textiles made of cotton such as terry towels, bed sheets, table cloths, jeans, workwear) Dry weight in kg Cupboard dry 0,5 1,0 1,0 2,0 2,0 3,0 3,0 4,0 Estimated drying time in minutes < 60 60 90 90 120 120 160 < 80 80 110 110 140 140 170 Intensive Dry (auto) / Recommended programme Intensive Dry (time) Easy-Care (textiles made of synthetic or mixed fibres such as shirts, sportswear, delicate garments) 0,5 1,0 1,5 2,0 1,0 2,0 2,0 2,5 Selectable drying time in minutes Estimated drying time in minutes < 50 50 100 100 120 30 60 90 120 Cupboard dry < 60 60 110 110 130 / Gentle Dry (auto) Gentle Dry (time) Recommended programme Times are approximate and refer to standard load, spin programme and environment temperature.



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>

The maximum selectable drying time (time dry) is 120 minutes, if the load of the laundry to be dried is more than 2.5 kg, please select auto dry function.

Auto dry is recommended to achieve good drying result and save energy. 15 minutes time dry programme is for cooling down the laundry. Dry weight in kg 0,5 1,0 (Overdosage): Foam detected. Maybe too much detergent. (Door): On if door can be opened. (Childproof lock): On, if childproof lock is activated. Flashing, if there is misoperation. Activate/deactivate childproof lock. Page 10 Display information kg, *: maximum load recommendation in kg for selected washing/drying programme. Page 7: Programme overview Consumption values Programme Cottons 30 °C** Cottons 40 °C** Cottons Eco 60 °C** Cottons 90 °C Easy-Care 40 °C** Mixed Load 40 °C ** Delicates Silk 30 °C Wool (cold) Wool 30 °C Intensive Dry Gentle Dry Fluff Clean (cold) Cottons Eco 60 °C + Intensive Dry (2 cycles)* Option Load 7 kg 7 kg 7 kg 7 kg 3,5 kg 3,5 kg 2 kg 2 kg 2 kg 4 kg 2,5 kg - Electricity consumption*** 0,49 kWh 0,57 kWh 1,19 kWh 2,10 kWh 0,48 kWh 0,54 kWh 0,15 kWh 0,08 kWh 0,16 kWh 2,55 kWh 1,55 kWh 0,04 kWh 5,67 kWh Water*** 74 l 74 l 51 l 84 l 58 l 52 l 28 l 42 l 42 l 31 31 29 l 57 l Programme duration*** 2:18 h 2:18 h 2:31 h 2:15 h 1:00 h 1:03 h 0:39 h 0:36 h 0:36 h 2:30 h 2:00 h 0:16 h 6:58 h Before starting a programme, the max.

load for the selected programme is displayed when the door is open. The remaining time or finish-in time is displayed when the door is closed. Drying status (Auto dry mode/Time dry duration/OFF) ** * Display shown may vary depending on the model and selected programme. ** Only when the drying programme is available. Time, e.

g. *: programme remaining time, or * Finish-in time defined by user. Page 10 Dry, drying mode and drying time: : Auto dry, for washing/drying without interruption. :Auto dry mode 1, for solo drying programme. :Auto dry mode 2, extra dry for solo drying programme. : Drying programme is off; *: Time dry, drying time defined manually. Page 10: (Dry) button : On if programme is in pause. :On if door can be opened when programme was paused. : End of programme, or : end of programme with the *: Set volume of signals. *: Information on the display. setting. Page 11 Page 10 * 7/3,5 kg Option buttons You can change the spin speed and temperature even while the selected programme is running. The effects depend on the progress of the programme. * Programme setting for testing and energy labelling in accordance with EN50229, EU directive 96/60/EC..

** Programme setting for testing according to the currently valid version of EN60456. Note for comparative testing: to test using the test programmes, wash using the specified load amount and maximum spin speed. Select the Mixed Load 40 °C programme and maximum spin speed as the short programme for coloureds. *** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambiente temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions. Temp. You can change the indicated washing temperature. The maximum washing temperature which can be selected depends on the programme that has been chosen. Page 7 8 9 Additional functions and Individual settings (Finish in) When you select a programme, the respective programme duration is displayed. You can delay the start of the programme before it begins. The finish-in time indicates when the programme will be finished.

It can be set in hour increments up to a maximum of 24 h. Press and hold the (Finish in) button until the required number of hours is shown (h=hour). Select Start/Stop, the door is locked. Information on the display Please close the door immediately because of rising water level. In pause status and are displayed alternately.

Door is locked for safety reasons (water level and/or temperature are too high). For washing programme: In pause status, and are displayed alternately. If you need to open the door, wait for the temperature to drop or drain the water (e.g. select Spin or Drain programme).

For drying programme: If you need to open the door, wait for the temperature to drop or set drying programme for 15 minutes to cool down the laundry. If is frequently indicated when the drying programme ends: Clean the air inlet filter. Installation and maintenance instructions, Page 9 Run the Fluff Clean (cold) programme without laundry. Door cannot be locked/unlocked due to high temperature of the door lock. Keep the machine switched on for about 1 minute. Then the machine can be locked/ unlocked again. Door cannot be opened due to the high temperature after the drying programme. The cooling down process will continue until this display disappears and the door can be opened. Flashing (no water supply): On (low water pressure): Tap turned on? Only information. No influence on the Inlet filter blocked? Clean filter.

programme process. The programme Installation and maintenance instructions, Page 8 duration will be prolonged. Supply hose kinked or blocked? Clean drain pump. Installation and maintenance instructions, Page 8; outlet pipe/drainage hose blocked. Hold down the (Dry) button for 3 seconds to clear this display. Clean the air inlet filter. Installation and maintenance instructions, Page 9 Run the Fluff Clean (cold) programme without laundry. Switch off the appliance, wait 5 seconds and switch it back on. If the display appears again, call the customer service. (Spin speed) You can change the indicated spin speed. The maximum spin speed which can be selected depends on the chosen programme. If is selected, the load is held in the rinsing water. (Dry) You can activate, deactivate and set the drying function by touching this option button. Mode of washing and drying without interruption is auto dry only; when single drying programme is selected, you can choose auto dry, or time dry with desired drying time. Page 8 Additional functions (Prewash) (Water Plus) (Less Iron) See also Programme overview Page 7 (Intensive) For heavily soiled laundry.

Prewash at max. 30°C. High water level to achieve better rinse result. Special spin sequence with subsequent fluffing. Gentle final spin residual moisture in the laundry increased slightly.

Extends the washing time for a more intensive washing of heavily soiled items. Start/Stop For starting or pausing the washing/drying programme. Signal volume (for button signal and information signal) 1. Start signal mode other displays Set to 1 step clockwise Press and hold 1 step clockwise Release Safety instructions Read and follow the operating and Installation and maintenance instructions and all other information enclosed with the washer dryer. Retain documents for subsequent use. Risk of electric Never pull out the mains plug by tugging the power cord.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3656372)

[V7446X0GB user guide](http://yourpdfguides.com/dref/3656372)

<http://yourpdfguides.com/dref/3656372>

shock Never insert/pull out the mains plug with damp hands. For worn-out appliances: Pull out the mains plug. Risk of death Sever the power cord and discard together with the plug. Destroy the lock on the washer dryer door.

This will prevent children from locking themselves in and risking their lives. Risk of suffocation Keep packaging, plastic film and packaging parts out of the reach of children. Risk of poisoning Keep detergents and care products out of the reach of children. Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvents may lead to an explosion after being Risk of explosion loaded into the washer dryer. Rinse items of laundry thoroughly by hand before. Washer dryer door may become very hot. Take care when draining hot detergent solution. Do not climb onto the washer dryer.

Risk of injury Do not lean on the open washer dryer door. Do not touch the drum in case it is still spinning. Ensure that the pump cap is screwed on while the machine is running to prevent the escape of water and contact with moving pump parts. If a drying programme was interrupted, the washer dryer and the laundry may be very hot, select Intensive Dry or Gentle Dry and set 15 minutes programme to cool down the laundry, then remove the laundry. Button signals 2.

Set volume for ... Information signals Set volume* *If required, set repeatedly direct 1 step clockwise Set volume* Set to Childproof lock Programme will not be changed by accidental operation. To activate the childproof lock: After the programme starts or finish in time being activated Page 10, press and hold the (Finish in) button for 5 seconds.

; Release when the symbol lights up. If button signal is on, an acoustic signal will be heard. When the programme ends, the Start/Stop indicator remains on to remind you to deactivate the childproof lock. To deactivate the childproof lock: Touch the (Finish in) button until the Release the button. symbol turns off. symbol flashes if the programme has been changed while childproof lock is activated. If the childproof lock is deactivated while the programme selector is in a different position from when the childproof lock was activated, the running programme will be halted. 10 11 What to do if...

Water is leaking out. No water supply. Detergent not dispensed. Fit/refit drainage hose correctly. Tighten the screw connection of the supply hose. Start/Stop not selected? Tap not turned on? Installation and maintenance Filter blocked? Clean the filter. instructions, Page 8 Supply hose kinked or trapped? Page 5 Safety function active. Programme stopped? (no final spin/drain) selected? Page 5 Can be opened by emergency release only. Page13 Childproof lock is activated? Page10 Start/Stop or (Finish in) selected? Washer dryer door closed properly? Clean the drain pump. Installation and maintenance instructions, Page 8 Clean waste pipe and/or drainage hose.

Not a fault water below the visible area. Wash small and large items of laundry together. (Less Iron)selected? Page 10 Page 10 Speed selected too low? Not a fault unbalanced load detection system adjusts the imbalance. Remove the insert. Clean detergent drawer and insert it again.

Installation and maintenance instructions, Page 7 Run the Fluff Clean (cold) programme without laundry. Use standard detergents. Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II in the detergent drawer. Reduce detergent dosage for the next wash cycle. Use commercially available low foam detergents and care products which are suitable for use in washer dryer.

Are the appliance feet fixed? Secure the appliance feet. Installation and maintenance instructions, Page 5 Transportation safety devices removed? Remove transport bolts. Installation and maintenance instructions, Page 3 Power failure? Circuit breaker tripped? Reset the circuit breaker/change the fuse. If the fault occurs repeatedly, call the customer service. Not a fault unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry. Not a fault foam detection system active adds an additional rinse cycle. Occasionally, phosphate-free detergents contain waterinsoluble residues. Select Rinse or brush the laundry after washing. This is an innovative process called thermospinning to reduce energy consumption during drying. Run the Fluff Clean (cold) programme without laundry inside to remove fluff accumulated in the tub during tumble drying.

What to do if ... According to the air cooling principle, higher environment temperature will result in poor drying performance, so the drying duration will be extended. Ensure a good ventilation to remove exhaust heat. Air inlet filter blocked? @@Drying programme does not Drying programme not selected? Page 10: (Dry) option start. @@ Pump is blocked? @@dry enough). @@ Machine overload: please follow the load recommendation in the programme table and load display, do not overload machine, because of maximum load amount for drying is lower than for washing unload the machine after washing with maximum load for washing and separate the load into two drying cycles. The line voltage of the power supply is too low (below 200 V) ensure suitable power supply. Air inlet filter blocked? Installation and maintenance instructions, Page 9: Clean the air inlet filter Thick multilayered textiles or textiles with thick fillings these textiles easily dry on the surface, but not inside.

This equalization process may take longer. Please use time drying programs to completely dry these kinds of textiles. A small amount of water is Drying time is shortened with a small load. Some residual observed dripping on the moisture may remain in the drying system. Opening the door dried laundry load when the quickly creates a suction effect which pulls moisture from the door is opened.

drying system. Open the door slowly. Avoid jerking the door open. If you cannot correct a fault yourself or a repair is required: Turn the programme selector to Off and pull the mains plug out of the socket. Turn off the tap and call customer services.

Drying duration extended. Washer dryer door cannot be opened. Programme does not start. Detergent solution is not drained. Water not visible in the drum. Spin result not satisfactory. Spin cycle performed several times. Compartment not rinsed out completely. Odour formation in the washer dryer. Foam escapes from the detergent drawer.

Excessive noise, vibrations and "wandering" during spin cycle. Display panel/indicator lamps do not function while the appliance is running. Programme sequence longer than usual.



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>

Detergent residues on the laundry. Emergency release e.g. in the event of power failure The programme will continue to run when the power is restored. However, if the laundry has to be removed, the washing machine door can be opened as follows: Risk of scalding. The detergent solution and laundry may be hot. If possible, leave it to cool down.

Do not open the washer dryer door if water can be seen through the glass. Set the programme selector to Off and disconnect the mains plug. Drain the detergent solution. Installation and maintenance instructions, Page 8 Pull the emergency release with a tool and release. The washer dryer door can then be opened.

Spinning noise during drying. Differently coloured fluff from the previous drying cycle is redeposited to the laundry in the following washing cycle. Water inlet noise during The machine includes a self cleaning function to remove fluff drying, Water tap symbol that is released from laundry during drying. This is done with is flashing during drying. help of a small amount of tap water.

Open the water tap also during drying. 12 13 en OPERATING INSTRUCTIONS WASHER DRYER n .



[You're reading an excerpt. Click here to read official NEFF](#)

[V7446X0GB user guide](#)

<http://yourpdfguides.com/dref/3656372>