




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF W5320X0GB. You'll find the answers to all your questions on the NEFF W5320X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF W5320X0GB
User guide NEFF W5320X0GB
Operating instructions NEFF W5320X0GB
Instructions for use NEFF W5320X0GB
Instruction manual NEFF W5320X0GB

Instruction Manual
and Installation Instructions
Washing machine

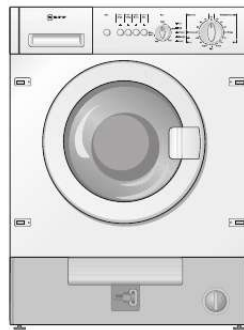

W 5320 X0 GB



[You're reading an excerpt. Click here to read official NEFF W5320X0GB user guide](http://yourpdfguides.com/dref/3655314)
<http://yourpdfguides.com/dref/3655314>

Manual abstract:

..... *Disposing of the packaging*
.....
.....
. *Disposing of your old appliance*

.. *Protection of the environment / Hints and tips* .. *General safety instructions*
.....
.....
.. *Introducing your washing machine*

..... *Control panel*
.....
.....
.....

. *Before using your washing machine for the first time*
.....
.....
.....

. *Preparing your washing machine*
. *Preparing, sorting and loading the washing*
 Preparing the washing

..... *Sorting the washing*
.....
.....
..... *Degrees of dirt*
.....
.....
.....

. *Loading the washing*
.....

. *Detergents and cleaning products*
.....
... *Dosing detergent*
.....
.....

. *Adding detergent/cleaning product*
..... *Programmes and functions*
.....

.. *Programme selector*
.....
.....

... *Additional option buttons*
.....
.....
.....

..... *Wash*
.....
.....
.....

.....
..... *After washing*
.....
.....

.....
Remove the washing

.....
.....

Signal

.....
.....
.....

... *Special applications*

.....
.....
..... *Soaking* ...

.....
.....
.....
..... *Starching* ..

.....
.....
.....
..... *Dyeing* ..

.....
.....
.....
.....
Bleaching

Cleaning and Care

.....
.....
..... *Clean housing, fascia and supply lines*

.....
.....
.....
..... *@@*

.....
.....
..... *Cleaning the detergent dispenser*

.....
.....
..... *Cleaning the drain pump*

.....
..... *Cleaning water inlet strainers* .
.....

..... *Descaling the washing machine*

..... *Help with minor problems* .
.....
.....

..... *Fault displays*

..... *Consumption values* .
.....
.....

.....
.....
.....
..... *Customer service*

.....
.....

.. @@ ..

.....

.....

Safety instructions

.....

..... Removing the transportation protection devices ...

.....

.....

.....

..... Installation surface .

.....

.....

.....

. Connecting the water

.....

.....

. Aligning the washing machine

.... Connecting the power

.....

.....

... Transport, e.g. when moving

..... Aqua Stop warranty .

.....

.....

.....

... Index

.....

.....

.....

..... @@Your washing machine is distinguished by its economical consumption of energy, water and detergent. Each washing machine which leaves our factory is checked carefully to ensure that it functions properly and is in perfect condition.

If you have any questions especially with respect to installing and connecting your washing machine - please do not hesitate to contact our customer service department. Further information and a selection of our products can be found on our Internet page: <http://www.neff.de> Please read these operating and installation instructions and all other information enclosed with the washing machine and act accordingly. Retain all documentation for subsequent use or for the next owner of the appliance.

4 Information concerning waste disposal Disposing of the packaging The shipping package has protected your new appliance on its way to your home. All utilised materials are ecologically harmless and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner. Please ask your dealer or inquire at your local authority about current means of disposal. d Risk of choking! Do not let children play with packaging and associated parts.

Risk of choking on plastic film and collapsible cardboard boxes. Disposing of your old appliance Old appliances are not worthless rubbish! Environment conscious recycling can reclaim valuable raw materials. d Danger of death! Unplug mains plug on redundant appliances. Cut off mains cable and discard with mains plug. Destroy the lock on the door. To prevent playing children from becoming trapped and endangered, ensure that the door locking mechanism is disabled. 5 Protection of the environment / Hints and tips Your washing machine uses water, energy and detergent efficiently, thereby protecting the environment and reducing your household costs. See Page 38 for consumption values of your appliance. Hints and tips Using your washing machine in an efficient and environmentally friendly manner: q Take advantage of recommended load quantity. Cottons/Coloureds Easy Care Delicates Wool 6.

0 kg / 13.2 lb 3.0 kg / 6.6 lb 2.0 kg / 4.4 lb 2.0 kg / 4.4 lb With smaller amounts of laundry, the load adjust reduces the water and energy consumption. q Select the Cottons/Coloureds 60 °C Stains programme instead of Cottons 90 °C. The longer washing time in this 60 °C programme means that the cleaning effects are comparable with those of a 90 °C programme, although the power consumption is considerably lower.

q Do not use prewash for lightly to normally soiled washing. q Add detergent according to the degree of soiling, amount of laundry and water hardness, and observe the detergent manufacturer's instructions. q If washing is then to be dried in the tumble dryer, select spin speed in accordance with the instructions supplied by the dryer manufacturer. 6 General safety instructions Your washing machine is intended for - use in the household only, - For washing machine washable fabrics in washing lye. - operation with cold drinking water and commercially available detergents and cleaning products which are suitable for use in washing machines.

Do not leave children unsupervised near the washing machine. Keep pets away from the washing machine. Do not insert/pull out the mains plug with wet hands. Do not pull out the mains plug by tugging the cable. Do not touch the loading door when washing at high temperatures.

Caution when draining hot water. Do not climb onto the washing machine. Do not lean on the open washing machine door. 7 Introducing your washing machine Adding detergent/cleaning product Dispenser I: Detergent for prewash or starch. Dispenser II: Detergent for main wash, soaking agent, water

softener, bleach or stain remover. Dispenser 2: Additives, e.g. fabric softener or former. (fill up to the max mark on insert 1). Opening .

.. and closing the door Service division 8 Control panel Start button For starting the wash cycle (programme must have been selected). Programme selector For switching the machine on and off and for selecting the programme. Can be rotated in either direction. The programme selector does not rotate while the programme is running the programme sequence is electronically controlled. Buttons for additional options (in addition to the programme if required) Prewash: actuate Prewash Less Ironing: Gentle spin Extra Rinse: Additional rinsing cycle Intensive: Intensive wash Additional options can be combined. The indicator lights of the buttons come on, if the additional options are active. Switching off the additional option: Press the button again. Indicator light goes out.

Indicator lights for the programme status Ready illuminate, if the programme is selected. Washing, Rinsing, Spin illuminate when the Start button is pressed and the particular programme section is running.



[You're reading an excerpt. Click here to read official NEFF](#)

[W5320X0GB user guide](#)

<http://yourpdfguides.com/dref/3655314>

End is lit when the programme has ended. Indicator lights flash: Operation error. Spin speed selector (if required) For stepless setting of the spin speed; must click in place at Rinse Hold.

See chapter Signal, page 26, for switching off acoustic signal or changing the volume. 9 Before using your washing machine for the first time Preparing your washing machine Attention The washing machine must have been installed and connected properly refer to Page 40. i The washing machine was tested before leaving the factory. To remove any water left over from te sting procedures, the first washing cycle should be carried out without laundry in the machine. q Turn the tap on.

q Pull out the detergent drawer all the way. q Pour approx. 1 litre / 1 ¾ pt of water into cham ber II of the detergent dispenser. q ½ Half fill the measuring beaker with detergent and pour into chamber II. i Do not use any special detergents for delicates or woollens (excessive foam). q Close the detergent drawer. q Close the washing machine door. q Set the programme selector to Cottons 90 °C. q Press the Start button. The programme starts.

The programme has ended when the End indicator light is lit: q Turn the programme selector to Off. 10 Preparing, sorting and loading the washing Preparing the washing Attention Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washing machine (e.g. drum). q Empty all pockets on items of clothing. q Brush sand out of pockets and cuffs/turn ups. q Close zips, fasten pillow cases/cushion covers. q Remove curtain runners or tie up in a net/bag.

q Wash in a net/cushion cover: - delicates, e.g. tights, curtains, - small laundry items, e.g. socks or handkerchiefs, - underwired bras (underwire may become detached during washing and cause damage).

q Trousers, knitwear and knitted textiles, e.g. jersey garments, T shirts or sweatshirts should be turned inside out. 11 Sorting the washing According to colour and degree of dirt Attention Washing may become discoloured. Do not wash new coloured washing with other washing.

White items may become grey. Wash white and coloured items separately. Degrees of dirt lightly soiled No visible soiling or stains. Washing has probably absorbed body odour. - Light weight summer clothing and sportswear worn for several hours. - T shirts, shirts, blouses worn for up to one day. - Bed linen, guest towels used for one day. normally soiled Visible soiling and/or a few light stains. - T shirts, shirts, blouses soaked in sweat or worn several times. - Underpants, briefs worn for one day.

- Tea towels, hand towels, bed linen used for up to one week. - Curtains (without nicotine soiling) used for up to six months. 12 very soiled Visible soiling and/or stains. - Kitchen towels used for up to one week. - Fabric serviettes. - Baby bibs. - Children's outer clothing or football jerseys and shorts soiled with grass and/or earth. - Work clothes, e.g. mechanic's overalls, baker's and butcher's clothing.

Typical stains - Skin grease, cooking oil/fat, sauces, mineral oil, wax (containing fat/oil). - Tea, coffee, red wine, fruit, vegetables (which can be bleached). - Blood, egg, milk, starch (containing protein, carbohydrate). - Soot, earth, sand (pigments), tennis clothing soiled with red clay. Removing stains

Remove/pretreat stains as soon as possible after they have occurred.

First dab with a soapy solution. Do not rub. Then select the appropriate programme and wash the item. Stubborn/dried in stains can sometimes only be removed by washing several times. 13 Sorting washing according to the instructions on the care labels Only wash laundry that is labelled with the following care symbols: abcde hard wearing textiles, heat resistant textiles e.

g. made from cotton or linen, fgh for easy care textiles e.g. cotton, linen, synthetic materials or blended fabrics kflg for easy care, washable textiles e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains) 6k fl g for hand and machine washable wool or wool rich textiles e.g. cashmere, mohair or angora, also suited for hand washable silk Do not wash laundry items which bear the following care label in the washing machine: B = do not wash 14 Loading the washing d Risk of explosion! Items of for hand and machine washable silk.

i We do not recommend washing these textiles with other rougher textiles. Wool 6 cold, 30 °C For hand and machine washable wool or wool rich textiles, e.g. cashmere, mohair or angora. Also suited for hand washable silk. Programme options Rinse Rinse cycle with subsequent spin cycle for rinsing hand washed items or for starching. Press the Extra Rinse button for an additional rinse cycle. Spin Spin cycle after a programme with setting Rinse Hold or for spinning hand-washed washing with selection of the required speed. Washing water or rinsing water is drained before the spin cycle. Drain Water is drained after a programme with the Rinse Hold setting on display panel for gentle treatment of delicate laundry.

19 Spin speed selector Basic setting The spin speed selector is pointing up. In the Cottons/Coloureds programme the fabrics will be spun at the maximum possible spin speed. In the Easy Care, Mix, Delicates and Wool programmes, a lower spin speed will automatically be used, irrespective of the position of the button gentle treatment of delicate fabrics. i Between the rinse cycles the washing is given an intermediate spin only (not for Delicates). This improves the rinsing results.

Maximum spin speeds Revolutions per minute 1200 800 800 600 800 800 800 Type of laundry / Programme options Cottons/Coloureds Easy Care Mix Delicates Wool Rinse Spin Additional option Rinse Hold For delicate textiles and net curtains. All programmes can be run without final spin. The laundry is left in the final rinsing water. The Spin indicator light is lit. Before the washing can be removed, the Drain or Spin programme must be run by setting the speed selector to the required speed.

20 Additional option buttons Prewash For very dirty, hard wearing laundry, e.g. cotton or linen. The washing temperature of the prewash is 30 °C. Prewash cannot be selected for woollens programme. i If the prewash is cancelled, the detergent solution is pumped out and the programme continues with the main wash cycle. Less Ironing Gentler reduced spin cycle with subsequent fluffing. After the spin cycle, the laundry is loose in the drum creasing is reduced. Additional rinsing of laundry. Programme duration is extended accordingly.

Recommended application: in areas with very soft water. Extra Rinse 21 Intensive The washing time is extended so that highly soiled washing or 6 kg of cottons/coloureds are washed more intensively. Press the button in addition to the programme for the following combinations of load and degree of soiling:

Amount of laundry 6 kg Programme and button Intensive Cottons/Coloureds 30, 40, 60 °C Cottons/Coloureds 60 °C Stains Cottons 90 °C up to 5 kg Cottons/Coloureds 30, 40, 60 °C Cottons/Coloureds 60 °C Stains up to 3 kg Easy Care 30, 40, 60 °C Mix 30 °C up to 2 kg p g Delicates 30 °C Wool cold, 30 °C See the separate programme table for further information.



[You're reading an excerpt. Click here to read official NEFF](#)

[W5320X0GB user guide](#)

<http://yourpdfguides.com/dref/3655314>

Degree of soiling lightly to normally soiled normally soiled with stains normally soiled normally to heavily soiled normally to heavily soiled with stains normally to heavily soiled 22 Wash Example of Easy Care 40 °C programme: q Turn the programme selector to the desired programme (see also the programme overview). The Ready indicator light comes on. q If required, select spin speed or Rinse Hold. q If required, press the button(s) for additional option(s). The indicator light of the selected button is on. q Press the Start button. The programme starts.

23 Changing the programme If you have accidentally selected the wrong programme: q Turn the programme selector to the desired programme. If prewash is selected subsequently, set the programme selector to Off and reselect the programme. q If required, change other settings. q Press the Start button. The programme starts.

i The newly selected programme starts at the programme section at which the previous programme was cancelled, however with the new settings. If you would like to terminate a programme and remove the washing: q Turn the programme selector to Drain, Spin or Rinse. If required, select spin speed (not Rinse Hold). i If a programme is interrupted at a high temperature, Rinse should be selected to cool down the washing. q Press the Start button.

q Wait until programme ends. q Turn the programme selector to Off. q Open the washing machine door. q Remove the washing. i If a programme was interrupted at a high temperature, the washing machine door may remain locked until the appliance has cooled down. Cancelling the programme 24 After washing The End indicator light comes on. q Turn the programme selector to Off. or Setting selected Rinse Hold (without final spin) i The programme has ended and the Spin indicator light is lit. q Select an additional programme (Drain or Spin). q Press the Start button.

q At the end of the programme option, turn the programme selector to Off. q Open the washing machine door. If the loading door cannot be opened: Wait 2 minutes (safety function is active) or there is still water in the washing machine if the Rinse Hold option was selected. Select the Drain or Spin programme and press the Start button. q Unload the laundry. Attention Remove any foreign objects (e.g. coins, paper clips) from the drum and rubber seal - Risk of corrosion and damage to the drum and rubber seal! q Leave the washing machine door and detergent drawer open to allow the interior of the washing machine to dry. Remove the washing 25 Signal The acoustic signal indicates: - that the additional functions (buttons) have been switched on or off, - individual programme statuses (e.g.

start of programme, end of programme), operating errors and faults. q Press the Start button and set the programme selector to Cottons/Coloureds 30 °C. Hold down the Start button until the signal is emitted. The selected setting is saved. i When the additional functions are switched on, a long signal is emitted; when the additional function is switched off, the signal is short.

The volume of the signal cannot be changed. Signal for switching buttons on and off Signal for programme status The signal can be switched on and off and the volume set before the start or after the end of the programme. q Press the Intensive button and hold down until the signal is emitted and the volume of the signal changes. q Release the button when the required volume is reached. The selected setting is stored.

26 Special applications Soaking q Load laundry of the same colour. q Pour soaking agent into dispenser II according to the manufacturer's instructions. q Set the programme selector to Cottons/Coloureds 30 °C. q Press the Start button. The programme starts. q After approx. 10 minutes, turn the programme selector to Off. The laundry is left to lie in the water. q Select a programme according to the required soaking time, the detergent solution is pumped out. i Only little detergent to be dispensed for the main wash.

Starching The laundry must not be treated with fabric softener. q Insert the washing. q Dose a quantity of starch for approx. 15 litres of water. Dissolve starch according to the manufacturer's instructions. q Turn the programme selector to Rinse. q Set the spin speed; Rinse Hold is possible. q Press the Start button.

@ @ @ @ Close the detergent drawer. @ @ Attention Washing in subsequent wash cycles may become discoloured.

q Apply dyes according to the manufacturer's instructions. After dyeing: q Pour approx. 1/2 measuring beaker of detergent into dispenser II.

@ @ @ @ @ First, always disconnect the appliance from the power supply. Never clean the washing machine with a water jet.

d Risk of explosion! @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ (Up to 20 litres. Have a suitable container ready.) d Risk of scalding! Allow the hot water to cool down beforehand. Keep children and pets away from the washing machine. q Turn the programme selector to Off.

@ @ @ @ @ The pump impeller wheel must be able to rotate. @ @ @ @ @ Insert the pump cover and screw tight. @ @ @ @ @ @ @ @ q Press the Start button, and allow the programme to run for approx. 40 seconds. q Turn the programme selector to Off. q Disconnect the hose from the water tap. q Clean the filter with a small brush or paint brush. q Connect the hose. q Turn the tap on. @ @ @ @ @ @ If descaling is nevertheless required, please follow the instructions supplied by the manufacturer of the descaling agent.

33 Help with minor problems If repairs are needed, and assuming that you cannot eliminate the fault yourself with the aid of the following table q Turn the programme selector to Off. q Disconnect the washing machine from the mains. q Turn off the tap. q Call customer service, see Page 39. d Risk of electric shock! Repairs may be carried out by customer service or authorised technicians only. Fault displays Indicator light flashes and a signal sounds Washing Possible cause Door not closed properly. Remedial action Check whether laundry is trapped in door; Close the washing machine door. Turn the tap on. Eliminate cause. Clean filter, see Page 33.

Eliminate cause. Clean the pump, see Page 31. Clean drainage pipe and/or drainage hose. Rinsing g Tap not turned on. Inlet hose kinked or pinched. Filter blocked in water inlet hose. Water pressure too low. Spin p Loose debris is blocking the pump. Drainage pipe and/or drainage hose blocked. 34 Problems Washing machine door cannot be opened.

Cause There is still some water in the appliance, Rinse Hold selected. Safety function is active. Remedial action Select Drain or Spin. Wait for 2 minutes. Clean and dry the detergent dispenser; see Page 30. Use the dosing aid for liquid detergent. Detergent residue in the detergent drawer. Damp or lumpy detergent. Difficult to dissolve detergent tablets used. Odour in the appliance.

Washing mainly at low temperatures and/or with liquid detergents. A fuse has triggered. gg Before filling dispenser II, crush the tablets in the packet. Start Cottons 90 °C programme without washing.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3655314)

[W5320X0GB user guide](http://yourpdfguides.com/dref/3655314)

<http://yourpdfguides.com/dref/3655314>

Use a standard detergent. Switch on/replace the fuse. If the fault occurs repeatedly, call Customer Service. Control lights do not come on. Power failure. An interrupted programme will be resumed when the power returns.

If you wish to unload the laundry, proceed as in Cleaning the drain pump, page 31. Plug is loose or not plugged in. Programme does not start. Loading door not closed properly. Check whether laundry is trapped in door.

Close the loading door (a click should be heard). Programme does not start. Water does enter the machine or detergent is not washed away. Start button not pressed. Tap not turned on.

Inlet hose kinked or pinched. Filter blocked in water inlet hose. Detergent in chamber I is not washed away. A programme without Prewash was selected. Clean the strainer; see from Page 33. Select programme with Prewash. Press the Start button. Turn the tap on. 35 Problems Water not visible in the drum. Washing solution is not completely drained.

Cause Remedial action Not a fault. The water lies below the visible part of the drum. Pumped blocked by foreign objects. Fluff producing laundry was washed. The water drainage pipe or drain hose is blocked. Water in the base pan; Appliance leaking. Screw fitting of the inlet hose is leaking. Drainage hose is leaking. Clean the pump refer to page 31. Clean drainage pipe and/or drainage hose.

Call Customer Service. Programme does not continue running and an indicator light is lit. Water runs out from under the appliance. Tighten the screw fitting. Replace the drain hose.

Mix 1 tablespoon of fabric softener with ½ litre of water and pour into chamber II of the detergent dispenser. Reduce detergent dosage for next wash cycle or use detergent which is suitable for use in washing machines. Foam comes out of the detergent drawer. Too much detergent or detergent not suitable for use in washing machines used. The washing has not been spun correctly.

Large laundry items have become entangled and are not evenly distributed in the drum. For safety reasons, the high speed final spin cycle was automatically cancelled. Do not put only large items in the drum. Spin result unsatisfactory. Less Ironing button pressed for reduced spin speed see page 21. The Rinse or Spin programme selected maximum spin speed: see Page 20. Spin cycle actuated several times. Not a fault. Unbalanced load detection system is attempting to compensate the imbalance by spinning the washing several times. 36 Problems The programme takes longer than usual.

Cause Not a fault. Imbalance compensation system attempts to balance the laundry by repeated distribution. The foam detection feature has activated an additional rinsing cycle to reduce the amount of foam. Remedial action Wash large and small items together in order to reduce the imbalance. Adjust the detergent dosage for the next wash cycle. Select suitable programme and press the Intensive button or reduce load. Dose detergent according to the manufacturer's instructions. Select Rinse immediately or brush out the washing after drying. Select maximum detergent dosage and maximum permitted temperature for the next wash cycle. Washing result not satisfactory.

Soiling is greater than expected or recommended load has been exceeded. Detergent was underdosed. Detergent residue on the washing. Some phosphate free detergents contain water insoluble residue which may appear as light stains on the washing. Soiling caused by ointment, grease or oil.

Grey residue on the washing. If the fault recurs, call Customer Service, see Page 39. 37 Consumption values Normal programme Additional option ti Load Consumption values ** Power 6 kg 5 kg 6 kg 6 kg 0.65 kWh 0.95 kWh 1.

0.2 kWh 2.1 kWh Water 60 l 60 l 49 l 67 l Programme duration 2:10 h 1:17 h 2:15 h 2:10 h Cottons/Coloureds 40 °C Cottons/Coloureds 60 °C Cottons/Coloureds 60 °C Stains Cottons 90 °C (the hot washing solution is mixed with approx. 7 litres of cold water before being drained) Easy Care 40 °C Easy Care 40 °C (Also suitable as short programme) Delicates 30 °C Wool 30 °C * Intensive * Intensive * Intensive Intensive * - 3 kg 3 kg 0.5 kWh 0.5 kWh 50 l 38 l 1:18 h 0:47 h Intensive * 2 kg 2 kg 0.3 kWh 0.2 kWh 42 l 35 l 0:35 h 0:50 h Programme setting with Intensive option for test in accordance or in conformity with EN 60 456 and IEC 60 456. ** Consumption values will differ from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type and quantity of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional options. 38 Customer service Before you call customer service, please check whether you can eliminate the fault yourself (see from Page 34). A technician who is called out to give advice will charge you, even if the appliance is still under guarantee.

You can find your nearest customer service in the enclosed address list. Please provide customer service with the product number (E Nr.) and the production number (FD) of the appliance. Rating plate These numbers are shown on the rating plate which can be found on the frame of the open door and also on the identification plate, enclosed by a thick line, on the front of the machine behind the nameplate. E Nr. FD Product number Production number Please note the two numbers in the space provided above. In specifying the product number and production number of your appliance, you help us in our attempt to prevent unnecessary travelling and the associated extra costs. 39 Installing, connecting and transporting the appliance Please install and connect the washing machine in accordance with the enclosed installation and assembly instructions. Be sure to read the information contained in this chapter! Safety instructions d Risk of injury! The washing machine is very heavy. Take care when lifting it.

Attention Frozen hoses may tear/burst. Do not install the washing machine in an area where there is a risk of frost or outdoors. The worktop must not have any cut outs in the area of the washing machine. In addition to the safety information listed here, the local water and electricity supplier may have special requirements. If in doubt, have the appliance connected by a specialist.

40 Removing the transportation protection devices Removing the transportation protection devices d Caution The transport bolts must always be removed before using the appliance for the first time. q Release screws 1, 2 and 3 using the A/F 13 wrench until they can be moved freely. q Completely remove all transportation protection devices (A and B screw together with washer and bushing; C screw together with spring, washer and bushing). q Insert the covers. Storing the transportation protection devices Always keep the transport bolts for subsequent transportation of the appliance (e.

g. when moving house).



[You're reading an excerpt. Click here to read official NEFF](#)

[W5320X0GB user guide](#)

<http://yourpdfguides.com/dref/3655314>

q Store transport bolts 1 and 2 (screw washer and bushing onto bolt). 41 Installation surface Appliance stability is important so that the washing machine does not wander" during the spin cycles. The installation surface must be solid and level. Soft floor coverings, e.g. carpets or floor coverings with a foam backing are not suitable. Always place the washing machine on the supplied slide plates. If the washing machine is to be aligned with the height adjustment kit WZ 20270 / Z 7040X0 / WMZ 2270: q Moisten the slide plates with a mixture of water and washing up liquid before pushing in the washing machine.

Do not use grease and/or oil! If the washing machine is to be installed on a base: q Do not use slide plates. q Secure the front feet of the washing machine with holding brackets*. If the washing machine is to be installed on a wooden floor: q If possible, install the washing machine in a corner. q Screw a water resistant wooden board (at least 30 mm thick) to the floor. Take into account the height of the worktop in your kitchen! q Do not use slide plates. q Secure the front feet of the washing machine with holding brackets*. * Holding brackets (set) can be obtained from a specialist store or the Customer Service order no.

CZ 110600. 42 Connecting the water d Risk of electric shock! Do not immerse Aqua Stop safety device in water (contains electrically operated valve). To prevent leaks or water damage, it is essential to follow the instructions in this chapter! Water inlet hose Attention Operate the washing machine with cold drinking water only.

Do not connect to the mixer tap of an unpressurised hot water apparatus. If in doubt, have the appliance connected by a specialist. The water inlet hose must not be - kinked or crushed, - modified or severed (strength is no longer guaranteed). Check the mains water pressure: - The water pressure should be between 1 and 10 bars (when the tap is turned on, at least 8 litres of water is discharged per minute). - If the water pressure is higher, install a pressure reducing valve.

Water drainage hose Attention Do not bend or pull the water drainage hose. Level the washing machine with the assistance of the four adjustable feet and a spirit level: All four feet must be firmly on the floor. The washing machine must not wobble. The locknuts on the front feet of the appliance must be screwed against the housing! Attention Loud noise generation, vibrations and "wandering" may be due to incorrect alignment! Aligning the washing machine 43 Connecting the power Attention Connect the washing machine only to an alternating current via a correctly installed earthed socket. The mains voltage must correspond to the voltage specification on the washing machine (nameplate).

Connection specifications as well as the required fuses are stipulated on the appliance nameplate. Ensure that: - The mains plug and socket are compatible. - The cable cross section is adequate. - The earthing system has been installed correctly. The mains cable may be changed (if required) by an electrician only. Replacement mains cable available from customer service. Do not use multiple plugs/sockets or extension cables. @@@@Do not insert/pull out the mains plug with wet hands. @@@@- Disconnect the washing machine from the power supply, - remove the hoses, - install the lower 2 transport bolts. Having transported the appliance and ensured proper installation and connection, allow the Drain programme to run through before starting the first wash programme.

Preparing and inserting the transport bolts q Remove the 2 lower covers. q Prepare the transport bolts: Loosen the screw in the sleeve until the end of the screw is level with the end of the sleeve. q Through the open washing machine door have a second person pull the top of the drum forwards. Now insert transportation protection devices 1 and 2 and tighten the screws. The washer lugs must be located in the groove in the rear panel of the housing. 45 Aqua Stop warranty In addition to warranty claims against the seller based on the sales contract and in addition to our appliance warranty we shall be liable for payment of damages under the following conditions: 1. If damage is caused by water due to a fault of our Aqua Stop system, we shall compensate the private user for the damage. 2. This liability guarantee is valid for the service life of the appliance. 3.

A claim under the warranty can only be considered provided Aqua Stop has been properly installed and connected to the appliance according to our instructions, including a properly installed Aqua Stop extension (original accessory). Our warranty does not apply to defective supply lines or fittings up to the Aqua Stop connection on the tap. 4. If your washing machine features Aqua Stop, you do not need to keep your eye on the washing machine during operation or turn the tap off afterwards. You should only turn the tap off if you intend being away from home for a prolonged period, e.g. on holiday. 46 Index A Additional options, 9, 21 Extra Rinse, 9, 21 Intensive, 9, 22 Less Ironing, 9, 21 Prewash, 9, 21 Aligning the washing machine, 43 Aqua Stop, 46 C Cancelling the programme, 24 Care labels, 14 Changing the programme, 24 Cleaning and care, 29 Control panel, 29 Detergent drawer, 30 Drain pump, 31 Drum, 29 Housing, 29 Strainer, 33 Supply lines, 29 Closing cap, 31 Connecting the power, 44 Connecting the water, 43 Consumption values, 38 Control panel, 9 Cottons/Coloureds, 18 20 Stains, 18 Customer service, 39 E Easy-Care, 18 End of the programme, 9, 25 F Fault display, 34 Functions, 18 H Hints and tips, 6 B Basic programmes, 18 Bleaching, 28 I Indicator lights, 9 End of programme, 9 Ready, 9 Rinsing, 9 Spin, 9 Washing, 9 Insert transportation protection devices, 45 Installation surface, 42 Internet, 4 L Loading the detergent, 17 Loading the washing, 11, 15 D Degrees of dirt, 12 Delicates, 19 Descaling, 33 Disposal, information, 5 Dosing detergent, 16 Drain, 19 Dyeing, 28 M Mix, 19 O Old appliance, 5 47 P Packaging, 5 Preparing the washing, 11 Problems, 34 Product number, 39 Production number, 39 Programme duration., 38 Programme options, 19 Programme selector, 9, 18 Programmes, 18 Protection of the environment, 6 Pump cap, 32 S Safety instructions, 7, 40 Signal, 26 Soaking, 27 Sorting the washing, 12 Spin, 19 Spin speed selector, 9, 20 Starching, 27 Start button, 9 Start programme, 23 Storing the transportation protection devices, 41 T Take out the drain hose., 31 Transporting the washing machine, 45 W Wash, 23 Washing machine, 8 Wool, 19 R Rating plate, 39 Remove the washing, 25 Removing stains, 13 Removing the transportation protection devices, 41 Rinse, 19 Rinse Hold, 20 48 49 0304 en 9000 004 036 50 Programmes 1)2) Type of laundry Amount of Degree of soiling laundry Required button, additional function Cottons/Coloureds ab Hard wearing textiles, heat resistant textiles e.



[You're reading an excerpt. Click here to read official NEFF W5320X0GB user guide](http://yourpdfguides.com/dref/3655314)
<http://yourpdfguides.com/dref/3655314>

g. cotton or linen 30, 40 3), 60 °C 60 °C Stains 3) 90 °C 30, 40, 60 °C 30, 40, 60 °C 60 °C Stains up to 5 kg 6 kg g light to normal normally with stains normal light normal to heavy normally to heavily with stains cde Intensive Intensive Intensive Intensive Intensive Easy Care fg Easy Care textiles e.g. cotton, linen, synthetic materials or blended fabrics (also suitable as a short programme) 30, 40, 60 °C 30, 40 3), h light up to 3 kg normal to heavy Intensive 60 °C Mix k For cotton washing and easy care textiles - different types of washing can be washed together 30 °C 30 °C up to 3 kg light normal to heavy Intensive f Delicates kfl Delicate, washable textiles, e.g. silk, satin, synthetic or blended fabrics without wool component (e.g. curtains) 30 °C 30 °C up to 2 kg light normal to heavy Intensive g Wool 6kflg light 3) hand and machine washable wool or woolrich textiles, e.g. cashmere, mohair or angora.

Also suited for hand washable silk. cold, 30 °C cold, 30 °C up to 2 kg Intensive normal to heavy Programme options Rinse, Spin, Drain 1) The following additional options can be selected in addition to the programmes: Spin speed selector: Spin speeds or Rinse Hold, Buttons: Prewash, Less Ironing, Extra Rinse, Intensive. 2) Pour detergent into dispenser II (on left) for programme without prewash; distribute detergent between dispensers I and II for programmes with prewash. 3) Programme setting for test in accordance or in conformity with EN 60456 and IEC 60456. Quick reference instructions 1 2 3 4 5 If required: 6 If required: 7 8 9 10 At the end of the programme: 1 2 0304 en 9000 004 036 \$.



[You're reading an excerpt. Click here to read official NEFF](#)

[W5320X0GB user guide](#)

<http://yourpdfguides.com/dref/3655314>