



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF W5420X0GB. You'll find the answers to all your questions on the NEFF W5420X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF W5420X0GB User guide NEFF W5420X0GB Operating instructions NEFF W5420X0GB Instructions for use NEFF W5420X0GB Instruction manual NEFF W5420X0GB

Your washing machine

Intended use

Preparation

Washing

Removing washing

Individual settings

Important information



You're reading an excerpt. [Click here to read official NEFF W5420X0GB user guide](http://yourpdfguides.com/dref/3655273)

<http://yourpdfguides.com/dref/3655273>

Manual abstract:

The washing machine is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition. For further information and a selection of our products go to our web site: <http://www.neff.de> Intended use J for use in the household only, J for the washing of machine washable textiles in a detergent solution, J to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines. - Do not leave children unattended near the washing machine! - Keep pets away from the washing machine! Preparation Correct installation according to separate Installation instructions. Before washing for the first time, wash once without any washing -> Page 6. Washing Detergent drawer with compartments I, II, 2 Washing machine door Control panel Door handle Removing washing Open washing machine door and remove washing. If Rinse Hold (Rinse stop = without final spin) is active: Select the spin speed or set programme selector to Drain or Spin. Select Start/Pause.

Remove any foreign objects risk of rusting. Sorting and inserting the washing Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature. Do not exceed maximum load -> Page 7. Follow Important instructions -> Page 6! Insert large and small items of washing! Close the washing machine door.

Take care not to trap any items of clothing between the loading door and rubber seal. Individual settings F Spin speed or Rinse Hold (Rinse stop = without final spin) can be set before and while the The spin speed F selected programme is running. Effects dependent on the programme progress. The maximum selectable spin speed depends on the model and the set programme. Additional functions see also programme overview Intensive Extend the washing time for a more intensive washing of heavily soiled items.

Prewash Less Ironing Extra Rinse For heavily soiled washing. Prewash at max. 30 °C. Special spin sequence with subsequent fluffing. @@Additional rinse cycle, extended washing time. @@Remove metal parts (paper clips, etc.). Wash delicates in the net/bag (tights, curtains, underwired bras). Close zips, button up covers. Brush sand out of pockets and collars.

@@@Turn on the tap, fill approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the Easy Care 60 °C programme and select Start/Pause . At the end of the programme set the programme selector to Off. Insert mains plug With dry hands only! Take hold of the plug only!

Contents J J J J J J J J J J J J J J J J Page Add detergent and care product Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer! Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages. Switch off Set programme selector to Off. Washing with different degrees of soiling Light heavy Wash new items separately.

Do not prewash. If required, pretreat stains. Select Intensive additional function. Load less washing. Prewash.

If required, pretreat stains. Select Intensive additional function. Intended use . . .

.....

.....

... 1 Programmes . .

.....

.....

..... 1 Set and adjust programme .

.....

.....

.... 3 Washing

.....

.....

.....

.. 3/4 After washing

.....

.....

... 4 Individual settings . .

.....

.....

5 Important information

.....

..... 6 Emergency release . .

.....

.....

... 6 Overview of programmes .

.....

..... 7 Safety instructions

.....

.....

..... 8 Consumption values . . .

.....

.....
.. 8 Care ...

.....

.....

.....

.....

9 Information about the indicator lights 9 Maintenance

.....

.....

.....

. 10 What to do if... ..

.....

.....

.. 11 Turn on the tap F F End of programme when ...

... Ready is lit on the indicator light. Start/Pause For starting or interrupting the programme. Signal 1. Start signal mode Insert for liquid detergent (depending on model), page 6 Compartment II: Detergent for the main wash, water softener, bleach, stain remover Compartment 2 : Fabric softener, starch Compartment I: Detergent for pre wash Programmes Detailed programme overview > Page 7. Spin speed can be selected individually, irrespective of the selected programme and programme progress. Cottons ..

..... Easy Care Hard wearing textiles Stains

.....

... Hard wearing textiles ..

..... easy care textiles Mix

.....

. different types of washing Delicates

.....

. delicate washable textiles u Wool

.. hand /machine washable wool Rinse

.....

extra rinse with spin Spin

..... extra spin with selectable spin speed Drain .

.....

.. the rinsing water with Rinse Hold (Rinse stop = without final spin) Set to D 1 step to right keep selected and + 1 step to right release Set and adjust programme Start/ Pause Additional functions Spin speed Status displays Programme selector For additional functions and spin speed see individual settings -> Page 5. 1 3 2 Drain hose Detergent solution pump Emergency release Change programme ..

. If you have mistakenly selected a wrong programme: - Reselect programme. - Select Start/Pause. Blind mode* ON OFF Optional: ON OFF direct Load washing of the same colour Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set Cottons 30 °C programme and select Start/Pause.

After approx. 10 minutes select Start/Pause. After the required soaking time reselect Start/Pause, if the programme is to be continued or change the programme. Starching Laundry must not be treated with fabric softener Starching is possible in all wash programmes if liquid starch is used. Add starch to the fabric softener compartment 2 in accordance with the manufacturer's instructions. Soaking Dyeing/bleaching Set to D Information signals Dye in small quantities only. Salt can corrode stainless steel. Observe the dye manufacturer's specifications. Do not bleach laundry in the washing machine. @@- Push insert forwards.

@@@2. Set volume for ... * Long signal - function on. Short signal - function off. @@- Wash normally soiled washing without prewash.

@@@@@@@@@@@@@@@@@@@@The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not reach into the drum if it is still rotating.

@@- Set the programme selector to Off and disconnect the mains plug. - Drain the detergent solution -> page 10. - Pull the emergency release with a tool and release. The washing machine door can then be opened. .

.. @@- Select Start/Pause. Programmes at lower temperature: - Select Spin or Drain. @@- Retain documents for subsequent use.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3655273)

[W5420X0GB user guide](http://yourpdfguides.com/dref/3655273)

<http://yourpdfguides.com/dref/3655273>

@@- Never insert/pull out the mains plug with damp hands. Danger to life Redundant appliances: - Pull out the mains plug. - Sever the power cord and discard together with the plug. - Destroy the lock on the washing machine door. @@@@Risk of explosion - Caused by detergents containing solvents, e.g. @@Before hand thoroughly rinse items of washing by hand. Risk of injury - Washing machine door may become very hot. - Caution when draining hot detergent solution. - Do not climb on the washing machine.

- Do not lean on the open washing machine door. @@Pull out the mains plug! Risk of explosion! @@Allow detergent solution to cool down! @@If textiles are heavily soiled, reduce the load or select additional functions, e.g. Intensive. Wipe with a soft, damp cloth. Do not use any abrasive cloths, sponges or cleaning agents (stainless steel cleaner). Immediately remove washing and cleaning agent residue. Do not clean the appliance with a water jet. Set programme selector to Off, pull out the mains plug. Take the drainage hose out of the retainer.

Remove the sealing cap, allow the detergent solution to flow out. Push the sealing cap back on. Carefully unscrew the pump cover (residual water). Clean the interior, pump cover thread and pump housing (fan impeller in the detergent solution pump must rotate). What to do if .

.. - Correctly attach/replace drainage F Water is running out. - Tighten screw fitting on the supplyhose. hose.

- Start/Pause not F Water not flowing in. - Tap not open? selected? Detergent not washed in. Operating instructions Clean the detergent drawer if it contains detergent or fabric softener residue. 1.

Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger. Clean detergent dispenser and insert with water and a brush and d seconds. Set programme selector to Off. Pull out the mains plug. Clean filter: 1. Depending on model: Remove hose from tap. Clean filter with small brush. or Remove hose from the rear. Remove filter with pliers and clean.

2. Connect the hose and check for leaks. Close the washing machine door properly; washing may be caught. Turn on the tap, supply hose kinked/jammed; Clean filter > Page 10; water pressure too low. Additional programmes Clean detergent solution pump -> Page 10; outlet pipe/ drainage hose blocked.

Motor fault. Call customer service! Programmes Easy Care Delicates u Wool Cottons Stains Mix * Programme setting to be tested in accordance with European standard 60 456. Note on comparative tests: test the test programme with maximum load, Intensive adicional function selected, maximum spin speed. A short programme which can be used for coloured items is Easy Care 40 °C, without the Intensive adicional function selected and set to maximum spin speed. ** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.

Water in the base pan, appliance leaking. Call customer service! or F F 9 10 Other displays: Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call customer services > Installation instructions, Page 7. - Too much detergent used? @@- Reduce detergent dosage for the next wash cycle. Intense noise formation, - Appliance feet fixed? Secure appliance feet > Installation instructions, Page 5. @@Remove transportation protection devices > Installation cycle. instructions, Page 4. - Power failure? Indicator lights do not - Fuse tripped? Switch on/replace fuse. @@appliance is running. @@longer than usual.

- Not a fault foam detection system active - a rinse cycle is started. Detergent residue on the - Occasionally phosphate free detergents contain water insoluble residue. washing. - Select K (Rinse) or brush the laundry after washing. In the pause state - Water level too high. Top up washing is not possible. If required, close door immediately. Start/Pause flashes very - Select "Start/Pause" to continue the programme. quickly and a signal sounds. If a fault cannot be rectified or a repair is required: - Set programme selector to Off and pull out the mains plug.

- Turn off tap and call customer service > Installation instructions, Page 7. 30, 40, 60, 90 °C 30, 40, 60 °C cold, 30 °C 60 °C 30 °C 30 °C Washing machine Read these instructions before switching on the washing machine! Also follow the separate Installation instructions. Follow the safety instructions on page 11! 7 8 11 .



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3655273)

[W5420X0GB user guide](http://yourpdfguides.com/dref/3655273)

<http://yourpdfguides.com/dref/3655273>