



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF W5440X0EE. You'll find the answers to all your questions on the NEFF W5440X0EE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF W5440X0EE User guide NEFF W5440X0EE Operating instructions NEFF W5440X0EE Instructions for use NEFF W5440X0EE Instruction manual NEFF W5440X0EE

Your washing machine

Intended use

Preparation

Washing

Removing washing

Individual settings

Important information



You're reading an excerpt. [Click here to read official NEFF W5440X0EE user guide](http://yourpdfguides.com/dref/3655265)
<http://yourpdfguides.com/dref/3655265>

Manual abstract:

The washing machine is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition. For further information and a selection of our products go to our web site: <http://www.neff.de> Intended use J for use in the household only, J for the washing of machine washable textiles in a detergent solution, J to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines. - Do not leave children unattended near the washing machine! - Keep pets away from the washing machine! Preparation Correct installation according to separate Installation instructions. Before washing for the first time, wash once without any washing -> Page 6. Washing Removing washing Open washing machine door and remove washing. If D (Rinse stop = without final spin) is active: Select the spin speed or set programme selector to b (Drain) or B (Spin). Select M (Start/Pause).

Remove any foreign objects risk of rusting. Individual settings F Option buttons You can change the spin speed and temperature beforehand and while the selected programme is running. Effects dependent on the programme progress. Important information Protecting the washing and the machine Empty pockets.

Remove metal parts (paper clips, etc.

). Wash delicates in the net/bag (tights, curtains, underwired bras). Close zips, button up covers. Brush sand out of pockets and collars. Remove curtain fittings or include in the net/bag.

Sorting and inserting the washing Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature. Do not exceed maximum load -> Page 7. Follow Important instructions -> Page 6! Insert large and small items of washing! Close the washing machine door. Take care not to trap any items of clothing between the loading door and rubber seal. @@@@ Take hold of the plug only! Before washing for the first time, Do not put any washing in the washing machine! Turn on the tap, fill approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the A Sintetic. (Easy care) 60 °C programme and select M (Start/Pause). At the end of the programme set the programme selector to m (Off).

Contents J J J J J J J J J J J J J J J J Add detergent and care product Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer! Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages. Page Switch off Set programme selector to m (Off). Á (Ready in) The respective programme duration is displayed by selecting the programme. The programme start can be delayed before the programme begins. The Á (Ready in) time can be set in hour steps up to maximum 24h. Keep pressing the Á (Ready in) button until the required number of hours is indicated (h=hour). Select M (Start/Pause).

Additional functions see also programme overview Extend the washing time for a more intensive washing of heavily ã (Wash Plus) soiled items. P (Prewash) For heavily soiled washing. Prewash at max. 30 °C. e (Reduced Ironing) Special spin sequence with subsequent fluffing.

Gentle final spin - residual moisture in the washing increased slightly. K (Rinse Plus) Increased water level and additional rinse cycle, extended washing time. For areas with very soft water or for further improvement of the rinsing result. Turn on the tap Programmes Detailed programme overview > Page 7. Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

y Algodón Color/ Cotone (Cottons) . . . j Color Eco (Cottons eco) Hard wearing textiles = Clinic (Sensitive) Power Wash 60 min Ç Sintetic.

(Easy care) easy care textiles yÇ Mix (Mixed Load) . .

. different types of washing q Delica.

(Delicates/Silk)

delicate washable textiles U Lana (Wool) hand /machine washable wool K (Rinse)

. extra rinse with spin B (Spin)

. extra spin with selectable spin speed b (Drain) .

.

. . . the rinsing water with D (Rinse stop = without final spin) C (Gentle Spin) . . . washing washed by hand at reduced spin speed Á Rapido 15 min (Super Quick) . . .

. . . short programme * Sport (Sportswear) textiles made of microfibres 9 Sintetic.

Plus (Dark Wash)

. . . dark textiles Washing with different degrees of soiling Wash new items separately. Do not prewash. If required, pretreat stains.

Select ã (Wash Plus) additional function. heavy Load less washing. Prewash. If required, pretreat stains. Select ã (Wash Plus) additional function. Soaking Load washing of the same colour Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set y Algodón Color/Cotone. (Cottons) 30 °C programme and select M (Start/Pause). After approx. 10 minutes select M (Start/Pause).

After the required soaking time reselect M (Start/Pause), if the programme is to be continued or change the programme. Starching Laundry must not be treated with fabric softener Starching is possible in all wash programmes if liquid starch is used. Add starch to the fabric softener compartment 2 in accordance with the manufacturer's instructions. Light Intended use

.

.

. 1 Programmes .

.

.

.

. 1 Set and adjust programme

.

3 Washing

.

.....

..... 3/4 After washing ..

.....

.....

.....

.... 4 Individual settings

.....

.....

..... 5 Important information

.....

.... 6 Emergency release .

.....

.....

..... 6 Overview of programmes

.....

.....

. 7 Safety instructions

.....

... 8 Consumption values ..

.....

.....

... 8 Care

.....

.....

.....

..... 9 Information on the display panel

.....

. 9 Maintenance

.....

.....

. 10 What to do if

.....

.....

..... 11 F End of programme when ...

... 0 is indicated on the display panel. Insert for liquid detergent (depending on model), Page 9.

@@@@@@@ Start signal mode Dyeing/bleaching Dye in small quantities only. Salt can corrode stainless steel. Observe the dye manufacturer's specifications. Do not bleach laundry in the washing machine. @@@@@@@@ The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not reach into the drum if it is still rotating. @@@@ - Drain the detergent solution -> Page 10. - Pull the emergency release with a tool and release. @@ - Wash normally soiled washing without prewash. @@@@@@@@@@@@@@@@@@ - Select M (Start/Pause). Programmes at lower temperature: - Select B (Spin) or b (Drain).



[You're reading an excerpt. Click here to read official NEFF](#)

[W5440X0EE user guide](#)

<http://yourpdfguides.com/dref/3655265>

@@@ - Retain documents for subsequent use. Risk of electric shock - Never pull out the mains plug by tugging the power cord! - Never insert/pull out the mains plug with damp hands. Danger to life Redundant appliances: - Pull out the mains plug.

- Sever the power cord and discard together with the plug. - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating. Risk of suffocation - Keep packaging, plastic film and packaging parts out of the reach of children. Risk of poisoning - Keep detergents and care products out of the reach of children. Risk of explosion - Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an etton and dark easy care textiles For delicate, washable textiles, eg. made of silk, satin, synthetic fibres or blended fabrics (e.g.

curtains) Hand or machine washable wool or rich wool textiles textiles made of microfibres Easy care textiles made of cotton, linen, synthetic fibres or blended fabrics Hard wearing textiles, heat resistant textiles made of cotton or linen Filter in the water inlet hose Drum Leave washing machine door open so that the drum can dry out. Rust stains use chlorine free cleaning agent, not steel wool. Descaling No washing in the machine! Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer. Risk of electric shock! Do not immerse Aqua Stop safety device in water (contains electric valve).

- Remove the insert. Clean detergent drawer and insert > Page 9. - Run y Algodón Color/Cotone. (Cottons) 90 °C programme without washing. Use standard detergent.

- Too much detergent used? Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser II in the detergent drawer. - Reduce detergent dosage for the next wash cycle. - Appliance feet fixed? Secure appliance feet > Installation instructions, Page 5. - Transportation safety devices removed? Remove transportation protection devices > Installation instructions, Page 3. - Power failure? - Fuse tripped? Switch on/replace fuse. - If the fault occurs repeatedly, call customer service. - Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the washing. - Not a fault foam detection system active - a rinse cycle is started. - Occasionally phosphate free detergents contain water insoluble residue. - Select K (Rinse) or brush the laundry after washing.

- Water level too high. Top up washing is not possible. If required, close door immediately. - Select "M (Start/Pause)" to continue the programme.

Consumption values Programme y Algodón Color/Cotone (Cottons) 30°C* y Algodón Color/Cotone (Cottons) 40°C* y Algodón Color/Cotone (Cottons) 60°C* j Color Eco (Cottons eco) 60 °C* y Algodón Color/Cotone (Cottons) 90°C A Sintetic. (Easy care) 40 °C* A Sintetic. (Easy care) 40 °C* (also suitable as Short programme) q Delica.(Delicates/Silk) Å (cold) q Delica.(Delicates/Silk) 30°C U Lana (Wool) Å (cold) U Lana (Wool) 30 °C Additional function ã (Wash Plus) ã ã ã ã Load Current** Water** Programme duration** 75 l 75 l 75 l 49 l 90 l 55 l 55 l 39 l 39 l 47 l 47 l 2:12 h 2:12 h 2:12 h 2:12 h 1:12 h 0:45 h 0:40 h 0:40 h 0:36 h 0:36 h 7,0 kg 0.85 kWh 7,0 kg 7,0 kg 7,0 kg 7,0 kg 3,5 kg 0.

85 kWh 1.50 kWh 1.19 kWh 2.51 kWh 0.55 kWh 1.

2. 3. 4. Release water pressure in the supply hose: Turn off the tap! Select any programme (except B (Spin)/b (Drain)). Select M (Start/Pause).

Leave programme for approx. 40 seconds. Set programme selector to m (Off). Pull out the mains plug. Insert for liquid detergent 7,0 kg* 3,5 kg* 5,0 kg 2,0 kg max. 3,5 kg 0.54 kWh 2,0 kg 2,0 kg 2,0 kg 2,0 kg 0.03 kWh 0.20 kWh 0.08 kWh 0.

20 kWh depending on model Position insert for dispensing liquid detergent: - Completely remove the detergent drawer > Page 9. - Push insert forwards. Do not use insert (push up): - for gelatinous detergents and washing powders; - for programmes with P (Prewash) and Å (Ready in) option. Type of washing Clean filter: 1. Depending on model: - Remove hose from tap. Clean filter with small brush. Intense noise formation, vibrations and "wandering" during spin cycle. or depending on model - Remove hose from the rear. Remove filter with pliers and clean. Å 90 Å 60 Å 60 Å 40 Å 40 O (°C) Å 40 Information on the display panel F: 16 F: 17, 29 F: 18 F: 23 F: 42, 43, 44 Other displays Turn the tap on fully, supply hose kinked/jammed; Clean filter > Page 10; water pressure too low.

F F F F Display panel/indicator lights do not function while the appliance is running. Programme progress longer than usual. Washing machine Close the washing machine door properly; washing may be caught. 2. Connect the hose and check for leaks.

Additional programmes y Algodón Color/Cotone (Cottons) j Color Eco (Cottons eco) Power Wash 60 min q Delica. (Delicates/Silk) A Sintetic. @@@@A short programme which can be used for coloured items is A Sintetic. @@@@Plus Clean detergent solution pump -> Page 10; outlet pipe/drainage hose blocked. Water in the base pan, appliance leaking.

Call customer service! Motor fault. Call customer service! Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call customer services -> Installation instructions, Page 7. In the pause state M (Start/Pause) flashes very quickly and a signal sounds. If a fault cannot be rectified or a repair is required: - Set programme selector to m (Off) and pull out the mains plug. - Turn off tap and call customer service > Installation instructions, Page 7. Read these instructions before switching on the washing machine! Also follow the separate Installation instructions. Follow the safety instructions on page 8! Programmes U Lana (Wool) (Super Quick) (Dark Wash) 8 9 10 11 .



[You're reading an excerpt. Click here to read official NEFF](#)

[W5440X0EE user guide](#)

<http://yourpdfguides.com/dref/3655265>