



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF W5440X0GB. You'll find the answers to all your questions on the NEFF W5440X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF W5440X0GB User guide NEFF W5440X0GB Operating instructions NEFF W5440X0GB Instructions for use NEFF W5440X0GB Instruction manual NEFF W5440X0GB

Your washing machine

Intended use

Preparation

Washing

Removing washing

Individual settings

Important information



You're reading an excerpt. [Click here to read official NEFF W5440X0GB user guide](http://yourpdfguides.com/dref/3567552)

<http://yourpdfguides.com/dref/3567552>

Manual abstract:

The washing machine is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition. Intended use J for use in the household only, J for the washing of machine washable textiles in a detergent solution, J to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines. - Do not leave children unattended near the washing machine! - Keep pets away from the washing machine! Preparation Correct installation according to separate Installation instructions. Before washing for the first time, wash once without any washing -> Page 6. Washing Detergent drawer with compartments I, II, 2 The washing machine door Fascia Door handle Removing washing Open washing machine door and remove washing. If L (Rinse stop = without final spin) is active: Select the spin speed or set programme selector to Drain or Spin. Select Start/Pause. Remove any foreign objects risk of rusting.

Individual settings F Option buttons You can change the spin speed and temperature beforehand and while the selected programme is running. Effects dependent on the programme progress. Important information Protecting the washing and the machine Empty pockets. Remove metal parts (paper clips, etc.). Wash delicates in the net/bag (tights, curtains, underwired bras). Close zips, button up covers. Brush sand out of pockets and collars. Remove curtain fittings or include in the net/bag. Sorting and inserting the washing Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature. Do not exceed maximum load -> Page 7. Follow Important instructions -> Page 6! Insert large and small items of washing! Close the washing machine door. Take care not to trap any items of clothing between the loading door and rubber seal. Checking the machine - Never switch on a damaged machine! - Inform your customer service! Temp. You can change the indicated washing temperature. @@@@Set the Easy Care 60 °C programme and select Start/Pause. @@Take hold of the plug only! Intended use

.....
.....
.....
.. 1 Programmes

.....
.....
... 1 Set and adjust programme ...
.....

... 3 Washing

.....
.....
.....

. 3/4 After washing

.....
.....

..... 4 Individual settings ...

.....

.....

.... 5 Important information .
.....

..... 6 Overview of programmes

.....
.....

.. 7 Care

.....
.....
.....

..... 8 Information on the display panel

..... 8 Maintenance

.....
.....
.....

. 9 What to do if

.....
.....

..... 10 Safety instructions ...

.....
.....

... 11 Consumption values ..

.....

..... 11 Add detergent and care product Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer! Dilute viscous fabric softener and fabric conditioner with water.

Prevents blockage of the overflow. Switch off Set programme selector to Off. Ready in The respective programme duration is displayed by selecting the programme. The programme start can be delayed before the programme begins. The Ready in time can be set in hour steps up to maximum 24h. Keep pressing the Ready in button until the required number of hours is indicated (h=hour). Select Start/Pause. Additional functions see also programme overview Intensive Extend the washing time for a more intensive washing of heavily soiled items. Prewash For heavily soiled washing. Prewash at max. 30 °C. Less Ironing Special spin sequence with subsequent fluffing. Gentle final spin - residual moisture in the washing increased slightly. Extra Rinse Additional rinse cycle, extended washing time. For areas with very soft water or for further improvement of the rinsing result. Turn on the tap Washing with different degrees of soiling Light heavy Wash new items separately. Do not prewash. If required, pretreat stains. Select Intensive additional function. Load less washing.

Prewash. If required, pretreat stains. Select Intensive additional function. F End of programme when 0 is indicated on the display panel. . Insert for liquid detergent (depending on model), Page 8. II Main wash: Detergent, water softener, bleach, stain remover 2 Care products: Fabric softener, impregnating agent I Prewash: Detergent, starch Programmes Detailed programme overview > Page 7. Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress. Cottons .

.....
.... Cottons Stains Power Wash 60' .

.. Sensitive
.. Easy Care ...

.....
Mix

.... Delicates/Silk
Wool

....
... Rinse

..... Spin

....
... Drain ..

.. Gentle Spin Rapid 15' ..

.....
.. Sports ...
..... Dark Wash ..

..... Hard wearing textiles Hard wearing textiles Hard wearing textiles Hard wearing textiles easy care textiles different types of washing delicate washable textiles hand /machine washable wool extra rinse with spin extra spin with selectable spin speed the rinsing water with L (Rinse stop = without final spin) washing washed by hand at reduced spin speed short programme textiles made of microfibres dark textiles Set and adjust programme For additional functions and option buttons see individual settings -> Page 5. @@@@Set Cottons 30 °C programme and select Start/Pause. After approx. 10 minutes select Start/Pause.

@@@@@Salt can corrode stainless steel. Observe the dye manufacturer's specifications. @@@@Risk of scalding! The detergent solution and washing may be hot. If required, leave it to cool down. Keep hands clear of the drum if it is still rotating.

Do not open the door if water can be seen through the glass. @@- Drain the water -> page 9. @@- Wash normally soiled washing without prewash.

@@@@@Can be rotated in either direction. Button signals 2.

Set volume for ... Information signals ... @@@@- Select Start/Pause. Programmes at lower temperature: - Select Spin or Drain . - Select Start/Pause. Set volume * direct 1 step to right Set volume * Set to d * If required, select repeatedly Status displays Q K B -0- Intensive Wash, Prewash, Less Ironing, Extra Rinse; different types of washing can be washed together Intensive Wash, Prewash, Less Ironing, Extra Rinse; reduced rinse and final spin cycle Intensive Wash, Prewash, Less Ironing, Extra Rinse; only short spin between the rinse cycles Particularly gentle wash programme to avoid shrinkage, longer programme breaks (fabrics rest in the detergent solution) Short programme approx.

15 minutes, suitable for lightly soiled laundry Care i The programmes are time controlled for lightly soiled textiles.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3567552)

[W5440X0GB user guide](http://yourpdfguides.com/dref/3567552)

<http://yourpdfguides.com/dref/3567552>

If textiles are heavily soiled, reduce the load or select additional functions, e.g. Intensive. Programmes Risk of electric shock! Pull out the mains plug! Risk of explosion! No solvents! Maintenance Detergent solution pump 1. 2. Risk of scalding! Allow detergent solution to cool down! Turn off the tap! Intensive, Prewash, Less Ironing, Extra Rinse for especially sensitive skin, extended wash cycle at selected temperature, higher water level, additional rinse cycle Time controlled programme short programme for normally soiled laundry Intensive Wash, Prewash, Less Ironing, Extra Rinse Machine housing, control panel Wipe with a soft, damp cloth. Do not use abrasive detergents. Immediately remove washing and cleaning agent residue. Do not clean the appliance with a water jet.

Set programme selector to Off, pull out the mains plug. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose. Carefully unscrew the pump cover (residual water).

Intensive, Prewash, Less Ironing, Extra Rinse Intensive, Prewash, Less Ironing, Extra Rinse What to do if ... - Correctly attach/replace drainage F Water is running out. - Tighten screw fitting on the supplyhose.

hose. Water not flowing in. - Start/Pause not selected? F Detergent not washed - Tap not open? in. - Filter blocked? Clean filter -> Page 9. - Supply hose kinked or jammed? - Safety function active. Wait approx. 2 minutes. - L (Rinse stop = without final spin) selected? -> Page 4. - Can be opened via emergency release only -> Page 6. - Start/Pause or Ready in selected? - Washing machine door closed? - Clean detergent solution pump -> Page 9.

- Clean outlet pipe and/or drainage hose. - Not a fault - water below the visible area. - Wash small and large items of washing together. - Less Ironing selected? -> Page 5. - Too low speed selected? -> Page 3. - Not a fault - unbalanced load detection system adjusts imbalance of water into dispenser II and start the Drain programme. Drum Select the Intensive additional function if washing 7,0 kg of cottons and coloureds. Leave washing machine door open so that the drum can dry out. Rust stains use chlorine free cleaning agent, not steel wool. Descaling No washing in the machine! Not necessary if detergent dispensed correctly.

However, follow the instructions of the descaler manufacturer. Insert for liquid detergent depending on model Position insert for dispensing liquid detergent: - Completely remove the detergent drawer > Page 8. - Push insert forwards. Do not use insert (push up): - for gelatinous detergents and washing powders; - for programmes with Prewash and Ready in option. Filter in the water inlet hose Risk of electric shock! Do not immerse Aqua Stop safety device in water (contains electric valve).

pour detergent into dispenser II, programmes with prewash Textiles for outdoor wear For further information and a selection of our products go to our web site: <http://www.neff.de> Overview of programmes 1. 2. 3.

4. Release water pressure in the supply hose: Turn off the tap! Select any programme (except Spin/Drain). Select Start/Pause. Leave programme for approx. 40 seconds. Set programme selector to Off. Pull out the mains plug. Clean filter: Depending on model: Remove hose from tap. Clean filter with small brush. or Consumption values Programme Cottons 30 °C* Cottons 40 °C* Cottons 60 °C Cottons Stains 60 °C* Cottons 90 °C Easy Care 40 °C* Easy Care 40 °C (also suitable as Short programme) Delicates/Silk Å (cold) Delicates/Silk 30 °C Wool Å (cold) Wool 30 °C Additional function Intensive Intensive Intensive Intensive Load 7.

0 kg 7.0 kg 7.0 kg 7.0 kg 7.0 kg 3.5 kg 3.5 kg 2.0 kg 2.0 kg 2.0 kg 2.

0 kg Current** 0.55 kWh 0.85 kWh 1.50 kWh 1.19 kWh 2.

20 kWh 0.55 kWh 0.54 kWh 0.03 kWh 0.20 kWh 0.

08 kWh 0.20 kWh Water** 75 l 75 l 75 l 49 l 87 l 55 l 55 l 39 l 39 l 47 l 47 l Programme duration** 2:12 h 2:12 h 2:12 h 2:25 h 2:00 h 1:12 h 0:45 h 0:40 h 0:40 h 0:36 h 0:36 h Type of washing 1. Intense noise formation, vibrations and "wandering" during spin cycle. @@@@2. Remove hose from the rear.

Remove filter with pliers and clean. @@Water in the base pan, appliance leaking. Call customer service! Motor fault. Call customer service! Switch off the appliance, wait for 5 seconds and switch it back on. @@washing.

- Select Rinse or brush the laundry after washing. - Water level too high. Top up washing is not possible. In the pause state If required, close door immediately. Start/Pause flashes very - Select "Start/Pause" to continue the programme. quickly and a signal sounds. If a fault cannot be rectified or a repair is required: - Set programme selector to Off and pull out the mains plug. - Turn off tap and call customer service > Installation instructions, Page 7. Read these instructions before switching on the washing machine! Also follow the separate Installation instructions. Follow the safety instructions on page 11! Mix

* Programme setting with maximum spin speed for conducting test according to currently valid European Standard 60456.

** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions. * 7 8 9 10 11 .



[You're reading an excerpt. Click here to read official NEFF](#)

[W5440X0GB user guide](#)

<http://yourpdfguides.com/dref/3567552>