



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF W5440X0GB. You'll find the answers to all your questions on the NEFF W5440X0GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF W5440X0GB User guide NEFF W5440X0GB Operating instructions NEFF W5440X0GB Instructions for use NEFF W5440X0GB Instruction manual NEFF W5440X0GB

Your washing machine

Intended use

Preparation

Washing

Removing washing

Individual settings

Important information



You're reading an excerpt. [Click here to read official NEFF W5440X0GB user guide](http://yourpdfguides.com/dref/3655262)

<http://yourpdfguides.com/dref/3655262>

Manual abstract:

The washing machine is distinguished by its economical use of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition. For further information and a selection of our products go to our web site: <http://www.neff.de> Intended use J for use in the household only, J for the washing of machine washable textiles in a detergent solution, J to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines. - Do not leave children unattended near the washing machine! - Keep pets away from the washing machine! Preparation Correct installation according to separate Installation instructions. Before washing for the first time, wash once without any washing -> Page 6. Washing Detergent drawer with compartments I, II, 2 Washing machine door Control panel Door handle Removing washing Open washing machine door and remove washing. If D (Rinse stop = without final spin) is active: Select the spin speed or set programme selector to Drain or Spin. Select Start/Pause.

Remove any foreign objects risk of rusting. Individual settings F Option buttons You can change the spin speed and temperature beforehand and while the selected programme is running. Effects dependent on the programme progress. Important information Protecting the washing and the machine Empty pockets. Remove metal parts (paper clips, etc.

) Wash delicates in the net/bag (tights, curtains, underwired bras). Close zips, button up covers. Brush sand out of pockets and collars. Remove curtain fittings or include in the net/bag.

Sorting and inserting the washing Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature. Do not exceed maximum load -> Page 7. Follow Important instructions -> Page 6! Insert large and small items of washing! Close the washing machine door. Take care not to trap any items of clothing between the loading door and rubber seal. Checking the machine - Never switch on a damaged machine! @@@@Set the Easy Care 60 °C programme and select Start/Pause. At the end of the programme set the programme selector to

Off. Insert mains plug With dry hands only! Take hold of the plug only! Contents J J J J J J J J J J J J J J Page Add detergent and care product Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer! Dilute viscous fabric softener and fabric conditioner with water.

This prevents blockages. Switch off Set programme selector to Off. Ready in The respective programme duration is displayed by selecting the programme. The programme start can be delayed before the programme begins. The Ready in time can be set in hour steps up to maximum 24h. Keep pressing the Ready in button until the required number of hours is indicated (h=hour). Select Start/Pause. Additional functions see also programme overview Intensive Extend the washing time for a more intensive washing of heavily soiled items. Prewash For heavily soiled washing. Prewash at max.

30 °C. Less Ironing Special spin sequence with subsequent fluffing. Gentle final spin - residual moisture in the washing increased slightly. Extra Rinse Additional rinse cycle, extended washing time. For areas with very soft water or for further improvement of the rinsing result.

Intended use

.....

. 1 Programmes

.....

.....

. 1 Set and adjust programme

.....

.....

. . 3 Washing

.....

.....

.....

3/4 After washing

.....

.....

. 4 Individual settings

.....

. 5 Important information

.....

.....

. 6 Overview of programmes

.....

. . 7 Safety instructions

.....

.....

. 8 Consumption values

.....

.....

. 8 Care

.....
.....
.....
..... 9 Information on the display panel ...

..... 9 Maintenance ...
.....
.....
.....

.. 10 What to do if
.....
.....

..... 11 Turn on the tap Washing with different degrees of soiling Light heavy Wash new items separately. Do not prewash.

If required, pretreat stains. Select Intensive additional function. Load less washing. Prewash. If required, pretreat stains. Select Intensive additional function.
F End of programme when

.. 0 is indicated on the display panel.. Insert for liquid detergent (depending on model), Page 9.

Compartment II: Detergent for the main wash, water softener, bleach, stain remover Compartment 2 : Fabric softener, starch Compartment I: Detergent for pre wash Programmes Detailed programme overview > Page 7. Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress. Cottons ...
.... Cottons Stains .. Power Wash 60' Sensitive

... Easy Care
. Mix
.....
..... Delicates/Silk

. Wool
.... Rinse .
.....
..... Spin

..... Drain .
.....
.....

.. Gentle Spin Rapid 15' .

..... Sports ..
.....
.... Dark Wash .

..... Set and adjust programme For additional functions and option buttons see individual settings -> Page 5. Start/ Pause Additional functions Display panel/ Option buttons Programme selector If the option buttons are touched for longer, the setting options run automatically! 1 3 2 Drain hose Detergent solution pump Emergency release Change programme ..

. If you have mistakenly selected a wrong programme: - Reselect programme. @@@@Set Cottons 30 °C programme and select Start/Pause. After approx. 10 minutes select Start/Pause. @@@@Salt can corrode stainless steel. Observe the dye manufacturer's specifications. @@@@The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not reach into the drum if it is still rotating.

@@- Set the programme selector to Off and disconnect the mains plug. - Drain the detergent solution -> Page 10. - Pull the emergency release with a tool and release. @@@@- Wash normally soiled washing without prewash. @@@@Set volume for .

.. Information signals ...

@@@@- Select Start/Pause. Programmes at lower temperature: - Select Spin or Drain . @@- Retain documents for subsequent use. @@- Never insert/pull out the mains plug with damp hands. Danger to life Redundant appliances: - Pull out the mains plug. - Sever the power cord and discard together with the plug. - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating. Risk of suffocation - Keep packaging, plastic film and packaging parts out of the reach of children. Risk of poisoning - Keep detergents and care products out of the reach of children.

Risk of explosion - Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3655262)

[W5440X0GB user guide](http://yourpdfguides.com/dref/3655262)

<http://yourpdfguides.com/dref/3655262>

Before hand thoroughly rinse items of washing by hand. Risk of injury - Washing machine door may become very hot. - Caution when draining hot detergent solution. - Do not climb on the washing machine. - Do not lean on the open washing machine door. - Do not touch the drum in case it is still spinning. Care Machine housing, control panel - Risk of electric shock! Pull out the mains plug! Risk of explosion! No solvents! Maintenance Detergent solution pump 1. Risk of scalding! Allow detergent solution to cool down! Turn off the tap! Intensive Wash, Prewash, Less Ironing, Extra Rinse; different types of washing can be washed together Intensive Wash, Prewash, Less Ironing, Extra Rinse; reduced rinse and final spin cycle Intensive Wash, Prewash, Less Ironing, Extra Rinse; only short spin between the rinse cycles Intensive Wash, Prewash, Less Ironing, Extra Rinse Particularly gentle wash programme to avoid shrinkage, longer programme breaks (fabrics rest in the detergent solution) Intensive, Prewash, Less Ironing, Extra Rinse Intensive, Prewash, Less Ironing, Extra Rinse The programmes are time controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or select addics For delicate, washable textiles, eg. made of silk, satin, synthetic fibres or blended fabrics Hard wearing textiles made of cotton or blended fabric To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the Drain programme. Hard wearing textiles, heat resistant textiles made of cotton or linen Hard wearing textiles, heat resistant textiles made of cotton or linen Hand or machine washable wool or rich wool textiles Dark textiles made of cotton and dark easy care textiles Textiles made of cotton and easy care textiles Filter in the water inlet hose Drum Leave washing machine door open so that the drum can dry out. Rust stains use chlorine free cleaning agent, not steel wool.

Descaling No washing in the machine! Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer. Insert for liquid detergent depending on model Position insert for dispensing liquid detergent: - Completely remove the detergent drawer > Page 9. - Push insert forwards. Do not use insert (push up): - for gelatinous detergents and washing powders; - for programmes with Prewash and Ready in option.

Risk of electric shock! Do not immerse Aqua Stop safety device in water (contains electric valve). Consumption values Programme Cottons 30 °C* Cottons 40 °C* Cottons 60 °C* Cottons Stains 60 °C* Cottons 90 °C Easy Care 40 °C* Easy Care 40 °C* (also suitable as Short programme) Delicates/Silk Å (cold) Delicates/Silk 30 °C Wool Å (cold) Wool 30 °C Additional function Intensive Intensive Intensive Intensive Intensive Intensive Intensive Load 7.0 kg 7.0 kg 7.0 kg 7.0 kg 7.0 kg 3.5 kg 3.5 kg 2.0 kg 2.

0 kg 2.0 kg 2.0 kg Current** 0.55 kWh 0.85 kWh 1.50 kWh 1.19 kWh 2.51 kWh 0.55 kWh 0.54 kWh 0.03 kWh 0.20 kWh 0.08 kWh 0.20 kWh Water** 75 l 75 l 75 l 49 l 90 l 55 l 55 l 39 l 39 l 47 l 47 l Programme duration** 2:12 h 2:12 h 2:12 h 2:19 h 2:12 h 1:12 h 0:45 h 0:40 h 0:40 h 0:36 h 0:36 h textiles made of microfibres 1. 2.

3. 4. Release water pressure in the supply hose: Turn off the tap! Select any programme (except Spin/Drain). Select Start/Pause. Leave programme for approx. 40 seconds. Set programme selector to Off. Pull out the mains plug. Type of washing Clean filter: 1. Depending on model: -Remove hose from tap. Clean filter with small brush. Intense noise formation, vibrations and "wandering" during spin cycle. Display panel/indicator lights do not function while the appliance is running. Programme progress longer than usual. Washing machine 7,0 kg* 3,5 kg* 5,0 kg 2,0 kg max.

or -Remove hose from the rear. @@2. @@@@** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised 8 detergent, fluctuations in the mains voltage and selected additional functions. Cottons Stains Programmes Delicates/Silk Clean detergent solution pump -> Page 10; outlet pipe/drainage hose blocked. Water in the base pan, appliance leaking. Call customer service! Motor fault. Call customer service! Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call customer services -> Installation instructions, Page 7. Dark Wash Easy Care Rapid 15' Sensitive Cottons Wool Detergent residue on the - Occasionally phosphate free detergents contain water insoluble residue. washing.

- Select Rinse or brush the laundry after washing. - Water level too high. Top up washing is not possible. In the pause state If required, close door immediately. Start/Pause flashes very - Select "Start/Pause" to continue the programme. quickly and a signal sounds. If a fault cannot be rectified or a repair is required: - Set programme selector to Off and pull out the mains plug. - Turn off tap and call customer service > Installation instructions, Page 7. Read these instructions before switching on the washing machine!Also follow the separate Installation instructions. Follow the safety instructions on page 8! Mix 9 11 .



[You're reading an excerpt. Click here to read official NEFF W5440X0GB user guide](http://yourpdfguides.com/dref/3655262)
<http://yourpdfguides.com/dref/3655262>