



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NEFF W7320F3EU. You'll find the answers to all your questions on the NEFF W7320F3EU in the user manual (information, specifications, details, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NEFF W7320F3EU User guide NEFF W7320F3EU Operating instructions NEFF W7320F3EU Instructions for use NEFF W7320F3EU Instruction manual NEFF W7320F3EU

The image shows a multi-page excerpt from the NEFF W7320F3EU user manual. The pages are color-coded and contain the following sections:

- Your washing machine:** Includes a table of contents and a section on 'Environmentally friendly waste disposal'.
- Intended use:** Lists safety warnings and instructions for use.
- Preparation:** Details 'Sorting and loading laundry', 'Checking the machine', 'Connecting the mains plug', and 'Turning on the tap'.
- Washing:** Shows 'Setting* and adjusting programmes' with a diagram of the control panel and a 'Washing' cycle diagram.
- Removing the washing:** Provides instructions on 'Turning the tap off', 'Switching off', and 'End of programme'.
- Individual settings:** Contains sections for 'Optimising buttons', 'Energy saving mode', and 'Start Delay'.
- Important information:** Includes 'Switching the laundry and the machine', 'Laundry with varying degrees of soiling', and 'Energy efficiency'.



[You're reading an excerpt. Click here to read official NEFF W7320F3EU user guide](http://yourpdfguides.com/dref/3655257)
<http://yourpdfguides.com/dref/3655257>

Manual abstract:

Preparation Correct installation according to the separate installations actions. Before the first wash, run a wash cycle with no laundry in the machine Page 9. Washing Removing the washing Open the washing machine door and remove the washing. If (without final spin) is active: turn the programme selector to Empty or select the spin speed. Choose Start/Reload. Individual settings Option buttons You can change the spin speed and the temperature before the selected programme starts and while it is running. The effects depend on the programme progress. Individual settings Signal 1. Activating the mode for setting the signal volume 1 step, the press and display panel hold lights up Button signals Information signals 2.

Setting the volume for... direct setting the volume* 1 step setting the volume* set to 0 Set to 0 Sorting and loading laundry Follow the manufacturer's care information! Sort laundry according to the label's indications. And according to type, colour, soiling and temperature.

Page 7. Do not exceed the maximum load Observe important information! Page 6 Wash laundry of different sizes in the same wash programme. Close the door. Take care not to trap items of laundry between the washing machine door and seal. Detergent drawer with compartments I, II, Drum Control panel Door Checking the machine Never use a damaged machine! Contact customer service! Remove any foreign objects.

Risk of rusting. Leave the washing machine door and detergent door open so that any residual water can evaporate. (Temperature °C) You can change the displayed washing temperature. The maximum selectable temperature depends on the current programme. Do not leave children unattended near the washing machine. @@@@Handle the plug only! Turn the tap off Not required for Aqua-Stop models Refer to Installation instructions. (Ready in) When you select the programme, the relevant programme duration is displayed. You can delay the end of the programme before it begins. The ready in-time can be set in increments of one hour up to a maximum of 24 hours. Press the (Ready in) button until the required number of hours is displayed (h = hour).

Choose Start/Reload. + 1 step, release Add detergent and care products Measure detergent according: amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. For models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. (spin speed in rpm/ (without final spin)) Turning on the tap Switching off Turn the programme selector to Off. You can change the displayed spin speed. The maximum selectable spin speed depends on the model and which programme is currently selected. Additional functions TurboPerfect and overview of programmes, page 7 For washing in a shorter time with a washing outcome comparable to that of the Overview of programmes, page 7. standard programme. Maximum load For saving energy with a washing performance comparable to that of the standard programme. Special spin sequence with subsequent fluffing.

Gentle final spin: residual moisture in the laundry slightly increased. Increased water level and additional rinse cycle, extended washing time. For areas with very soft water or for further enhancing the spin result. You can lock the washing machine to prevent the functions you have set from being changed inadvertently. ON/OFF: after the start/end of the programme, press the Start/Reload button for five seconds.

Note: the childproof lock can remain activated until you wish to start the next programme, even after switching off the machine. Then you can deactivate the childproof lock before the start of the programme and activate it again as necessary once the programme has started. If you wish to turn off the childproof lock during a programme, turn the programme selector to the position in which the machine is locked (the symbol remains lit). Turning it off in any other position will cancel the programme in progress. Press Start/Reload if you want to add additional items of laundry after the programme has started.

The machine checks whether reloading is possible. + lit: reloading is possible. flashes: wait until + lights. Note: do not open the door until both the + symbols are lit. : it is not possible to reload. Note: for safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the Start/Reload button. * if necessary, select the function several times Insert for liquid detergent (depending on model) page 6 Compartment II: detergent for the main wash, water softener, bleach, stain remover Compartment : Fabric softener, bleach Compartment I: Detergent for prewash Programmes page 7. @@Cottons + Prewash Synthetics + Prewash Mix Delicate/Silk Wool Rinse / Spin hard-wearing fabrics hard-wearing fabrics, prewash synthetic fabrics synthetic fabrics, prewash Different types of laundry Delicate washable fabrics Hand/machine washable wool Laundry washed by hand, (Water plus) button activated; if only using the spin cycle, deactivate the button Drain rinsing water with Short programme Dark laundry Lingery programme microfibre fabrics hard-wearing fabrics Status displays Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages.

EcoPerfect (Reduced Ironing) (Water plus) Important information Protecting the laundry and the machine When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.. Empty all pockets Check for metal items (paper-clips, etc.). Wash delicates in a laundry bag (tights, curtains, underwired bras). Fasten zips, do up any buttons. Brush sand out of pockets and collars. Remove curtain fittings or place in the laundry bag. Contents Page Intended use ..

.....
1 Programmes

...1 Setting and adjusting the programme

.....

.....

.....

.....

.....3 Washing

.....

..3/4 After washing ...

...4 Individual settings

.....

.....

.....

.....

.....

.....

.....
.....

.....5/6 Important information ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... @@10 What to do if ..

. @@11 Setting** and adjusting programmes Additional functions Display panel / option buttons Programme selector Start / Reload **If the symbol flashes in the display panel, the childproof lock is Deactivate childproof lock, active page 5. Additional functions and option Individual settings, buttons page 5. 1 End of programme when Start/Reload flashes and - - appears on the display panel.

Note: If display panel lighting is switched off, press any button saving mode, page 5. Energy Childproof lock in the display panel Laundry with varying degrees of soiling Wash new items of clothing separately. Do not prewash. If required, choose the additional function TurboPerfect. Pre-treat any stains as necessary. intense wash Load less laundry. Choose a programme with a prewash. Soaking Load laundry of the same colour. Pour soaking agent/detergent into compartment II in accordance with the manufacturer's instructions.



[You're reading an excerpt. Click here to read official NEFF W7320F3EU user guide](http://yourpdfguides.com/dref/3655257)
<http://yourpdfguides.com/dref/3655257>

Turn the programme selector to Cottons 30 °C and press Start/Reload.

After approx. 10 minutes, press Start/Reload to pause the programme. Once the required soaking time has elapsed, press Start/Reload again to continue the programme, or select a different programme. Starch Laundry should not be treated with fabric softener. light Starching is possible in all wash programmes if liquid starch is used.

Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment (rinse first if necessary). Interrupting the programme Press Start/Reload All buttons are sensitive and need only to be touched lightly. Press and hold the (Ready in) option button for an automatic run through all setting options. - 90 °C 1 - 24 h - 1400* (temp. °C) (Ready in) (rpm) Select the temperature (End of programme after .

.. Select the spin speed (* depending on the model) or (without final spin, laundry soaks in the last rinsing water, display panel - - -) Programme sequence displays: = cold) 2 Service door 3 Programmes at high temperatures: Cool washing: Select Rinse /Spin Press Start/Reload. Programmes at lower temperatures: Select Rinse /Spin (deactivate Press Start/Reload. . (Water plus) button) or Empty. Reloading + in the display panel Protection of the environment/Conservation tips Always fill the washing machine with a maximum amount of laundry for the relevant programme. Wash normally soiled laundry without a pre-wash. @@Comparable cleaning result was significantly lower energy consumption. Measure the detergent according to the manufacturer's instructions and water hardness.

If the laundry is then dried in the tumble dryer, select spin speed according to instructions of dryer manufacturer. Empty Gentle spin Super Quick 15' Synthetics+ Dessous Sports Sensitive Changing the programme if ... you have selected the wrong programme by mistake: Reselect the programme. Press Start/Reload. The new programme starts from the beginning.

(without final spin) Laundry washed by hand with a reduced spin speed Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction. Dyeing / Bleaching Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do not use the washing machine for bleaching clothes. Insert for liquid detergent depending on model Position the insert for dispensing liquid detergent: Remove the detergent drawer completely page 9 &s the detergent solution) (Reduced Ironing), (Reduced Ironing), (Reduced Ironing), , EcoPerfect , (Reduced Ironing), TurboPerfect different types of laundry can be washed together (Reduced Ironing), (Reduced Ironing), (Reduced Ironing), Do not put laundry in the machine! Turn on the tap. Put into compartment II: approx. 2 litres of water detergent (measure according to the manufacturer's instructions for lightly soiled laundry and water hardness) Turn the programme selector to Synthetics 60 °C and press Start/Reload. At the end of the programme, turn the programme selector to Off.

Refer to the table of consumption values on page 8, and advice and warnings on page 6. Machine housing, control panel Wipe with a soft, damp cloth. Do not use any abrasive cloths, scourers or cleaning agents (stainless steel cleaners). Remove detergent and cleaning agent residue. Do not wash the machine with a jet of water! . As a short programme Mix 40 °C with a maximum spin speed, is ideal. For programmes without prewash, add detergent to compartment II. For prewash programmes, distribute the detergent between compartments I and II. synthetic cotton, linen, synthetic fibres or blended fabrics Short programme of approx. 15 minutes, suitable for lightly soiled laundry Additional functions; Information W7320F3EU /.

.. Danger of suffocation! Risk of poisoning! Risk of explosion! 2. Remove the folding gutter and place a large enough container underneath. 3. For models with a drainage hose: Remove the drainage hose from the retainer and pull it from the housing. Remove the sealing cap, allow the detergent solution to flow out into the container. Replace the sealing cap and place the drainage hose in the retainer. 3* For models without a drainage hose: Carefully unscrew the pump cover 180° or until the detergent solution begins to flow out on the folding gutter. When the container is full, close the pump cover and empty the container.

Repeat the above steps until all the detergent solution has completely drained out. The appliance door will not open. TurboPerfect , EcoPerfect , reduced rinse and final spin cycle Cleaning the detergent drawer ...
... if it contains detergent or fabric softener residues. Risk of injury! TurboPerfect hard-wearing fabrics, cottons or linen that can be washed TurboPerfect at 90°C TurboPerfect TurboPerfect 9000584364 9008 / 9000584364 1.

2. 3. 4. 5. 6. Pull out, press insert down and remove drawer completely. To remove the insert: press upwards from below with your finger. For models with insert for liquid detergent: Slide the insert upwards and remove it from the back. Clean the detergent dispenser tray and inserts with water and a brush and dry them. Attach the insert and engage (connect the cylinder to the guide pin).

Push in the detergent drawer. / Spin Leave the detergent drawer open so that any residual water can evaporate. for delicate fabrics, e.g., silk, satin, synthetic fibres or blended fabrics (e.g. curtains) easy-care cotton, linen, synthetic or blended fabrics Drum Rinse Consumption values Programme Additional function Load depending on model Electricity*** Leave the washing machine door open so that the drum can dry out. For rust stains, use chlorine-free cleaning agent, not steel wool. 4. Carefully unscrew the pump cover (there may be residual water).

5. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must rotate). 6. Replace the pump cover and screw it tightly. 7.

Return the drainage hose (depending on model) and the folding gutter to their start position. 8. Place the service flap back on and close. To prevent unused detergent from flowing straight into the drain during the next wash: Pour 2 litres of water into compartment II and then start the Empty programme.

Descaling Ensure there is no laundry in the machine! Programme duration*** Drainage hose at the siphon Turn the programme selector to Off and disconnect the mains plug.

1. Loosen the hose clamp, carefully remove the drainage hose (residual water). 2. Clean the drainage hose and siphon connecting piece. 3. Reattach the drainage hose and secure the connection with the hose clamp. Water*** 60 l 59 l 59 l 59 l 69 l 42 l 53 l 47 l 34 l 35 l 39 l 39 l hand/machine washable wool colour fast cottons or linen Cottons (cold) 7 kg 7 kg 7 kg 7 kg 7 kg EcoPerfect * 7 kg 3.



[You're reading an excerpt. Click here to read official NEFF](#)

[W7320F3EU user guide](#)

<http://yourpdfguides.com/dref/3655257>

Washing Removing the washing Open the washing machine door and remove the washing. If (without final spin) is active: turn the programme selector to Empty or select the spin speed. Choose Start/Reload. Sorting and loading laundry Follow the manufacturer's care information! Sort laundry according to the label's indications. And according to type, colour, soiling and temperature. Page 7.

Do not exceed the maximum load Observe important information! Page 6 Wash laundry of different sizes in the same wash programme. Use the door. Take care not to trap items of laundry between the washing machine door and seal. Detergent drawer with compartments I, II, Drum Control panel Door Remove any foreign objects. Risk of rusting.

Leave the washing machine door and detergent door open so that any residual water can evaporate. Turn the tap off Not required for Aqua-Stop models Refer to Installation instructions. Add detergent and care products Measure detergent according: amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. For models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. Switching off Turn the programme selector to Off.

Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages. Setting** and adjusting programmes e selector Start / Reload **If the symbol flashes in the display panel, the childproof lock is Deactivate childproof lock, active page 5. Additional functions and option Individual settings, buttons page 5. 1 End of programme when

Start/Reload flashes and - - appears on the display panel. Note: If display panel lighting is switched off, press any button saving mode, page 5. Energy Interrupting the programme Press Start/Reload All buttons are sensitive and need only to be touched lightly. Press and hold the (Ready in) option button for an automatic run through all setting options.) 2 Service door 3 Programmes at high temperatures: Cool washing: Select Rinse /Spin Press Start/Reload.

Programmes at lower temperatures: Select Rinse /Spin (deactivate Press Start/Reload. . (Water plus) button) or Empty. Changing the programme if you have selected the wrong programme by mistake: Reselect the programme.

Press Start/Reload. The new programme starts from the beginning. g on the model) or (without final spin, ater, display panel - - -) Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction. Washing Reloading laundry if .

.. page 5 ration or end (-0-) ... Press Start/Reload; both the symbols + are displayed on the display panel. If is lit, the washing machine door cannot be opened. Press Start/Reload. pages 4, 5 reload laundry 3 4 Individual settings Option buttons You can change the spin speed and the temperature before the selected programme starts and while it is running. The effects depend on the programme progress.

Individual settings Signal 1. Activating the mode for setting the signal volume 1 step, the press and display panel hold lights up Button signals Information signals 2. Setting the volume for... direct setting the volume* 1 step setting the volume* set to o Set to o (Temperature °C) You can change the displayed washing temperature. The maximum selectable temperature depends on the current programme. (Ready in) When you select the programme, the relevant programme duration is displayed. You can delay the end of the programme before it begins. The ready in-time can be set in increments of one hour up to a maximum of 24 hours.

Press the (Ready in) button until the required number of hours is displayed (h = hour). Choose Start/Reload. + 1 step, release (spin speed in rpm/ (without final spin)) You can change the displayed spin speed. The maximum selectable spin speed depends on the model and which programme is currently selected.

Additional functions TurboPerfect EcoPerfect (Reduced Ironing) (Water plus) and overview of programmes, page 7 For washing in a shorter time with a washing outcome comparable to that of the Overview of programmes, page 7.

standard programme. Maximum load For saving energy with a washing performance comparable to that of the standard programme. Special spin sequence with subsequent fluffing. Gentle final spin: residual moisture in the laundry slightly increased. Increased water level and additional rinse cycle, extended washing time.

For areas with very soft water or for further enhancing the spin result. You can lock the washing machine to prevent the functions you have set from being changed inadvertently. ON/OFF: after the start/end of the programme, press the Start/Reload button for five seconds. Note: the childproof lock can remain activated until you wish to start the next programme, even after switching off the machine. Then you can deactivate the childproof lock before the start of the programme and activate it again as necessary once the programme has started. If you wish to turn off the childproof lock during a programme, turn the programme selector to the position in which the machine is locked (the symbol remains lit). Turning it off in any other position will cancel the programme in progress. Press Start/Reload if you want to add additional items of laundry after the programme has started. The machine checks whether reloading is possible. + lit: reloading is possible.

flashes: wait until + lights. Note: do not open the door until both the + symbols are lit. : it is not possible to reload. Note: for safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the Start/Reload button.

** if necessary, select the function several times* Important information Protecting the laundry and the machine When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.. Empty all pockets Check for metal items (paper-clips, etc.). Wash delicates in a laundry bag (tights, curtains, underwired bras).

Fasten zips, do up any buttons. Brush sand out of pockets and collars. Remove curtain fittings or place in the laundry bag. Childproof lock in the display panel Laundry with varying degrees of soiling Wash new items of clothing separately. Do not prewash.

If required, choose the additional function TurboPerfect. Pre-treat any stains as necessary. intense wash Load less laundry. Choose a programme with a prewash. Soaking Load laundry of the same colour.

Pour soaking agent/detergent into compartment II in accordance with the manufacturer's instructions. Turn the programme selector to Cottons 30 °C and press Start/Reload. After approx. 10 minutes, press Start/Reload to pause the programme. Once the required soaking time has elapsed, press Start/Reload again to continue the programme, or select a different programme.



[You're reading an excerpt. Click here to read official NEFF](http://yourpdfguides.com/dref/3655257)

[W7320F3EU user guide](http://yourpdfguides.com/dref/3655257)

<http://yourpdfguides.com/dref/3655257>

Starch Laundry should not be treated with fabric softener. light Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment (rinse first if necessary). Reloading + in the display panel Dyeing / Bleaching Dye should only be used in normal household quantities. Salt may damage stainless steel.

Always follow the dye manufacturer's instructions. Do not use the washing machine for bleaching clothes. Insert for liquid detergent depending on model Position the insert for dispensing liquid detergent: Remove the detergent drawer completely page 9 Slide the insert forwards and click into place. Do not use the insert (slide upwards): for gel detergents and washing powder, for programmes with + Prewash and end time option. Energy saving mode The display panel lighting goes out after a few minutes, Start/Reload flashes. Press any button to switch on the lighting. Start/Reload To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock. 5 6 (Water plus); *, EcoPerfect , (Reduced Ironing), TurboPerfect for particularly sensitive skin; longer wash programme at selected temperature, higher water level, additional rinse cycle Neff GmbH Carl Wery Str. 34 81739 Munich / Germany (Water plus) (Water plus); (Water plus); (Water plus): Safety instructions Carefully read the instruction manual and the information enclosed, and act accordingly. Keep the machine's documentation for future reference.

Risk of electric shock! Danger to life! Never pull the cable to disconnect the mains plug! Never insert/disconnect the mains plug with damp hands. For worn-out appliances: Disconnect the mains plug. Sever the mains cable and discard along with the plug. Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives.

Keep packaging, film and packaging parts out of the reach of children. Keep detergents and care products out of the reach of children. Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may lead to an explosion after being loaded into the washing machine.

Rinse items of laundry thoroughly by hand beforehand. The washing machine door may become very hot. Be careful when draining hot detergent solution.

Do not climb onto the washing machine. Do not lean on the open washing machine door. Do not reach into the drum if it is still rotating. Be careful when opening the detergent drawer while the machine is in operation. (Water plus) (Water plus) (Reduced Ironing), particularly delicate wash programme to avoid shrinkage of laundry; longer programme breaks (fabrics rest in the detergent solution) (Reduced Ironing), (Reduced Ironing), (Reduced Ironing), TurboPerfect , EcoPerfect , (Reduced Ironing), different types of laundry can be washed together Refer to the table of consumption values on page 8, and advice and warnings on page 6. (Reduced Ironing), (Reduced Ironing), (Water plus) . As a short programme Mix 40 °C with a maximum spin speed, is ideal.

TurboPerfect , EcoPerfect , (Reduced Ironing), different types of laundry can be washed together Refer to the table of consumption values on page 8, and advice and warnings on page 6. (Reduced Ironing), (Reduced Ironing), (Water plus) . As a short programme Mix 40 °C with a maximum spin speed, is ideal.

For programmes without prewash, add detergent to compartment II. For prewash programmes, distribute the detergent between compartments I and II. of approx. 15 synthetic cotton, linen, synthetic fibres or blended fabrics Short programme soiled laundryminutes, suitable for lightly Additional functions; Information W7320F3EU /... Danger of suffocation! Risk of poisoning! Risk of explosion! , , , EcoPerfect TurboPerfect , EcoPerfect , reduced rinse and final spin cycle * , EcoPerfect , EcoPerfect , EcoPerfect TurboPerfect no spin between rinse cycles , , EcoPerfect , , Empty, Gentle spin Risk of injury! hard-wearing fabrics, cottons or linen that can be washed TurboPerfect at 90°C TurboPerfect TurboPerfect TurboPerfect for delicate fabrics, e.g., silk, synthetic fibres or blended fabrics (e.g.

curtains) easy-care cotton, linen, synthetic or blended fabrics 9000584364 9008 / 9000584364 Rinse / Spin Consumption values Programme Additional function Load depending on model Electricity*** dark cotton and dark synthetic fabrics Water*** 60 l 59 l 59 l 59 l 69 l 42 l 53 l 47 l 34 l 35 l 39 l 39 l hand/machine washable wool colour fast cottons or linen Cottons (cold) 7 kg 7 kg 7 kg 7 kg 7 kg EcoPerfect * 7 kg 3.5 kg 3.5 kg 2 kg 2 kg 2 kg 2 kg Water inlet temperature cold 60 °C 0.24 kWh 0.24 kWh 0.37 kWh 0.98 kWh 1.15 kWh 2.10 kWh 1.05 kWh 0.62 kWh 0.54 kWh 0.19 kWh 0.05 kWh 0.17 kWh 0.03 kWh 0.37 kWh 0.48 kWh 0.57 kWh 1.36 kWh 0.

55 kWh 0.34 kWh 0.32 kWh 0.19 kWh 0.05 kWh 0.17 kWh 0.03 kWh Programme duration*** 145 min 145 min 155 min 165 min 155 min 180 min 87 min 60 min 41 min 41 min 40 min 40 min 3.5 kg cotton or synthetic fabrics Cottons 30 °C** Cottons 40 °C** Cottons 60 °C** Cottons 90 °C Cottons 60 °C Synthetics 40 °C** Mix 40 °C** Delicate/Silk 30 °C Delicate/Silk Wool 30 °C Wool (cold) (cold) Overview of programmes microfibre fabrics - 40 °C Type of laundry - 40 °C 1 kg lingery Additional programmes * reduced load with additional function TurboPerfect 7 kg/ 4 kg* max. - 90 °C - 60 °C - 60 °C - 40 °C - 40 °C - 40 °C - 40 °C 2 kg - 40 °C °C Programmes Synthetics + Prewash Super Quick 15' Delicate/Silk Synthetics+ Cottons + Prewash Sensitive Dessous Sports Mix * Programme setting for testing and energy labelling in accordance with EU directive 92/75/EEC. ** Programme setting for testing in accordance with valid standard EN60456.

Note on comparative tests: For testing the test programmes, wash the specified load using the maximum spin speed. As a short programme for coloureds, select the programme Mix 40 °C with the maximum spin speed. *** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions. Wool 7 8 Care and cleaning Before the first wash Risk of electric shock! Disconnect the mains plug. Risk of explosion! Do not use solvents.

Maintenance Detergent solution pump Turn the programme selector to Off and disconnect the mains plug. 1. Using a screwdriver or the insert for liquid detergent (depending on model), open and remove the service flap. Risk of burning! Allow the detergent solution to cool. Turn off the tap. Do not put laundry in the machine! Turn on the tap. Put into compartment II: approx. 2 litres of water detergent (measure according to the manufacturer's instructions for lightly soiled laundry and water hardness) Turn the programme selector to Synthetics 60 °C and press Start/Reload.



[You're reading an excerpt. Click here to read official NEFF](#)

[W7320F3EU user guide](#)

<http://yourpdfguides.com/dref/3655257>

At the end of the programme, turn the programme selector to Off. Machine housing, control panel Wipe with a soft, damp cloth. Do not use any abrasive cloths, scourers or cleaning agents (stainless steel cleaners). Remove detergent and cleaning agent residue. Do not wash the machine with a jet of water! 2. Remove the folding gutter and place a large enough container underneath. 3.

For models with a drainage hose: Remove the drainage hose from the retainer and pull it from the housing. Remove the sealing cap, allow the detergent solution to flow out into the container. Replace the sealing cap and place the drainage hose in the retainer. 3* For models without a drainage hose: Carefully unscrew the pump cover 180° or until the detergent solution begins to flow out on the folding gutter. When the container is full, close the pump cover and empty the container. Repeat the above steps until all the detergent solution has completely drained out. Cleaning the detergent drawer ...

.. if it contains detergent or fabric softener residues. 1. 2.

3. 4. 5. 6. Pull out, press insert down and remove drawer completely.

To remove the insert: press upwards from below with your finger. For models with insert for liquid detergent: Slide the insert upwards and remove it from the back. Clean the detergent dispenser tray and inserts with water and a brush and dry them. Attach the insert and engage (connect the cylinder to the guide pin). Push in the detergent drawer. Leave the detergent drawer open so that any residual water can evaporate. Drum Leave the washing machine door open so that the drum can dry out. For rust stains, use chlorine-free cleaning agent, not steel wool. 4. Carefully unscrew the pump cover (there may be residual water).

5. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must rotate). 6. Replace the pump cover and screw it tightly. 7. Return the drainage hose (depending on model) and the folding gutter to their start position. 8. Place the service flap back on and close. To prevent unused detergent from flowing straight into the drain during the next wash: Pour 2 litres of water into compartment II and then start the Empty programme.

Descaling Ensure there is no laundry in the machine! This will not be necessary if the correct dosage of detergent is used.

If it is, descale the appliance according to the manufacturer's instructions. Descaling products can be acquired on the website or from customer services Installation instructions. Drainage hose at the siphon Turn the programme selector to Off and disconnect the mains plug. 1. Loosen the hose clamp, carefully remove the drainage hose (residual water).

2. Clean the drainage hose and siphon connecting piece. 3. Reattach the drainage hose and secure the connection with the hose clamp. Emergency release (e.g. in the event of a power cut) The programme continues to run when the power has been restored. However, if the laundry has to be removed, the washing machine door can be opened as follows: Risk of scalding! The detergent solution and laundry may be hot. Let it cool. Do not reach into the drum if it is still rotating. @@1. Turn the programme selector to Off and disconnect the mains plug. 2. Drain the detergent solution page 10. 3.

Pull the emergency release downwards with a tool and release. @@@@Reduce the water pressure in the supply hose: Turn off the tap. Select any programme (except Rinse / Spin // Empty). Choose Start/Reload. Let the programme run for approximately 40 seconds. Turn the programme selector to Off. Disconnect the mains plug. @@2. 3. 4.

depending on model Close the washing machine door properly; laundry may be caught. Turn on the tap fully, supply hose kinked or trapped; Clean the filter page 10, water pressure too low. Detergent solution pump blocked; Clean the detergent solution pump page 10. Drainage hose / waste pipe blocked; Clean the drainage hose at the siphon page 10. Water in the base tub, appliance leaking.

Call customer services! Not a fault. Entry of unused hot water. Check hot water tap. Childproof lock activated: to deactivate page 5. 5.

Disconnect the hose from the tap. Clean the filter using a small brush. and/or for Standard and Aqua-Secure models: Remove the hose on the rear of the appliance. Remove the filter with pliers and clean. 6. Connect the hose and check for leaks. 9 10 What to do if... Water is leaking out No water supply.

Detergent not dispensed. Attach/replace the drainage hose correctly. Tighten the screw connection of the supply hose. Start/Reload not selected? Tap not turned on? Filter blocked? Clean the filter page 10. Supply hose kinked or trapped? Safety function active. Programme stopped? page 4. (without final spin) selected? page 3, 4. Can be opened by emergency release only? page 9. Door locked after the washing machine is switched off: Switch on the washing machine and wait for 5 seconds. Start/Reload or (Ready in) time selected? Washing machine door closed? Childproof lock active? Deactivate page 5. (without final spin) selected? page 3, 4. Clean the detergent solution pump page 10. Clean the waste pipe and/or drainage hose. Not a fault. Water remains inside below the visible area.

The appliance door will not open. The selected programme does not start. Detergent solution is not drained. No water can be seen in the drum. Spin result not satisfactory.

Not a fault. Spin control system has stopped the spin cycle. Uneven distribution of Laundry wet/too damp. laundry. Distribute large and small items of laundry evenly in the drum. (Reduced Ironing) selected? page 5. Selected speed too low? page 5. Programme duration changes Not a fault. The program time can vary according to the distribution of laundry, with suddenly during operation. it therefore being possible for the display panel to show adjustments in the duration.

Spin cycle performed several Not a fault. The balance control system has detected an imbalance and is times. attempting to redress this by repeating the spin. Residual water in the Not a fault: the action of the care product is not affected. compartment for care products. Clean the compartment if necessary page 9. Odour formation in the washing Run programme Cottons 90 °C without laundry. Use standard detergent. machine. Too much detergent used? Status display flashing.

If foam is escaping from the detergent drawer: mix 1 tablespoon of fabric softener Appliance has detected a with ½ litre of water and pour into compartment II (not with outdoor or down detergent overload. fabrics). Reduce the detergent dosage for the next wash cycle. Intense noise formation, Are the appliance feet fixed? vibrations and "wandering" Secure the appliance feet Installation instructions. during the spin cycle.

Transportation safety devices removed? Remove transportation safety devices Installation instructions.



[You're reading an excerpt. Click here to read official NEFF W7320F3EU user guide](http://yourpdfguides.com/dref/3655257)
<http://yourpdfguides.com/dref/3655257>

Display panel/indicator lamps Energy-saving mode page 5. remain turned off while the Power cut? machine is working. Fuses triggered? Reset/change the fuse. If the fault occurs repeatedly, call customer services.

Programme sequence longer Not a fault. Unbalanced load detection system adjusts imbalance by repeatedly than usual. distributing the laundry. Not a fault: foam detection system active; adds an additional rinse cycle. @@laundry. Select Rinse / Spin or brush out the laundry after washing. @@ Turn off the water supply and call customer services Installation instructions. 11 .



[You're reading an excerpt. Click here to read official NEFF](#)

[W7320F3EU user guide](#)

<http://yourpdfguides.com/dref/3655257>