



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NETGEAR FS208. You'll find the answers to all your questions on the NETGEAR FS208 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NETGEAR FS208
User guide NETGEAR FS208
Operating instructions NETGEAR FS208
Instructions for use NETGEAR FS208
Instruction manual NETGEAR FS208


FS208_FS208_10 user's guide Page 1 Thursday, August 7, 2012 9:57 AM

NETGEAR® Guide

Installation
Connect with Innovation™

Ethernet Switch FS205/FS208

Estimated installation time: 5-10 minutes



Package Contents

This package includes:

- Ethernet Switch FS205/FS208
- AC power adapter
- Installation Guide (this document)

Prepare to Install the Switch

Place the switch on a flat horizontal surface such as a table, desk, or shelf. You can use wall-mounting screws (not provided) to hang the switch in an open space on a wall.


Make sure that the selected location is:

- Not in direct sunlight or near a heater or heating vent
- Not cluttered or crowded. There must be at least 2 inches (5 cm) of air space on all sides of the switch.
- Well ventilated (especially if it is in a closet).

You need a Category 3 (10 Mbps) or Category 5 (100 Mbps) Ethernet cable with RJ-45 connectors for each device you connect to the switch. Each Ethernet cable must be less than 328 feet (100 meters).


Install the Switch and Connect Devices

- Place the switch on a flat surface or hook it onto the screws.
- For each device, insert one end of an Ethernet cable into a port on the switch and the other end into the network port on the device.
- Connect the power adapter cord into the back of the switch and then plug the adapter into a power source (such as a wall socket or power strip).

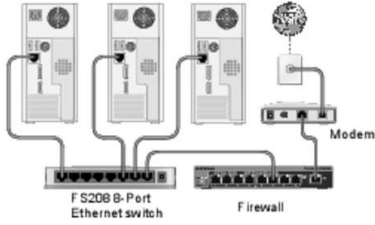

4. Check the LEDs:

Power



- Verify that the Power LED is lit
- For each jack that is connected to a powered device, check that the Link LED is lit and it flashes when activity occurs.

Note: If any LED does not operate as indicated, go to the Troubleshooting section.



[You're reading an excerpt. Click here to read official NETGEAR FS208 user guide](http://yourpdfguides.com/dref/5324802)

<http://yourpdfguides.com/dref/5324802>

Manual abstract:

@@ not cluttered or crowded. There must be at least 2 inches (5 cm) of air space on all sides of the switch. well ventilated (especially if it is in a closet).
Modem Power You need a Category 3 (10 Mbps) or Category 5 (100 Mbps) Ethernet cable with RJ-45 connectors for each device you connect to the switch.
Each Ethernet cable must be less than 328 feet (100 meters). fS208 8-Port Ethernet switch Firewall 4. @@Place the switch on a flat surface or hook it onto
the screws. 2. @@ 3. @@ Verify that the Power LED is lit.
For each jack that is connected to a powered device, check that the Link LED is lit and it flashes when activity occurs. Note: If any LED does not operate as
indicated, go to the Troubleshooting section. @@Make sure that the cable is less than 328 feet (100 meters). @@@@Use it to register your product at:
http://www. Registration is required to use our telephone support service.
@@@@@@@@Make sure that the cable connectors are securely plugged in at the switch and the device. Make sure that the connected device is turned
on. Weight Operating temperature Operating humidity Safety agency approvals for the power adapter http://support. @@@@@@NETGEAR, the
NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. And/or its subsidiaries in the United States
and/or other countries.
Information is subject to change without notice. @@For indoor use only in all EU countries and Switzerland. The Port LED for a device is off or stays on
continuously. .



[You're reading an excerpt. Click here to read official NETGEAR
FS208 user guide
http://yourpdfguides.com/dref/5324802](http://yourpdfguides.com/dref/5324802)