



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR. You'll find the answers to all your questions on the NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR
User guide NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR
Operating instructions NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR
Instructions for use NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR
Instruction manual NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR

Nikon **AF-S DX NIKKOR** **18-55mm f/3.5-5.6G VR**

使用説明書	P. 2-11
User's Manual	PP. 12-19
Benutzerhandbuch	S. 20-27
Manuel de l'utilisateur	P. 28-35
Manual del Usuario	PP. 36-43
Användarhandbok	S. 44-51
Руководство пользователя	СТР. 52-59
Gebbruikshandleiding	P. 60-67
Manuale d'uso	PP. 68-75
使用说明书	P. 76-85
使用説明書	P. 86-93
사용 설명서	P. 94-103

Jp
En
De
Fr
Es
Se
Ru
NI
It
Ck
Ch
Kr



[You're reading an excerpt. Click here to read official NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR user guide](http://yourpdfguides.com/dref/3856174)
<http://yourpdfguides.com/dref/3856174>

Manual abstract:

Repairs should be performed only by qualified technicians. Should the camera or lens break open as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection after unplugging the product and/or removing the battery. Keep out of reach of children Particular care should be taken to prevent infants from putting the batteries or other small parts into their mouths. Observe the following precautions when handling the camera and lens Keep the camera or lens unit dry. Do not handle or touch the camera or lens unit with wet hands. When shooting with back-lighting, keep the sun well out of the frame. Sunlight could be focused into the lens body and cause a fire. Sunlight not directly in the frame, but even near the frame, can also be the cause of fire. @@@@Should you notice smoke or an unusual smell coming from the camera or lens, remove the battery immediately, taking care to avoid burns. continued operation could result in injury.

After removing or disconnecting the power source, take the product to a Nikon-authorized service representative for inspection. Do not look at the sun through the lens or viewfinder Viewing the sun or other strong light sources through the lens or viewfinder could cause permanent visual impairment. @@@@ 5x the focal length in 35mm format. Before using this lens, please read these instructions and refer to your camera's User's Manual. Enabling vibration reduction (VR) allows for shooting at shutter speeds approximately three stops* slower (at a focal length of 55mm) than when vibration reduction is disabled, thus expanding the range of effective shutter speed options, and simplifying hand-held shooting at a variety of zoom positions. (*Based on results achieved under Nikon measurement conditions. The effects of vibration reduction may vary by individual and/or shooting conditions. @@@@Be sure to turn the camera off before removing the lens. @@Hold down the lens hood attachment buttons 2 when removing the lens hood 1. Before focusing, rotate the zoom ring 4 to adjust the focal length until the desired composition is framed in the viewfinder. If your camera has a depth of field preview (stop-down) button or lever, depth of field can be previewed through the camera viewfinder. Shooting is possible when camera focus mode is set to either AF or M. Be careful not to touch the focus ring 3 when it is turning during autofocus operation. For more information on camera focus modes, refer to your camera's User's Manual. Getting good results with autofocus Enabling vibration reduction (VR) allows for shooting at shutter speeds approximately three stops* slower (at a focal length of 55mm) than when vibration reduction is disabled. The effects of vibration reduction may vary depending on individual and shooting conditions. @@@@This is not a malfunction. @@@@This is not a malfunction. Turn the camera on again to correct this. @@@@It is not possible to shoot at distances shorter than 0.

Supported focal length / Shooting distance D300, D200, D100, D80, D70- No vignetting occurs at series, D60, D50, D40-series any focal length Digital-SLR cameras Clean lens surfaces with a blower brush. To remove dirt and smudges, use a soft, clean cotton cloth or lens tissue moistened with ethanol (alcohol) or lens cleaner. Wipe in a circular motion from the center to the outer edge, taking care not to leave traces or touch other parts of the lens. @@ NC filters are available to protect the front lens element. The lens hood 1 also helps to protect the front of the lens. @@@@ Do not get water on the lens or drop it in water as this will cause it to rust and malfunction. Reinforced plastic is used for certain parts of the lens. 76°28'50" 18, 24, 35, 45, 55mm Output to camera body Manually via separate zoom ring Autofocus using a Silent Wave Motor; manually via separate focus ring Lens-shift method using voice coil motors (VCMs) 0. Attachment Ring SX-1 Other accessories may not be suitable for use with this lens. G-type AF-S DX Zoom-Nikkor lens with built-in CPU and Nikon bayonet mount (Specially designed for use with Nikon digital-SLR--Nikon DXformat--cameras) 18mm55mm f/3.

Specifications and designs are subject to change without notice or obligation on the part of the manufacturer. @@@@E, the background may be in focus, while the subject is out of focus. @@F, focus may be difficult to acquire using autofocus. @@Om kameran eller objektivet skulle brytas upp efter att de tappats i marken eller stötts till, ska du efter att den kopplats bort från nätströmmen och/eller batteriet lossats, lämna in produkten till ett auktoriserat Nikonservicecenter för inspektion. En noggrannare exponeringskontroll blir möjlig eftersom information om avståndet till motivet överförs från objektivet till kamerahuset.

76°28'50" 18, 24, 35, 45, 55 mm Skickas till kamerahuset Manuellt via separat zoomring Autofokus med Silent Wave Motor; manuellt via separat fokusring Vibrationsreducering Objektivbyte med VCM-motorer (voice coil) Kortaste 0,28 m vid alla zoominställningar fokuseringsavstånd Antal lamellblad 7 st (rundade) Irisbländare Helautomatisk Bländarintervall f/3,5 till f/22 (vid 18 mm), f/5,6 till f/36 (vid 55 mm) Exponeringsmätning Via metod med full bländare Tillbehörsstorlek 52 mm (P = 0,75 mm) Storlek Ungefär 73 mm (diam. No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION. .



[You're reading an excerpt. Click here to read official NIKON AF-S DX NIKKOR 18-55MM F-3.5-5.6G VR user guide](http://yourpdfguides.com/dref/3856174)
<http://yourpdfguides.com/dref/3856174>