



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NIKON AF-S TELECONVERTER TC-20E III. You'll find the answers to all your questions on the NIKON AF-S TELECONVERTER TC-20E III in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NIKON AF-S TELECONVERTER TC-20E III
User guide NIKON AF-S TELECONVERTER TC-20E III
Operating instructions NIKON AF-S TELECONVERTER TC-20E III
Instructions for use NIKON AF-S TELECONVERTER TC-20E III
Instruction manual NIKON AF-S TELECONVERTER TC-20E III

Nikon

AF-S TELECONVERTER
TC-20E III

使用説明書	P.2	Gebruikshandleiding	P.72
User's Manual	P.12	Manuale d'uso	P.82
Benutzerhandbuch	S.22	Návod k obsluze	STR.92
Manuel d'utilisation	P.32	Užívateľská príručka	STR.102
Manual del usuario	P.42	使用说明书	P.112
Användarhandbok	S.52	使用説明書	P.124
Руководство пользователя	СТР.62	사용설명서	P.134

Jp

En

De

Fr

Es

Sv

Ru

Nl

It

Cz

Sk

Ck

Ch

Kr



[You're reading an excerpt. Click here to read official NIKON AF-S TELECONVERTER TC-20E III user guide](http://yourpdfguides.com/dref/3856415)
<http://yourpdfguides.com/dref/3856415>

Manual abstract:

Do not look at the sun through the lens or viewfinder. Viewing the sun or other strong light sources through the lens or viewfinder could cause permanent visual impairment. Should you notice smoke or an unusual smell coming from the camera or lens, remove the battery immediately, taking care to avoid burns. continued operation could result in injury. After removing or disconnecting the power source, take the product to a Nikon-authorized service representative for inspection. Observe the following precautions when handling the camera and lens. When shooting with back-lighting, do not point the lens at the sun or allow sunlight to pass directly down the lens as this may cause the camera to overheat and possibly cause a fire. Failure to do so could result in a fire, as the lens may focus sunlight onto a flammable object. This teleconverter employs aspherical lens, which minimizes optical interference of the prime lens. Those recommended for your teleconverter/lens combination are listed on pages 144-145. See User's Manual of the camera body for more details.

Blank box means not applicable.

Using this teleconverter with a lens decreases the effective aperture by two stops. Autofocus with manual priority, Autofocus with auto priority, Manual focus only (Focus assist is available), Manual focus only (Focus assist is available), Manual focus only. Both autofocus and manual focus using electronic rangefinder are possible with an AF-S/AF-I NIKKOR lens having maximum aperture of f/2.8 (effective aperture of f/5.6). Be careful not to allow the CPU contacts to become dirty or damaged. To remove dirt and smudges, use a soft, clean cotton cloth or lens tissue moistened with ethanol (alcohol) or lens cleaner.

Wipe in a circular motion from the center to outer edge, taking care not to leave traces or touch other parts of the lens. Be sure to store the teleconverter away from direct sunlight or chemicals such as camphor or naphthalene.



[You're reading an excerpt. Click here to read official NIKON AF-S TELECONVERTER TC-20E III user guide](http://yourpdfguides.com/dref/3856415)
<http://yourpdfguides.com/dref/3856415>