



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK 421 A-B-510 B. You'll find the answers to all your questions on the NILFISK 421 A-B-510 B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK 421 A-B-510 B
User guide NILFISK 421 A-B-510 B
Operating instructions NILFISK 421 A-B-510 B
Instructions for use NILFISK 421 A-B-510 B
Instruction manual NILFISK 421 A-B-510 B

421 A/B - 510 B



04-06	Bedienungsanleitung	37-39	Οδηγίες χρήσης
07-09	Operating instructions	40-42	Használati utasítás
10-12	Mode d'emploi	43-45	Instrukcja obsługi
13-15	Gebruiksaanwijzing	46-48	Návod k obsluze
16-18	Instrucciones de utilizaci3n	49-51	Инструкция по эксплуатации
19-21	Instruções de serviço	52-54	Vartojimo instrukcijos
22-24	Istruzioni per l'uso	55-57	Lietošanas instrukcija
25-27	Brugsanvisning	58-60	Navodila za uporabo
28-30	Bruksanvisning	61-63	Návod na obsluhu
31-33	Bruksanvisning	64-66	Kasutusejuhend
34-36	Käyttöohje		



05/2004 CE



[You're reading an excerpt. Click here to read official NILFISK 421 A-B-510 B user guide](http://yourpdfguides.com/dref/2884396)
<http://yourpdfguides.com/dref/2884396>

Manual abstract:

@@The right to make technical changes is reserved. Repairs must only be carried out by a trained technician. The type and the serial number of your machine may be found on its type plate. This information will be required for ordering spare parts. Please make a note of them in the space below so that they will always be available when required! Neither the machine nor the suction units are suitable for the evacuation of ·Dusts that are hazardous to health You should examine both the shipping carton and the machine as soon as it has arrived. If you find any damage, retain the packaging so that it can, if necessary, be examined by the carrier. Contact the carrier immediately and report the damage. Please read this information carefully, and take the appropriate steps to protect both persons and property. This symbol is used to indicate an immediate danger that could be injurious or fatal to the user. This symbol is used to warn of a situation that could be injurious to the user.

This symbol is used to draw attention to situations that could result in light injury to the user or damage to the machine or to other property. @@@Always wear ear protection when the level of operating noise is high. @@ 6. @@ 7. Always check the operational safety of the machine before using it.

@@ 9. @@ 10. No safety devices must ever be removed, modified or deactivated. @@It is dangerous to drive over it when the machine is in operation. @@ 17.

@@ 18. @@ 19. @@ 20. @@Only connect to a power network that is fitted with leakage current protection equipment. 23. Only persons who are familiar with the machine and who have been instructed in the possible hazards may operate, service or repair it. 24. Remove all jewellery when working close to electrical components. When performing cleaning and servicing work, ensure that authoritative regulations applicable to the particular location regarding the correct handling of oils, fats, acids, alkalis, fuels and other similar agents are obeyed. 27.

Observe the regulations applicable to your location when disposing of old machines or their components. 28. Do not clean the machine with a high-pressure cleaner. Only start the machine when the control handle is locked. The built-in "dead-man's" switch prevents the machine from being switched on when the control handle is vertical. Push the switch outwards with the index finger ·press and hold Switch off ·Push the control handle gently downwards = the machine runs to the left ·Begin as far away as you can from the socket or door Work backwards Steadily work one track forwards and back Work so that the tracks overlap by about 1/3 Fit accessory manually by turning to the left Removing accessories ·Mount the vacuum unit on the control handle Insert the vacuum hose Insert cable into the control bar Fit the vacuum ring Place the tank on the lower control handle holder Fix it in place with the upper holder Attach the cable to the left hand lever on the control handle Connect the liquid hose to the tank and insert it to the side of the motor Type Voltage Frequency Protection class Protection grade Drive motor Brush - ϕ Pad - ϕ Rotation speed Working pressure Torque Cable length Noise level Weight Vibration CE testing V Hz IP W mm mm rpm g/cm²Nm m dB(A) kg m/s² 421 B 220-240 50 I 44 1200 420 406 170 50 67 12 63 38 2,5 X 421 A 110 50-60 II 44 750 420 406 170 50 56 12 63 38 2,5 X 510 B/B3 110/220240/ 400* 50-60 I 44 1500 510 430 145 51/210 98 12/25* 64 62 2,5 X Fix it in place with the upper holder 3. Always withdraw the mains plug before beginning servicing work. Only trained electricians may work on electrical components. Regularly clean the spray device with water after use. 6.

Regularly wipe down the machine with a damp cloth. @@.



[You're reading an excerpt. Click here to read official NILFISK 421 A-B-510 B user guide](http://yourpdfguides.com/dref/2884396)
<http://yourpdfguides.com/dref/2884396>