



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK BR 755. You'll find the answers to all your questions on the NILFISK BR 755 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK BR 755
User guide NILFISK BR 755
Operating instructions NILFISK BR 755
Instructions for use NILFISK BR 755
Instruction manual NILFISK BR 755

BR 755, BR 755C, BR 855



Quick Start Guide
Hızlı Başlangıç Rehberi

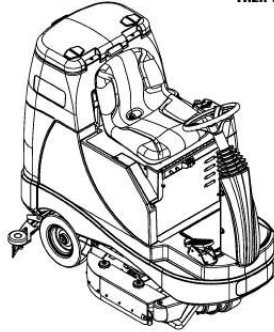

Nilfisk Models: 56601014, 56601015, 56601016

12/08
FORM NO. 56041781

A-English
B-Türkçe

Printed in USA



[You're reading an excerpt. Click here to read official NILFISK BR 755 user guide](http://yourpdfguides.com/dref/2884736)
<http://yourpdfguides.com/dref/2884736>

Manual abstract:

The purpose of this Quick Start Guide is to provide the operator with all basic information to use the machine properly. For information about technical characteristics, operation, machine inactivity, maintenance, spare parts and safety conditions refer to the User Manual on the supplied CD-ROM. Before performing any procedure on the machine, the operators and qualified technicians must read the User Manual on the supplied CD-ROM. This guide must be kept near the machine, inside an adequate case, away from liquids and other substances that can cause damage to it. The supplied CD-ROM contains an Index, pdf files of all instructions for use manuals, parts lists, service manuals and Adobe Reader® software installers. Microsoft® Windows® Vista, Windows XP Professional, Windows XP Home Edition, Windows Tablet PC Edition with Service Pack 2, Windows 2000 with Service Pack 4, Windows 2003 Server. The Model Number and Serial Number of your machine are shown on the Nameplate on the machine. This information is needed when ordering repair parts for the machine. Use the space below to note the Model Number and Serial Number of your machine for future reference. @@The following symbols indicate potentially dangerous situations.

@@@Most of the accidents that may occur in a factory, while working or moving around, are caused by failure to comply with the simplest rules for exercising prudence. A careful and prudent operator is the best guarantee against accidents and is essential for successful completion of any prevention program. Nilfisk uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property. is used to warn of immediate hazards that will cause severe personal injury or death.

Is used to call attention to a situation that could cause severe personal injury. Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. Read all instructions before using. Specific Cautions and Warnings are included to warn you of potential danger of machine damage or bodily harm. This machine shall be used only by properly trained and authorized persons.

While on ramps or inclines, avoid sudden stops when loaded. avoid abrupt sharp turns. Use low speed down hills. clean only while ascending (driving up) the ramp. Keep sparks, flame and smoking materials away from batteries. Explosive gases are vented during normal operation. charging the batteries produces highly explosive hydrogen gas. Charge batteries only in well-ventilated areas, away from open flame. Do not smoke while charging the batteries. Remove all jewelry when working near electrical components.

Turn the key switch off (O) and disconnect the batteries before servicing electrical components. Never work under a machine without safety blocks or stands to support the machine. Do not dispense flammable cleaning agents, operate the machine on or near these agents, or operate in areas where flammable liquids exist. Do not clean this machine with a pressure washer. Only use the brushes provided with the appliance or those specified in the instruction manual.

The use of other brushes may impair safety. This machine is not approved for use on public paths or roads. This machine is not suitable for picking up hazardous dust. do not use scarifier discs and grinding stones. Nilfisk will not be held responsible for any damage to floor surfaces caused by scarifiers or grinding stones (can also cause damage to the brush drive system).

When operating this machine, ensure that third parties, particularly children, are not endangered. Before performing any service function, carefully read all instructions pertaining to that function. Do not leave the machine unattended without first turning the key switch off (O), removing the key and applying the parking brake. Turn the key switch off (O) and remove the key, before changing the brushes, and before opening any access panels. Take precautions to prevent hair, jewelry, or loose clothing from becoming caught in moving parts.

Use caution when moving this machine in below freezing temperature conditions. Any water in the solution, recovery or detergent tanks or in the hose lines could freeze, causing damage to valves and fittings. flush with windshield washer fluid. The batteries must be removed from the machine before the machine is scrapped. The disposal of the batteries should be safely done in accordance with your local environmental regulations.

Do not use on surfaces having a gradient exceeding that marked on the machine. All doors and covers are to be positioned as indicated in the instruction manual before using the machine. @@@@ turn ON the Key Switch (A) and check the Battery Indicator (F6). If the gauge is completely filled, the batteries are ready for use. @@@@ install the batteries by following the instructions below. DO NOT install two 12 volt batteries in your machine. Use extreme caution when working with batteries. @@@@This gas can be ignited by any electrical arc, spark or flame. Wear safety glasses, a rubber apron and rubber gloves. Do not allow tools to touch more than one battery terminal at a time.

@@@@@Before changing batteries consult TSBUS2008-984 or visit <http://www.@@@@@@@@@@@@@@@@@@@@> Once this indicator comes on you should be able to simply pour an entire gallon bottle of detergent into the Cartridge to refill without worrying about measuring. nOTE: Only reset the system when the cartridge is full. When switching cartridges, the "Low Detergent" indicator is only accurate if the replacement cartridge is at the same level as the cartridge being replaced. To change the percentage, the detergent system must be OFF, then press and hold the Detergent ON/OFF Switch (E) for 2 seconds. The detergent indicator will flash and each press of the switch will cycle through the available percentages (3%, 2%, 1. Once the desired percentage is displayed on the screen (F5), stop and it will lock in after 5 seconds. cARTRIDGE INSTRUCTIONS: The Detergent Cartridge (13) is located behind the Detergent Cartridge Access Door (12) in the operator's compartment. Fill the detergent cartridge with a maximum of 1. SERVICE NOTE: Remove the detergent cartridge from the detergent box prior to filling to avoid spilling detergent on the machine.

It is recommended that a separate cartridge be used for each detergent you plan to use. The detergent cartridges have a white decal on them so you can write the detergent name on each cartridge to avoid mixing them up. When installing a new cartridge, remove the Cap (AA) and place the cartridge in the detergent box. Be sure you understand the operator controls and their functions. While on ramps or inclines, avoid sudden stops when loaded.

avoid abrupt sharp turns. Use low speed down hills. Follow the instructions in "preparing the machine for use" section of this manual. 1 See Figure 4. While seated on the machine, adjust the steering wheel to a comfortable position using the Steering Wheel Tilt Adjust Knob (23).



[You're reading an excerpt. Click here to read official NILFISK BR 755 user guide](http://yourpdfguides.com/dref/2884736)
<http://yourpdfguides.com/dref/2884736>

The seat can be adjusted if necessary by tipping up the seat and using the adjustment knob (18). 3 To transport the machine to the work area, apply even pressure with your foot on the front of the Drive Pedal (3) to go forward or the rear of the pedal for reverse. Vary the pressure on the foot pedal to obtain the desired speed. 4 Press and hold the Solution Switch (C) to pre-wet the floor, solution will be dispensed while the switch is held. NOTE: This will help prevent scarring of the floor surface when starting to scrub with dry brushes. This must be done prior to pressing the Scrub ON Switch (H). The scrub pressure will default to Normal (one scrub pressure indicator lit). Use the Scrub Pressure Increase Switch (G) and Scrub Pressure Decrease Switch (I) to change between Normal, Heavy and Extreme Scrub modes. the solution flow rate will automatically adjust to coincide with the scrub pressure. NOTE: The solution flow rate can be changed independently of the scrub pressure by pressing the Solution Increase Switch (B) or Solution Decrease Switch (D).

Any subsequent scrub pressure adjustments will reset the solution flow rate to correspond with the scrub pressure. NOTE: The scrub, solution, vacuum and detergent (EDS models) systems are automatically enabled when the Scrub ON/OFF Switch (H) is pressed. Any individual system can be turned OFF or back

ON by simply pressing its switch at any time during scrubbing. @@@@If there is water trailing the machine, you may be dispensing too much solution, the recovery tank may be full, or the squeegee tool may require adjustment. This will cause the indicator to flash yellow for one minute, solution flow rate will increase to the next level, scrub pressure will increase to the next level and the detergent percentage will increase to the next larger percentage. 9

For extremely dirty floors, a one-pass scrubbing operation may not be satisfactory and a "double-scrub" operation may be required. This operation is the same as a one-pass scrubbing except on the first pass the squeegee is in the up position (press the Vacuum/Wand Switch (L) to raise the squeegee). This allows the cleaning solution to remain on the floor to work longer. The final pass is made over the same area, with the s.



[You're reading an excerpt. Click here to read official NILFISK BR](http://yourpdfguides.com/dref/2884736)

[755 user guide](http://yourpdfguides.com/dref/2884736)

<http://yourpdfguides.com/dref/2884736>