



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK DELTA BOOSTER. You'll find the answers to all your questions on the NILFISK DELTA BOOSTER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK DELTA BOOSTER
User guide NILFISK DELTA BOOSTER
Operating instructions NILFISK DELTA BOOSTER
Instructions for use NILFISK DELTA BOOSTER
Instruction manual NILFISK DELTA BOOSTER

DELTABOOSTER



**Nilfisk
ALTO**

Why Compromise

7509021 (02/2008)

User Manual



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

Manual abstract:

3.1 Water tank

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 10 1.3.2 C3K pumps

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 10 1.3.3 Dimensions, weight and total performance for systems ..

.....
.....
.....

. 11 Location: surroundings -frost, safety and service margins

.....
.....
.....

.... 12 Installation requirements for water connection

.....
.....
.....
.....
.....
.....

..... 13 Installation requirements for mains power connection

.....
.....
.....
.....

.... 14 Pipe system.....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 15 1.7.

1 Location of pipe lines/general instructions

.....
.....
.....
.....

... 15 1.7.2 Types of pipes, standards

.....
.....
.....

.....
.....
.....
.....

.....
.....

15 1.7.3 Fittings, standards ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 16 1.7.4 Dimensioning of pipe systems, pressure drop graph .

.....
.....
.....

..... 21 1.7.5 Examples .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 23 1.7.

6 Mounting requirements and hints

.....
.....
.....

.....
.....

.....
.. 26 Outlet points and accessories ...

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..... 29 Spray lance system ..

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

31 1.4 1.5 1.6 1.7 1.8 1.9 2 Instructions for assembly....

.....
.....

.....
.....

.....
.....

.....
.....

.....32 2.1 2.2 2.

3 2.4 2.5 Location of the DELTABOOSTER

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.. 32 Mounting base and tip over safety device ...

.....
.....

.....
.....

.....
.....

.....
.....

33 Connection of inlet water.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

.... 34 2.3.1 Control of filter in water tank

.....
.....
.....
.....
.....
.....

. 34 Connection of power between the DELTABOOSTER and the supply network (Settings on the plant, see section 3.5) ...

.....
.....
.....
.....
.....

.... 35 Starting up / running in .

.....
.....
.....
.....
.....
.....
.....
.....

. 36 2.5.1 Oil control..

.....
.....
.....
.....
.....
.....
.....
.....

.. 36 2.5.2 Start .

.....
.....

.....
.....
.....
.....
.....

.....
.....
.. 38 Model survey ...
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 39 Functional diagram.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 40 Instrument panel

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 41 3.4.
1 Main / emergency switch

.....
.....

.....
.....
.....
.....

.....
.....
.....
41 3.4.2 Control switch / starting switch and stopping switch

.....
.....
.....
. 41 3.4.3 Control panel

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
. 42 3.5 Setting and reading of DELTABOOSTER.....

.....
.....
.....
.....
.....
.....
.....
.....
. 43 3.5.1 Setting of water temperature

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 44 3.5.2 Connection and disconnection of C3K pumps .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 45 3.5.3 Reading of hour meters .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
. 46 3.6 Starting up / operation.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

47 3.7 Multipressure spray lance system

.....
.....
.....

.....
.....
.....

. 49 3.8 Operation after starting up - outlet points and equipment

.....
.....
.....

..... 50 3.8.1 High-pressure cock with Multipressure spray lance, Outlet point A ..

..... 50 3.

8.2 Outlet point with foam injector and foam lance, Outlet point B

..... 51 3.

8.3 Outlet point with detergent trolley and foam lance, Outlet point D 52 3.

8.4 General guidelines for the dosage of detergents

.....
.....

.....
.....

52 3.9 Maintenance.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

..... 53 3.

9.1 Service intervals / oil change

.....
.....
.....

.....
.....
.....

..... 53 3.9.2 Water filter ...

.....
.....

.....
.....
.....

.....
.....
.....

..... 53 3.

9.3 Couplings

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

53 3.10 Trouble-shooting and correction

.....

.....
.....
.....

.....
.....

..... 54 3.

1 3.2 3.3 3.4 Users are urgently requested to study section "3.1 Safety" before operating the system. Only instructed staff should operate the system. NOTE 3
1. Product Description Layout of system The DELTABOOSTER is a flexible pump station capable of supplying several simultaneous users with pressurized cold / hot water through a pipeline. The DELTABOOSTER has been pre-adjusted for a certain line pressure which is also the maximum working pressure.

For the DELTABOOSTER a system of nine different spray lances has been developed.

From a diagram the user can choose the lance giving the exact pressure and water volume required for his cleaning job. As standard the DELTABOOSTER system is available with capacities from 2 - 6 users and pre-adjusted at a line pressure of 160 bar (other pressures are available according to wishes of the customer). A plant with a capacity for 3 users can be upgraded to 4, 5, or 6 users at any time, and more DELTABOOSTER plants can be connected up on the same pipeline. With the DELTABOOSTER users no longer have to bother about the pros and cons of high or low pressure. From now on all choices are united in one system, and the solution with the optimal effect on the job to be done may always be found.

In more technical terms the plant operates in the following way: Water from a COLD and a HOT connecting valve is mixed in a water tank of the type A airgap. From here water of the required temperature is drawn into the high pressure pumps of the DELTABOOSTER which pressurize the water and supply it to a pipeline. When one or more outlet points are being used, the number of pumps required to maintain the pressure will automatically start up. When the cleaning stops successively, one of the excess pumps will cease operation each 15 sec. If all cleaning is stopped then controls will ensure that the requisite pressure for re-starting is maintained.

If a leakage is caused to the pipe system then the pump station will be totally switched off after some 2 minutes. In the case of an internal hose leakage in the system, faulty water supplies, excess temperature of inlet water, excess motor temperature or excess power consumption the system will be switched off. When starting and stopping the individual pumps, controls will ensure an even distribution of operation time on the pumps by switching between all the pumps in the system.

4 5 1.1 Model survey and main functions The DELTABOOSTER comprises 4 different modules: 1. 2. 3. 4. A switchboard A water tank KEW Technology C3K pumps Cabinet / frame The DELTABOOSTER is made of stainless materials through and through. DELTABOOSTER switchboard The switchboard comprises: - main (emergency) switch, to which the supply cable is connected - control switch 24V AC - push-button switch for starting up - maximum current breaker (short circuit and overload) for each pump - contactors for connection of 3 or 6 pumps.

The switchboard also incorporates an electronic control that monitors the operation of the system; i.e. a) selection at any time of required pump capacity; b) even distribution of load on individual pumps; c) mixing of desired temperature of water drawn from a cold water and a hot water supply and d) the indication of status/fault on a control panel. It also incorporates hour meters to show hours of operation of each individual pump. The switchboard has been prepared for connection of 6-pumps: (4, 5, and 6 pump plants) or for connection of 3-pumps: (2 and 3 pump plants) The switchboard which on delivery controls 3 pumps may later be expanded to control 6-pumps. The DELTABOOSTER is available for the following voltages: 3 x 230V 3 x 346-400V, 3 x 415-440V, 50 and 60 Hz + earth (PE) 50 and 60 Hz + earth (PE) 50 and 60 Hz + earth (PE) 6 Water tank The water tank of the DELTABOOSTER has been constructed in accordance with BS 6281 part 1 (type A air gap). As standard the water tank is mounted for water connection in the left side (seen from in front) but the water tank is also available with prepared water connection in the right side. The water tank of the DELTABOOSTER incorporates the following: - two solenoid valves for water inlet, cold and hot water respectively - various control valves - temperature sensor and level switches in the float tank - overflow - connection of up to 6 pumps - filters in in-lets C3K pumps The C3K pumps are designed for the very demanding environments in which they are used. Their durability has been achieved by the use of ceramic pistons *) and valves of stainless steel. Each of the pumps are connected by individual non-return valves to a central manifold.

Thus it is ensured that a defective pump will not cause a malfunction or an unintentional by-pass situation. *) The C in the pump designation C3K stands for "Ceramic". 7 1.2 Selection of system The great degree of flexibility, an important characteristic of the DELTABOOSTER, means that each individual customer may select the system which suits his cleaning needs.



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

The following solutions are offered: NUMBER OF PUMPS Choose from 2 to 6 pumps depending on the capacity required at the same time.

In other words, the number of pumps should be decided on the basis of the number of places that are to use the system at one and the same time. LINE PRESSURE The line pressure is the maximum working pressure for the individual user and is of importance to the dimensioning of the pipeline, of course. As a standard the system is adjusted to a line pressure of either 120 bar or 160 bar, but it may be adjusted to a line pressure within the area 90 to 160 bar. This adjustment should only be done by a specialized Nilfisk-ALTO customer engineer. SELECTION OF SPRAY LANCE For each of the line pressures (120 and 160 bar) there are nine different spray lances developed especially for the DELTABOOSTER.

Each of the nine spray lances represents a combination of pressure and water volume. Users may therefore always select the job-right combination of pressure and water volume. 8 1.3 Technical data Identification of model The model identification appears from the identification plate on the cabinet. The model plate provides the following data: 1. 2. 3. 4. 5. 6.

7. 8. 9. 10. 11. Model Nilfisk-ALTO No. Nozzle Pump pressure Max. pressure Water volume Max. temperature of inlet water Voltage / frequency / nominal input Power consumption Approval Serial number / Production week and year 11 3 4 5 9 8 DELTABOOSTER xxx xxx - xxx xxx/xx/200x xxx P bar/MPa xxx/xxx Pmax bar/MPa xxx/xx Q l/min xx Tin max °C xx I nom. Amp xx XXX-XXXV/Xph/XXHz/XX kW Made in Denmark 1 2 10 6 107330xxx IP X5 7 9 1. 3.0 Control system Country B,E,I, N Model DELTABOOSTER-3P Power absorption 230V 3~+ EARTH, 50Hz 6,7-20,4kW 20,6-63 A 230V 3~+ EARTH Installation requirements for mains power connection The power system of the DELTABOOSTER is designed in conformity with the common European standard: EN 60204-1 (October 1992): Electrical equipment of machines, Part 1: General requirements. Power should be connected through a flexible rubber cable holding copper conductors for 3 phases and earth (PE). The minimum dimensions of the cable are determined by the power consumption of the current system (cf. data sheet), but common to all systems is the following: Max pre-fuse: Max core section of cable: 125 A 35 mm In consideration of a future extension of the plant we recommend you to use a cable with a min.

core section of cable of 25 mm. Earth wire protection is required and the connection of the DELTABOOSTER to the mains power supply MUST be carried out by an authorized electrician in conformity with local regulations. To ensure maximum protection of persons, the installation should be protected by a Residual Current Device (RCD). SUPPLY NETWORK PE L1 L2 L3 Ground fault circuit interrupter max 125 A max 35 PE DELTABOOSTER control system 14 1.7 Pipe system I.

7.1 Location of pipelines/general instructions The pump station and outlet points should be placed so that the lines become as short as possible. The line should be arranged with as few bends as possible. Sometimes it may pay to split the line close to the pump station so the lengths conducting large volumes of water become as short as possible. A centre location of the pump station in relation to the outlet points would also lead to smaller pipe dimensions. Pipe lines should be placed on walls of tile or concrete, otherwise great care should be taken (reinforcement plates etc.) Pipe lines should be placed so that damage is prevented (collision, frost, extreme attacks of corrosion, etc.) Pipe lines should be fitted in a visual location everywhere or so that they may easily be inspected. Lines should not be incorporated in walls or floors. When leading through walls be careful not to enclose.

(Special lead-in bushes are available) The outlet points should be placed as close to the operation point as possible and so that a hose length preferably of 20 m is used. 1.7.2 Types of pipes - standards Seamless pipes of precision steel are used for the pipe system according to DIN 2391/C of St. 35.4 material quality, normalized, bright annealed and electro galvanized or welded steel pipes, stainless, calibrated and glowed according to DIN 2463 - 1.401 d3-- (DIN 17457 cl. 1). Alternatively, seamless pipes of precision steel in dimensions according to DIN 2391 and stainless material quality e.g.

Werkstoff no. 1.4301, 1.4436 or 1.4571.

Comparable qualities to Swedish standards are SIS 2333 or SIS 2343. Pipe dimensions: The following sizes are used with electro galvanized precision steel pipes: - 15x2 - 22x2.5 - 30x4 The following sizes are used with stainless precision steel pipes: - 15x1.5 - 22x2 - 30x3 In connection with branches close to the pump station it should be possible to avoid the 30 dimension for most 44C3 systems. For 160 bar systems fittings with a permissible working pressure of min. ND 160 bar are to be used. Please note that the pipe dimension 30 according to DIN 2353 is used together with a stronger type of fitting (S-series) and pipe systems with this dimension therefore become more expensive than e.g. an 22 line - particularly in multi-pump systems. 15 16 BETEGNELSE DESCRIPTION

BEZEICHNUNG DESIGNATION DIMENSION G R X X * X X X X X G Ø15 x 2 mm R Ø15 x 1,5 mm G Ø22 x 2,5 mm R Ø22 x 2,0 mm G Ø30 x 4,0 mm R Ø30 x 3,0 mm 3/4" Rohr Tuyau Rohr Tuyau Rohr Tuyau Anschlußschlauch Tuyau de raccordement Rør Pipe Rør Pipe Rør Pipe Tilslutningslange Connecting hose Rørledningskomponenter - Piping Components - Rohrleitungskomponenten - Elements De Tuyauterie 1.7.3 Cu X Fittings, standards - 1 Rørsamler Pipe coupling Verschraubung Raccord Verschraubung Raccord Verschraubung Raccord T-Stück Raccord en Té Rørsamler Pipe coupling Rørsamler Pipe coupling T-stykke T-Connection T-stykke T-Connection T-stykke T-Connection T-Stykke T-Connection Ø15 Ø22 Ø30 Ø15 x Ø15 x Ø15 Ø22 x Ø22 x Ø22 Ø30 x Ø30 x Ø30 Ø15 x 3/8RG x Ø15 X X X X X X X X * X X * * *

*) Lagerføres ikke (leveringstid oplyses) Not in stock (Ask for time of delivery) Nicht vorrätig (Fragen Sie bitte nach Lieferzeit) N'est pas en stock (Le délai de livraison peut être communiqué) Rørledningskomponenter - Piping Components - Rohrleitungskomponenten - Elements De Tuyauterie BETEGNELSE DESCRIPTION BEZEICHNUNG DESIGNATION DIMENSION G R X X * X X X X X X Ø15 x Ø15 Ø22 x Ø22 Ø30 x Ø30 Ø15 Ø22 Winkel Coude Winkel Coude Winkel Coude Verschraubung Raccord reg. Verschraubung Raccord reg. Vinkel Elbow Vinkel Elbow Vinkel Elbow Stilbar L-forskrining Adj.



[You're reading an excerpt. Click here to read official NILFISK](http://yourpdfguides.com/dref/3470806)

[DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)

<http://yourpdfguides.com/dref/3470806>

Elbow coupl.

Stilbar L-forskrining Adj. Elbow coupl. Cu * 1.7.3 Fittings, standards - 2 Vinkel Elbow Winkel Coude Ø15 x 3/8" RG X Vinkel Elbow Winkel Coude Ø22 x Ø15 X Vægbeslag f. rørholder Bracket f. pipe hangs Vægbeslag f. rørholder Bracket f. pipe hangs

pipe hangs Wandbeschlag Fixation mural Wandbeschlag Fixation murale Wandbeschlag Fixation murale Ø15 Ø22 Ø30 X X X X X 17 Nicht vorrätig (Fragen Sie bitte nach Lieferzeit) N'est pas en stock (Le délai de livraison peut être communiqué) *) Lagerføres ikke (leveringstid oplyses) Not in stock (Ask for time of delivery) 18 BETEGNELSE DESCRIPTION BEZEICHNUNG DESIGNATION DIMENSION G R X X X X X Ø22 x Ø15 x Ø22 Ø30 x Ø30 Ø15 T-Stück Raccord en Té T-Stück Raccord en Té T-Verschraubung Raccord en Té reg. T-stykke T-Connection T-Stykke T-Connection Justerbar T-forskrining T-coupling adj. Rørledningskomponenter - Piping Components - Rohrleitungskomponenten - Elements De Tuyauterie 1.7.3 Fittings, standards - 3 Cu Ligereducering Straight coupling Übergangsröhr Reduction droite Ø22 x Ø15 Ø30 x Ø15 Ø30 x Ø22 Ø15 Ø22 Ø30 Ø15 Ø22 Überwurfmutter Ecrou N'est pas en stock (Le délai de livraison peut être communiqué) X X X X X X X X X X X X X X X Ligereducering Straight coupling Übergangsröhr Reduction droite Übergangsröhr Reduction droite Schniedring Anneau Schniedring Anneau Schniedring Anneau Überwurfmutter Ecrou Überwurfmutter Ecrou Ligereducering Straight coupling Skærering Cutting ring Skærering Cutting ring Skærering Cutting ring Omløber Union nut Omløber Union cut Omløber Union nut Nicht vorrätig (Fragen Sie bitte nach Lieferzeit) Ø30 X X *) Lagerføres ikke (leveringstid oplyses) Not in stock (Ask for time of delivery) Rørledningskomponenter - Piping Components - Rohrleitungskomponenten - Elements De Tuyauterie BETEGNELSE DESCRIPTION BEZEICHNUNG DESIGNATION DIMENSION G R X X X X X X X X X Ø15 Ø22 Ø30 1/2" Ø15/Ø22 3/4" Ø22/Ø30 Rohrhalterung Support tuyau Rohrhalterung Support tuyau Rohrhalterung Support tuyau Schlauch - Tempkomp.

Tuyau temp. compenser Schlauch - Tempkomp. Tuyau temp. compenser Rørhol der Pipe holder Rørhol der Pipe holder Rørholder Pipe holder Slange f. temp. kompens. Hose temp. compensated Slange f. temp. kompens. Hose temp. compensated 1.7.3 Fittings, standards - 4 Cu Tætningsskive Tightening washer Dichtungsscheibe Rondelle d'etancheite 3/8RG Ø17 mm X X Stiknippel Quick coupling Schnellkupplungsrip. Raccord rapide male 3/8RG X X Murgennemføring Lead-in bush Murgennemføring Lead-in bush Murgennemføring Lead-in bush Durchführung Réalisable Durchführung Réalisable Durchführung Réalisable Ø15 Ø22 Ø30 X X X 19 Nicht vorrätig (Fragen Sie bitte nach Lieferzeit) N'est pas en stock (Le délai de livraison peut être communiqué) *) Lagerføres ikke (leveringstid oplyses) Not in stock (Ask for time of delivery) 20 BETEGNELSE DESCRIPTION BEZEICHNUNG DESIGNATION DIMENSION G R X X X X Ø15 Ø22 Ø30 2 mm Röllchenplat.

f. Durch Enkysté de tuyau Röllchenplat. f. Durch Enkysté de tuyau Röllchenplat. f. Durch Enkysté de tuyau Stützenbeschlag Support Roset f. murgennemføring Pipe enclose Roset f. murgennemføring Pipe enclose Roset f. murgennemføring Pipe enclose Støttebeslag f. tapped Supportingfitting f. tap Rørledningskomponenter - Piping Components - Rohrleitungskomponenten - Elements De Tuyauterie 1.7.3 Fittings, standards - 5 Cu Brystnippel Hexagon nipple Doppelnippel Raccord Ø15 x 3/8RG X X Hydroballhane High pressure ball valve Hydroballhane High pressure ball valve Hydroballhane High pressure ball valve Hochdruck Kugelhahn Robinet haute press. Hochdruck Kugelhahn Robinet haute press. Hochdruck Kugelhahn Robinet haute press. 3/8RG X X Ø22 Ø30 X X X X G R Cu Kobber Copper Rustfri-syrefast Corrosion proof El-galvaniseret Galv. Galv. Galv. Rustfrei Inoxydable Kupfer Cuivre *) Lagerføres ikke (leveringstid oplyses) Not in stock (Ask for time of delivery) Nicht vorrätig (Fragen Sie bitte nach Lieferzeit) N'est pas en stock (Le délai de livraison peut être communiqué) 1.7.

4 Dimensioning of pipe systems The below diagram shows the current pressure drop graphs meant for the dimensioning of pipe systems used in connection with the DELTABOOSTER plant. The diagram illustrates two vertical divisions for II) electro galvanized steel pipes 15x2 mm I) stainless steel pipes 15x1.5 mm - 22x2.5 mm 22x2 mm 30x4 mm - 30x3 mm The pressure drop per metre of pipe at a given water volume may be read from the following pressure drop graph. Water volume [l/min] When dimensioning the system be careful that the maximum pressure drop at the remotest outlet point does not exceed 15 bar at full load. The pressure drop in elbows and branches is of minor importance in relation to the pressure drop in the pipes. 21 22 1.7.5 Examples The following examples have been worked out on the basis of stainless steel pipes and a 160 bar system, and the dimension requirements are max.15 bar pressure drop from the machine to the outlet points.

Example 1 50 m 40 m 70 m c b a M Two different conditions may be used when dimensioning the pipe system: A. Based upon a fixed type of spray lance (capacity l/min) B. Based upon max. capacity, i.e. all spray lances may be used anywhere A: If standard lances (17 l/min) are selected for outlet points a, b and c the maximum load on line b-c = 17 l/min. According to the diagram the use of a 50 m 15 mm pipe will result in a pressure drop of: In the diagram you follow the 50 m division vertically upwards to the curve symbolizing 17 l/min through an 15 mm pipe. From here proceed horizontally and a pressure drop of 2.3 bar is had. Maximum load on pipe line a-b = 35 l/min.

Use of 40 m Ø15 mm pipe will result in a pressure drop of: Maximum load on pipe line M-a = 51 l/min. Use of 70 m Ø22 mm pipe will result in a pressure drop of: Total pressure drop 7.4 bar 3.3 bar 13.0 bar PRESSURE DROP 2.3 bar The aggregate pressure drop on the three lines is less than 15 bar and the dimension requirements have therefore been met. 23 B: If, on the other hand, a green spray lance is selected = 33 l/min + a standard spray lance = 17 l/min the maximum load on the line b-c = 33 l/min.



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

PRESSURE DROP 9.3 bar 2.0 bar 3.

2 bar 14.5 bar Use of 50 m 15 mm pipe will result in a pressure drop of: Maximum load on line a-b = 50 l/min. Use of 40 m 22 mm pipe will result in a pressure drop of: Maximum load on line M-a = 50 l/min. Use of 70 m 22 mm pipe will result in a pressure drop of: Total pressure drop The aggregate pressure drop on the three lines is less than 15 bar and the dimension requirements have therefore been met. Example 2 c1 20 60 m 20 b1 20 a1 c 10 m 20 30 m b 30 m 20 a 10 m M 20 c2 80 m b2 a2 Branched system Selection of spray lance: 2 green spray lances each of 33 l/min 2 blue spray lances each of 17 l/min
PRESSURE DROP 4.0 bar 2.5 bar 7.5 bar 14.0 bar Maximum load in each branch is 33 l/min Use of 15 mm pipe on e.g.

the a-a2 line (20m) will result in a pressure drop of: Maximum load on line b-c = 66 l/min Use of 30 m 22 mm pipe will result in a pressure drop of: Maximum load on line a-b + M-a = 101 l/min Use of 40 m 22 mm pipe will result in a pressure drop of: Total pressure drop The aggregate pressure drop on the three lines is less than 15 bar and the dimension requirements have therefore been met. 24 Example 3 20 m c1 60 m 30 m b1 40 m a1 20 m 30 m c2 20 m 15 m 20 m M 30 m b2 40 m 80 m a2 20 m Ring system Selection of spray lance: 2 green spray lances each of 33 l/min 2 blue spray lances each of 17 l/min If the maximum load is distributed evenly and symmetrically the maximum load on line b1 - c1 = 33 l/min. If 15 mm pipe is selected 35 m pipes will result in a pressure drop of: Maximum load on line M-a1 + a1-b1 = 50 l/min. If 90 m 22 mm pipe is used the resulting pressure drop will be: Total pressure drop
PRESSURE DROP 6 bar 4 bar 10 bar This means that 22 mm pipe is to be used from the pumps to outlet points b1 and b2 and 15 mm for the rest. The examples show different ways of installing the pipe system. What to prefer in each individual case highly depends on the building where it is to be located and special requirements, if any. Due regard should be paid to the fact that big pipe dimensions and units are considerably more expensive, and the financial costs of each solution should therefore always be compared to one another. 25 1.7.6 Mounting requirements and hints Temperature compensation When hot water

(max. 75°C) is used in the system due regard should be paid to thermal expansion of the pipes when mounting the system. When raising the temperature from 10°C to 75°C the system will expand some 0.7 mm/m. In order to allow for this expansion long straight lines should be fitted with compensators in the form of U-bends or hose connections. The pipe system should not be fixed too close to any corners and close to Tee connectors at outlet points.

U-bends/hose connections At a max. temperature on the system of 75°C a compensator should be fitted at 20 m intervals if there are no elbows on the line. If the pipe may expand at one end compensators may be left out if the pipe is not fixed at the Tee connectors at the same time. Compensation for 15 and 22 should be in the form of hose connections or as U-bends on the pipe. Use hose connections for 30.

COMPENSATION Pipe 15 22 30 Hose no. 6300453 6300453/6300454* 6300454 Hose no. stainless 6301191 6301191/6202161* 6202161 L (mm) L min (mm) R min (mm) 350 350/480 480 450 550 40 55 * If the pipe line carries more than the water volume from 3 pumps 6300454 respectively 6202161 hoses should be fitted. 26 FIXATION AT CORNERS AND TEE CONNECTORS Standard distance between pipe brackets is some 2 m. MOUNTING OF PIPE LINES/GENERAL INSTRUCTIONS Shorten the pipes by sawing off and take off burrs. When bending the pipe bending radii should not be smaller than those stated in the chart under "U-bends/hose connections" and the bending should always be completed in a bending tool with rolling matrixes in order to prevent deformation of the pipe. Union nut and cutting ring should be greased with oil and the cutting ring should be pre-fitted to the pipe in the screw joint or the annealed pre-mounting socket before fitting the pipe. Place the pipe brackets at a maximum interval of 2 m. Use 6 hexagon-headed screw with expansion joint for wall or concrete walls when mounting wall fittings, alternatively use a knock-type anchor for concrete walls, e.g.

HILTI type HPS 8/30. In systems meant for hot water, care should be taken to place the pipe brackets on a straight line in order to prevent the lengthwise expansion of the pipe. 27 Mounting in Connection Socket 6. Pipes of a large outer diameter and all 1. Saw the pipe rectangularly through and take off 2. burrs. It will be most easy for you to saw the pipe rectangularly through by means of the pipe sawing mechanism shown. NAME: BAV 6/42 (for pipes of 6-42 mm OD). NOTE: Do not use pipe cutter! The pipe will be cut over slantingly and there will be burrs inside as well as outside the pipe end. connections in free pipings are mounted in a vice of practical reasons while you are fastening the connection socket.

The screw spanner must have a length approximately 15 times as long as the width of it. (Lengthen it by means of a pipe, if necessary). Proceed according to point 4. When using series connection sockets, be aware that the pipe ends go into the same inner conus as the one in which the mounting in the vice was carried out. The final tightening will be simplified by loosening the compression nut a little, so that the wearing surfaces may be supplied with a little oil.

3. Lubricate thread as well as cutting- and key ring with oil (not grease). Now push the pipe nut and the ring over the pipe end as shown on the drawing. If the cutting- and key ring cannot or can only just be pushed over the end of the pipe, do not enlarge it, but file the pipe end. 7.

After the final feeding, loosen compression nut and check that there is an apparent belt before the cutting. If not - wring the cutting- and key ring a little extra. Apparent belt 4. At first screw up the compression nut by hand until it has got contact with the cutting- and key ring. Then press the pipe wholly up to the inner conus and give the compression nut a turn of app. 3/4. A marking thread on the compression nut will make it easier for you to observe the turns prescribed. 8. It does not matter if the cutting- and key ring can be turned on the pipe end. 9.

REMOUNTING 5. (NOTE: The pipe must nut turn at the same After each loosening of the connection, the tightening of the compression nut may be done without any lengthening with a pipe and without any violent effort. time). The cutting- and key ring will get hold of the pipe, and now it is unnecessary to press the pipe further. For the final feed, give the compression nut another turn of approximately 3/4. By doing so, the ring will cut into the pipe and reveal an apparent belt. 10. The straight pipe end, which goes into the screwed connection, must have a length of at least 2 lengths of the compression nut (H).



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

If the pipings are longer or more weighted, you will have to mount a pipe fitting. 28 1.

8 Outlet points and accessories Outlet point A is a high-pressure cock meant for permanent mounting. The high-pressure cock should be fitted straight on the pipe line by means of an 15 mm cutting ring connection. If a DELTABOOSTER spray lance is wanted the quick-coupling for the high-pressure hose should be fitted straight on to outlet point A. If equipment for the application of detergents is wanted a foam injector should be fitted between outlet point A and the quick-coupling on the high-pressure hose. When using the detergent trolley the high-pressure hose may be fitted straight on to the outlet point A.

OUTLET STATION A High-pressure cock To be used for connection of detergent trolley, single foam injector or single DELTABOOSTER spray lance. B Foam injector To be fitted on high-pressure cock. To be used in conjunction with foam lance when detergents and disinfectants are to be applied. Dosage from 1-5%. C Wall rack Used in conjunction with outlet station A and detachable foam injector.

Capacity to take lance, two 25 l cans and 10 m high-pressure hose. D Detergent trolley May be connected to high-pressure cock. Capacity to take high-pressure cock with detachable foam injector (A+B+C) and floor washer. 29 ACCESSORIES Detachable foam injector, to be used in conjunction with outlet station A. Pressure-relieved spray handle with 10 m hose. Hose coil with 20 m hose Single spray lance for DELTABOOSTER plant described in section 1.9 Foam lance To be used in conjunction with detachable foam injector and detergent trolley. 30 1.9 Multipressure spray lance system Spray lances with colour coding are used as standard equipment. The colour code indicates the water volume and pressure supplied by the specific lance.

The different water volumes and pressures depend on the high-pressure nozzle, pre-nozzle and spray lance fitted. The spray lances for 120 and 160 bar respectively differ in that the spray lances for 120 bar are fitted with a GREY nozzle protection, whereas the spray lances for 160 bar are fitted with a BLACK nozzle protection. @@@@ of pumps in oper. @@@@ of pumps in oper. @@@@ 1. It is important that the plant is adjusted to horizontal position. Otherwise it may be a problem opening the cabinet door. Fig. @@2. Fasten the fittings securely to the floor with 4 pcs.

@@Fig. @@@@ @@Fig. @@Fig. @@the model plate. Max.

125 Amp pre-fuses. @@The angle flange is opened by loosening two nuts. @@@@ 3) It is also advisable to take additional precautionary measures to protect the user by installing a Residual Current Device (RCD) / Ground fault circuit interruptor (GFCI) in the DELTABOOSTER supply line. 4) Finally, check that fuses F1 - F2 and F3 (cf. wiring diagram) have been mounted in the retainers and that the overload cut-out Q1-Q? has been connected and set correctly (cf.

C3K model plate). 5) With an appropriate measuring equipment the connection of earth cables from the outlet of the fixed installation to a metallic part on the high pressure outlet of the machine should be checked. The phase conductors of the supply cable should be subjected to a high voltage test with the main switch in off position. At Nilfisk-ALTO the DELTABOOSTER has been tested on the above-mentioned items as a separate machine. 6) The door to the switchboard should be closed and locked. The system is now ready for running in and function testing. Fig. 5 2. Sealing connection 1. Cable reliefs 4.

Main earth terminal 3. Angle flange 35 2.5 Starting up/running in Prior to starting up the customer engineer should be fully confident with sections 3.4 - 3.6 of the Operation Manual describing the instrument panel, settings and starting up/operation. If any faults appear during the starting up and running in, sect. 3.10 on trouble-shooting may help you. 2.5.

1 Oil control Check the oil level in the oil glas (cf. Fig. 6). Fig. 6 will light up.

If the oil level gets too low, the machine will automatically shut down. In the case of repeated low oil level (oil waste) please contact a Nilfisk-ALTO service technician. 2.5.2 Start Turn the main switch to position - I -.

Turn the operation switch to position - I -. The water tank will now be filled up. Press the starting switch when the system has been made ready for venting of the pumps. 2.5.3 Venting of pumps Venting should be carried out on each pump individually (cf. sect. 3.5.2) as power is only connected to the water tank module and the relevant pump during the venting process.

The pump should be vented in the following way: 1. 2. 3. 4. 5. 6. 7. Make sure that only the pump to be vented is switched on (cf. Fig. 3.

5.2). Open the cabinet. Loosen the venting screw of the pump (cf. Fig.

7). Fit a hose to the end of the venting screw and lead it to waste (jar or the like). Start the pump and let it run until all the air has been removed. Tighten the venting screw. Repeat the procedure until all pumps of the DELTABOOSTER have been vented.

Fig. 7 Venting screw 36 2.5.4 Venting of pipe system When each pump has been vented the system is started up, and all high-pressure cocks on the pipeline are opened one at a time until all air has been removed. Begin with the remotest high pressure cock. Please note that the cock should be closed for a short time before opening it again. The latter is done in order to prevent the leakage stop from being activated when venting long pipelines. 2.5.5 Adjustment of line pressure Adjustment of line pressure should only be carried out by an authorized Nilfisk-ALTO service technician.

As a standard the DELTABOOSTER is adjusted to a line pressure of 160 bar, but it may be adjusted to any line pressure within the area 90 to 160 bar. It will always be expedient to choose a line pressure corresponding to the highest working pressure / nozzle pressure which you know will be required for your cleaning jobs. A Nilfisk-ALTO service technician can adjust the high pressure switch (1) and the overflow valve (2) to the required line pressure. The pressure can be read from the pressure gauge (3). Fig. 8 2 3 1 37 3 How to use the DELTABOOSTER Users are urgently requested to study these instructions before operating the DELTABOOSTER. The individual user is personally responsible for handling and using the cleaning system properly and safely. It is therefore urgent that all users are instructed in detail of how to use the system and they should all have a copy of Appendix A on "Operation and Safety Instructions".

3.1 Your Nilfisk-ALTO DELTABOOSTER is designed and made in accordance with the latest rules on safety at work.

In order to prevent injuries to yourself and other persons, the following regulations should always be observed when operating the plant. 1. WARNING! Never direct the water jet towards people, pets, electric wiring, or the DELTABOOSTER. 2. WARNING! Never try to clean clothes or footwear on yourself or other persons.

3. We recommend you to wear ear defenders, goggles and protective clothing during operation.



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

4. Never work barefoot or with sandals. 5.

Operator and anyone in immediate vicinity of the site of cleaning should take action to protect himself from being struck by debris dislodged during operation. 6. Spray handle and lance are affected by a thrust during operation - therefore always hold the spray handle and lance firmly with both hands. 7. Only activate the trigger by hand. Never tie it up or fix it in any other way. 8. At intervals during operation, the machine should be stopped and the spray handle secured against inadvertent use by turning safety knob to position O. 9. WARNING! High pressure hoses, nozzles and connections are important for safety when operating the plant.

Only use the high pressure hoses, nozzles and connections prescribed by Nilfisk-ALTO. 10. Avoid damage to the high pressure hose such as running over by a car, squeezing, pulling, knotting/kinking etc. and keep it away from oil and sharp or hot objects, as such may cause the hose to burst. 11. Never use the water for other purposes than cleaning. Detergents etc. may have been added. 12. Never detach the high pressure hose from an outlet point until the high pressure cock at the outlet has been properly closed and the high pressure hose relieved of pressure.

13. Only let instructed personnel operate the plant. 14. Never let children operate the plant. Denmark: Persons under the age of 18 must not operate the plant if the working pressure exceeds 70 bar.

15. When using detergents the instructions should always be strictly observed. 16. Persons under the influence of alcohol, drugs and medicine should not operate the machine. 17.

Don't use the machine if important parts of the equipment are damaged - i.e. safety devices, high pressure hoses, pipeline, spray handle. Save these instructions for later. The high-pressure pumps of a DELTABOOSTER are fitted with a safety valve each. The safety valve has been set and sealed from the works. DO NOT INTERFERE WITH THIS SETTING! The motors in a DELTABOOSTER are protected against overload as thermal circuit breakers have been incorporated in the stator windings, and the motor is guarded. If the motor is subjected to an overload the thermal switches will cut off the system so it stops. After such a stop the DELTABOOSTER can be restarted without interfering in the electrical system as the failing motor will automatically be disconnected. After cooling or re-connection of the motor protection, the previously disconnected motor can be taken into operation again when re-starting the plant as described in section 3.4.

2. The motor protection disconnects the system if the motor consumes too much power. Frost protection The system should be installed in frost-free premises. Pipelines and outlet stations should also be in a frost-free location. When outlet stations are situated outdoors remember to provide for the cutting off and draining of that part of the line which is exposed to frost. If the temperature of the inlet water is above 80°C or below 2°C the plant will be disconnected.

Safety 38 3.2 Model survey 1 5 4 3 10 9 7 6 8 15 2 14 13 11 1. 2. 3.

4. 5. 6. 7. 8.

9. 10. 11. 12. 13.

14. 15. 16. Switchboard Main switch Operation switch Starting button Switchboard Water tank Motor pump units Water connection Oil control Pressure gauge Outlet socket Machine feet with vibration absorber Identification plate Water filters Lock Handle / lock for cabinet door 16 12 39 3.3 Functional diagram 1 21 20 2 3 14 4 5 6 19 22 12 7 8 9 26 15 17 16 15 18 25 13 10 11 1. 2. 3. 4. 5. 6.

7. 8. 9. 10. 11. 12. 13. Water filter Water tank Overflow pipe Level sensor (lack of water) - (start inlet of water) - (stop inlet of water) Relief valve Flow switch (flow back to tank) Excess-pressure valve (overflow valve) Pressure switch (low pressure) Pressure switch (high pressure) Solenoid relief valve Pressure gauge 14. 15. 16.

17. 18. 19. 20. 21.

22. 23. 24. 25. 26.

Difuse filter, return Non-return valve Accumulator Motor pump unit High pressure hose, machine outlet Temperature sensor Drain cock for cleaning of water filter Water inlet for hot water Water inlet for cold water Solenoid valve, hot water Solenoid valve, cold water Pipeline, high pressure Oil glas with level sensor 40 3.4 Instrument panel The instrument panel is situated on the switchboard of the DELTABOOSTER. 1. 2. 3. 4. 5. Main / emergency switch (circuit breaker) Operation switch - stopping switch Starting switch Switchboard Locks for the door of the switchboard 4 2 3 3.4.1 Main / emergency switch The main switch (1) connects the DELTABOOSTER to the supply network when the switch is turned from pos.

0 to pos. I. At pos. 0 there is no connection between the DELTABOOSTER and the supply network and the capacity of the switch is sufficient to use it as an emergency device. The main switch may be locked in 0 position by means of an ordinary padlock. The switch should always be locked during service checks of the system. PLEASE NOTE: The switchboard can only be opened by means of a key and only when the main switch (1) is in pos. 0. 1 5 3.4.

2 Control switch / starting switch and stopping switch The control switch (2) supplies 24VAC control voltage to the DELTABOOSTER when turned to position I (provided the main switch is in pos. I). The plant is started up by pressing the starting switch (3). The plant will now be in operation / stand-by mode until the operation switch is turned back to pos. 0.

Stop of plants in operation should always be effected on the operation switch and thus only use the main / emergency switch for power cut off and emergencies. 41 3.4.3 The control panel The control panel (5) is based upon a schematic drawing of the system where a number of control lamps will show the status of the system and possible faults. The control lamps have been divided into three categories: Green indicating a coupled unit (valve, C3K) Yellow indicating an activated sensor (pressure switch, flow, level) Red indicating a serious fault (leakage, over heating, etc.

) In normal conditions only the green and the yellow control lamps will glow. If a serious fault arises the relevant red control lamp will start flashing and at the same time the system will stop operating completely. Status from the other lamps is retained so the condition at the moment of the fault is visible. If a red control lamp flashes the system can usually not be re-started until the fault has been corrected unless a motor pump unit is disengaged because of a too high temperature or a too high power consumption. The plant can be restarted by following the procedure described in section 3.4.2 as the steering will disconnect the defective motor. Thus the actual control lamp will glow contantly (cf. the section on "3.10 Trouble-shooting and correction").

The meaning of the control panel and the individual control lamps appears from Fig. 2 below. Fig. 2 RED: Flashes at illegal sensor combination [water inlet will stop] RED: Flashes at a water temperature in tank above 80°C [system will stop] RED: Flashes at lack of water YELLOW: Glows when high water level has been achieved [water inlet will stop] YELLOW: Glows when low water level has been achieved [water inlet will start] YELLOW: Temperature adjustment connected Glows if the regulation is temporarily disconnected because of an insufficient water supply.

[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](#)



<http://yourpdfguides.com/dref/3470806>

GREEN: GREEN: Cold inlet Hot inlet YELLOW: GREEN: YELLOW: YELLOW: Glows when water is recirculated Glows when relief valve is closed [normal operat.] Glows at normal working pressure [high pressure] Glows when line pressure exceeds 25 bar. RED: *) Flashes if the temp. in motor no. 1 is excessive or the oil level low [system will stop] *) Glows constantly when starting the plant with a defective motor pump unit RED: *) Flashes if the current cons. on pump no.

1 is excessive [system will stop] GREEN: Glows when pump no. 1 is in operation RED: Flashes in case of leakage on internal high pressure hose [system will stop] RED: Flashes in case of leakage on external pipe line [system will stop] 42 3.5 Setting and reading of DELTABOOSTER 1. 2. 3.

Setting of water temperature Setting of number of C3K pumps in operation Reading of hour meters In the DELTABOOSTER the user will only need to make the following settings and readings: In all three cases the switchboard (Fig. 3) will have to be opened by means of the enclosed special key. Prior to opening the door the main switch should be turned to pos. 0. Fig.

3 2 1 2 3 4 5 6 7 8 ON 3 1 43 3.5.1 Setting of water temperature The knob for adjusting the water temperature is placed on the steering A1 in the switchboard and may either be put in the OFF position (click function - vertically) or set on the desired mixing temperature. The yellow diode below the control knob indicates the starting point of the temperature adjustment. OFF In this position the system will allow the parallel inlet of water from the two water connections into the water tank. This is an advantage if the pressure of the inlet water is low and you can do without the function of temperature regulation. No adjustment of temperature is provided for, but the water temperature at the two connections may be selected freely (lower than 75°C). The yellow indicator symbol on the control panel (section 3.6, Fig. 5, symbol 4) is not lit.

ON 50°C In this position water from the two connections will be mixed to the desired mixing temperature (e.g. 50°C). The yellow indicator symbol on the control panel (section 3.6, Fig. 5, symbol 4) will glow constantly as an indication that the temperature adjustment has been activated. The indicator lamp may start to flash while the system is in operation. This means that the temperature adjustment has been cancelled by the controls. This will happen if the water supply from either the cold or the hot connection is so sparse (closed tap, low water pressure) that the system is about to enter to a fault situation: "Lack of water". Both connections will then be opened in parallel until a high water level has been achieved.

The attempt at mixing to the desired temperature will then be repeated. The indicator lamp will continue to flash even though the water supply returns to OK and the temperature adjustment is repeated. Please note: The flashing can only be removed by restarting the system. 44 3.5.

2 Connection and disconnection of C3K pumps The desired configuration of the DELTABOOSTER will determine this setting. As the system may have 2 to 6 C3K pumps connected, each module location has a specific figure connected to it.: 3 6 2 5 1 4 The current configuration is set on the 8-poled transformer (cf. Fig. 3); below is a setting for a configuration of 4 C3K pumps: 1 2 3 4 5 6 7 8 ON C3K C3K C3K C3K C3K C3K } NO.

1 ON NO.2 ON NO.3 OFF NO.4 ON NO.5 ON NO.6 OFF Meant for connection of more DELTABOOSTER plants Both should be ON for the operation of a single plant 45 3.5.3 Reading of hour meters On the hour meters you can read for how many hours each of the motor pump units has been running. Reading as follows: Motor pump unit 1 Hours 1/100 hours Example: 4 hours + 50/100 hour = 4½ hours 46 3.6 Starting up/running in (cf.

Fig. 4) Once the desired settings have been made the cover of the switchboard should be closed and both locks activated. Make sure the water supply has been connected. Turn the main switch (1) to position I. Turn the control switch (2), to position I and keep an eye on the control panel (3) to make sure that water is drawn in and the relief valve closed. (Are there any red indicator lamps flashing on the control panel? cf. sect. "3.10 Trouble-shooting and corrections") Press the starting switch (4) and 1 pump will then start running if the line pressure is on working pressure or even higher. If the pressure is lower, 2 pumps will start and an additional pump will start every other second until a working pressure has been achieved.

Fig. 4 3 2 4 1 The system is now in operation and water may be drawn off under high pressure at the individual outlets. If consumption exceeds the capacity of the pumps connected a pump will immediately be started up and an additional pump will follow every other second until capacity meets consumption. If consumption drops at the outlets so that the pump capacity becomes excessive, one pump will stop every 15 seconds, until capacity meets consumption. The controls determine a rotation between the individual C3K pumps so that all units -time-wisear are subjected to the same load.

If consumption at the outlets is cut off completely all pumps will stop 1 every 15 seconds. The system will then be on STAND BY with a working pressure on the line and one or more pumps will start operating again as soon as the pressure in the line drops below 25 bar or if the outlets are re-activated. 47 The operation of the system may be controlled on the control panel. (cf. sect.

3.4.4, Fig. 2) From the above figure it appears which pumps and water supplies have been connected at the moment (green), and the status of the pressure, water flow and water level (yellow). Below is an example of the indications on the control panel in a given situation. Fig. 5 The water level in the water tank is low - water is being filled from the cold connection and from the hot connection. Temperature adjustment is active (set. 50°C) Pumps no. 1, 3, 4 and 5 have been connected Consumption is lower than the capacity from the connected number of pumps.

Water is therefore being recirculated (the first connected pump will stop after 15 sec.) 7 The line pressure is on working pressure, H (= high pressure) and consequently also >25 bar, L (= low pressure) 1 2 3 4 5 6 48 3.7 Multipressure spray lance system For each line pressure of 120 and 160 bar a kit of nine different spray lances is available, which have been especially developed for the Multipressure spray lance system. Each of the nine spray lances represents a combination of pressure and water volume. Users may therefore always select the job-right combination of pressure and water volume. The spray lances for 120 and 160 bar respectively differ in that the spray lances for 120 bar are fitted with a GREY nozzle protection, and the spray lances for 160 bar are fitted with a BLACK nozzle protection.



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

The nine spray lances are marked with each their colour and on the spray lance chart on the DELTABOOSTER pressure, water volume and number of pumps may be read for the nine types of spray lance. The different water volumes and pressures depend on which high-pressure nozzle and which pre-nozzle the spray lance is fitted with. For further details on reactive power and nozzle sizes please refer to the Product Description in sect. 1.

9. Alternative nozzles or spray lances should only be fitted in consultation with your Nilfisk-ALTO specialists. 49 3.8 Operation after starting up - outlet points and equipment 3.8.

1 High pressure cock with Multipressure spray lance, Outlet point A 1. 2. 3. 4. 5.

6. Open/close handle on high-pressure cock Quick-coupling Trigger on spray handle Safety lock Quick-coupling for spray lance Multipressure spray lance Operation after starting up 1. Carefully connect the high-pressure hose to the quick-coupling of the high-pressure cock (2). Any impurities should be removed prior to coupling. 2. Fit the spray lance (6) in the quick-coupling of the spray pistol (5). 3. Slowly turn the handle of the high-pressure cock (1) to open position and start your cleaning work. 4. After use close the high pressure cock by turning the handle (1) to closed position, relieve the hose of its pressure by opening the pistol until the hose is void of pressure.

50 3.8.2 Outlet point with foam injector and foam lance, Outlet point B 1. 2. 3. 4. 5. 7. 10. 11.

12. 13. Open/close handle on high-pressure cock Quick-coupling Trigger on spray handle Safety lock Quick-coupling for spray lance Foam lance Dosage scale Dosage valve Detergent containers Wall rack for detergent containers Operation after starting up 1. Carefully connect the high-pressure hose to the quick-coupling of high-pressure cock (2). Any impurities should be removed prior to coupling.

2. Fit the spray lance (6) in the quick-coupling of the spray pistol (5). 3. Slowly turn the handle of the high-pressure cock (1) to open position and start your cleaning work. Admixture of detergents 1.

Set the dosage valve on the foam injector to a concentration of 1-5%. When adjusting the dosage valve please note that maximum admixture of detergent is 5% when the dosage valve is fully opened. (Percentages apply to detergents and disinfectants in aqueous solutions. These values will be modified if other viscosity rates are used). 2. Apply the desired detergent or disinfectant by means of the foam lance (7). 3. Fit the DELTABOOSTER spray lance (6) (low pressure) in the quick-coupling (5) of the spray pistol and after-rinse. 4. If the injector is only used at long intervals make sure to rinse it in clean water every time it has been used.

This may be done by putting the suction hose of the injector in a container with clean water and letting the injector suck clean water for 1 to 2 minutes with a fully opened dosage valve. After use 1. Close the high-pressure cock by turning the handle (1) to closed position and relieving the hose of its pressure by activating the spray handle until the hose is void of pressure. Please refer to section "3.8.4 General guidelines for the dosage of detergents". 51 3.8.3 Outlet point with detergent trolley and foam lance, Outlet point D 1. 2.

3. 4. 5. 7. 10.

11. 12. Open/close handle on high-pressure cock Quick-coupling Trigger on spray handle Safety lock Quick-coupling for spray lance Foam lance Dosage scale Dosage valve Detergent containers Outlet point with detergent trolley should be operated in the same way as outlet point A with foam injector - cf. section 3.8.

2. 3.8.4 General guidelines for the dosage of detergents The Nilfisk-ALTO detergent equipment may be used for all disinfectants and detergents suitable for use in high-pressure cleaning according to Nilfisk-ALTO instructions. (The pH value should lie between 4 and 14). Acids and lyes should not be used undiluted. The supplier's instructions and guidelines should be followed very closely, this also applies to rules on protective garments and drainage. Detergents which have not specifically been specified for use in high-pressure cleaning should only be used after prior permission from Nilfisk-ALTO and possibly the supplier. By using Nilfisk-ALTO detergents users are sure to have machinery, accessories and detergents which are compatible and which are a pre-requisite for optimal solutions to the cleaning tasks. Nilfisk-ALTO can offer a wide range of effective substances for professional cleaning and disinfection.

The products are composed of substances which unite effectiveness with environmental considerations. 52 3.9 Maintenance The DELTABOOSTER is designed to ensure a minimum of maintenance. The following points should however, be observed in order to secure trouble-free operation. 3.9.1 Service intervals/oil change "Frequency of system servicing is dependent upon several factors including water temperature and water quality. We, therefore, recommend that you contact your local service agent for advice." Change the oil in the pump at each service interval. The pump is supplied with zinc-free hydraulic oil - "KEW Pump Oil 100".

When replenishing use this or an oil specified to ISO NO. 100 Viscosity index (VI) min 130 Congelation point lower than -30°C URGENT: PROTECT NATURE Waste oil and oil sludge should be removed or destroyed in accordance with local rules and regulations. 3.9.2 Water filter There are two filters on the water inlets in order to prevent impurities from entering the high-pressure pumps and thus causing damage.

The filters should be cleaned regularly. The frequency depends on the purity of the inlet water, but daily cleaning would often be required. Cleaning is accomplished by leaving both inlets open and opening the outlet cocks on filters (14). The inlet water will then flush away impurities from the filters. 3.

9.3 Couplings In order to prevent leakages and destruction of quick-couplings on hoses, spray handle, outlet points and spray lances it is urgent to clean them regularly and grease with a little oil or fat. 53 3.10 Trouble-shooting and possible correction Problem System will not start or stops in mid-operation (no indication of fault) Possible cause 1 2 3 Correction Connect mains power supply Check that fuses correspond to power consumption (model plate). Renew fuses Call customer engineer When fault has been corrected restart system - check that the fault indication has disappeared *) Call customer engineer (C3K pump no. 2 can be withdrawn on the steering - see section 3.5 - upon which the operation can be resumed *) Allow the motor to cool Check the air intake and clean, if necessary Refill with oil. Check that the shut-off's on the water inlets are open and clean the inlet filters, if necessary. Check that the water supply meets the requirements stated in sect. 1.

5 Allow the water to cool, empty the watertank, if necessary. Check that the cold water connection is open and, if not, that the temp. on the hot connection does not exceed 75°C.



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>

Empty the water tank, and make sure that the temperature of the water inlets are above 2°C. In case of external leakage: disengage any open spray handles, if relevant - repair leakage. In case of internal leakage: repair leakage) Mains power supply cut off) Fuses have blown) Control voltage fuses in DELTA BOOSTER have blown System does not start or stops in mid-operation with the following fault indication: C3K Any of the below faults is fatal and should be corrected Motor guard on motor 2 cut out: 1) No phase 2) Pump - motor blocked 3) Short-circuit in motor Thermal cut-out sensor in motor 3 cut out 1 2 C3K) Air intake obstructed) Oil deficiency Water tank Water level in water tank too low Water tank Temperature in water tank too high (>80°C) Temperature in water tank too low (<2°C) Pipeline / internal hoses Leakage: external or internal Sensors Combination of sensor values illegal. I.e. if the high pressure switch is ON and the low pressure switch is OFF. Call customer engineer One or more pumps will not stop after end of operation High-pressure cock at outlet point does not close Flow sensor return defective Check that all high-pressure cocks at outlet points have been closed Call customer engineer Check that all high-pressure cocks at outlet points have been closed

Shift to single spray lance at this outlet point. @@sect. @@sect. @@@@P.O.

Box 6046 Silverwater, N.S.W. 2128 Tel.: +61 2 8748 5966 Fax: +61 2 8748 5960 AUSTRIA Nilfisk-Advance GmbH Nilfisk-ALTO Metzgerstrasse 68 5101 Bergheim/Salzburg Tel.

: +43 662 456 400-0 Fax: +43 662 456 400-34 E-mail: info@nilfisk-alto.at www.nilfisk-alto.at BELGIUM Nilfisk-ALTO Division of Nilfisk-Advance n.v.s.a. Internationalelaan 55 (Gebouw C3/C4) 1070 Brussel Tel.: +32 02 467 60 40 Fax: +32 02 466 61 50 E-mail: info.be-@nilfisk-alto.com CANADA Clarke Canada Part of the Nilfisk-Advance Group 4080 B Sladeview Crescent, Unit 1 Mississauga, Ontario L5L 5Y5 Tel.

: +1 905 569 0266 Fax: +1 905 569 8586 CHINA Nilfisk-Advance (Shenzhen) Ltd. Blok 3, Unit 130 1001 Honghua Road Int. Commercial & Trade Center Fuitian Free Trade Zone 518038 Shenzhen Tel.: +86 755 8359 7937 Fax: +86 755 8359 1063 CZECH REPUBLIC ALTO Česká Republika s.r.o. Zateckých 9 14000 Praha 4 Tel.: +420 24 14 08 419 Fax: +420 24 14 08 439 E-mail: info@alto-cz.com DENMARK Nilfisk-ALTO Division of Nilfisk-Advance A/S Industrivej 1 9560 Hadsund Tel.: +45 7218 2100 Fax: +45 7218 2105 E-mail: salg@nilfisk-alto.

dk E-mail: service@nilfisk-alto.dk www.nilfisk-alto.dk Nilfisk-ALTO Food division Division of Nilfisk-Advance A/S Blytækkervej 2 9000 Aalborg Tel.: +45 7218 2100 Fax: +45 7218 2099 E-mail: scanio.

technology@nilfisk-alto.dk FRANCE Nilfisk-ALTO ALTO France SAS Aéroparc 1 19 rue Icare 67960 Entzheim Tel.: +33 3 88 28 84 00 Fax: +33 3 88 30 05 00 E-mail: info@nilfisk-alto.fr www.nilfisk-alto.

com GERMANY Nilfisk-ALTO Division of Nilfisk-Advance AG Guido-Oberdorfer-Strasse 10 89287 Bellenberg Tel.: +49 0180 5 37 37 37 Fax: +49 0180 5 37 37 38 E-mail: info@nilfisk-alto.de www.nilfisk-alto.de GREECE Nilfisk-Advance SA 8, Thoukididou str. 164 52 Argiroupolis Tel.: +30 210 96 33443 Fax: +30 210 96 52187 E-mail: nilfisk-advance@clean.gr HOLLAND Nilfisk-ALTO Division of Nilfisk-Advance BV Camerastraat 9 3322 BB Almere Tel.: +31 36 546 07 60 Fax: +31 36 546 07 61 E-mail: info@nilfisk-alto.nl www.

nilfisk-alto.nl HONG KONG Nilfisk-Advance Ltd. 2001 HK Worsted Mills Ind'l Bldg. 31-39 Wo Tong Tsui St. Kwai Chung Tel.: +852 2427 5951 Fax: +852 2487 5828 HUNGARY Nilfisk-Advance Kereskedelmi Kft. II. Rákóczi Ferenc út 10 2310 Szigetszentmiklos-Lakihegy Tel: +36 2447 5550 Fax: +36 2447 5551 E-mail: info@nilfisk-advance.hu www.nilfisk-advance.

hu ITALY Nilfisk-ALTO Divisione di Nilfisk-Advance A/S Località Novella Terza 26862 Guardamiglio (LO) E-mail: d.puglia@nilfisk-advance.it JAPAN Nilfisk-Advance Inc. 247 Nippa-cho, Kouhoku-ku Yokohama, 223-0057 Tel.: +8145 548 2571 Fax: +8145 548 2541 MALAYSIA Nilfisk-Advance Sdn Bhd Sd 14, Jalan KIP 11 Taman Perindustrian KIP Sri Damansara 52200 Kuala Lumpur Tel.

: +60 3 603 6275 3120 Fax: +60 3 603 6274 6318 NORWAY Nilfisk-Advance AS Bjørnerudveien 24 1266 Oslo Tel.: +47 22 75 17 70 Fax: +47 22 75 17 71 E-mail: info@nilfisk-alto.no www.nilfisk-alto.no POLAND Nilfisk-Advance Sp.

Z.O.O. 05-800 Pruszków ul. 3-go MAJA 8 Tel.: +48 22 738 37 50 Fax: +48 22 738 37 51 E-mail: info@nilfisk-alto.pl www.nilfisk-alto.pl PORTUGAL Nilfisk-ALTO Division of Nilfisk-Advance Lda. Sintra Business Park Zona Industrial Da Abrunheira Edifício 1, 1° A P2710-089 Sintra Tel.

: +35 808 200 537 Fax: +35 121 911 2679 E-mail: mkt@nilfisk-advance.es RUSSIA Nilfisk-Advance LLC Vyatskaya str. 27, bld. 7 127015 Moskow Tel.: +7 495 783 96 02 Fax: +7 495 783 96 03 E-mail: info@nilfisk-advance.ru SINGAPORE Nilfisk-Advance Pte. Ltd. Nilfisk-ALTO Division 40 Loyang Drive Singapore 508961 Tel.: +65 6 759 9100 Fax: +65 6 759 9133 E-mail: sales@nilfisk-advance.com.

sg SPAIN Nilfisk-ALTO Division of Nilfisk-Advance S.A. Torre D'Ara Paseo del Rengle, 5 Pl. 10 08302 Mataró Tel.: +3 4 902 200 201 Fax: +34 93 757 8020 E-mail: mkt@nilfisk-advance.

es SWEDEN ALTO Sverige AB Member of Nilfisk-Advance Group Aminogatan 18, Box 4029 431 04 Mölndal Tel.: +46 31 706 73 00 Fax: +46 31 706 @nilfisk-alto.se www.nilfisk-alto.se TAIWAN Nilfisk-Advance Taiwan Branch No.

5, Wan Fang Road Taipei Tel.: +886 227 002 268 Fax: +886 227 840 843 THAILAND Nilfisk-Advance Co. Ltd. 89 Soi Chokechai-Ruammitr Viphavadee-Rangsit Road Layao, Jatuchak, Bangkok 10900 Tel.: +66 2 275 5630 Fax: +66 2 691 4079 TURKEY Nilfisk-Advance Profesyonel Temizlik Ekipmanlari Tic. A/S. Necla Cad. NI.: 48 Yenisahra / Kadiköy Istanbul Tel.: +90 216 470 08 - 60 Fax: +90 216 470 08 - 63 www.

nilfisk-advance.com UNITED KINGDOM Nilfisk-ALTO Division of Nilfisk-Advance Ltd. Bowerbank Way Gilwilly Industrial Estate, Penrith Cumbria CA11 9BQ Tel.: +44 1 768 86 89 95 Fax: +44 1 768 86 47 13 E-mail: sales@nilfisk-alto.co.uk www.nilfisk-alto.co.uk USA Nilfisk-Advance Inc. 14600 21st Avenue North Plymouth, MN 55447-3408 Tel.

: +1 763 745 3500 Fax: +1 763 745 3718 E-mail: info@nilfisk-advance-us.com www.advance-us.com VIETNAM Nilfisk-Advance Representative Office No. 46 Doc Ngu Str.

Ba Dinh Dist. Hanoi Tel.: +84 4 761 5642 Fax: +84 4 761 5643 E-mail: nilfisk@vnn.vn FINLAND Nilfisk-Advance Oy Ab Piispantilankuja 4 02240 Espoo Tel.: +358 207 890 600 7309021 (02.

2008) .



[You're reading an excerpt. Click here to read official NILFISK DELTA BOOSTER user guide](http://yourpdfguides.com/dref/3470806)
<http://yourpdfguides.com/dref/3470806>