




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK GD 5. You'll find the answers to all your questions on the NILFISK GD 5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK GD 5
User guide NILFISK GD 5
Operating instructions NILFISK GD 5
Instructions for use NILFISK GD 5
Instruction manual NILFISK GD 5

Adgility™ 6XP, Adgility™ 10XP

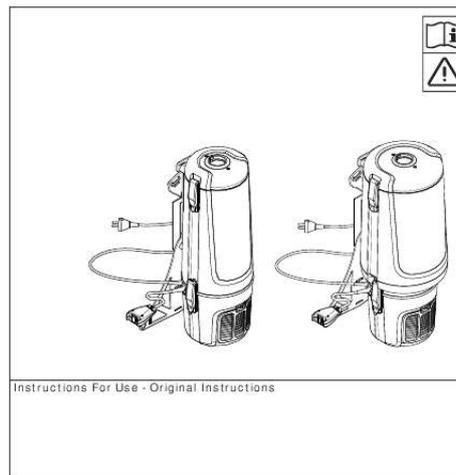

823 0100 040 A



[You're reading an excerpt. Click here to read official NILFISK GD 5 user guide](http://yourpdfguides.com/dref/4257982)

<http://yourpdfguides.com/dref/4257982>

Manual abstract:

If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. * * * * * Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing. To reduce the risk of electric shock - do not use outdoor or on wet surfaces. Do not allow to be used as a toy. Close attention is necessary when used near children. Use only as described in this manual. use only the manufacturer's recommended attachments.

Do not use with damaged cord or plug. @@@ Do not pull or carry by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. do not put the appliance over cord. Keep cord away from heated surfaces. Do not handle plug, cord or appliance with wet hands.

Do not put any object into openings. @@@@ Turn off all controls before unplugging. Use extra care when cleaning on stairs. @@@@ Do not use without dust bag and filters in place. @@ Do not pick up water or other liquids.

To reduce risk of electric shock - connect this vacuum cleaner to a properly grounded outlet. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounding attachment plug that looks like the plug illustrated in figure A below. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance. This machine is also suitable for commercial use, for example in hotels, schools, hospitals, factories, shops and offices and for normal housekeeping purposes. 2. @@ 3.

@@@@ 5. @@@@ 6. @@ 7. @@ In particular the machine must not be used for cleaning open and closed fireplaces, ovens or similar objects that contain warm or glowing ashes. Regularly inspect the cord and plug for damage, in particular if it has been crushed, shut in a door or run over. 9. The machine must not be used if it is faulty. Always turn off this vacuum cleaner before connecting or disconnecting motorized nozzle. 12. When repairing or replacing the cord, the same type of cord as originally supplied with the machine must be used.

This cord can be supplied by the manufacturer. 12b. If the fixed supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. 13. The plug must always be removed from the socket outlet before starting any maintenance of the machine or the cord.

14. Disconnect vacuum cleaner before servicing and when not in use. No changes or modifications to the mechanical or electrical safety devices should be made. @@@@ Always keep the vacuum cleaner in a dry place. the cleaner is designed for continuous heavy work.

@@@@ Do not use with damaged cord or plug. @@@@ Keep cord away from heated surfaces. @@@@ When cleaning is performed roll up the extension cord starting at the machine end and store it at the machine belt by snapping the nylon tie around the cord. Before using the vacuum cleaner make sure that the voltage shown on the rating plate on the vacuum cleaner corresponds with the main voltage. Accessories shown in the illustrations may vary from model to model. Accessories shown in the illustrations may vary from model to model. Hose connection: Fit the hose inlet sleeve into the opening on the upper lid. Apply soft pressure and turn the inlet sleeve approximately half a turn to ensure it is firmly secured. Turn clockwise to lock, counterclockwise to release. 3.

Adjustment of strap position on support plate: On the primary strap, the position of the strap can be adjusted for your individual comfort by moving the adjustment plate to the inner or outer position. 4. @@@@ Put your arms through the shoulder straps. @@ Make sure they are securely fastened. @@ Always use and connect such an extension cord to this vacuum cleaner. @@@@ Dust bag: If the suction power diminishes, it may be time to replace the dust bag. Check the bag frequently to make sure that you don't overfill. Grasp at the cardboard part of the dust bag and carefully lift the bag out of the container. Some types of dust bag can be sealed to prevent any dust/rubbish from being released. In that case, peel off the protective paper and fold the cardboard collar to seal the bag.

Main filter: When you replace the dustbag also replace or clean the Main filter. This can be done after you have lifted out the dust bag. clean the filter by shaking it well. @@ replace the dust bag and slide it in place to the main filter. Then put back the lid and close the latches.

Once they have become dirty, they must be replaced. check and change the HEPA filter frequently. @@@@ Repeat in reverse order to install new HEPA filter. Never run the vacuum cleaner without the pre-filter in place. @@ Release the two latches on the motor top.

@@@@ Place a new exhaust filter into the cover and replace the cover onto the machine. The length can be adjusted by holding in the button and simultaneously pulling or pushing the tube components. Round brush nozzle: Useful tool for cleaning home furnishings etc. 19. Combi nozzle: One setting with brush (hard floors) and one without brush for rugs (soft floors).) Main Filter Filter Efficiency, DIN 44956-2 Dust bag capacity (Gallon) Tank Capacity (Gallons) Machine Inlet, (in/mm) Sound pressure level, BS 5415 dB(A) Dimensions l x w x h, (in) Weight, cleaner only (lbs. Specifications and details are subject to change without prior notice. .



[You're reading an excerpt. Click here to read official NILFISK GD 5 user guide](http://yourpdfguides.com/dref/4257982)

<http://yourpdfguides.com/dref/4257982>