



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK MULTI 30. You'll find the answers to all your questions on the NILFISK MULTI 30 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK MULTI 30
User guide NILFISK MULTI 30
Operating instructions NILFISK MULTI 30
Instructions for use NILFISK MULTI 30
Instruction manual NILFISK MULTI 30



Multi 20
Multi 30
User manual



107402134

Nilfisk



[You're reading an excerpt. Click here to read official NILFISK MULTI 30 user guide](http://yourpdfguides.com/dref/3635380)
<http://yourpdfguides.com/dref/3635380>

Manual abstract:

it is recommended that the vacuum cleaner should be connected via a residual current circuit breaker. The vacuum cleaner must not be used if the electrical cable or plug shows any sign of damage. regularly inspect the cable and the plug for damage. If the power cord is damaged, it must be replaced by Nilfisk Service or an electrician to avoid danger before use of the vacuum cleaner is continued. Do not handle the electrical cable or plug with wet hands. The plug must always be removed from the socket outlet before starting any service or repair work of the machine or cable. Danger that can lead to serious injuries and damage. No changes to the mechanical, electrical or thermal safety devices must be made. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall be supervised to make sure that they do not play with the appliance.

@@Do not blow the air out in the open space. Only use the blow function with a clean tube. @@@@Opening the unit housing causes the warranty to become void. Further claims may not be made on the basis of the warranty. The statutory warranty rights of the customer remain unaffected.

@@Manufacturer warranty claims shall be made to the manufacturer. Statutory warranty rights also remain unaffected in this case. @@Before plugging an appliance into the appliance socket: 1. @@Always unwind the cable of the vacuum cleaner completely before use. @@The operating voltage shown on the rating plate must correspond to the voltage of the mains power supply.

Before liquids are picked up, always remove the filter bag. If foam develops or liquid emerges from the machine, stop work immediately and empty the dirt tank. Distance in order not to damage the filter with the air stream) or rinse in water. Dry filter before use. Carefully remove the filter bag from the container and close the small slider in the top of the filter bag. Insert the new filter bag in the container and press it gently on the inlet fitting using both hands. Nilfisk always recommends the use of a filter bag for fine dust. Turn the speed regulation to "max" (ref. Close the suction hose opening with the palm of your hand. 4.

Make a hard/fast push to the Filter clean button (ref. Always clean cable before rewind using a wet/damp cloth. When activating the automatic cord rewind, care must be taken as the plug at the end of the cord can swing during the last part of the rewinding. It is recommended that you hold on to the plug while rewinding. @@@.



[You're reading an excerpt. Click here to read official NILFISK MULTI 30 user guide](http://yourpdfguides.com/dref/3635380)
<http://yourpdfguides.com/dref/3635380>