



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK P 160.2 X-TRA. You'll find the answers to all your questions on the NILFISK P 160.2 X-TRA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK P 160.2 X-TRA
User guide NILFISK P 160.2 X-TRA
Operating instructions NILFISK P 160.2 X-TRA
Instructions for use NILFISK P 160.2 X-TRA
Instruction manual NILFISK P 160.2 X-TRA



POSEIDON 2



**Nilfisk
ALTO**
Why Compromise

Ⓝ	Instruktionsbog.....	3 - 16
Ⓡ	Instruksjonsbok.....	17 - 31
Ⓔ	Instruktionsbok.....	32 - 46
Ⓛ	Käyttöohje.....	47 - 61
Ⓜ	Instruction manual.....	62 - 75
Ⓞ	Betriebsanleitung.....	76 - 92
Ⓡ	Manuel d'Instructions.....	93 -108
Ⓝ	Gebruikershandleiding.....	109 -123
Ⓡ	Manuale di istruzioni.....	124 -138
Ⓔ	Manual de Instruções.....	139 -154
Ⓡ	Manual de Instruções.....	155 -169
Ⓔ	γχειρίδιο οδηγίων.....	170 -186

128330883



[You're reading an excerpt. Click here to read official NILFISK P 160.2 X-TRA user guide](http://yourpdfguides.com/dref/3801865)
<http://yourpdfguides.com/dref/3801865>

Manual abstract:

Se till att vattenslangen är helt fylld med vatten innan den ansluts till maskinen. 64 Before you start using your pressure washer. Symbols used to mark instructions Before starting up your high-pressure washer for the first time, this instruction manual must be read through carefully. save the instructions for later use. Safety instructions marked with this symbol must be observed to prevent danger to persons. This symbol is used to mark safety instructions that must be observed to prevent damage to the machine and its performance. This symbol indicates tips and instructions to simplify work and to ensure a safe operation. Do not let children or people who have not read the instruction manual operate the machine. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.

Before starting up your machine please check it carefully for any defects. @@High pressure jets can be dangerous. @@@@Wear goggles during operation. @@The use of other cleaning Original Instructions Agents or chemicals may adversely affect the safety of the appliance. To ensure the appliance safety only use original spare parts from the manufacturer or approved by the manufacturer.

@@@@Do not use the appliance if a supply cord or important parts of appliance are damaged, e. g. Safety device, high pressure hose and trigger gun. Remove the plug from the socket outlet during cleaning or maintenance and when replacing parts or converting the machine to another function. Appropriate ear protection must be used.

Never use the machine in an environment where there could be a danger of explosion. if any doubt arises, please contact the local authorities. It is not allowed to clean asbestos-containing surfaces with high pressure. do not spray flammable liquids. Always switch off the mains disconnecting switch when leaving the machine unattended. This high pressure washer must not be used at temperatures below 0°C. If an extension cord is used, it shall be suitable for outdoor use, and the connection has to be kept dry and off the ground. It is recommended that this is accomplished by means of a cable reel which keeps the socket at least 60 mm above the ground. Cables on reels should always be completely unwound Original Instructions Extension cables should comply with the below-mentioned requirements for length and cable dimensions. @@@@ iMPORTANT! Only use water without any impurities.

If there is a risk of silt, sand or sediment in the inlet water (i. e. From your own well), an additional filter should be mounted. @@When the button is activated, the spray handle cannot be operated. @@@@Pressure safety device An integrated hydraulic safety valve protects the system from excessive pressure. If the electric cable is damaged, it must be replaced by the manufacturer or his service agent or similarly qualified person in order to avoid a hazard. The following should be observed when connecting the high pressure washer to the electric installation: Only connect the machine to an installation with earth connection. The electric installation shall be made by a certified electrician and comply with IEC 60364-1. It is strongly recommended that the electric supply to this machine should include a residual current device (GFCI). @@@@Screw the quick coupling tight on to the water inlet (2).

@@@@Machines with hose reel: Unwind the high pressure hose completely. Pull the blue quick-release grip (A) of the spray gun backwards. 2. @@ 3. @@@@Only use water without any impurities.

If there is a risk of silt, sand or sediment in the inlet water (i. e. From your own well), an additional filter should be mounted. 1. @@@@ 2. @@@@When a click is heard, the handle is in right position. @@NOTE: Do not place the machine in tall grass! @@Always adjust the distance and thus the pressure of the nozzle to the surface, which is to be cleaned. Do not cover the machine during operation. Note: If the machine is left or not used for 5 minutes, it must be switched off on the start/stop switch "O" (1): 1. The machine will start again when you re-activate the spray handle. The washer can take in water from a rain water tank as an example. The hose for the water supply must not be too long, approx. 5 m. Make sure that the water tank is not placed on a lower level than the machine. Make sure that the water hose is filled completely with water before connecting to the machine.

To avoid water spillage, crimp the water inlet hose down in the water and then connect the hose to the machine with the quick coupling and finally uncrimp the water inlet hose. @@Fill the container with a detergent. @@ separate detergent container 1. Remove the cover with suction hose from the detergent container. The cover has a standard thread and fits common detergent containers. @@ remount the filter in the suction hose. Extra detergent hose can be pulled out of the machine. @@@@Here is some basic information about cleaning. Foam or detergent should be applied onto dry surfaces so that the chemical product is in direct contact with the dirt. Detergents are applied from bottom to top, for example on a car bodywork, in order to avoid "super clean" areas, where the detergent collects in higher concentration and streams downwards.

Let the detergent work for several minutes before rinsing but never let it dry on the surface being cleaned. note: It is important that the detergents do not dry up. Otherwise the surface that has to be cleaned can be damaged. In order to break down tough layers of dirt, additional mechanical effect may be required.

Special wash brushes offer this supplementary effect that cuts through dirt (especially by car washing).

Let the machine run until no more water runs through the spray handle. Machines without hose reel: Detach high pressure hose, coil it up and place it on the hose storage. @@@@ nEVER START-UP A FROZEN MACHINE. Frost damages are not covered by the guarantee! To avoid accidents, the electric cable and the high pressure hose should always be wound The lower hook can be turned to release the electric cable. 2.

The high pressure washer comes in two models: A) with hook for storage of high pressure hose (14) - B) with a hose reel (13). @@@@Clean the water inlet filter regularly once a month or more frequently according to use. Carefully loosen the filter with a pair of pliers and clean it. check that it is intact before re-mounting it. The inlet filter must always be fitted inside the water inlet pipe to filter out sand, limestone and other impurities, as they will damage the pump valves. A clogging up in the nozzle causes a pump pressure which is too high. This is why cleaning is required immediately. IMPORTANT: The cleaning tool (11) should only be used when the nozzle is detached! The machine should be kept clean so as to let cooling air To ensure easy connection and that o-rings do not dry up, the Please ensure that you check the following before contacting the Nilfisk-ALTO service organization: Symptom Cause Recommended action Plug in machine.



[You're reading an excerpt. Click here to read official NILFISK P](http://yourpdfguides.com/dref/3801865)

[160.2 X-TRA user guide](http://yourpdfguides.com/dref/3801865)

<http://yourpdfguides.com/dref/3801865>