



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK PS 333A. You'll find the answers to all your questions on the NILFISK PS 333A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK PS 333A  
User guide NILFISK PS 333A  
Operating instructions NILFISK PS 333A  
Instructions for use NILFISK PS 333A  
Instruction manual NILFISK PS 333A

## PS 333A



[You're reading an excerpt. Click here to read official NILFISK PS 333A user guide](http://yourpdfguides.com/dref/2885288)  
<http://yourpdfguides.com/dref/2885288>

**Manual abstract:**

. This machine is not a toy. Do not let children or unauthorised personnel play with it. @@@@Do not attempt to modify the machine yourself in any way. . Do not use the machine if the plug or mains lead are damaged. If the machine does not work correctly, if it has been damaged, left outside or become wet, return it to the service agent for repair. Make sure the lead does not get trapped in a doorway. The lead must not be exposed to heat. .

Make sure the lead does not touch any moving parts of the machine. . Always unplug the machine by pulling out the plug. Switch off the machine before unplugging it. Switch off the machine and unplug it before fitting or removing accessories.

. The machine is equipped with a "dead mans handle" for the safety of the operator. Do not attempt to override this safety mechanism or render it inoperable.

Do not fit any device to lock the switch in the on position. .

The machine is earthed and should therefore only be connected to an earthed mains socket. Pull it a bit upwards along the handle tube. There is a tongue on top and in the bottom of the tank. Fit the bottom tongue into the lower holder. B) Fit the chain to the hook on the bottom of the fluid control lever, figure 1 pos.

Make sure you get the right tension on the chain. if the chain is to tensed the fluid valve will continuously drain the solution from the tank. It can be necessary to loosen the lower tank holder as well to get the right tension on the chain. Press down the upper holder and fit the tongue on top of the tank into the holder.

@@The tank is filled through the big opening on top of the tank.

@@@@@@@@Press the pad onto the holder, make sure the pad is centered. @@Keep in mind that the pad/ brush should be parallel with the floor. @@ the machine starts immediatly. @@@@Some practice may be needed in order to learn how the machine works. @@@@Both sides can be used on the pad. @@ caution! @@Place the solution hose in a drain and rinse the tank while the fluid valve is kept open. Keep the valve open and rinse until the tank is clean. If there is no drain available, dismount the tank and clean it in a suitable place. Wipe the lead as you are coiling it. Always coil from the machine to the plug, this is to prevent the lead from getting entangle.

Vajutage käepidemest vasakul või paremal pool paiknevat turvalukku ning seejärel samal pool asuvat sisse-/väljalülitamise nuppu. GB The undersigned certify that the above mentioned model is produced in accordance with the following directives and standards. (Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. @@@@.



[You're reading an excerpt. Click here to read official NILFISK PS](#)

[333A user guide](#)

<http://yourpdfguides.com/dref/2885288>