



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 101. You'll find the answers to all your questions on the NOKIA 101 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 101
User guide NOKIA 101
Operating instructions NOKIA 101
Instructions for use NOKIA 101
Instruction manual NOKIA 101

Nokia 101 User Guide

Issue 1.0EN



[You're reading an excerpt. Click here to read official NOKIA 101 user guide](http://yourpdfguides.com/dref/4211677)

<http://yourpdfguides.com/dref/4211677>

Manual abstract:

0EN Keys and parts 1 ct Sele 2 k Bac 8 3 7 6 5 5 6 7 8 4 1 2 3 4 Earpiece Screen End/Power key Keypad Microphone Scroll key Call key Selection keys 13 9 10 12 11 9 10 11 12 13 Charger connector Flashlight Memory card slot Loudspeaker Headset connector Insert the SIM card and battery 1 Slide the back cover down. 4 Close the SIM card holder. 2 Open the SIM card holder. 5 Slide SIM2 under the metal part. 3 Insert SIM1. 6 Make sure the plastic tab holds the SIM card in place. Insert a memory card 7 Line up the contacts. 1 Open the cover of the memory card slot. See vi) in General information. 8 Push the battery in.

2 Make sure the contact area is facing up, and push the card in. 9 Slide the back cover up. 3 Close the cover. Charge the battery Switch on 2 seconds 1 Connect the charger to a wall outlet. 1 Press and hold the power key .

Dual SIM 1 2 SIM1 SIM2 OK 2 Connect the charger to the phone. 2 Set which SIM card to use. Press OK. See v) in General Information. 09:00 OK Back 3 The phone indicates a full charge.

You can use the phone while charging. 3 To set the hour, press up or down. You can also press the number keys. 15:00 OK Back 4 To set the minutes, press right, and then press up or down. Press OK. Time is set 7 The phone is ready to use. Menu Go to 5 The time is changed. Date: 08.04.2011 OK Exit 6 To set the date, press up or down.

Press OK. Explore your phone Menu Go to Select Back 1 To see the available functions, press Menu. 4 To select an item, press Select. Select Exit Select Back 2 To go to a function, press the scroll key up, down, left, or right. 5 To return to the previous view, press Back. Select Exit Select Exit 3 To select the function, press Select. 6 To return to the home screen, press . Select a SIM card for calls and messages Default SIM for calls SIM1 SIM2 Default SIM for msgs Select SIM1 SIM2 Ask every time Ask every time Back 3 Select Default SIM for calls. Ask every time SIM1 SIM2 You can use two SIM cards, and share your phone with your family. Menu Go to Select Exit Select Back 1 Press Menu.

Select Settings. Dual SIM settings Tone settings Display settings Select 4 Select Ask every time. Default SIM for calls: Ask every time Press the call key to call directly! Back OK 2 Select Dual SIM settings. See v) in General Information. 5 Your phone asks which SIM card to use when you make a call.

Default SIM for calls Default SIM for msgs Select Ask every time Ask every time Back 6 Select Default SIM for msgs. Ask every time SIM1 SIM2 Tip: To open Dual SIM settings from the home screen, press and hold *. Select Back 7 Select Ask every time. Default SIM for msgs.: Ask every time Press the call key to send the message directly! OK 8 Your phone asks which SIM card to use when you send a message.

Use one SIM card only Dual SIM 1 SIM1 SIM2 Back Menu Go to Select Exit 2 Select 1 To save battery power, use only SIM1. Press Menu. Select Settings. Dual SIM settings Tone settings Display settings Select 4 Select SIM1. @@@@ To answer, . press 1 Press left for quieter, right for louder. 5 You can enjoy chatting with your . friend. To end the call, press 2 Better. Use the loudspeaker Use the headset Others in the room can join in with a call.

0123456789 00:00:05 You can make a hands-free call with a headset. Options Loudsp. 1 During a call, press Loudsp.. 1 0123456789 calling Connect a headset. Calling 0123456789 End call 2 Place the phone on a table. 2 Make a call. Switch off Save a name and number To save battery power, switch the phone off. Add a friend's number to your phone. Switch off 2 seconds Menu Go to Select Exit 1 Press and hold the power key .

1 Press Menu. Select Contacts. Search Add contact Delete Select Back 2 The phone switches off. 2 Select Add contact. SIM1 SIM2 Phone Phone number: Phone number: OK 0123 Clear OK 0123456789 Clear Select Back 3 Select where to save the contact.

6 Enter the phone number. Press OK. Contact name: Mi OK Clear Use Back 4 Write the name. 7 Go to a picture, and press Use. Mike Contact name: Mike OK Clear 9876543210 calling Silence 5 Press OK.

8 When you receive a call, the name, number, and picture are shown. Change the ringtone Airy Beach Bold Brook Coconut Desk phone OK Back Menu Go to Select Exit 1 Press Menu. Select Settings. Dual SIM settings Tone settings Display settings Select 4 To listen to the sound of a ringtone, go to the ringtone. Airy Beach Bold Brook Coconut Desk phone OK Back Back 2 Select Tone settings. Ringing tone Ringing volume Select Level 4 5 Press OK. SIM1 SIM2 1 2 Beach Nokia tune Done Back Select Back 3 Select Ringing tone and a SIM card. 6 The ringtone is selected. Flashlight 2 SIM2 1 SIM1 Tip: To select different ringtones for SIM1 and SIM2, repeat steps 3-5. 01:10 Song 1 01:18 My favourite songs Demo songs Use as ringtone Select Use the flashlight if you need more light.

See iii) in General Information. Options Back Back x2 1 Menu Go to Tip: You can select an MP3 song as a ringtone. To use the flashlight, press up twice. x1 2 Menu Go to To switch the flashlight off, press up once. Send and receive messages Hello Anna, how are you today? Menu Go to Select Exit Options Clear 1 Press Menu. Select Messages. Create message Inbox Sent items Select Back 4 Press Options, and select Send. See i) in General Information. 1 2 SIM1 SIM2 Select Back 2 Select Create message. Hello Anna, 5 If asked, select which SIM card to use.

See v) in General Information. Phone number: Clear Options OK 0123456789 Clear 3 To write your message, press the keys. 6 Enter a phone number. Press OK. Write text Press a key repeatedly until the letter is shown.

Change the writing language: select Menu > Settings > Phone settings > Language, the language, and OK. See iv) in General Information. Insert a space: press 0. Change a word: press * repeatedly until the word is shown. 1 message received 7 The message is sent.

Insert a number: press and hold the number key. Exit Show 8 To read a message, press Show. Hello Anna, how are you today? Insert a special character: press and hold *. Change the text input method: press # repeatedly. Use predictive text: select Options > Dictionary and the language. Press a key for each letter. When the word is shown, press 0. Start writing the next word. Stop using predictive text: select Options > Dictionary > Dictionary off. Options Back 9 To view the rest of the message, press down.

Set an alarm 08:00 OK Back 3 Use your phone as an alarm clock to wake you up.



You're reading an excerpt. Click here to read official NOKIA 101 user guide

<http://yourpdfguides.com/dref/4211677>

To set the hour, press up or down. Menu Go to Select Exit 08:30 OK Back 1 Press Menu. Select Clock. Alarm time Alarm tone 4 To set the minutes, press right and then up or down. Off Repeat alarm Select Speaking clock Alarm once 08:30 OK Back Back 2 Select Alarm time. 5 Press OK. Set a reminder Alarm on Meeting 6 The alarm is ready. Postp. Quit Set a reminder to meet your friends.

Alarm! 08:30 Menu Go to Select Exit Stop Snooze 7 An alarm sounds at the set time. Press Stop. 1 Press Menu. Select Extras. Spreadsheet Countd. tim. Calendar Select Back Off 2 Select Calendar. Feb 2011 Week 5 MTWTF S S 31 7 14 21 28 1 8 15 22 1 2 9 16 23 2 3 10 17 24 3 4 11 18 25 4 5 12 19 26 5 6 13 20 27 6 Alarm on Alarm off Options Back OK Back 3 Go to the date, and press Options. Add reminder Go to date 6 To set an alarm, select Alarm on.

20:30 OK Back OK Back 4 Select Add reminder.

7 To set the hour and minutes, press up or down. Reminder added Reminder about: Meeting OK Clear 5 Write a name for the reminder. 8 Press OK. The alarm is ready. Listen to music All songs My favourite songs Demo songs Select Back 3 Enjoy your music on the go. Make sure a memory card is in your phone. Press Options. Select All songs. Root Song 1 Song 2 Song 3 Song 4 Options Back Menu Go to Select Exit 1 Press Menu. Select Music.

Mp3 Music player Radio 4 Select a song. Play Previous folder Next folder Add into My fav. Use as ringtone Back Select Back Select 2 Select Mp3 Music player. 5 Press Options. Select Play. Listen to the radio Tip: To go to the previous or next song, press 2 or 8. To pause, press 5. 00:00 Mp3 Music player 00:00 Use your phone to listen to the radio. See ii) in General Information. Options Back 1 Tip: Press left for quieter, right for louder, down to add as a favourite.

Connect a headset. The headset cable works as the radio antenna. Menu Go to Select Exit 2 Tip: You can also press up to play or pause and 4 or 6 to control the volume. Press Menu. Select Music.

Mp3 Music player Radio Select Back Switch off Manual tuning Save channel Auto tuning Set frequency Delete channel Select Back 3 Select Radio. The radio is on. Search all available channels? 6 To save the channel, press Options, and select Save channel. Channel name: Station 1 Back OK Clear OK 4 To automatically find radio channels, press OK. 87.

5 7 Write a name for the channel, and press OK. 1. (empty) 2. (empty) 3. (empty) 4. (empty) 5. (empty) 6. (empty) Select 87.50 MHz 108 Options Back Back 5 To select the next channel, press down. 8 Select an empty channel.

To save more channels, repeat steps 57. Calculator Save channel Auto tuning Set frequency Delete channel Rename Loudspeaker Select Back 9 To use the loudspeaker, press Options, and select Loudspeaker. Switch off Save channel Auto tuning Set frequency Delete channel Rename Select Back Radio off Use your phone to make a calculation. Menu Go to Select Exit 10 To close the radio, press Options, and select Switch off. 1 Press Menu. Select Extras. Reminders Calculator Alarm! 08:30 Stop Snooze Converter Select Back 2 Select Calculator. Tip: Wake up to the radio. Press Options, and select Clock radio. Equals 50

Clear 3 To enter numbers, press the keys.

x Equals 50 Clear 4 To change a function, use the scroll key. x Equals 50 120 Clear x Equals = 50 120 6000 Clear 5 Enter the second number, and press Equals. General information Read these simple guidelines. Not following them may be dangerous or illegal. For further information, read the complete user guide.

SWITCH OFF IN RESTRICTED AREAS Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. QUALIFIED SERVICE Only qualified personnel may install or repair this product. KEEP YOUR DEVICE DRY Your device is not waterresistant. Keep it dry. PROTECT YOUR HEARING Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Battery removing Switch the device off and disconnect the charger before remt applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco profile at www.nokia.com/ecoprofile.

Batteries and chargers Battery and charger information Your device is intended for use with a BL-5CB rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries. This device is intended for use when supplied with power from the following chargers: AC-3. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.

@@@ Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. @@ Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Recycle when possible. Do not dispose as household waste. @@ If a battery leaks, do not let battery liquid touch skin or eyes. @@@ Batteries may explode if damaged. Use the battery and charger for their intended purposes only.

@@@ Never use a damaged battery or charger. Only use the charger indoors. @@ Ensure the device is switched on. 2. Check for adequate signal strength. You may also need to do the following: · Insert a SIM card. @@ · Ensure your device is not in an offline or flight profile. 3. To clear the display, press the end key as many times as needed. 4. Enter the official emergency number for your present location. Emergency call numbers vary by location. 5. Press the call key. 6.

Give the necessary information as accurately as possible. Do not end the call until given permission to do so. @@@ Connections in all conditions cannot be guaranteed. @@ They may contain small parts. Keep them out of the reach of small children. @@@@ Persons who have such devices should: · Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. · Not carry the wireless device in a breast pocket. · Hold the wireless device to the ear opposite the medical device. · Turn the wireless device off if there is any reason to suspect that interference is taking place. · Follow the manufacturer directions for the implanted medical device.



[You're reading an excerpt. Click here to read official NOKIA 101 user guide](http://yourpdfguides.com/dref/4211677)

<http://yourpdfguides.com/dref/4211677>

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids.

Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetre (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available.

Follow the separation distance instructions until the transmission is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere, for example near gas pumps at service stations.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR.

The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.28 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

DECLARATION OF CONFORMITY 0434 incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, applications and services may vary by region. @@@@© 2011 Nokia. All rights reserved. Nokia and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation.

Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, .



[You're reading an excerpt. Click here to read official NOKIA 101 user guide](http://yourpdfguides.com/dref/4211677)

<http://yourpdfguides.com/dref/4211677>