



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 109. You'll find the answers to all your questions on the NOKIA 109 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 109
User guide NOKIA 109
Operating instructions NOKIA 109
Instructions for use NOKIA 109
Instruction manual NOKIA 109

Nokia 109 User Guide

Issue 1.0 EN



[You're reading an excerpt. Click here to read official NOKIA 109 user guide](http://yourpdfguides.com/dref/5574832)

<http://yourpdfguides.com/dref/5574832>

Manual abstract:

See 3. @@push the battery in. 2 5 If the battery is in the phone, lift it out. @@2 Tip: To remove the SIM, press the tongue down, and slide the SIM out. If the battery is in the phone, lift it out. 3 Slide the memory card holder towards the top of the phone. 8 4 7 Lift the holder. Slide the holder to its original position. 8 5 Put a compatible memory card in with Line up the battery contacts, and push the battery in. the contact area face down.

6 9 Lower the holder. Slide the back cover down until it locks into place. See 2. 9 Charge the battery 1 Lock the keys Plug the charger into a wall outlet. Lock the keys when not using your phone.

1 2 Connect the charger to the phone. See 4. 3 Select Menu, then press *. 2 Battery full? Unplug from the phone, To unlock, select Unlock, then press then from the wall outlet. *.

10 Attach a strap 1 Explore your phone 1 Menu Switch the phone off, and remove the To see the features and apps in your back cover. phone, press Menu. 2 2 Back Loop the strap around the peg. To go back to the previous view, press Back. 3 3 Exit Slide the back cover down until it locks into place. 11 To go back to the home screen, press . Indicators on your phone 4 — You have unread messages. — You have unsent, cancelled, or failed messages. — The keys are locked. Select To go to an app or feature, press the scroll key up, down, left, or right.

5 — The phone doesn't ring when somebody calls or sends a message. — An alarm is set. Select / — The phone is connected to a GPRS or EGPRS network. / — A GPRS or EGPRS To open the app or select the feature, connection is open. press Select. / — The GPRS or EGPRS connection is on hold. — All incoming calls are forwarded to another number. — A headset is connected to the phone. 12 Make or answer a call 3 9876543210 calling Answer Call your friend. See 12.

When your phone rings, press answer. See 13. to 1 Options 0123 456789 Save Clear Type in the phone number, then press . 2 0123456789 In call Options Loudsp. To end the call, press .

13 Call the last dialled number 1 View your missed calls 1 1 missed call Go to Menu Names View Exit On the home screen, press 0123456789 9876543210 Today, 07:29 Today, 08:29 . On the home screen, select View. See 5. 2 0123456789 Today, 14:29 2 Call Call Select the number, then press . To call back, select the number, then press .

All calls Missed calls Received calls Options Select Exit Select Back Tip: To view missed calls later, select Menu > Log > Missed calls. 14 Change the volume Save a name and phone number Is the volume too loud during a call or Add new contacts to your phone. when listening to the radio? 1 1 Options Select Exit Scroll up or down. Select Menu > Contacts. Names Add new Synchronise all Select Back 2 2 Better. Select Add new. 15 3 Number: 123 6 Jim Brown 9876543210 Options OK Clear Jim Options Select Clear Type in the phone number, then select OK. 4 Jim Brown Last name: Brown Options Save Clear To search for a contact, start writing the contact's name in the search box. 7 Jim Brown Call 9876543210 Call Contact details Add detail Add image Delete contact Copy contact Back Select Back Send message Send mail Options Select Back 9876543210 Send message Send mail Options Select Write the first and last name, then select Save. 5 Select Options > Contact details.

Names Add new Synchronise all Select Back Anna Dad Jim Brown Mum Options Select Back To edit details, select Names and a contact. 16 Make calls quickly 3 Phone number: Found: Mike 9876543210 End call Mike Anna Dad Mum Options Search Back Select Back Call someone often? Set their number as a speed dial. 1 Select Search and a contact. Found: Mike 9876543210 End call 4 Options Select Exit Select Menu > Contacts. To call, press and hold a number key on the home screen. 2 Groups Speed dials Settings Select Back 2. (empty) 3. (empty) 4. (empty) 5. (empty) 6. (empty) 7. (empty) 2. (empty) 3. (empty) 4. (empty) 6.

(empty) 7. (empty) Back 5. Mike Change Delete Call View Back Select Assign Options Back Select More > Speed dials and a free Tip: To change a speed dial, select slot, then select Assign. Options > Change. 17 Send a message 3 Hi Mi ke ! Hi Anna, how are you? Options Send to Clear Keep in touch with people through messages.

See 7. 1 Write your message. Your message: Hi Anna, how are you? Insert symbol Insert object Prediction Writing language Save as draft Options Select Exit Options Send to Back Select Back Select Menu > Messaging. Create message Inbox Mail Tip: To add an attachment, select Options > Insert object. See 8, 9. 4 Hi Anna, how are you? Image: Number or mail Contacts Mum Recently used Log Photo0001.jpg Contact groups Close Options Select 123 2 Options Select Back Options Sendto Back Select Create message. To add a recipient, select Send to > Contacts. 18 Write text 5 Photo0001.jpg To: Anna 123456789 Add Send Clear Press a key repeatedly until the letter is shown.

To type in a punctuation mark, press 1 repeatedly. To type in a special character, press *, then select the character. To switch between character cases, press #. To use number mode, press and hold #, then select Number mode. To go back to letter mode, press and hold #. If you want to quickly type in a single number, just press and hold the number key. To switch predictive text on or off, select Options > Prediction, then select On or Off. Not all languages are supported. To change the writing language, select Options > Writing language. Select Send.

See 10, 9. 19 Check your voicemail 3 Mailbox number: Options OK 123456789 Clear When you can't answer, you can forward calls to your voicemail. 1 When setting up voicemail, type in your voice mailbox number. Calling Voice mailbox End call Options Select Exit Select Menu > Messaging. Tip: To quickly call your voicemail, press and hold 1 on the home screen.

2 Message settings Voice messages Info messages Options Select Listen to voice messages Voice mailbox number Select 123456789 Back Back Select More > Voice messages > Listen to voice messages. 20 Personalise your home screen 3 Wallpaper Photos Menu Home screen OK Cancel Opt. Select Back You can change the wallpaper, and Select OK to open the folder, and rearrange items on the home screen. select a photo. 1 Options Select Exit Select Menu > Settings.

2 Tones Display Date and time Select Wallpaper Set by theme Home screen Back Select Back Select Display, scroll to Wallpaper, and scroll to a folder. 21 Add shortcuts to your home screen 3 Notifications Menu Options Change Done Save changes? No Yes Back Add shortcuts to your favourite apps Select Done > Yes. to your home screen. 1 Personalise Home scr. sett. Options Select Exit Select Back Scroll to a shortcut, then select Options > Personalise. 2 Clock Countd. timer Gen. indicators Notifications Radio & Media Shortcut bar Options Change Back Select Back Select a bar, then select an item, such as a widget.



[You're reading an excerpt. Click here to read official NOKIA 109 user guide](http://yourpdfguides.com/dref/5574832)

<http://yourpdfguides.com/dref/5574832>

22 Change your ringtone 3 Incom.

call alert: Ringing Ringtone: Open Gall. Ringing volume: Options Select Back Set a different ringtone for each profile. 1 Scroll to Open Gall., then select Select. 4 Graphics Tones Recordings Ringtones Alert tones Options Select Exit Options Open Back Options Open Back Select Menu > Settings. Select Tones > Ringtones and a ringtone. 2 Themes Tones Display Select Incom. call alert: Ringing Ringtone: Nokia tune Ringing volume: Back Options Save Back Select Tones, then scroll to Ringtone:. 23 Tip: To switch between the silent and normal profile, press and hold #. Set an alarm 3 09:00 Alarm on Options Save Repeat days Off Alarm tone Standard Back Select Back Use your phone as an alarm clock.

To repeat the alarm, select Options > Repeat days and the days, then select Done. 1 Games Alarm clock Calendar Options Select Exit Select Back Select Menu & @chat.com Hello! Send Clear Write your message in the text box, then select Send. See 6. 7 mychat@chat.
com Conversations friend@chat.com Set your phone to automatically lock itself when you're not using it. 1 Options Select Home Options Select Exit When you want to continue a conversation, select the thread. Select Menu > Settings. 2 Call Device Security keyguard Off New message from friend@chat.
com Flight query Off Select Accessories Back Select View Back Tip: To see a message when Chat is Select Device, then switch Security open in the background, select View. keyguard on. 33 Change the security code 3 Security code: 12345 ***** OK Clear Type in the security code. Create your own security code, so only you know how to unlock your phone. 1 4 Options Select Exit To unlock, select Unlock, press *, then type in the security code. Select Menu > Settings. 2 Configuration Security Nokia account Select Access codes Code in use Back Select Back Select Security > Access codes. 34 Restore original settings 3 Change security code Change PIN code Select Back Select Change security code. If your phone is not working properly, reset the settings. 1 4 Security code: 0123456789 In call Options Loudsp.

OK Clear Type in the preset security code 12345. 5 Enter new security code: End all calls and connections. 2 OK Clear Options Select Exit Type in a new code, using at least 5 numbers. 35 Select Menu > Settings. Troubleshooting 3 Configuration Security Restore factory sett. Select Restore sett. only Restore all Back Select Back If you have an issue, do the following: • Switch the phone off, and remove the battery. After about a minute, put the battery back in, and switch the 4 phone on again. • Update your phone software: Security code: Select Menu > Settings and Device > Device updates. • Restore the original factory settings: End all calls and connections, OK Clear and select Menu > Settings and Type in the security code, then select Restore factory sett. > Restore sett. OK. only. 5 If your issue remains unsolved, contact Nokia for repair options at www.nokia.com/support.

Before sending your phone for repair, back up your data, as all personal data in your phone may be deleted. Select Restore factory sett. > Restore sett. only.
Restore complete OK You can also go to www.nokia.com/ Your phone switches off and on again. support where you can find: This may take longer than usual. See • Troubleshooting info • News on apps and downloads 11. 36 Update phone software using your phone • Longer version of this user guide • Software update info • Details about features and technologies, and the compatibility of devices and accessories You can update your phone software wirelessly. You can also set your phone to automatically check for updates. Select Menu > Settings and Device > Device updates. 1. To check if there is an update, select Download device software.

2. To download and install an update, select Download device software, and follow the instructions shown on the phone. The update may take several minutes. If you encounter problems, contact your network service provider. Check for updates automatically Select Automatic SW update check, and set how often to check. Your network service provider may send updates over the air directly to your phone. For more info on this 37 Back up content to a memory card network service, contact your network service provider. Contacts Settings Messages Bookmarks Calendar Gallery files Options Done Want to make sure you won't lose any important files? You can back up your phone memory to a compatible memory card. Select Menu > Settings > Sync and backup. 1. Select Create backup. 2. Select what you want to back up, then select Done. Restore a backup Select Restore from backup. 38 Access codes PIN or PIN2 code (4-8 digits) These protect your SIM against unauthorised use or are required to access some features.
You can set your phone to ask for the PIN code when you switch it on. If not supplied with your card or you forget the codes, contact your service provider. If you type in the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code. PUK or PUK2 code These are required to unblock a PIN or PIN2 code. (8 digits) IMEI number (15 digits) If not supplied with your SIM, contact your service provider.
This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. You may also need to give the number to Nokia Care services. To view your IMEI number, dial *#06#. Lock code (security code) (min. 5 digits) This helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define. The default lock code is 12345. Keep the code secret and in a safe place, separate from your phone. 39 If you forget the code and your phone is locked, your phone will require service.

Additional charges may apply, and all the personal data in your phone may be deleted. For more information, contact Nokia Care or your phone dealer. 40 General information Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide. SWITCH OFF IN RESTRICTED AREAS Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. QUALIFIED SERVICE Only qualified personnel may install or repair this product. BATTERIES, CHARGERS, AND OTHER ACCESSORIES Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products.



[You're reading an excerpt. Click here to read official NOKIA 109 user guide](http://yourpdfguides.com/dref/5574832)
<http://yourpdfguides.com/dref/5574832>

KEEP YOUR DEVICE DRY Your device is not water-resistant.

Keep it dry. **PROTECT YOUR HEARING** To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use. Product and safety information Feature-specific instructions 1 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

2 Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. Important: This device is designed 3 to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout. 4 If the battery is completely discharged, it may take several minutes before the 41 charging indicator is displayed or before any calls can be made. 5 Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area. 6 Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. 7 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages.

Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message. 8 If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size. 9 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices. 10 Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your service provider. Only those features that are supported by the social networking service are available. Using social networking services requires network support. This may involve the transmission of large amounts of data and related data traffic costs.

For information about data transmission charges, contact your service provider. The social networking services are third party services and not provided by Nokia. Check the privacy settings of the social networking service you are using as you may share information with a large group of people.

@@@To make a call, activate another profile. @@The 42 messages contain tips and tricks and support.

To stop receiving the messages, select Unsubscribe. @@@To use the device, you need a subscription with a service provider. @@@@The following suggestions help you protect your warranty coverage. •Keep the device dry. @@@•Do not use or store the device in dusty or dirty areas.

Moving parts and electronic components can be damaged. •Do not store the device in high temperatures. @@•Do not store the device in cold temperatures.

@@@@•Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics. @@•Do not paint the device.

Paint can clog moving parts and prevent proper operation. @@•Keep your device away from magnets or magnetic fields. @@Recycle Always return your used electronic products, batteries, and packaging materials to 43 dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials.

Check how to recycle your Nokia products at www.nokia.com/recycling. Crossed-out wheeled-bin symbol with OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life.

This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco profile at www.nokia.com/ecoprofile.

About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content. Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected Other transfer methods may not transfer the licences which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted.

You may also need to restore the licences if the files on your device become corrupted. Batteries and chargers Battery and charger info Your device is intended for use with a BL-5CB rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries. This device is intended for use when supplied with power from the following chargers: AC-11. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, B, or N. 44 The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Battery safety Always switch the device off and unplug the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket.



[You're reading an excerpt. Click here to read official NOKIA 109 user guide](http://yourpdfguides.com/dref/5574832)

<http://yourpdfguides.com/dref/5574832>

Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it.

Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Make an emergency call 1. Make sure the device is switched on. 2. Check for adequate signal strength. You may also need to do the following: • Put a SIM card in the device. • Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group. • Make sure the flight profile is not activated. 3.

Press the end key repeatedly, until the home screen is shown. 4. Type in the official emergency number for your present location. Emergency call numbers vary by location. 45 5. Press the call key. 6. Give the necessary info as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls.

The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies. Small children Your device and its accessories are not toys. They may contain small parts.

Keep them out of the reach of small children. Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should: • Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. • Not carry the wireless device in a breast pocket. • Hold the wireless device to the ear opposite the medical device. • Switch the wireless device off if there is any reason to suspect that interference is taking place. • Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids.

Nickel The surface of this device is nickel-free. Protect your device from harmful content Your device may be exposed to viruses and other harmful content.

Take the following precautions: • Be cautious when opening messages. They may contain malicious software or 46 otherwise be harmful to your device or computer. • Be cautious when accepting connectivity requests, browsing the internet, or downloading content. • Only install and use services and software from sources that you trust and that offer adequate security and protection. • Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer. • If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions.

Nokia does not endorse or assume liability for such sites. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle.

Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch your device off in any area with a potentially explosive atmosphere, for example near petrol pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to switch your vehicle engine off, below deck on boats, chemical transfer or storage facilities, and 47 where the air contains chemicals or particles such as grain, dust, or metal powders.

You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.



[You're reading an excerpt. Click here to read official NOKIA 109 user guide](http://yourpdfguides.com/dref/5574832)

<http://yourpdfguides.com/dref/5574832>

@@@@@@@The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.30 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

Additional SAR information may be provided under product information at www.nokia.com. **DECLARATION OF CONFORMITY** Hereby, NOKIA CORPORATION declares that this RM-907 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at <http://www.nokia.com/global/declaration/declaration-of-conformity>.

© 2012 Nokia. All rights reserved. Nokia, and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation.

Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, apps, and services may vary by region.

For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. Oracle and Java are registered trademarks of Oracle and/or its affiliates. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use.

Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>. 49 The availability of Nokia services may vary by region.

Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge. 50 .



[You're reading an excerpt. Click here to read official NOKIA 109 user guide](http://yourpdfguides.com/dref/5574832)

<http://yourpdfguides.com/dref/5574832>