



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 112. You'll find the answers to all your questions on the NOKIA 112 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 112
User guide NOKIA 112
Operating instructions NOKIA 112
Instructions for use NOKIA 112
Instruction manual NOKIA 112

Nokia 112 User Guide

Issue 1.0 EN



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

Manual abstract:

12 Loudspeaker 13 Wrist strap hole 14 SIM slot (SIM 2). @@2 Line up the battery contacts, then push the battery in. 5 If the battery is in the phone, lift it out. @@See 2. @@2 SIM cover. See 7. Put the SIM in with the contact area face up. 3 Push the card in until it locks into place. Close the cover. 8 Insert a memory card 4 1 To remove the SIM, push the SIM in until it's free.

5 Switch the phone off, then remove the back cover. 2 Pull the SIM out. If the battery is in the phone, lift it out. 3 Slide the memory card holder towards the top of the phone. 9 4 7 Lift the holder.

Slide the holder to its original position. 8 5 Put a compatible memory card in with Line up the battery contacts, then push the battery in. the contact area face down. 6 9 Lower the holder. Replace the back cover.

See 1. 10 Charge the battery 1 Lock the keys Plug the charger into a wall outlet. Lock the keys when not using your phone. 1 2 Connect the charger to the phone. See 3, 4. 3 Select Menu, then press *. 2 Battery full? Unplug from the phone, To unlock, select Unlock, then press then from the wall outlet. *. 11 Attach a strap 1 Explore your phone 1 Menu Switch the phone off, then remove the back cover. 2 To see the features and apps in your phone, press Menu.

2 Back Push the loop through the hole, then To go back to the previous view, press put it over the hook. Back. 3 3 Exit Replace the back cover. To go back to the home screen, press . 12 Set which SIM card to use 4 Select To go to an app or feature, press the Set the SIM for outgoing calls, scroll key up, down, left, or right. messages, and connections. 5 1 Select Options Select Exit To open the app or select the feature, Select Menu > SIM manager. press Select. 2 Ask every time SIM1 SIM2 Help Always used (no selections) (no selections) Select Back To decide every time which SIM to use, select Ask every time. 13 Copy content from your old phone 3 Ask every time SIM1 SIM2 Options Always used (no selections) (no selections) Call Text messages MMS Mobile data Select Back Mark Back Select SIM1 or SIM2 to set which SIM Easily get your contacts, calendar, to use for which connection.

and other stuff to your new phone. 4 1 Ask every time SIM1 SIM2 Options Always used (no selections) (no selections) Rename Help Select Back Select Back Select Back To rename a SIM, select the card, and Switch Bluetooth on in both phones. select Options > Rename. 5 Rename SIM: 2 Options OK Clear Options Select Exit Write a name, and select OK. Select Menu > Settings.

14 3 My shortcuts Sync and backup Connectivity Select Back Sync with server Phone switch Create backup Select Back 6 Enter passcode: Options OK Clear Select Sync and backup > Phone switch. 4 If asked, create a one-time passcode (such as 123), then select OK. 7 Does code match with code on other device? Synchronise Copy to this Copy from this Contacts Calendar Text messages Multimedia msg. Notes Select Back Options Unmark Done Yes No Select Copy to this and what you want Check that the codes match on both to copy, then select Done. phones.

5 Nokia XX My laptop 8 Options Connect Back Select your old phone from the list of Follow the instructions shown on found devices. both phones. 15 Indicators on your phone / — You have unread messages sent to SIM1 or SIM2. — You have unread messages sent to SIM1 and SIM2. / — You have unsent, cancelled, or failed messages from SIM1 or SIM2. — Bluetooth is on. / — All incoming calls to SIM1 or SIM2 are forwarded to another number. — All incoming calls to SIM1 and SIM2 are forwarded to another number. — You have unsent, cancelled, or — A headset is connected to the failed messages from SIM1 and SIM2. phone.

— The keys are locked. — The phone doesn't ring when somebody calls or sends a message. — An alarm is set. / — The phone is connected to a GPRS or EGPRS network using SIM1. / — A GPRS or EGPRS connection from SIM1 is open. / — The GPRS or EGPRS connection from SIM1 is on hold. 16 Make or answer a call 3 0123456789 In call Options Loudsp. Call your friend. See 16. To end the call, press .

1 Options 0123 456789 Save 4 9876543210 calling SIM1 Answer Clear Type in the phone number, then press When your phone rings, press answer. See . 17. 2 Call using: SIM1 SIM2 Select Back to If asked, select which SIM to use. 17 Call the last dialled number 1 View your missed calls 1 1 missed call Go to Menu Names View Exit On the home screen, press 0123456789 9876543210 Today, 07:29 Today, 08:29 .

On the home screen, select View. See 5. 2 0123456789 Today, 14:29 2 Call Call Select the number, then press . To call back, select the number, then press . 3 Call using: SIM1 SIM2 Select Back Options Select All calls Missed calls Received calls Exit Select Back Select the SIM to use.

Tip: To view missed calls later, select Menu > Log > Missed calls. 18 Change the volume Save a name and phone number Is the volume too loud during a call or Add new contacts to your phone. when listening to the radio? 1 1 Options Select Exit Scroll up or down. Select Menu > Contacts. Names Add new Synchronise all Select Back 2 2 Better. Select Add new. If asked, select where to save the contact. 19 3 Number: 123 6 Jim Brown 9876543210 Options OK Clear Jim Options Select Clear Type in the phone number, then select OK. 4 Jim Brown Last name: Brown Options Save To search for a contact, start writing the contact's name in the search box. 7 Jim Brown Call 9876543210 Call Contact details Add detail Add image Delete contact Copy contact Back Select Send message Send mail Clear Options Select Back 9876543210 Send message Send mail Options Select Back Write the first and last name, then select Save.

5 Select Options > Contact details. Names Add new Synchronise all Select Anna Dad Jim Brown Mum Back Options Select Back To edit details, select Names and a contact. 20 Make calls quickly 3 Phone number: Found: Mike 9876543210 End call Mike Anna Dad Mum Options Search Back Select Back Call someone often? Set their number as a speed dial. See 8. 1 Select Search and a contact. Found: Mike 9876543210 End call 4 Options Select Exit Select Menu > Contacts. To call, press and hold a number key on the home screen. 2 Groups Speed dials Settings Select Back 2. (empty) 3. (empty) 4. (empty) 4. (empty) 6. (empty) 7. (empty) Back 5. Mike Change Delete Call View Back Select Assign Options Back Select More > Speed dials and a free Tip: To change a speed dial, select slot, then select Assign.

Options > Change. 21 Send a message 3 Hi Mi ke ! Hi Anna, how are you? Options Send to Clear Keep in touch with people through messages. See 10. 1 Write your message. Your message: Hi Anna, how are you? Insert symbol Insert object Prediction Writing language Save as draft Options Select Exit Options Send to Back Select Back Select Menu > Messaging.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

Create message Inbox Mail Tip: To add an attachment, select Options > Insert object. See 11, 12. 4 Hi Anna, how are you? Image: Number or mail Contacts Mum Recently used Log Photo001.jpg Contact groups Close Options Select 22 29 5 2 9 16 23 30 6 Options View Back Select a date and View > Add. 29 Listen to the radio 3 My music Radio Select Back Listen to your favourite radio stations Select Radio.

on your phone. 1 4 Connect a compatible headset. It acts To change the volume, scroll up or as an antenna. down. 2 5 87.5 87.5 108.0 Options Hide Options Select Exit Select Menu > Music. To close the radio, press . 30 Find and save radio stations 3 Station Switch off Play in backgr.

Stations Search stations 108.0 87.5 87.5 Set frequency Select Options Hide Back Search for your favourite radio stations 1 To search for all available stations, select Options > Search stations. 4 Station Switch off Play in backgr.

Save station 101.8 87.5 108.0 Stations Search stations Select Options Select Exit Options Hide Back Select Menu > Music. To save a station, select Options > Save station.

5 01 Station 2 My music Radio 88.5 87.5 108.0 Select Back Options Hide Select Radio. To switch to a saved station, scroll left or right. 31 Play a song 02 Station 101.8 87.5 108.0 Options Hide Tip: To switch to a saved station, you Listen to your favourite music on your can also press a number key. phone.

1 01. 88.5 MHz Delete station Rename Organise Select 02. 101.8 MHz Back Select Back Options Select Exit Tip: To rename a station, select the station and Options > Rename. Select Menu > Music. My music Radio 2 Select Back Select My music. 32 Take a photo 3 Go to Media pl. All songs Playlists Artists Albums Genres Options Select Song 1 Song 2 Song 3 Song 4 Song 5 Song 6 Exit Options Play Capture Back Select the song you want to play. There's a camera in your phone - just aim and snap! 1 4 Song 1 Camera My photos Timeline Options Select 00.

38 03.47 Options Hide Exit Select Back To pause or resume playing, press the To open the camera, select Menu > scroll key. Photos > Camera. 5 00.38 Options 03.

47 Hide Capture 2 To close the music player, press . To zoom in or out, scroll up or down. 33 Record a video 3 Opt. Capture Back Record Select Capture. The photos are saved in My photos.

Besides taking photos, you can also record videos with your phone. 1 My albums Video camera My videos Options Select Exit Select Back To open the camera, select Menu > Photos > Video camera. 2 Options Record Back To start recording, select Record. 34 Browse the web 3 Paris Record To zoom in or out, scroll up or down. Catch up on the news, and visit your favourite websites. 1 4 Pause Stop Options Select Exit To stop recording, press Stop. Videos are saved in My videos. Select Menu > Internet. abc 2 www.nokia.

com OK Clear To go to a website, write the web address in the address bar. 35 Add a bookmark Featured Home Favourites History Clear history Edit favourite Delete favourite Downloads Settings www.nokia.com Options Exit Back Tip: On the History tab, you can select If you visit the same websites often, Options > Clear history. add them as bookmarks. 1 Options Select Exit Select Menu > Internet. 2 Start page Reload Forward Add to fav. Downloads Back While browsing, select Options > Add to fav.. 36 Set up your mail account Send a mail Mail Hi Mike! Mike Hello Anna! Anna Want to use mail, but don't have a computer? You can use your phone.

1 You can read and send mail while on the move. 1 Inbox Mail Drafts Options Select Exit Options Select Back Select Menu > Messaging. Select Menu > Messaging > Mail. If asked, select which SIM to use. 2 user@mymailbox.

com 2 Inbox Mail Drafts Options Select My mailbox Home mailbox Add account Back Options Select Exit Select Exit Select Mail and a mail service, then follow the instructions. 37 Select a mail account. 3 Quick reply Delete Delete Many Compose New Forward 5 Subject: Thanks. Body text: Hi Anna! Options Clear Select Back In the mailbox, select Options > Compose New. 4 To: Write the subject and your message.

6 Sent Inbox Phone Subject: Thanks. Body text: Hi Anna! Find: Subject: Anna Body text: Options Insert Cancel Find Cancel Send To add a recipient, select Insert, or manually write the address. Cancel Add Cc/Bcc Attach new ing. Attach file Help Select Send. Expand Reply Quick reply Reply to all Delete Select Back Select Back Tip: To attach a file, select Options > Tip: To reply to a mail, open the mail, Attach file. then select Options > Reply. 38 Chat with your friends User ID: Password: Hi Mike! Sign In Options Select Back You can chat with your friends online Tip: If you don't have a chat account, while on the move. you can sign in to Nokia Chat. 1 3 mychat@chat.com My Status Send IM to... Add Contact Options Select Exit Select Back Select Menu > Chat.

If asked, select Select Options > Send IM to.... which SIM to use. 2 Select your IM service: 4 Send IM to... User ID: Chat Options Select Exit OK Cancel Select a service, then sign in. Type in the username. 39 Send a photo using Bluetooth 5 mychat@chat.com Hello! Send Clear Write your message in the text box, then select Send. See 9.

6 mychat@chat.com Conversations friend@chat.com Send a photo you have taken to your PC. See 14. 1 Delete Send Use photo Edit photo Landscape mode Options Select Home Opt.

View Back Select Back When you want to continue a conversation, select the thread. Select the photo and Opt. > Send. 2 Message Via Bluetooth Select Back Select Via Bluetooth. 40 Restore original settings 3 Nokia XX My laptop Connect Back Select the device to connect to.

If asked, type in the passcode. 4 If your phone is not working properly, reset the settings. 1 0123456789 In call Options Loudsp. The photo is sent to your PC. End all calls and connections. 2 Options Select Exit Select Menu > Settings. 41 Update phone software using your phone 3 Configuration Security Restore factory sett. Select Restore sett. only Restore all Back Select Back Select Restore factory sett. > Restore sett.

only. 4 Security code: You can update your phone software wirelessly. You can also set your phone to automatically check for updates. You can only update your software when using the SIM in the internal SIM holder. Select Menu > Settings and Device > Device updates. 1. To check if there is an update, Type in the security code, then select select Download device software. 2. To download and install an update, OK. select Download device software, then follow the instructions shown on 5 the phone.

OK Clear Restore complete OK The update may take several minutes. If you encounter problems, contact your network service provider. Check for updates automatically Your phone switches off and on again. This may take longer than usual.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

See Select Automatic SW update check, then set how often to check.

15. 42 Back up content to a memory card Your network service provider may send updates over the air directly to your phone. For more info on this network service, contact your network service provider. Contacts Settings Messages Bookmarks Calendar Gallery files Options Done Want to make sure you won't lose any important files? You can back up your phone memory to a compatible memory card. Select Menu > Settings > Sync and backup.

1. Select Create backup. 2. Select what you want to back up, then select Done. Restore a backup Select Restore from backup. 43 Access codes PIN or PIN2 code (4-8 digits) These protect your SIM against unauthorised use or are required to access some features. You can set your phone to ask for the PIN code when you switch it on. If not supplied with your card or you forget the codes, contact your service provider. If you type in the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code. PUK or PUK2 code These are required to unblock a PIN or PIN2 code.

(8 digits) IMEI number (15 digits) If not supplied with your SIM, contact your service provider. This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. You may also need to give the number to Nokia Care services. To view your IMEI number, dial *#06#. Lock code (security code) (min. 5 digits) This helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define. The default lock code is 12345. Keep the code secret and in a safe place, separate from your phone.

44 If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted. For more information, contact Nokia Care or your phone dealer. 45 Support When you want to learn more about how to use your phone, or if you're unsure how your phone should work, read the user guide thoroughly. If you have an issue, do the following: • Reboot your phone.

Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone. • Update your phone software • Restore the original factory settings Nokia original accessories For availability of approved accessories, check with your dealer. An extensive range of accessories is available for your device. For more details, see www.nokia-asia.com/accessories.

Practical rules about accessories • Keep all accessories out of the reach of small children. • When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord. If your issue remains unsolved, • Check regularly that accessories contact Nokia for repair options. installed in a vehicle are mounted and Before sending your phone for repair, are operating properly. always back up your data, as all • Installation of any complex car personal data in your phone may be accessories must be made by qualified deleted. personnel only. Battery Type: BL-6C Talk time: Up to 14 hours. Standby: Up to 839 hours.

46 Important: Battery talk and standby times are estimates and only possible under optimal network conditions. Actual battery talk and standby times depend on SIM cards, features used, battery age and condition, temperatures to which battery is exposed, network conditions, and many other factors, and may be significantly shorter than those specified above. Ringing tones, hands free call handling, use in digital mode, and other features will also consume the battery, and the amount of time a device is used for calls will affect its stand-by time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time. 47 General information Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide. SWITCH OFF IN RESTRICTED AREAS Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws.

Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. QUALIFIED SERVICE Only qualified personnel may install or repair this product. BATTERIES, CHARGERS, AND OTHER ACCESSORIES Use only batteries, chargers, and other accessories approved by Nokia for use with this device.

Do not connect incompatible products. KEEP YOUR DEVICE DRY Your device is not water-resistant. Keep it dry. PROTECT YOUR HEARING To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Product and safety information Feature-specific instructions The images in this guide may differ from your device screen. Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

1 Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. 2 Important: This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.

48 3 If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then unplug and reconnect it. 4 If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made.

5 Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area. 6 If you only have one SIM card, put the card into the SIM1 card holder. Some features and services may only be available when using the SIM card in the SIM1 card holder. If there is a SIM card only in the SIM2 card holder, you can only make emergency calls. 7 Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other is unavailable. 8 You can only use speed dials for the contacts stored on your phone or on the SIM in the internal SIM1 holder. 9 Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. 10 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)
<http://yourpdfguides.com/dref/5574840>

Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message. 11 If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size. 12 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices. 13 Sending a message with an attachment may be more expensive than sending a normal text message.

For more information, contact your network service provider. 14 Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth function off when you are not using it. 15 Restoring settings does not affect documents or files stored on your phone.

49 16 To type in the + character, used for international calls, press * twice. 17 Warning: When the flight profile is activated, you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make a call, activate another profile. Network services and costs

Your device is approved for use on the (E)GSM 900 and 1800 MHz networks. To use the device, you need a subscription with a service provider. Using network services and downloading content to your device requires a network connection and may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them. Take care of your device Handle your device, battery, charger and accessories with care.

The following suggestions help you protect your warranty coverage. • Keep the device dry.

Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry. • Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged. • Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics. • Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits. • Do not attempt to open the device other than as instructed in the user guide. • Unauthorised modifications may damage the device and violate regulations governing radio devices.

• Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics. • Only use a soft, clean, dry cloth to clean the surface of the device. • Do not paint the device. Paint can clog moving parts and prevent proper operation.

• Switch off the device and remove the battery from time to time for optimum performance. • Keep your device away from magnets or magnetic fields. • To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.

Recycle Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials.

Check how to recycle your Nokia products at www.nokia.com/recycling. 50 About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring pictures, music, and other content. Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10 and OMA DRM 1.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRMprotected content be revoked.

Revocation may also prevent renewal of such DRMprotected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRMprotected content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. need to restore the licences if the files on your device become corrupted. Batteries and chargers Battery and charger information Your device is intended for use with a BL-6C rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries. This device is intended for use when supplied with power from the following chargers: AC-11. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, B, or N. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

When the talk and standby times are noticeably shorter than normal, replace the battery. Important: Talk and standby times are estimates only. Actual times are affected by, for example, network conditions, device settings, features being used, battery condition, and temperature. Battery safety Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected Other transfer methods may not transfer the licences which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also 51 to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F).

Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes.

If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Make an emergency call 1. Make sure the device is switched on.

2. Check for adequate signal strength. You may also need to do the following: • Insert a SIM card. • Deactivate call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group. • Make sure the flight profile is not activated.
3. Press the end key repeatedly, until the home screen is displayed.
4. Enter the official emergency number for your present location. Emergency call numbers vary by location.
5. Press the call key.
6. Give the necessary information as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

They may contain small parts. Keep them out of the reach of small children. Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should: • Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. • Not carry the wireless device in a breast pocket. • Hold the wireless device to the ear opposite the medical device.

• Turn the wireless device off if there is any reason to suspect that interference is taking place. • Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Accessibility solutions Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information, visit the Nokia website at www.nokiaaccessibility.com.

Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids.

Nickel The surface of this device is nickel-free. Protect your device from harmful content Your device may be exposed to viruses and other harmful content.

Take the following precautions: • Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. • Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust. 53 • Only install and use services and software from sources that you trust and that offer adequate security and protection. • Install antivirus and other security software on your device and any connected computer. Only use one antivirus application at a time. Using more may affect performance and operation of the device and/or computer.

• If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more info, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force.

Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch your device off in any area with a potentially explosive atmosphere, for example near petrol pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include areas where you would be advised to switch your vehicle engine off; below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. 54 Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.30 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com. NOKIA SERVICE TERMS Terms of Use 1.

Acceptance These Nokia Service Terms together with the Privacy Policy and all other additional terms and information that may be provided within the Service (collectively "Terms") govern your use of the service, site, content and software (collectively the "Service"). By registering for or using the Service or any portion of it you accept the Terms. The Terms constitute an agreement between you and Nokia Corporation, Keilalahdentie 2-4, 02150 Espoo, Finland including its affiliates and suppliers (collectively "Nokia"), defining your and Nokia's rights and responsibilities with respect to the Service. 2. Eligibility To use the Service, you must be at least thirteen (13) years of age.

If you are under thirteen (13) years of age, or at least thirteen (13) years of age but a minor where you live, you must have your parent or legal guardian accept your registration on your behalf and approve your use of the Service. Anyone completing the registration must be legally competent. 3. Registration and Termination 55 To use a Service you may need to register and create a Nokia account with username and a password. You may need to provide us with certain personal and other information.

Nokia may verify your email address before account can be used. Upon first use of your device and each time you update the Nokia device software, a text message will be sent to Nokia. The creation of a Nokia Account will require data transmission. Data transmission costs may apply. You agree to provide truthful and complete information when you register for the Service and to keep that information updated. You must take due care to protect your username and password against misuse by others and promptly notify Nokia about any misuse. You, and your parent or legal guardian if you are a minor, are personally responsible for any use of the Service. You may terminate your registration if you no longer wish to use the Service. After termination, you will no longer have access to the Service. Nokia may terminate your registration or restrict your access to certain parts of the Service if Nokia reasonably believes that you have breached the Terms or with prior notice if you have not signed into the Service with your username in the past six (6) months.

Except as set forth in the Privacy Policy, Nokia is not responsible for any removal or loss of the information or content you have submitted to the Service. @@@@The Software maybe subject to export controls under the U.S. @@@@Nokia does not claim ownership in your Material. @@@@You are solely responsible for taking backup copies of the data you store on the Service, including Content you upload. If the Service is discontinued or canceled, Nokia may permanently delete your data. Nokia has no obligation to return data to you after the Service is discontinued or canceled. 5. Using the Service You agree to: • Comply with applicable laws, the Terms and good manners; • Use the Service only for your personal, non-commercial purposes; • Not submit unlawful, offensive, inaccurate, misleading, abusive, pornographic, harassing, libelous or otherwise inappropriate Material; • Obtain any consents, permission or licenses that may be legally required for you to submit any Material; • Respect the privacy of others; • Not distribute or post spam, unreasonably large files, chain letters, pyramid schemes, viruses; or • Not use any other technologies or initiate other activities that may harm the Service, or the interest or property of the Service users.

• Not to use any automated systems or means to access, acquire, copy or monitor any part of the service. 57 • Be responsible for the consequences related to the Material that you post. Nokia may but has no obligation to: • Monitor or moderate any Content or Material; • Remove any Material from the Service; and • Restrict access to any part of the Service at any time in its sole discretion. 6. Content Before downloading or accessing any Content, please check whether the Content which you wish to access is restricted by age or marked as potentially 'offensive' or 'explicit'.

Nokia shall not be responsible for any claims or offense caused or suffered by you accessing such Content. You agree: • To use the Content only for your personal, non-commercial purposes; • To use the Content in accordance with the restrictions set out in the applicable laws, additional terms, guidelines and policies or on the product pages that apply to that particular piece of the Content; • Not to make copies, give, sell, resell, loan, rent, offer, broadcast, send, distribute, transfer, communicate to the public, reproduce, modify, display, perform, commercially exploit or make the Content available unless otherwise authorized in the applicable Terms and to advise Nokia promptly of any such unauthorized use; • Not to remove, circumvent, reverse engineer, decrypt, or otherwise alter or interfere with any applicable usage rules or attempt to circumvent digital rights management or copy protection features associated with the Content or any other technologies used to control the access to or use of the Content or its identifying information; • Not to use any automated systems or means, except for those provided by us, for the selection or downloading of the Content; • Not to give out your password or otherwise allow other people to access the Content. The restrictions on copying that apply to applicable media also apply to the Content accessed as part of this Service. The Content is owned and/or controlled by Nokia and/or its respective licensors and is protected by intellectual property laws. The third party Content provider is solely responsible for any Content it provides, any warranties to the extent that such warranties have not been disclaimed and for any claims you may have relating to that Content or your use of that Content.

However, Nokia may enforce the third party Content license terms against you as a third party beneficiary of those terms.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

The third party Content providers are third-party beneficiaries under these Terms and may enforce the provisions that directly concern the Content in which they have rights. Nokia may be acting as an agent for third party Content provider in providing the Content to you. Nokia is not a party to the transaction between you and the third party Content provider for such Content. 58 7. Allegations of Copyright Infringement You may notify Nokia of copyright infringement on the Service by providing notice (a) by email with "Copyright Notification" in the subject line to copyright.notices@nokia.com, (b) by a document titled "Copyright Notification" mailed to Nokia, Attn: Copyright Agent, 102 Corporate Park Drive, White Plains, NY 10604, USA or (c) via the online form, if available. Your notice must: 1. identify the original copyrighted work you claim is infringed; 2.

identify the content on the Service that you claim is infringing the copyrighted work. Please provide enough detail for Nokia to locate the allegedly infringing content on the Service; 3. provide your contact information, including your full name, mailing address, telephone number, and email address, if available; 4. provide a statement that you have a good faith belief that the use of the content in the manner complained of is not authorized by the copyright owner, its agent, or the law; 5. provide this statement: "I swear, under penalty of perjury, that the information in this notification and complaint is accurate and that I am the copyright owner, or am authorized to act on behalf of the copyright owner of an exclusive right that is infringed."; and 6. provide your signature, as applicable. 8. Notices Nokia may post notices within the Service. Nokia may also send you notices about products and Services to the email address or telephone number you have provided to us.

You are deemed to have received such notices at the latest within seven (7) days from Nokia sending or posting those. Your continued use of the Services constitutes your receipt of all notices regardless of delivery method. 9. Fees Your use of the Service may be or may become subject to charges. Any fees charged by Nokia will be announced separately in connection with the Service.

Use of the Service may involve transmission of data through your service provider's network. Prices listed within the Service do not include possible data transmission, text message, voice or other service provision charges by your network service provider. Nokia assumes no responsibility for the payment of any charges of your service providers. 59 10. Order and Payment Terms "Order" shall mean the selection of payable Content and/or subscription to Content offered by Nokia and available in the Service and submission of payment method, as well as submitting the order by selecting the "buy", "ok", "I accept" or other similar confirmation of acceptance in the order flow or providing other indication of acceptance terms that are presented to you in the order flow. To place an Order within the Service, you must have reached the age of legal competence according to the applicable legislation. If you have not reached the age of legal competence, you may place Orders only with the prior consent of your parent or legal guardian. You agree that all Orders shall be legally valid and binding. All Orders are subject to acceptance by Nokia. You may pay by credit or debit card, network service provider billing, or other payment methods if available. Your credit or debit card must have a billing address in the country where the Content is offered by the Service. Nokia will charge your credit card or debit your bank account within a reasonable time after you have made your Order. All credit card payments are subject to validation checks and authorization by the card issuer. If you choose network service provider billing, charges will appear on your mobile phone bill or be deducted from your prepaid account if it is a prepaid account. Some network service providers may subject your usage of the Service to additional terms and conditions including placing limits on the amount of charges possible with network service provider billing.

Charges in excess of network service provider limits or account balance may be rejected. You agree to pay the charges related to your Order, to ensure that the instrument of payment is valid at the time of the Order, that you are the rightful holder of the instrument and that the instrument is used within its credit limits. The Content that is delivered is licensed to you. You agree to use such Content solely as permitted in these Terms and in any additional terms that you may be presented in the order flow. The Service may offer subscriptions. You authorize the Service to place a periodical charge during the period of the subscription. The Service may also offer a trial period. If your Order involves a trial period (also known as try-and-buy), you may be charged when the trial period expires, unless you cancel in accordance with the subscription/trial terms. The prices in the Service may change from time to time. Prices include applicable taxes in effect at the time of your transaction, 60 unless otherwise stated.

There may be instances where you incur additional charges from your bank or credit card provider based on currency conversion rates used and/or additional fees assessed. Nokia assumes no responsibility for the payment of bank or any other third party service fees or charges. 11. Cancellations and Refunds You agree to the electronic delivery of Content being initiated concurrently with the placement of your Order. You will not be able to cancel your Order once it has been processed.

The nature of the Content is such that it cannot be returned. In the event that after your Order you discover and promptly inform Nokia within 48 hours that (a) the Content you have ordered is faulty; (b) the Content Nokia delivers to you does not match the description of the Content you ordered via the Service; or (c) technical problems delayed or prevented delivery of your Content or accidental multiple orders caused by such technical problems, your sole and exclusive remedy with respect to such Content will be either replacement of such Content, or refund of the price paid for such Content, as determined solely by Nokia. Otherwise, no refunds are available. If you encounter any of the above issues, please contact Nokia Customer Support. Please note that Nokia may not be able to process your customer support request if you are unable to provide your transaction ID, which is provided to you by Nokia following your Order from the Service.

Nokia may only process refunds for Content where the total price is above the monetary limit stipulated in applicable local legislation. 12. Feedback to Nokia By submitting any ideas, feedback and/or proposals ("Feedback") to Nokia through the Service or other means, you acknowledge and agree that: (1) Nokia may have similar development ideas to the Feedback; (2) your Feedback does not contain confidential or proprietary information of you or any third party; (3) Nokia is not under any obligation of confidentiality with respect to the Feedback; (4) Nokia may freely use, distribute, exploit and further develop and modify Feedback for any purpose; and (5) you are not entitled to any compensation of any kind from Nokia.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>

13. *Social Activities and Location Sharing* You may use features in the Service to share your location, status, content, Materials or personal information or to interact with other users, sites and services. By using these features you agree that Nokia may use and provide that information to other services and persons with whom you choose to interact or share this information. Users of these services and persons, such as your contacts, may see your location, status and/or personal information. In using these features you agree not to share information, Content or Material or to link to any service or site that: (a) contains content or other 61 material that is illegal or inappropriate; or (b) exploits intellectual property rights without authorization or encourages users to piracy. Any interaction does not involve Nokia and is solely between you and the other user(s). 14.

Availability and Technical Requirements The availability of Content and the Service may vary and is subject to Nokia's sole discretion. Nokia expressly disclaims any representation or warranty that any particular Content or Service will be available. The Service may not be available in all countries and may be provided only in selected languages. The Service, operations and some features may also be dependent on the network, compatibility of the devices used and the content formats supported. To access the Service, you may need to download a specific piece of software developed by Nokia or by another party. Nokia may, in its sole discretion, change, correct or discontinue the Service in whole or in part. The Service may not be available during maintenance breaks and other times. To ensure you have the latest Nokia device software and applications, your device may automatically check for the availability of software updates from Nokia. If any are detected you will be prompted to approve the installation. You may disable automatic checking for updates through settings in your device.

You may also install software through available software update channels. If Nokia considers a Software update to be important or critical you may not continue using the previous version of the Software. Nokia may prevent your use of the previous version of the Software or Service until you install the update. Nokia may disable any Content or Software contained in your Service account for any reason and remove any Content or Software and/or disable copies of any application on your device in order to protect the Service, application providers, wireless carriers over whose network you access the service or any other affected or potentially affected parties. A particular service may be a pre-release version, for example a beta release, and may not work in the way a final version works.

Nokia may significantly change any version of Service or Software or decide not to release a final version. 15. *Links to Third Party Sites and Content* Nokia may include access to sites and services on the Internet or preloaded clients that enable you to interact with sites and services that are owned or operated by third parties and that are not part of the Service. You must review and agree to the terms and conditions of these sites or services before using these sites or services. Nokia has no control over the third party content, sites or services and assumes no responsibility for services provided or material created or published on these third- 62 party sites or services.

A link to a third-party site does not imply that Nokia endorses the site or the products or services referenced in the site. In addition, you and other users may create content and links to content within the Service that has not otherwise been submitted to the Service. Nokia is not responsible for this type of content or links. 16. *Advertisements* Service may include advertisements. Advertisements may be targeted to the content or information stored on the Service, queries made through the Service, or other information. 17. *Personal Data* The Privacy Policy and any additional privacy information made available to you govern the use of your personal data. 18. *Limitation of Liability* The Service is provided on "AS IS" and "AS AVAILABLE" basis.

Nokia does not warrant that the Service will be uninterrupted or error or virus-free. No warranty of any kind, either express or implied, including but not limited to warranties of title, non-infringement, merchantability, or fitness for a particular purpose, is made in relation to the availability, accuracy, reliability, information or content of the Service. You expressly agree and acknowledge that the use of the Service is at your sole risk and that you may be exposed to content from various sources. Except for liability for death or personal injury caused by its gross negligence or intentional misconduct, Nokia is not liable for any direct damages caused by your use or inability to use the Service. In no case will Nokia be liable for any indirect, incidental, punitive or consequential damages resulting from your use or inability to use the Service. 19. *Indemnification* You agree to defend and indemnify Nokia from and against all third party claims and all liabilities, assessments, losses, costs or damages resulting from or arising out of (i) your breach of the Terms, (ii) your infringement or violation of any intellectual property rights, other rights or privacy of a third party, or (iii) misuse of the Service by a third party where the misuse was made possible by your failure to take reasonable measures to protect your username and password against misuse. 20. *Miscellaneous* 20.1 *Choice of Law* The Terms are governed by the laws of Finland without regard to its conflicts of law provisions.

20.2 *Validity* 63 The Terms neither exclude nor limit any of your mandatory rights in your country of residence that cannot by law be waived. If a provision of the Terms is found to be invalid, the remaining provisions will not be affected and the invalid provision will be replaced with a valid provision that comes closest to the result and purpose of the Terms. In the event one or more provisions of these Terms are not relevant to your use of the Service, it shall not impact the validity or enforceability of any other provision of the Terms or the Terms as a whole. If there is any conflict between these Nokia Service Terms and the Privacy Policy, the provisions of these Nokia Service Terms prevail.

The provisions of the Terms that are intended to survive termination of your registration remain valid after termination. 20.3 *Changes in Terms* Nokia may modify the Terms at any time without prior notice. If the Terms are changed in a material, adverse way, Nokia will provide a separate notice advising of the change. You are responsible for regularly reviewing the Terms.

Your continued use of the Service constitutes your consent to any changes and modification. 21. *Intellectual Property* The Service, Content and Software are protected under international copyright laws. Nokia claims copyrights in its Service, Content, and Software to the maximum extent of the law.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)
<http://yourpdfguides.com/dref/5574840>

Subject to the Terms, Nokia retains all right, title and interest in the Service, its Content, the Software and in all other Nokia products, software and other properties provided to you or used by you through the Service. 22. Assignment Nokia may assign its rights and obligations under these Terms to its corporate parent, its subsidiaries, or to any company under common control with Nokia. Additionally, Nokia may assign its rights and obligations under these Terms to a third party in connection with a merger, acquisition, sale of assets, by operation of law or otherwise. WE CARE ABOUT YOUR PRIVACY Nokia is committed to protecting your privacy and to complying with applicable data protection and privacy laws. This Privacy Policy ("Policy") explains how we process personal data.

Throughout this Policy the term "personal data" means information relating to an identified or identifiable individual (i.e. a natural person). "Nokia" refers to Nokia Corporation, including its affiliates (also referred to as "we", "us", or "our"). This Policy applies for processing of your personal data where Nokia is the data controller or where we refer to the applicability of this Policy. We may provide additional privacy information in connection with our products and services through service descriptions 64 and other notices. Such information prevails over this Policy to the extent of any conflict. Third party services installed on your device may allow access to information available on your device. Our products or services may contain links to other companies' websites and services that have privacy policies of their own. We recommend that you read the privacy policies of such third party services.

Nokia is not responsible for the privacy practices or contents of any such third party services. By using this website and/or by submitting personal data to Nokia, you agree to the processing of your personal data as explained in this Policy. If you do not agree with this Policy, please do not use this website or provide Nokia with your personal data. What Data Do We Collect? We collect your personal data typically when you make a purchase, use or register into our products and services, take part in a campaign or otherwise interact with us. Below are examples of the categories of data we collect.

- Your use of our products and services When you use our products and services your IP-address, access times, the website you linked from, pages you visit, the links you use, the content you viewed and other such information your browser provides us with is automatically collected by Nokia. Some of our mobile services may collect your unique mobile device identifiers, subscriber identity information, network service provider specific identifiers, network settings and other such information. When you use our products and services or otherwise interact with us over telecommunications networks, certain additional information, such as your mobile subscription number, may be transmitted to us by your mobile network provider.
- Information you provide us with We may ask you to provide us with information such as your name, email address, street address, user names and passwords, your consents, preferences and feedback, information relating to your devices, age, gender, postal code and language preferences. Please note that certain non-identifiable information collected from you may become personally identifiable when you provide us with your personal data.

We may also obtain, in accordance with applicable law, some personal data from list-rental companies and other such publicly available sources. Some of our services may allow you to submit information about other people, for example, if you make an order for a product that you wish us to send directly to another recipient.

- Your transactions with us We collect information relating to your purchase and use of our products and services and your other interactions with us. Such information may include details of the queries or requests you have made, the products and services provided, delivery details, bank account number, credit card details, billing address, credit checks and other such financial information, details of agreements 65 between you and Nokia, records of contacts and communications, information and details relating to the content you have provided us with and other such transactional information.

We may, in accordance with applicable law, record your communication with our customer care or with other such contact points.

- Location data Nokia's location based services and features may use satellite, Wi-Fi or other network based location data, for example your IP-address. Assisted positioning methods of the device, for example Assisted GPS, provide you with faster and more accurate location data. Use of assisted positioning methods may involve exchanging your location data, wireless network identifiers along with your unique device or network service provider identifiers with a location server. Nokia processes this information anonymously. Depending on your positioning settings and your use of location services of other service providers your device may connect to other service providers' servers, which are not controlled or operated by Nokia.

We recommend you to check the privacy policies of such service providers to understand how they process your location data. You can modify the positioning settings of your device from the device settings, for example change or disable positioning methods or location servers or modify the accuracy of your location data. Nokia offers various location based services and features that may require the use of your location data. For example when you make a location based search, use location enhanced weather features or request for map data, your location data may be sent to Nokia to serve you with the right content. This may also include location based advertising. Some location based services may allow you to associate your personal data with your location. To learn more about available location based services and features, please refer to instructions and other support material for our products and services. Why

Do We Process Personal Data? Nokia may process your personal data for the following purposes. Please note that one or more purposes may apply simultaneously.

- Providing products and services We may use your personal data to provide you with our products and services, to process your order or as otherwise may be necessary to perform the contract between you and Nokia, to ensure the functionality and security of our products and services, to identify you as well as to prevent and investigate fraud and other misuses.

- Developing products and services We may use your personal data to develop our products and services. However, for the most part we only use aggregate and statistical information for such purposes. We may combine personal data collected in connection with your use of a particular Nokia product and/or service with other personal data we may hold about you, unless such personal data was collected for a different purpose.



[You're reading an excerpt. Click here to read official NOKIA 112 user guide](http://yourpdfguides.com/dref/5574840)

<http://yourpdfguides.com/dref/5574840>