



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 1280. You'll find the answers to all your questions on the NOKIA 1280 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 1280
User guide NOKIA 1280
Operating instructions NOKIA 1280
Instructions for use NOKIA 1280
Instruction manual NOKIA 1280

Nokia 1280 User Guide

Issue 2



[You're reading an excerpt. Click here to read official NOKIA 1280 user guide](http://yourpdfguides.com/dref/2737669)
<http://yourpdfguides.com/dref/2737669>

Manual abstract:

Read the complete user guide for further information. @@ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. @@SWITCH OFF IN RESTRICTED AREAS Follow any restrictions. @@QUALIFIED SERVICE Only qualified personnel may install or repair this product. ACCESSORIES AND BATTERIES Use only approved accessories and batteries. Do not connect incompatible products. WATER-RESISTANCE Your device is not water-resistant. Keep it dry.

4 Get started Get started Insert the SIM card and battery This phone is intended for use with the BL-5CB battery. Safe removal. 1 2 3 4 Place your finger in the recess at the bottom of the device, and carefully lift and open the back cover (1). Lift the battery, and remove it (2). Insert the SIM card (3). Ensure the contact surface area is facing down and the bevelled corner of the SIM card is facing the bottom of the device. Replace the battery (4) and back cover (5, 6, 7). Remove the SIM card Press the release spring (1), and slide out the SIM card (2). Charge the battery Your battery has been partially charged at the factory. If the device indicates a low charge, do the following: 1 2 Connect the charger to a wall outlet.

Connect the charger to the device. Get started 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet. 5 Tip: To save energy, unplug the charger when the battery is fully charged. You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. @@Switch on and off Press and hold the end key. Use the phone only in its normal operating position. Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life. 6 Your phone Your phone Keys and parts 1 2 3 4 5 6 7 8 9 10 11 12 13 Earpiece Display Selection keys Navi™ key (scroll key) Call key End/Power key Keypad Headset connector (3.

5mm) Flashlight Microphone Wrist strap eyelet Charger connector Loudspeaker Main features Select Menu and from the following: Messages Contacts Call register Create, send, and manage messages. Save names and phone numbers. Access missed, received, and dialled calls. Your phone Settings Clock Radio Set up various features of your device. Set the time for the alarm. Manage radio features. Manage reminders. Play or set up the games in your device. Access various applications. Use supported SIM card services.

7 Reminders Games Extras SIM services Calls To make a call, enter the phone number, including the country code and area code, if necessary, and press the call key. To answer a call, press the call key. To end or reject a call, press the end key. To use a loudspeaker or earpiece during a call, select Loudsp. or Hands.

. To adjust the volume during a call, scroll left or right. When the volume is high, do not hold the device near your ear. Write text To enter text, you can use traditional or predictive text input. Not all languages are supported by predictive text input.

Use traditional text input Press a key repeatedly until the desired letter is displayed. Activate predictive text input Select Options > Dictionary and the desired language. Deactivate predictive text input Select Options > Dictionary > Dictionary off. When using predictive text input, press each key once for a single letter. If the desired word is displayed, press 0, and start writing the next word. If ? is displayed after the word, the word is not in the dictionary. Change a word Press * repeatedly until the desired word is displayed. Add a word Select Spell, enter the word using traditional text input, and select OK. 8 Your phone Add a space Press 0. Change text input method Press # repeatedly, and check the indicator at the top of the display.

Add a number Press and hold the desired number key. Add a special character Press * when using traditional text input; press and hold * when using predictive text input. Undo clearing of a message Select Options > Undo clear. Message The message services can only be used if they are supported by your service provider. Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options take more space, and limit the number of characters that can be sent in a single message. Write and send a message 1 Select Menu > Messages > Create message. 2 Write the message.

The message length indicator shows how many characters you can enter in the message. 3 Select Options > Send, enter the recipient's phone number or select it from the contacts list, and select OK. Delete messages Select Menu > Messages > Delete messages > All read or the desired folder. Contacts You can save names and phone numbers in the phone and SIM card memory. The contacts list can contain up to 500 contacts, stored in the phone memory.

Search for a contact Scroll down in the standby mode, enter the first characters or letters of the name, and scroll to the desired contact. Save contacts to the contacts list Select Menu > Contacts > Add contact. Your phone Copy contacts between the phone and SIM card memory Select Menu > Contacts > Copy. 9 Multi-phonebook Your phone supports up to five separate phonebooks for multiple users. When the multiphonebook is activated, only the contacts in the active phonebook are visible.

A contact can belong to one or several phonebooks. The contacts in Shared cont. are accessible from all phonebooks. Select Menu > Contacts > Settings > Multi-Phonebook and the appropriate options. Activate the multi-phonebook Select Phonebook style > Multi-Phonebk.. Activate a phonebook Select Current phonebook and the desired phonebook or Shared cont.. Assign a contact to one or more phonebooks Select Manage contacts and the desired contact. Rename a phonebook Select Rename phonebooks and the desired phonebook.

FM Radio The FM radio depends on an antenna other than the wireless device antenna. A compatible headset needs to be attached to the device for the FM radio to function properly. You may need to purchase a compatible headset separately. To open the radio, select Menu > Radio. To adjust the volume of the radio, scroll left or right. You need at least one saved channel for the clock radio to function properly. Warning: Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Flashlight shortcuts in standby mode To switch on, scroll up twice. To switch off, scroll up once.

Do not shine the flashlight in anyone's eyes.



[You're reading an excerpt. Click here to read official NOKIA 1280 user guide](http://yourpdfguides.com/dref/2737669)
<http://yourpdfguides.com/dref/2737669>

10 Product and safety information Product and safety information General information About your device The wireless device described in this guide is approved for use on the EGSM 900 and 1800 MHz networks. Contact your service provider for more information about networks. Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred. Make back-up copies or keep a written record of all important information stored in your device. When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

The images in this guide may differ from your device display. Network services To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Network services involve transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can explain what charges will apply. Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons. Support When you want to learn more about how to use your product or you are unsure how your device should function, see the user guide or see the support pages at www.nokia.com/support or your local Nokia website, or with a mobile device, www.nokia.mobi/support. If this does not resolve your issue, do the following:

Restart the device: switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device. Restore the original factory settings as explained in the user guide. If the issue remains unsolved, contact Nokia for repair options. See www.nokia.com/repair. The battery intended for use with this device is BL-5CB. Nokia may make additional battery models available for this device. Safe removal. Proper charging. Avoid extreme temperatures. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Do not short-circuit. Accidental antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

Use chargers indoors. Check product environmental information and how to recycle your Nokia products at www.nokia.com/wecycle, or nokia.mobi/wecycle. The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco-Declarations at www.nokia.com/environment.

Additional safety information The surface of this device is nickel-free. Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children. Operating environment This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available.

Follow the separation distance instructions until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased. Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices.

Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should: Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Turn the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing aids Some digital wireless devices may interfere with some hearing aids. 14 Product and safety information Vehicles RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or death.



[You're reading an excerpt. Click here to read official NOKIA 1280 user guide](http://yourpdfguides.com/dref/2737669)
<http://yourpdfguides.com/dref/2737669>

Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders.

You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Emergency calls Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions.

If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device may attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed.

You should never rely solely on any wireless device for essential communications like medical emergencies. To make an emergency call: 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following: · · · 2 3 4 Insert a SIM card if your device uses one. Remove certain call restrictions you have activated in your device. Press the end key as many times as needed to clear the display and ready the device for calls. Press the call key. Change your profile from Offline or Flight profile to an active profile. Enter the official emergency number for your present location. @@@@Do not end the call until given permission to do so.

@@Your mobile device is a radio transmitter and receiver. @@These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed Product and safety information 15 to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.15 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

16 DECLARATION OF CONFORMITY Hereby, NOKIA CORPORATION declares that this RM-647 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/. © 2009 Nokia.

All rights reserved. Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT.

NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. /Issue 2 EN .



[You're reading an excerpt. Click here to read official NOKIA 1280 user guide](http://yourpdfguides.com/dref/2737669)
<http://yourpdfguides.com/dref/2737669>