



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 206. You'll find the answers to all your questions on the NOKIA 206 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 206
User guide NOKIA 206
Operating instructions NOKIA 206
Instructions for use NOKIA 206
Instruction manual NOKIA 206

Nokia 206 User Guide

Issue 1.1 EN



[You're reading an excerpt. Click here to read official NOKIA 206 user guide](http://yourpdfguides.com/dref/5574830)

<http://yourpdfguides.com/dref/5574830>

Manual abstract:

12 Loudspeaker 13 Antenna area. See 1 in "Feature-specific instructions". Tip: You can set a shortcut to the app you use the most. To use the shortcut, press and hold the * key. When you press and hold * for the first time, select what it opens. @@push the battery in. 2 5 If the battery is in the phone, lift it out. 3 Press the back cover down until it locks into place. @@the phone vibrates. @@back cover.

2 2 Push the card in, contact area face down, until it locks into place. 3 Connect the charger to the phone. See 4. 3 Press the back cover down until it locks into place. See 2.

9 Battery full? Unplug from the phone, then from the wall outlet. Lock the keys Explore your phone 1 Menu Lock the keys when not using your phone. 1 To see the features and apps in your phone, press Menu. 2 Select Select Menu, then press *. To go to an app or feature, press the scroll key up, down, left, or right. 3 2 Select To unlock, select Unlock, then press *. 10 To open the app or select the feature, press Select. Copy content from your old phone 4 Back To go back to the previous view, press Easily get your contacts, calendar, Back. and other stuff to your new phone. 5 1 Exit To go back to the home screen, press Switch Bluetooth on in both phones. . 2 Select Select Menu > Settings. 11 3 My shortcuts Sync & backup Connectivity Call Select Sync w. server Copy from dev. Create backup Restore backup Select 6 Enter passcode: Options OK Clear Select Sync & backup > Copy from dev.

. 4 Contacts Calendar Text messages Multimedia msg. Notes If asked, create a one-time passcode (such as 123), and select OK. 7 Does code match with code on other device? Done Yes Select what you want to copy, and select Done. 5 Nokia XX My laptop Check that the codes match on both phones. 8 Connect Select your old phone from the list of Follow the instructions shown on found devices. both phones. 12 Icons shown on your phone — You have unread messages. — You have unsent or failed messages. — The keys are locked. — The phone doesn't ring when somebody calls or sends a message. — An alarm is set. — Bluetooth is on. — All incoming calls are forwarded to another number. — A headset is connected to the phone.

The type of mobile network you're currently connected to may be shown with a single letter, a combination of letters, or a combination of letters and numbers. For example, , depending on your network service provider. The icons may vary depending on your region or network service provider. 13 Make or answer a call 3 987654321 calling Call your friend. See 13.

When your phone rings, press answer. See 14. to 1 123 456789 Type in the phone number, and press . 2 In call 123456789 To end the call, press . 14 Call the last dialled number 1 View your missed calls 1 1 missed call 09:00 View Go to Menu Names 123456789 On the home screen, press 123456789 987654321 Today, 08:29 . On the home screen, select View. See 5. 2 123456789 Today, 15:00 2 Today, 07:29 Select the number, and press . To call back, select the number, and press . Names Add new Log Synchronise all Select Select Tip: To view missed calls later, select Menu > Contacts > Log > Missed calls.

15 Change the volume Save a name and phone number Is the volume too loud during a call or Add new contacts to your phone. when listening to the radio? 1 1 Select Scroll up or down. Select Menu > Contacts. Names Add new Log Synchronise all Select 2 2 Better. Select Add new. 16 3 Number: 6 Jim Brown 987654321 OK Select Type in the phone number, then select OK. 4 Jim Brown Last name: To search for a contact, start writing the contact's name in the search box. 7 Jim Brown Call 987654321 Contact details View conversations Add detail Add image Delete contact Copy contact Select Call Brown Save Send message Send mail 987654321 Send message Send mail Options Write the first and last name, then select Save. 5 Names Add new Log Synchronise all Select Select Select Options > Contact details. Anna Dad Jim Brown Mum To edit details, select Names and a contact.

17 Make calls quickly 3 Phone number: Found: Mike 987654321 Mike Anna Dad Mum Search Select Call someone often? Set their number as a speed dial. 1 Select Search and a contact. 4 Found: Mike 9876543210 End call Select Select Menu > Contacts. To call, press and hold a number key on the home screen. 2 Groups Speed dials Settings Del. all contacts Select 2. (empty) 3. (empty) 4. (empty) 5. (empty) 6. (empty) Assign 2. (empty) 3. (empty) 4. (empty) 5. Mike 6. (empty) 7. (empty) Options Change Delete Call Select Select More > Speed dials and a free Tip: To change a speed dial, select slot, then select Assign. Options > Change. 18 Send a message 3 Hi Mi ke ! Hi Anna, how are you? Keep in touch with people through messages. See 7.

1 Write your message. Your message: Insert symbol Insert object Writing language More Hi Anna, how are you? Select Options Select Select Menu > Messaging. Create message Inbox Conversations Mail Select Tip: To add an attachment, select Options > Insert object. See 8, 9. 4 Your message: 2 Hi Anna, how are you? Contacts Mum Recently used Log Contact groups Number or mail Select 123 Image: Photo0001.jpg Send to Select Create message. To add a recipient, select Send to > Contacts. 19 Write text 5 Image: Photo0001.jpg Press a key repeatedly until the letter is shown. To type in a special character or a punctuation mark, press and hold *, and select the character.

To switch between character cases, press #. To use number mode, press and hold #, and select Number mode. To go back to letter mode, press and hold #. If you want to quickly type in a single number, just press and hold the number key. To switch predictive text on or off, select Options > Prediction, and select On or Off.

Not all languages are supported. To change the writing language, select Options > Writing language. To: Anna [123456789] Send Select Send. See 10, 9. 20 Check your voicemail 3 Mailbox number: 123456789 When you can't answer, you can forward calls to your voicemail.

1 When setting up voicemail, type in your voice mailbox number. Calling Voice mailbox End call Select Select Menu > Messaging. Tip: To quickly call your voicemail, press and hold 1 on the home screen. 2 Archive Msg. settings Voicemails Info messages Select Listen to voicemails Voice mailbox no. 123456789 Select Select More > Voicemails > Listen to voicemails. 21 Personalise your home screen 3 Wallpaper Photos Home screen OK Select You can change the wallpaper, and Select OK to open the folder, and rearrange items on the home screen. select a photo. 1 Menu Select Select Menu > Settings. Tip: You can also take a photo on your phone camera, and use that.

2 Themes Tones Wallpaper Set by theme Display Date and time Select Home screen Select Display, scroll to Wallpaper, and scroll to a folder.



[You're reading an excerpt. Click here to read official NOKIA 206 user guide](http://yourpdfguides.com/dref/5574830)
<http://yourpdfguides.com/dref/5574830>

22 Add shortcuts to your home screen 3 Notifications Menu Done Save changes? Yes Add shortcuts to your favourite apps Select Done > Yes. to your home screen. 1 Personalise view Home screen sett. Select Select Scroll to a shortcut, then select Options > Personalise view. 2 Clock Countdown timer General indicat. Notifications Radio and Media Shortcut bar Change Select Select a bar, then select an item, such as a widget. 23 Change your ringtone 3 Incom. call alert: Ringing Ringtone: Open Gallery Ringing volume: Select Set a different ringtone for each profile. 1 Scroll to Open Gallery, and select Select. 4 Graphics Tones Recordings Renbsp;> Mail or Menu > Messaging > Mail. 2 user@mymailbox.com Add account To add a recipient, select Add, or manually write the address. 5 To: Anna Subject: Message: Hi, how are you? Thanks Select Select a mail account. Write the subject and your message. 33 Set up chat in your phone Writing options Quick text Attach Save to Drafts Select Tip: To attach a file, select Options > Set up chat to keep in touch with your Attach. friends wherever you are. 6 Subject: Thanks 1 Photo0001.jpg Message: Hi, how are you? Send Select Select Send. Select Menu > Chat. Reply Delete Forward Next mail Previous mail Select 2 Chat Select Tip: To reply to a mail, open the mail, Select a service, and sign in. and select Options > Reply. 34 Chat with your friends 3 Hi Mike! mychat@chatserv1.com Collapse all Chat with More Select You can chat with your friends online Select Options > Chat with. while on the move. 1 4 Select mail domain: User ID: Chat with Editor options Send Select Select Menu > Chat. Select a chat service, write the username, and select Options > Send. 5 friend@chatserv1.com 2 Select account mychat@chatserv1.com funchat@chatserv2.

com Add new account Hello! Sign in Send Select a chat account, and sign in. Write your message in the text box, and select Send. See 6. 35 Send a photo using Bluetooth 6 mychat@chatserv1.com Conversations friend@chatserv1.com Open When you want to continue a conversation, select the thread. Send a photo you have taken to your PC. See 11. 1 Delete Share Use photo Edit photo Landscape mode Options Select Select the photo and Options > Share. 2 Message Via Bluetooth Select Select Via Bluetooth.

36 Share using Nokia Slam 3 Nokia XX My laptop Connect Select the device to connect to. If asked, type in the passcode. 4 Share your content easily with Nokia Slam. 1 The photo is sent to your PC. Switch Bluetooth on in both phones.

Your phone must not be hidden. 2 Delete Share Use photo Edit photo Landscape mode Options Select Select, for example, a photo to share, and Options > Share. 37 Restore original settings 3 Message Via Bluetooth Via Slam Select Select Via Slam. If your phone is not working properly, reset the settings. 1 0123456789 In call Options 4 Loudsp.

Move your phone close to the other phone. 5 End all calls and connections. 2 Select Nokia Slam searches for the nearest phone, and sends the item to it. 38 Select Menu > Settings. Update phone software using your phone 3 Configuration Security Nokia account Rest. fact. sett. Select Select Settings only All Select Rest. fact. sett.

> Settings only. 4 Security code: You can update your phone software wirelessly. You can also set your phone to automatically check for updates. Select Menu > Settings and Phone > Device updates. 1. To check if there is an update, select Downl. phone sw. 2. To download and install an update, select Downl. phone sw, and follow the instructions shown on the phone.

OK Type in the security code, then select The update may take several minutes. OK. If you encounter problems, contact your network service provider. 5 Check for updates automatically Restore complete OK Select Auto sw update, and set how often to check. Your network service provider may Your phone switches off and on again.

send updates over the air directly to This may take longer than usual. See your phone. For more info on this 12. 39 Back up content to a memory card network service, contact your network service provider. Settings Messages Contacts Bookmarks Calendar Gallery files Apps and games Done Want to make sure you won't lose any important files? You can back up your phone memory to a compatible memory card.

Select Menu > Settings > Sync & backup. 1. Select Create backup. 2. Select what you want to back up, then select Done. Restore a backup Select Restore backup. 40 Access codes PIN or PIN2 code (4-8 digits) These protect your SIM against unauthorised use or are required to access some features. You can set your phone to ask for the PIN code when you switch it on. If not supplied with your card or you forget the codes, contact your service provider. If you type in the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code.

PUK or PUK2 code These are required to unblock a PIN or PIN2 code. (8 digits) IMEI number (15 digits) If not supplied with your SIM, contact your service provider. This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. You may also need to give the number to Nokia Care services. To view your IMEI number, dial *#06#. Lock code (security code) (min. 5 digits) This helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define. The default lock code is 12345.

Keep the code secret and in a safe place, separate from your phone. 41 If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted. For more information, contact Nokia Care or your phone dealer. 42 Support When you want to learn more about how to use your phone, or if you're unsure how your phone should work, read the user guide thoroughly.

If you have an issue, do the following: • Reboot your phone. Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone. • Update your phone software • Restore the original factory settings If your issue remains unsolved, contact your network service provider or Nokia for repair options. Before sending your phone for repair, always back up your data, as all personal data in your phone may be deleted.

43 General information Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide.

SWITCH OFF IN RESTRICTED AREAS Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving.



[You're reading an excerpt. Click here to read official NOKIA 206 user guide](http://yourpdfguides.com/dref/5574830)

<http://yourpdfguides.com/dref/5574830>

Your first consideration while driving should be road safety. **INTERFERENCE** All wireless devices may be susceptible to interference, which could affect performance. **QUALIFIED SERVICE** Only qualified personnel may install or repair this product.

BATTERIES, CHARGERS, AND OTHER ACCESSORIES Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products. **KEEP YOUR DEVICE DRY** Your device is not water-resistant. Keep it dry. **PROTECT YOUR HEARING** To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use. Product and safety information Feature-specific instructions The images in this guide may differ from your device screen. To turn off notifications from apps to avoid data transfer costs, go to Menu > Apps > My apps > Notifications > Options > Settings. 1 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

2 Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card. 44 3 Important: This device is designed to be used with a standard SIM card (see figure) only.

Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout. 8 If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size. 9 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices.

10 Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your network service provider. 11 Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth function off when you are not using it. 12 Restoring settings does not affect documents or files stored on your phone. @@@@To make a call, activate another profile. @@@@@@@@Longer messages are sent as two or more messages. Your service provider may charge accordingly. @@@@Do not connect any voltage source to the audio connector.

@@@@The messages contain tips and tricks and support. @@@@@@@@@@@@@@@@@@You may also need to subscribe to some features. @@The following suggestions help you keep your device in operation. • Keep the device dry. @@@@• Do not use or store the device in dusty or dirty areas. • Do not store the device in high temperatures. High temperatures may damage the device or battery. • Do not store the device in cold temperatures. @@@@@@• Do not drop, knock, or shake the device. Rough handling can break it.

• Only use a soft, clean, dry cloth to clean the surface of the device. • Do not paint the device. Paint can prevent proper operation. • Switch off the device and remove the battery from time to time for optimum performance. 46 • Keep your device away from magnets or magnetic fields.

• To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info. Recycle Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check how to recycle your Nokia products at www.nokia.com/recycling. For more info on recycling, see "Mobile Phone Recycling Explained in 2 Minutes" <http://www.youtube.com/watch?v=jD5yLicr6Js>

Crossed-out wheeled-bin symbol About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. With this device you can access content protected with OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRMprotected content be revoked. Revocation may also prevent renewal of such DRMprotected content already in your device.

Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRMprotected content. Batteries and chargers Battery and charger info Use your device only with an original BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Charge your device with: AC-11 charger. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. This requirement applies in the European Union and Turkey. Do not dispose of these products as unsorted municipal waste. For more environmental info, see the product Eco profile at www.nokia.com/ecoprofile. 47 noticeably shorter than normal, replace the battery. Battery safety Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it.

Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object. Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.



[You're reading an excerpt. Click here to read official NOKIA 206 user guide](http://yourpdfguides.com/dref/5574830)
<http://yourpdfguides.com/dref/5574830>

Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Make an emergency call 1. Make sure the device is switched on. 2. Check for adequate signal strength.

You may also need to do the following: • Put a SIM card in the device. • Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group. • Make sure the flight profile is not activated. 3. Press the end key repeatedly, until the home screen is shown. 4. Type in the official emergency number for your present location. Emergency call numbers vary by location. 5. Press the call key. 6. Give the necessary info as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to 48 make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies. Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy. Implanted medical devices To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should: • Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. • Not carry the wireless device in a breast pocket. • Hold the wireless device to the ear opposite the medical device. • Switch the wireless device off if there is any reason to suspect that interference is taking place. • Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel The surface of this device is nickel-free.

Protect your device from harmful content Your device may be exposed to viruses and other harmful content. Take the following precautions: • Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. • Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.

• Only install and use services and software from sources that you trust and that offer adequate security and protection. • Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a 49 time. Using more may affect performance and operation of the device and/or computer. • If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. The sending of data files or messages requires a quality network connection and may be delayed until such a connection is available.

Follow the separation distance instructions until the sending is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death.

Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. @@@@ That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.

93 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com. DECLARATION OF CONFORMITY be found at <http://www.nokia.com/global/declaration/declaration-of-conformity>. © 2012 Nokia.

All rights reserved. Nokia, and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.



[You're reading an excerpt. Click here to read official NOKIA 206 user guide](http://yourpdfguides.com/dref/5574830)

<http://yourpdfguides.com/dref/5574830>

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. Hereby, NOKIA CORPORATION declares that this RM-873 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can Oracle and Java are registered trademarks of Oracle and/or its affiliates.

51 The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com>. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is".

Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, apps, and services may vary by region. For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. The availability of Nokia services may vary by region.

Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge. 52 .



[You're reading an excerpt. Click here to read official NOKIA 206 user guide](#)

<http://yourpdfguides.com/dref/5574830>