



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 2320 CLASSIC. You'll find the answers to all your questions on the NOKIA 2320 CLASSIC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 2320 CLASSIC
User guide NOKIA 2320 CLASSIC
Operating instructions NOKIA 2320 CLASSIC
Instructions for use NOKIA 2320 CLASSIC
Instruction manual NOKIA 2320 CLASSIC

Nokia 2320 User Guide

Issue 1.0



[You're reading an excerpt. Click here to read official NOKIA 2320 CLASSIC user guide](http://yourpdfguides.com/dref/4210957)
<http://yourpdfguides.com/dref/4210957>

Manual abstract:

@@@ This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details, and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials.

Nokia does not provide any warranty for the third-party applications. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account.

However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

Export controls This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. **FCC/INDUSTRY CANADA NOTICE** Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment. Not following them may be dangerous or illegal. Read the complete user guide for further information.

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. All wireless devices may be susceptible to interference, which could affect performance. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas. Only qualified personnel may install or repair this product. Your device is not water-resistant. The wireless device RM-515, described in this guide is approved for use on the GSM 850 and 1900 wireless networks. Contact your service provider for more information about networks. When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred. Your device may have preinstalled bookmarks and links for third-party internet sites. You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you access such sites, you should take precautions for security or content.

Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger. When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred. When connecting to any other device, read its user guide for detailed safety instructions.

To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Check with your service provider for details about fees in your home network and when roaming in other networks. Your service provider can explain what charges will apply. Some networks may have limitations that affect how you can use some features of this device requiring network support such as support for specific technologies like WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols and language-dependent characters. Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons. The following features in this device may share memory: tones, graphics, contacts, text messages, multimedia, and instant messages, e-mail, calendar, To-Do Notes, Java™ games, applications, and the Notes application.

Use of one or more of these features may reduce the memory available for the remaining features. If your device displays a message that the memory is full, delete some of the information or entries stored in the shared memory. The security code helps to protect your phone against unauthorized use. You can create and change the code, and set the phone to request the code. Keep the code secret and in a safe place separate from your phone. If you forget the code and your phone is locked, your phone will require service and additional charges may apply.



[You're reading an excerpt. Click here to read official NOKIA 2320](#)

[CLASSIC user guide](#)

<http://yourpdfguides.com/dref/4210957>

For more information, contact a Nokia Care point or your phone dealer. The PIN code supplied with the SIM card protects the card against unauthorized use. The PIN2 code supplied with some SIM cards is required to access certain If you enter the PIN or PIN2 code incorrectly three times in succession, you are asked for the PUK or PUK2 code. If you do not have them, contact your service provider.

The module PIN is required to access the information in the security module of your SIM card. the signing PIN may be required for the digital signature. The restrictions password is required when using the call restriction service. To set how your phone uses the access codes and security settings, select Menu > Settings > Security. Check the model number of any charger before use with this device.

This device is intended for use when supplied with power from the AC-3U charger. Warning: Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. for availability of approved accessories, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Always switch the device off and disconnect the charger before removing the battery. This device is intended for use with BL-5C battery. The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card. Press the release button (1), and remove the back cover (2). Open the SIM card holder, and insert the SIM card into the holder with the gold-colored contact surface facing down (4). Close the SIM card holder. Your battery has been precharged, but the charging levels may vary. When the battery indicates a full charge, disconnect the charger from the device, then from the wall outlet. You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause the device to operate at a higher power level than otherwise needed and may reduce the battery life. Keys and parts Note: Avoid touching this connector as it is intended for use by authorized service personnel only. 5 seconds to lock or unlock the keypad. to set the automatic keyguard on with a time delay, select Menu > Settings > Phone settings > Automatic keyguard. To answer a call when the keyguard is on, press the call key or open the phone. When you end or reject the call, the keypad automatically locks. When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device. The security keyguard requires a 5 to 10 digit code to protect against unauthorized use.

to change the code and activate the security keyguard, select Menu > Settings > Phone settings > Security keyguard. When the security keyguard is activated, enter the security code if requested. Functions without a SIM card Several functions of your phone may be used without installing a SIM card (for example, the data transfer with a compatible PC or another compatible device). Without a SIM card, some functions appear dimmed in the menus and cannot be used.

For an emergency call, some networks may require that a valid SIM card is properly inserted in the device.

You can refill your account using your phone: 1. From the standby mode, press the left scroll key, or select Options > Refill and press Select. Follow the on screen instructions to refill your account. You need your account passcode to access the options under the My Profile link and to refill with a credit or debit card. In order to refill with a credit or debit card from your phone, you must first call 611 and complete a credit/debit card refill to set up your payment card.

Make a voice call 1. Enter the phone number, including the area code. For international calls, press * twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number. 2. To call the number, press the call key. To increase the volume in a call, press the volume up key and to decrease press the volume down key. 3. To end the call or to cancel the call attempt, press the end key. To search for a name or phone number that you have saved in Address book, see "Find a contact" on page 32. Press the call key to call the number.

To access the list of dialed numbers, press the call key once in the standby mode. To call the number, select a number or name, and press the call key. Assign a phone number to one of the speed-dialing keys, 2-9. see "Speed dial list" on page 33. Call the number in either of the following ways: Â· Press a speed-dialing key, then the call key. â· If Speed dialing is set to On, press and hold a speed-dialing key uimit the device may make it smaller so that it can be sent by MMS. important: Exercise caution when opening messages. Email messages may contain malicious software or otherwise be harmful to your device or PC. To add recipients, scroll to the To: field, and enter the recipient's number or email address, or select Add to select recipients from the available options. For more information, contact your service provider.

Messages may contain malicious software or otherwise be harmful to your device or PC. You receive a notification when you receive a message. select View to display the message. If more than one message was received, to display a message, select the message from the Inbox folder and select Open. To create an answer message, select Reply.

Note: The message sent icon or text on your device screen does not indicate that the message is received at the intended destination. If the message sending is interrupted, the device tries to resend the message a few times. SIM card messages are text messages that are saved to your SIM card. You can copy or move those messages to the device memory, but not vice versa. Received messages are saved to the device memory.

To read SIM card messages, select Menu > Messaging > Options > SIM Card messages. Your device allows you to send and receive instant messages with friends and family, regardless of the mobile system or platform (like the internet) they are using, as long as everyone is using the same IM service. Before you can start using IM, register with the IM service you want to use and obtain a unique ID and password. select Menu > Messaging > IM and the service you want to log into. Note: Depending on your IM service provider, you may not have access to all of the features described in this guide and menus may be different.



[You're reading an excerpt. Click here to read official NOKIA 2320](http://yourpdfguides.com/dref/4210957)

[CLASSIC user guide](http://yourpdfguides.com/dref/4210957)

<http://yourpdfguides.com/dref/4210957>

To check the availability and costs and to subscribe to the IM service, contact your wireless service provider and the IM service provider from whom you receive your unique ID, password, and settings. While you are logged in and connected to the IM service, you can exit the IM application and use the other functions of the device, and the IM session and conversations remain active in the background. You can register over the internet with the IM service provider you have selected to use. During the registration process, you create a unique ID and password. Information about signing up for IM services, contact your wireless service provider or an IM service provider.

If you subscribe to voice mail (network service), you can access the service through a voice mail number supplied by your service provider. The number may appear in your contact list during the activation process. If not, you need to save this number to your device to use voice mail. When you receive a voice message, a tone sounds, a notification is displayed, or both. If you receive more than one message, your device displays the number of messages received. To call your voice mailbox, in the standby mode, press and hold 1, or select Menu > Messaging > Voice mail > Listen to voice mails. To enter, find, or edit your voice mailbox number, select Voice mailbox number. Use the service commands editor to enter and send service requests (also known as USSD commands) to your service provider. For information about specific service commands, contact your service provider. Select Menu > Messaging > Message settings and from the following: General settings -- to save copies of sent messages in your device, to overwrite old messages if the message memory becomes full, and to set up other preferences related to messages.

Text-- to allow delivery reports, to set up message centers for SMS, to select the type of character support, and to set up other preferences related to text messages. Multimedia -- to allow delivery reports, to set up the appearance of multimedia messages, to allow the reception of multimedia messages and advertisements, and to set up other preferences related to multimedia. The device logs the phone numbers of identified missed, received, and dialed calls, and the approximate length of your calls. The device registers missed and received calls only if the network supports these functions and the device is switched on and within the network's service area. To view the information on your calls, select Menu > Recent Calls > All calls > Missed calls, Calls received, or Calls made.

To view your recent missed and received calls and the calls made chronologically, select All calls. To view the contacts to whom you most recently sent messages, select Message recipients. To view the approximate information on your recent communications, select Menu > Recent Calls and from the available options. To view how many text and multimedia messages you have sent and received, select Menu > Recent Calls > Message log. Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so on.

Note: Some timers may be reset during service or software upgrades. You can access various mobile internet services with your device browser. Important: Use only services that you trust and that offer adequate security and protection against harmful software. Check the availability of these services, pricing, and instructions with your service provider. With the device browser you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. appearance may vary due to screen size. You may not be able to view all details of the internet pages. Ensure that the correct configuration settings of the service are activated. Only the configurations that support browsing service are shown. Make a connection to the service in one of the following ways: Â· select Menu > MEdia Net.

In the standby mode, press and hold 0, or press the MEdia Net key under the left selection key. To enter the address of the service, select Menu > MEdia Net > Go to. Enter the address of the service, and select OK. The MEdia Mall provides links to a variety of content such as tones, games, graphics, multimedia, and applications that may be purchased and downloaded to your device. For information about billing or about accessing this website, please contact your service provider. These files are stored in the device memory and may be arranged in folders. Your device software includes some games. To set sounds, lights, and shakes for the game, select Menu > Games & Apps. Your device software includes some Java applications. Update version -- to check if a new version of the application is available for download from web (network service) MEdia net page-- to provide further information or additional data for the application from an internet page (network service), if available App.

Make sure that the application is compatible with your device before downloading it. Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software. You can download new Java applications and games. For the availability of different services and pricing, contact your service provider. Your device may have preinstalled bookmarks and links for third-party internet sites.

You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you choose to access such sites, you should take precautions for security or content. In this menu, you can manage graphics, images, recordings, and tones, which are files arranged in folders. This menu also includes multimedia and entertainment features available in the phone, and features that assist you in organizing daily tasks.

Your phone supports an activation key system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee. To manage images, video clips, music files, themes, graphics, tones, audio, and received files. You can use folders to organize the files. The files stored in tones and graphics use the memory capacity of the phone. Scroll to the file you want to view, and select Open. You can record pieces of speech, sound, or an active call. Use this to record notes or phone numbers to enter later. To start recording during a call, select Options > Record. While recording a call, all parties to the call hear a faint beeping sound.

When recording a call, hold the phone in the normal position near to your ear. Your Nokia mobile phone has many useful features for organizing your everyday life. The following features are found in tools: alarm clock, calendar, to-do list, notes, calculator, countdown timer, and stopwatch.



[You're reading an excerpt. Click here to read official NOKIA 2320](http://yourpdfguides.com/dref/4210957)

[CLASSIC user guide](http://yourpdfguides.com/dref/4210957)

<http://yourpdfguides.com/dref/4210957>

The alarm clock works even when the phone is turned off if there is enough power in the battery. To set the phone to alert you on selected days of the week, select Repeat alarm. To set a snooze time-out, select Snooze time-out and the time you want. After making changes to the alarm settings, scroll to the bottom of the menu and select Save. If you let the phone continue to sound the alarm for a minute or select Snooze, the alarm stops for the selected snooze time-out and then resumes. If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone.

@@@Select No to switch off the device or Yes to make and receive calls.

@@@The current day is indicated by a frame in the month view. If there are any notes set for the day, the day is in bold type. To view the day notes, select View. To view a week, select Options > Week view. @@@ select Settings, to set the date and time.

@Anniversary entries are repeated every year. To-do entries help you to keep a list of tasks that you need to do. @@@@ to stop the alarm press any key. @@@@During timing, the other functions of the device can be used. To set the stopwatch timing in the background, press the end key.

@@@Names and numbers saved in the SIM card memory, are indicated with . @@@Select Menu > Address Book > Names, and scroll through the list of contacts, or enter the first letter of the name you are trying to find. Copy or move contacts To copy a name and phone number from the device memory to the SIM card memory, or vice versa, select Menu > Address Book > Names > Options > Copy contact. To move all contacts from the SIM card to device memory, or vice versa, select Menu > Address Book > Move contacts or Copy contacts. To copy more than one contact, but not all contacts, select Menu > Address Book > Names > Options > Mark. Scroll and mark the contacts you want to move, and select Move marked or Copy marked. You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card. To send a business card, find the contact whose information you want to send, and select Details > Options > Send business card > Via multimedia, Via text message, or Via Bluetooth. When you have received a business card, select Show > Save. Select Menu > Address Book > Settings and one of the following: Memory in use -- to select the SIM card or device memory for your contacts.

Select Phone and SIM to recall names and number from both memories. In that case, when you save names and numbers, they are saved in the device memory. Address Book view -- to select how the names and numbers in Address Book are displayed Name display -- to select whether the contact's first or last name is displayed first Font size -- to set the font size for the list of contacts Check memory -- to view the free and used memory capacity Select Menu > Address Book > Groups to arrange the names and phone numbers into caller groups with different ringing tones and group images. To assign a number to a speed dialing key, select Menu > Address Book > Speed dial list, and scroll to the speed-dialing number that you want. Select Assign or, if a number has already been assigned to the key, select Options > Change. select Find and the contact you want to assign. If the speed dialing function is off, the device asks whether you want to activate it. To make a call using speed dialing, see "Speed dialing" on page 14. Your device has various settings groups called profiles, for which you can customize the device tones for different events and environments. select Menu > Settings > Set profile, and the desired profile and from the following: Activate -- to activate the selected profile Customize-- to customize the profile.

Select the setting you want to change, and make the changes. Timed -- to set the profile to be active until a certain time up to 24 hours, and set the end time. When the time set for the profile expires, the previous profile that was not timed becomes active. To set the device to ring only for calls from phone numbers that belong to a selected caller group, select Alert for. Scroll to the caller group you want or All calls, and select Mark.

For information on how to create a caller group, see "Groups" on page 33. Select Options > Save to save the settings or Cancel to leave the settings unchanged. If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds. Select Menu > Settings > Display and from the following: Wallpaper -- to add the background image in the standby mode Standby mode font color -- to select the color for the texts in the home screen mode Notif. details-- to display contact information in missed calls and messages received.

Font size -- to set the font size for messaging, contacts and web pages Operator logo -- to set your device to display or hide the operator logo When traveling to a different time zone, select Menu > Settings > Set time/date > Date and time settings > Time zone and the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT) or Universal Time Coordinated (UTC). The time and date are set according to the time zone and enable your device to display the correct sending time of received text or multimedia messages. For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich/London (UK). With personal shortcuts you get quick access to often used functions of the device. Left selection key to select a function from the list, select Menu > Settings > My shortcuts > Left selection key. In the home screen mode, select Options > Go to and from the following: Select options -- to add a function to the shortcut list or to remove one Organize -- to rearrange the functions on your personal shortcut list To assign other device functions from a predefined list to the navigation key (scroll key), select Menu > Settings > My shortcuts > Navigation key. General packet radio service (GPRS) or 3G are network services that allow mobile phones to send and receive data over an internet protocol (IP)-based network. To define how to use the service, select Menu > Settings > Connectivity > Packet data > Packet data conn. And from the following options: When needed -- to set the packet data connection to established when an application needs it. the connection is closed when the application is terminated.

Always online -- to set the phone to automatically connect to a packet data network when you switch the phone on. Select Menu > Settings > Call settings and from the following options: Call forwarding -- to forward your incoming calls (network service). You may not be able to forward your calls if some call restriction functions are active. see Call restrictions in "Security" on page 40.



[You're reading an excerpt. Click here to read official NOKIA 2320 CLASSIC user guide](http://yourpdfguides.com/dref/4210957)
<http://yourpdfguides.com/dref/4210957>

Anykey answer > On -- to answer an incoming call by briefly pressing any key, except the power key or the left and right selection keys Automatic redial > On -- to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt Speed dialing > On -- to dial the names and phone numbers assigned to the speeddialing keys 2 - 9. To use, press and hold the corresponding number key Call waiting > Activate -- to see a notification for an incoming call while you have a call in progress (network service). Call duration display> On -- to display a counter during each call Summary after call > On -- to briefly display the approximate duration and cost (network service) of the call after each call Send my caller ID > Yes -- to show your phone number to the person you are calling (network service). To use the setting agreed upon with your service provider, select Set by network. Select Menu > Settings > Phone settings and from the following: Language settings -- to set the display language of your device, select Phone language. automatic selects the language according to the information on the SIM card.

Check memory -- to view the amount of used and available device memory Automatic keyguard -- to set the keypad of your device to lock automatically after a preset time delay when the device is in the standby mode and no function of the device has been used. select On , and set the time. Security keyguard -- to set the device to ask for the security code when you unlock the keyguard. Enter the security code, and select On. Help text activation -- to select whether the device shows help texts Start-up tone > On -- the device plays a tone when switched on Switch off tone > On -- the device plays a tone when switched off This menu or the following options are displayed only if the device is or has been connected to a compatible mobile enhancement.

Select an enhancement, and from corresponding options: Default profile -- to select the profile that you want to be automatically activated when you connect to the selected enhancement Charger > Lights--to set the lights permanently on. Select Automatic to set the lights on for 15 seconds after a keypress. You can configure your device with settings required for certain services to function correctly. Your service provider may also send you these settings. Select Menu > Settings > Configuration and from the following: Default configuration settings-- to view the service providers saved in the device.

to set the configuration settings of the service provider as default settings , select Options > Set as default. Activate default in all applications-- to activate the default configuration settings for supported applications Preferred access point-- to view the saved access points. scroll to an access point , and select Options > Details to view the name of the service provider , data bearer , and packet data access point or GSM dial-up number. Connect to service provider support -- to download the configuration settings from your service provider Device manager settings -- to select when to allow service software updates Personal configuration settings -- to add new personal accounts for various services manually, and to activate or delete them. To add a new personal account if you have not added any, select Add new; otherwise, select Options > Add new. When security features that restrict calls are in use (such as call restriction and fixed dialing) calls still may be possible to the official emergency number programmed into your device. Select Menu > Settings > Security and from the following: PIN code request -- to set the device to ask for your PIN code every time the device is switched on. Some SIM cards do not allow the code request to be switched off. PIN2 code request -- to select whether the PIN2 code is required when using a specific device feature which is protected by the PIN2 code. Some SIM cards do not allow the code request to be switched off.

Call restrictions -- to restrict incoming calls to and outgoing calls from your device (network service). a restriction password is required. Fixed dialing -- to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card. When the fixed dialing is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message center number must be included in the fixed dialing list. Security level > Phone -- to set the device to ask for the security code whenever a new SIM card is inserted into the device. If you select Memory, the device asks for the security code when the SIM card memory is selected, and you want to change the memory in use. Access codes -- to change the security code, PIN code, or PIN2 code Code in use -- to activate the PIN code requirement Authority certificates -- to view the list of the authority certificates downloaded into your device. User certificates -- to view the list of the user certificates downloaded into your device. Security module settings-- to view Security module details, select Module PIN request, or change the module PIN and signing PIN.

To reset some of the menu settings to their original values, select Menu > Settings > Reset device. Select Restore settings only to prevent personal data from being deleted or Restore all. Enter 1234, 12345, or create a security code if the device prompts you to create one. The names and device numbers saved in the address book, are not deleted. The battery intended for use with this device is BL-5C.

Nokia may make additional battery models available for this device. This device is intended for use when supplied with power from the following chargers: AC-3U. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

Use only replacement batteries qualified with the device per the IEEE 1725-2006 standard. Use of other batteries or chargers may present a risk of fire, explosion, leakage, or other hazard. Use of other batteries or chargers may present a risk of fire, explosion, leakage, or other hazard. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made. safe removal. Always switch the device off and disconnect the charger before removing the battery. Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime.



[You're reading an excerpt. Click here to read official NOKIA 2320](http://yourpdfguides.com/dref/4210957)

[CLASSIC user guide](http://yourpdfguides.com/dref/4210957)

<http://yourpdfguides.com/dref/4210957>

If left unused, a fully charged battery will lose its charge over time.

avoid extreme temperatures. Always try to keep the battery between 15Å°C and 25Å°C (59Å°F and 77Å°F). extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Do not dispose of batteries in a fire as they may explode. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. This happens, flush the affected areas immediately with water, or seek medical help.

Do not modify or remanufacture, attempt to insert foreign objects into the battery or immerse or expose it to water or other liquids. correct use. Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children. Always use original Nokia batteries for your safety. To help ensure that you are getting an original Nokia battery, purchase it from a Nokia authorized service centre or dealer, and inspect the hologram label using the following steps: Authenticate hologram 1.

When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle. Taking care of your device When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively. If cannot confirm authenticity or if you have any reason to believe that your Nokia battery with the hologram on the label is not an authentic

Nokia battery, you should refrain from using it, and take it to the nearest Nokia authorized service centre or dealer for assistance. [For all areas other than LTA and NAM use instead:] To find out more about original Nokia batteries, see www. Taking care of your device Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it. Taking care of your device Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

â· Do not store the device in high or cold temperatures. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. When the device warms to its normal temperature from a cold temperature, moisture can form inside the device and damage electronic circuit boards. â· Do not attempt to open the device other than as instructed in this guide. â· Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics. â· Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device. Paint can clog the moving parts and prevent proper operation. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

Backup all data you want to keep, such as contacts and calendar notes. â· To reset the device from time to time for optimum performance, power off the device and remove the battery. These suggestions apply equally to your device, battery, charger, or any accessory. Recycle The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. this requirement applies in the European Union.

Do not dispose of these products as unsorted municipal waste. Your device and its accessories may contain small parts. Keep them out of the reach of small children. This device meets RF exposure guidelines in the normal use position at the ear or at least 2. 2 centimeters (7/8 inches) away from the body. Any carry case, belt clip, or holder is used for body-worn operation should not contain metal and should position the device the above-stated distance from your body. to send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed. Operation of any radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy. 3 centimeters (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. persons who have such devices should: Å· Always keep the wireless device more than 15. 3 centimeters (6 inch) from the medical device.

Hold the wireless device to the ear opposite the medical device. â· Turn the wireless device off if there is any reason to suspect that interference is taking place. â· Follow the manufactures directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Some digital wireless devices may interfere with some hearing aids. RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. check regularly that all wireless device equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.



[You're reading an excerpt. Click here to read official NOKIA 2320 CLASSIC user guide](http://yourpdfguides.com/dref/4210957)
<http://yourpdfguides.com/dref/4210957>

Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

Switch off your device in any area with a potentially explosive atmosphere. Switch off the device at refuelling points such as near gas pumps at service stations. @@@@If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device may attempt to make emergency Calls over both the cellular networks and through your internet call provider if both are activated. connections in all conditions cannot be guaranteed.

You should never rely solely on any wireless device for essential communications like medical emergencies. To make an emergency call: Depending on your device, you may also need to complete the following: 1. Insert a SIM card if your device uses one. 2. Remove certain call restrictions you have activated in your device. 3. Change your profile from Offline or Flight profile to an active profile. 4. Press the end key as many times as needed to clear the display and ready the device for calls. 5. Enter the official emergency number for your present location. When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident.

Do not end the call until given permission to do so. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.96W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. The highest SAR value reported under this standard during product certification for use at the ear is 1.47W/kg and when properly worn on the body is 0. Enhancements 38 enter multimedia message 18 enter text 15 Calculator 30 calendar 28 call counters 22 functions 13 settings 37 timers 22 voice mail 21 calls 13 calls made 22 calls received 22 character case 15 charge the battery 10 charger lights 39 clock settings 35 Factory settings 41 folders outbox 19 font size 35 Keyguard 12 keypad lock 12 keys 12 Names 31 navigation 14 navigation key 36 note alarm 29 note creation 29 notes 30 Language options 18 language settings 38 Phone configuration 39 settings 38 phone lock. MEdia Mail 24 MEdia Net 23 memory capacity 26 SIM 31 status 33 memory in use 33 menu 14 message center number 17 message length indicator 18 message settings 21 messages multimedia 18 read and reply 19 sending 19 SIM 20 text 17 missed calls 22 multimedia messages 18 My Account 13 My Profile 13 Received calls 22 record a call 27 refill your account 13 ringing tones 35 Save names 32 security settings 40 send multimedia message 18 service commands 21 services 23 set profiles 34 settings Call 37 clock 35 configuration 39 connectivity 37 contacts 33 date 35 display 35 enhancements 38 messages 21 my shortcuts 36 phone 38 profiles 34 restore factory settings 41 security 40 themes 34 time 35 tones 35 wallpaper 35 shortcuts 36 SIM card 12 card installation 9 speed dial list 33 speed dialing 14 standby mode 36 stopwatch 31 Voice mail 21 voice recorder 27.



[You're reading an excerpt. Click here to read official NOKIA 2320 CLASSIC user guide](http://yourpdfguides.com/dref/4210957)
<http://yourpdfguides.com/dref/4210957>