



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 515. You'll find the answers to all your questions on the NOKIA 515 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 515
User guide NOKIA 515
Operating instructions NOKIA 515
Instructions for use NOKIA 515
Instruction manual NOKIA 515

User Guide
Nokia 515

NOKIA

Issue 2.0 EN



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>

Manual abstract:

2 User Guide Nokia 515 Psst... Safety Get started Keys and parts Insert a SIM card and battery Insert a memory card Charge the battery Copy content from your old phone Basics Explore your phone Display indicators Prolong battery life Personalise your home screen Change your ringtone Set a song as your ringtone Nokia Store Write text People & messaging Make or answer a call Save a name and phone number Add social info to contacts Send a message Check your voice mail Mail for Exchange Set up your mail account Send a mail Get social Camera Take a photo Take a self-portrait © 2014 Nokia. All rights reserved. Contents 2 4 5 5 5 7 7 8 9 9 10 10 11 11 11 12 12 13 13 13 13 14 14 15 16 16 17 18 18 18 Take a panorama photo Send a photo or video Internet Browse the web Add a website to your favourites Entertainment Listen to the radio Play a song Office Add a calendar entry Change the time and date Set an alarm Phone management & connectivity Share your content using Slam Copy content between your phone and a computer Back up content to a memory card Update your phone software Access codes Product and safety information 19 19 20 20 20 21 21 21 23 23 23 23 24 24 24 25 25 25 27 3 Safety Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide. SWITCH OFF IN RESTRICTED AREAS Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. QUALIFIED SERVICE Only qualified personnel may install or repair this product.

BATTERIES, CHARGERS, AND OTHER ACCESSORIES Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products. KEEP YOUR DEVICE DRY Your device is not water-resistant. Keep it dry. GLASS PARTS The device screen is made of glass.

This glass can break if the device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch the glass parts of the device or attempt to remove the broken glass from the device. Stop using the device until the glass is replaced by qualified service personnel. PROTECT YOUR HEARING To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use. © 2014 Nokia. All rights reserved. 4 Get started Get to grips with the basics, and have your phone up and running in no time. Keys and parts Explore the keys and parts of your new phone. 1 Micro-USB connector 2 Headset connector (3.

5 mm AHJ) 2 3 Volume keys 4 Scroll key 5 End/Power key 6 Back cover release hole 7 Microphone 8 Call key 9 Selection keys 10 Earpiece 11 Camera flash 12 Camera lens. Before using the camera, remove the protective tape from the lens. 13 Back cover opening tool. If you lose the tool, you can also use a paper clip. 14 Antenna area 15 Loudspeaker Tip: Lock the keys when not using your phone. Select Menu, and press *. To unlock, select Unlock, and press *. Your phone uses S40 software. Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. The images in this guide may differ from your device screen. 2 Insert a SIM card and battery Learn how to insert a SIM card and the battery.

The SIM1 holder can be used for both 3G and 2G SIMs. 1. Push the tool into the hole until the cover is released. Remove the back cover. © 2014 Nokia. All rights reserved. 5 2. If the battery is in the phone, lift it out. 3. Push the SIM in with the contact area face down. 4. Line up the battery contacts, and put the battery in. 5. Press the back cover down until it locks into place. To switch the phone on, press and hold the until the phone vibrates.

power key Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached. Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card. © 2014 Nokia. All rights reserved. 6 Important: Your device uses a mini-UICC SIM card, also known as a micro-SIM card. Use of incompatible SIM cards, or use of SIM card adapters, may damage the card or the device, and may corrupt data stored on the card. Insert a memory card Learn how to insert a memory card into your phone. Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. 1. Push the tool into the hole until the cover is released. Remove the back cover, and lift out the battery. 2.

Slide the memory card into place with the contact area face down. 3. To remove the card, pull it out. Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.

Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone. 1. Plug the charger into a wall outlet. © 2014 Nokia. All rights reserved. 7 2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet. If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made. Tip: You can use USB charging when a wall outlet is not available.

Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Make sure your computer is switched on. Copy content from your old phone Easily get your contacts, calendar entries, and other stuff to your new phone. 1. Switch Bluetooth on in both phones. To switch Bluetooth on on your new phone, select Menu > Settings > Connectivity > Bluetooth. 2. On your new phone, select Menu > Settings > Sync & backup > Copy from dev.. 3. Select what you want to copy, then select Done. 4. Choose your old phone from the list of found devices. 5. If asked, create a one-time passcode (such as 123), and select OK.



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>

6. Check that the codes match on both phones. 7. Follow the instructions shown on both phones.

Tip: To quickly copy contacts from a compatible phone, select Menu > Apps > My apps > Transfer. © 2014 Nokia. All rights reserved. 8 Basics Learn how to get the most out of your new phone. Explore your phone Explore your phone with a simple key press. 1. To see the apps and features of your phone, press Menu. Menu 2. To go to an app or feature, press the scroll key up, down, left, or right. 3.

To open the app or select the feature, press Select. Select 4. To go back to the previous view, press Back. Back 5. To go back to the home screen, press . © 2014 Nokia. All rights reserved. 9 Display indicators The display indicators on your phone tell you the current time, battery and signal strength, and much more. You have unread messages. You have unsent or failed messages.

The keys are locked. An alarm is set. Bluetooth is on. The phone is connected to a GSM network. All incoming calls are forwarded to another number.

The phone is connected to a headset. The phone is connected to a device, such as a PC, with a USB cable. The type of mobile network you're currently connected to may be shown with a single letter, a , depending on combination of letters, or a combination of letters and numbers. For example, your network service provider. The icons may vary depending on your region or network service provider.

Prolong battery life Get the most out of your phone while getting the battery life you need. There are steps you can take to save power on your phone. ••• Always charge the battery fully. Mute unnecessary sounds, such as key press sounds. Use wired headphones, rather than the loudspeaker. To save power, you can: Lower the backlight brightness Set the backlight to switch off after a short time © 2014 Nokia. All rights reserved. Select Menu > Settings > Display > Backlight, and change the setting for Backlight intensity. Select Menu > Settings > Display > Backlight, and change the setting for Backlight time-out. 10 Use network connections selectively •• Switch Bluetooth on only when needed.

If you're listening to music or otherwise using your phone, but don't want to make or receive calls, switch flight mode on. Select Menu > Settings > Profiles > Flight > Activate. Personalise your home screen Want to open your favourite apps straight from the home screen? You can add, remove, and rearrange items on your home screen. 1. Scroll down on the home screen, and select Options > Personalise view. 2. Select a bar and an item, such as Notifications. 3. Select Done > Yes. Tip: To add more apps, scroll to the shortcut bar on the home screen, and select Options > Change shortcut.

Change your ringtone Set a ringtone for your phone. 1. Select Menu > Settings > Tones, and scroll to the ringtone options. 2. Use the scroll key to select Open Files.

3. Select Tones > Ringtones. 4. Select the ringtone. Tip: To switch between the silent and normal profile, press and hold #.

Set a song as your ringtone You can set a song from the music player as your ringtone. 1. When setting a ringtone, scroll left to select Open Files, and select the song. 2. You can mark a section of a song to use as a ringtone. Select Yes. 3. To move the start point , scroll left or right. To move the end point in the same way, scroll down. When you're ready, select Done.

4. Select Save. The edited ringtone doesn't replace the original ringtone or sound clip. Preset ringtones can't be edited, and not all formats of ringtones are supported. © 2014 Nokia. All rights reserved. 11 Nokia Store Download mobile games, apps, themes, wallpapers, and ringtones to your phone from Nokia Store. Select Menu > Store. Many items are free of charge; some you need to pay for with your credit card or on your phone bill. The availability of payment methods depends on your country of residence and your network service provider.

To learn more about Nokia Store, go to store.nokia.com. Write text Want to write a note or maybe use more than one language in your message? Writing with the keypad is easy and fun. Press a key repeatedly until the letter is shown.

Type in a special character or punctuation mark Press *, and select the character. Switch between character cases and text input methods Press #. This may not be available in all languages. Type in a number Press and hold #, and select Number mode. To go back to letter mode, press and hold #.

Switch predictive text on or off Select Options > Prediction, and select On or Off. Not all languages are supported. Change the writing language Select Options > Writing language. © 2014 Nokia. All rights reserved. 12 People & messaging Contact your friends and family, and share your files, such as photos, using your phone. Stay tuned with the latest updates to your social networking services even when on the go. Make or answer a call Learn how to make or answer a call with your new phone. 1. On the home screen, type in the phone number.

To type in the + character, used for international calls, press * twice. 2. Press . 3. To end the call, press . to answer. When someone calls you, press Tip: Is your friend's voice too loud or quiet? Press the volume keys to change the volume. Warning: When . If you don't know the correct info, contact your company IT department. During the setup, you can define how often you want your phone to sync your mail with the server.

Only content defined when setting up the account is synced. To sync additional content, change the Mail for Exchange account settings. With Mail for Exchange, it may be mandatory to use the lock code. Use of the Mail for Exchange is limited to over-the-air synchronisation of PIM information between the Nokia device and the authorised Microsoft Exchange server. This device is able to communicate with Microsoft Exchange ActiveSync enabled servers. The provision of this device to you does not grant you, and you do not receive, any rights under any Microsoft intellectual property with respect to any server software, or server device, that is accessed using this device or with respect to use of Microsoft Exchange ActiveSync apart from this device. © 2014 Nokia. All rights reserved. 15 Set up your mail account Do you use more than one mail address? You can have several mail accounts on your phone. You must be connected to the internet to set up a mail account, and to send and receive mail.

1. Select Menu > Mail. 2. Select a mail service, and sign in. Tip: If you don't have a mail address, you can create a Nokia Mail account during setup. You can add a Mail for Exchange account to your phone if you want to sync your work or other mail, including contacts and calendar, with your phone. Select Menu > Mail Exch. and a mail account, and type in the required details. Add a mail account later Select Menu > Mail > Add account and a mail service, and sign in. Send a mail Would you like to send a mail while on the go? With your phone, you can read and send mail, even when not sitting at your desk.



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>

1. Select Menu > Mail and a mail account. 2. In the mailbox, select Options > Compose new. 3. To add a recipient from your contacts, select Add. You can also write the address. You can add more than one recipient. 4. Write the subject and your message.

5. To attach a file, such as a photo, select Options > Attach. 6. Select Send. Reply to a mail To reply to a mail, open the mail, and select Options > Reply.

© 2014 Nokia. All rights reserved. 16 Get social Use the Notifications app to see what's happening with your friends. Sign in to your social networking services. 1.

Select Menu > Apps. 2. Select My apps > Notifications. Tip: Add Notifications to your home screen to see the latest updates. Switch notifications off In the Notifications app, select Options > Settings, scroll left or right, and select Save.. © 2014 Nokia. All rights reserved. 17 Camera Why carry a separate camera if your phone has all you need for capturing memories? With your phone camera, you can easily take photos or record videos. Take a photo Capture the best moments with your phone camera.

1. To switch the camera on, select Menu > Camera. 2. To zoom in or out, use the volume keys. . 3. To take the photo, select Tip: To record a video, scroll right, and select The photos are saved in Menu > Photos. Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a photo.

Switch the camera off Select . . Take a self-portrait It's easy to take a self-portrait with your phone camera. 1. To switch the camera on, select Menu > Camera.

> . 2. Select 3. Hold the phone with the camera facing you, and follow the instructions you hear. When ready, the phone takes the photo automatically.

© 2014 Nokia. All rights reserved. 18 Take a panorama photo Want to take a photo of a beautiful landscape or skyline? Use panorama mode to take a spectacular photo. 1. To switch the camera on, select Menu > Camera. 2. Select > . . 3. To take the first photo, select 4.

To take the next photo, move the phone slowly to the right until the indicator is in the middle of the screen. 5. When you have taken 4 photos, the phone saves the panorama photo automatically. Tip: You can take a panorama photo with the phone in landscape or portrait position. Send a photo or video Send your best shots to your friends and family in a multimedia message or mail, or using Bluetooth. 1. Select Menu > Photos. 2. Go to the photo, and select Options > Share and how you want to send. Tip: To send a video, select Menu > Videos, the video you want to send, and Options > Share.

Send several photos or videos at the same time Go to the folder where the photos or videos are, and select Options > Mark and an option. To send, select Options > Share marked and how you want to send. © 2014 Nokia. All rights reserved. 19 Internet Learn how to browse the web.

Browse the web Catch up on the news, and visit your favourite websites on the go. 1. Select Menu > Internet. 2. Select the address bar.

3. Write a web address. Tip: To search the internet, write a search word in the address bar. If asked, select your default search engine. Zoom in Select a section of the page. Tip: To view the page in a single column of larger, readable text and pictures without having to zoom in, select Options > Settings, and switch Column view to On. Add a website to your favourites If you visit the same websites all the time, add them to your favourites, so you can easily access them. 1. Select Menu > Internet. 2.

Go to a website. 3. Select Options > Add to favourites. Go to a favourite website Open the Favourites tab, and select a favourite. © 2014 Nokia. All rights reserved. 20 Entertainment Having a spare moment and in need of entertainment? Learn how to listen to music or the radio on your phone. Listen to the radio You can listen to FM radio stations using your phone – just select a station. To listen to the radio, you need to connect a compatible headset to the device. The headset acts as an antenna.

Select Menu > Radio. Close the radio Press the end key. Set the radio to play in the background Select Options > Play in background. Close the radio when it is playing in the background Press and hold the end key. Play a song Play music stored in the phone memory or on the memory card.

1. Select Menu > Music. 2. Select a song. To pause or resume playing, select Skip to the beginning of the current song Scroll left.

Skip to the previous song Scroll left twice. Skip to the next song Scroll right. © 2014 Nokia. All rights reserved. or . 21 Fast-forward or rewind Press and hold the scroll key to the right or left. Close the music player Press the end key. Set the music player to play in the background Select Options > Play in background. Close the music player when it is playing in the background Press and hold the end key. © 2014 Nokia.

All rights reserved. 22 Office Learn how to use the calendar to keep yourself organised. Add a calendar entry Need to remember an appointment? Add it to your calendar. 1. Select Menu > Calendar. 2. Select a date and View > Add. 3. Select an entry type. 4.

Fill in the fields, and select Save. @@Select Menu > Settings > Date and time. @@1. Select Menu > Apps > Alarm clock. 2.

@@@@@1. Select Menu > Settings > Connectivity > Bluetooth > On. 2. @@3. @@4.

Move your phone close to the other phone. Slam searches for the nearest phone, and sends the item to it. @@@@1. Connect your phone to a computer with a compatible USB cable. 2. Select Memory card. 3. @@4. @@@@You can back up your phone memory to a compatible memory card. 1.

Select Menu > Settings > Sync & backup. 2. Select Create backup. 3. Select what you want to back up, then press Done. @@You can also set your phone to automatically check for updates. 1. Select Menu > Settings > Phone > Device updates. 2. @@phone sw.

The update may take several minutes. If you encounter problems, contact your network service provider. @@@@Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. Access codes Ever wondered what the different codes on your phone are for? PIN or PIN2 code (4-8 digits) These protect your SIM card against unauthorised use or are required to access some features. You can set your phone to ask for the PIN code when you switch it on.

© 2014 Nokia. All rights reserved. 25 If you forget the codes or they aren't supplied with your card, contact your network service provider. If you type in the code incorrectly 3 times in a row, you need to unblock the code with the PUK or PUK2 code. PUK or PUK2 These are required to unblock a PIN or PIN2 code.

If not supplied with your SIM card, contact your network service provider. Security code (lock code, password) This helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define.



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>

Keep the code secret and in a safe place, separate from your phone. If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data on your phone may be deleted. For more information, contact Nokia Care or your phone dealer. IMEI This is used to identify phones in the network. You may also need to give the number to Nokia Care services. To view your IMEI number, dial *#06#.

© 2014 Nokia. All rights reserved. 26 Product and safety information Network services and costs You can only use your device on the GSM 850, 900, 1800, 1900 MHz and WCDMA 900, 2100 MHz networks. You need a subscription with a service provider. Using some features and downloading content require a network connection and may result in data costs. You may also need to subscribe to some features. Emergency calls 1. Make sure the device is switched on. 2.

Check for adequate signal strength.

You may also need to do the following: ••••Put a SIM card in the device, if supported by your device. Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group. Make sure the flight profile is not activated. If the device keys are locked, unlock them. 3.

Press the end key repeatedly, until the home screen is shown. 4. Type in the official emergency number for your present location. Emergency call numbers vary by location. 5.

Press the call key. 6. Give the necessary info as accurately as possible. Do not end the call until given permission to do so. When you switch your device on for the first time, you are asked to create your Nokia account. To make an emergency call during the account setup, press the call key. Important: Activate both cellular and internet calls, if your phone supports internet calls. The phone may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Take care of your device Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational. ••

••••••••••Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and let the device dry. Do not use or store the device in dusty or dirty areas. Do not store the device in high temperatures.

High temperatures may damage the device or battery. Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.

Do not open the device other than as instructed in the user guide. Unauthorised modifications may damage the device and violate regulations governing radio devices. Do not drop, knock, or shake the device. Rough handling can break it. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not paint the device. Paint can prevent proper operation. For optimal performance, switch the device off and remove the battery from time to time. Keep the device away from magnets or magnetic fields. To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

During extended operation, the device may feel warm. In most cases, this is normal. If the device is not working properly, take it to the nearest authorised service facility. © 2014 Nokia. All rights reserved. 27 Recycle Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia products at www.nokia.com/recycle.

Crossed-out wheeled-bin symbol The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or go to www.nokia.com/support. For more info on the environmental attributes of your device, see www.nokia.com/ecoprofile. About Digital Rights Management

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. With this device you can access content protected with OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked.

Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content. Battery and charger info Use your device only with an original BL-4U rechargeable battery. Charge your device with AC-20 or AC-18 charger. Charger plug type may vary.

Nokia may make additional battery or charger models available for this device. Battery and charger safety Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance.

Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use the battery and charger for their intended purposes only.

Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty.



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>

If you believe the battery or charger is damaged, take it to a service centre before continuing to use it. Never use a damaged battery or charger. Do not charge your device during a lightning storm. Only use the charger indoors.

© 2014 Nokia. All rights reserved. 28 Additional safety information Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy. Implanted medical devices To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should: ••••Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Switch the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel The surface of this device is nickel-free. Protect your device from harmful content Your device may be exposed to viruses and other harmful content. Take the following precautions: ••••Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.

Only install and use services and software from sources that you trust and that offer adequate security and protection. Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer. If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions.

Nokia does not endorse or assume liability for such sites. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty.

Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area. © 2014 Nokia. All rights reserved. 29 Potentially explosive environments Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles.

Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. For information on SAR, see the printed user guide. Nokia support messages To help you take maximum advantage of your phone and services, you receive free customised text messages from Nokia. The messages contain tips and tricks and support. To stop receiving the messages, select Menu > Settings > Nokia account > News and Offers. To provide the service described above, your mobile phone number, the serial number of your phone, and some identifiers of the mobile subscription are sent to Nokia when you use the phone for the first time. Some or all information may also be sent to Nokia when updating software. This information may be used as specified in the privacy policy, available at www.nokia.com.

com. Copyrights and other notices DECLARATION OF CONFORMITY Hereby, NOKIA CORPORATION declares that this RM-953 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.nokia.com/global/declaration/declaration-of-conformity.

The availability of products, features, apps and services may vary by region. Nokia may, in its sole discretion, change, correct or discontinue any of its services in whole or in part. For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. @@@@Nokia operates a policy of continuous development. @@Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or enduser support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region.

Please check with your local Nokia dealer for further details and availability of language options. © 2014 Nokia.



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>

All rights reserved. 30 FCC NOTICE This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more info, go to transition.fcc.gov/oet/rfsafety/rf-faqs.html. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: •••• Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. TM & © 2014 Nokia. All rights reserved.

Third party products/names may be TMs of their respective owners. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See www.mpegla.com.

© 2014 Nokia. All rights reserved. 31 .



[You're reading an excerpt. Click here to read official NOKIA 515 user guide](http://yourpdfguides.com/dref/5574827)

<http://yourpdfguides.com/dref/5574827>