



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 6350. You'll find the answers to all your questions on the NOKIA 6350 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 6350
User guide NOKIA 6350
Operating instructions NOKIA 6350
Instructions for use NOKIA 6350
Instruction manual NOKIA 6350

Nokia 6350 User Guide



Issue 2



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)

<http://yourpdfguides.com/dref/4210923>

Manual abstract:

@@Nokia tune is a sound mark of Nokia Corporation. @@Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2010. Tegic Communications, Inc. All rights reserved. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. Java is a trademark of Sun Microsystems, Inc.

Portions of the Nokia Maps software are © 1996-2010 The FreeType Project. All rights reserved. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC.

See <<http://www.mpegla.com>>. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS".

EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. The availability of particular products and applications and services for these products may vary by region.

Please check with your Nokia dealer for details, and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications.

BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS. © 2010 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan. Your phone is designed to make it easy for you to access a wide variety of content.

For your protection, AT&T wants you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, AT&T offers privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, AT&T's privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. Your phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties.

AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls. AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit att.com/privacy.

Export controls This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. FCC/INDUSTRY CANADA NOTICE Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Issue 2 Contents SAFETY..

.....

.....

.....

.....

.....

.... 6 About your device.

.....

.....

.....

.. 7 Network services...

.....

.....

.....

.....
.....
.....
.....
.....
..... 26 Voice mail..

.....
.....
.....
.....
.....
.....
.....
..... 27 Service commands

.....
.....
.....
.....
.....
.....
.....
..... 27 Message settings....

.....
.....
.....
.....
.....
.....
.....
..... 27 8. YPmobile.....

.....
.....
.....
.....
.....
..... 27 9. Mobile Web.

.....
.....
.....
.....
.....
.....
.....
..... 28 Configuration settings.....

.....
.....
.....
.....
.....
..... 28 Connect to the web.....

.....
.....
.....
.....
.....
..... 28 Bookmarks.

.....
.....
.....
.....
.....
.....
.....
..... 28 Settings

.....
.....
.....
.....

. 29 Security settings....

.....
.....

.....
.....
.....

..... 29 Browser security....

.....
.....
.....
.....

. 29 1. Get started...

.....
.....

.....
.....

. 11 Insert SIM card and battery....

.....

Insert a microSD card....

.....
.....

.....
.....

Charge the battery

.....

.....
.....
.....

..... Connect a headset.....

.....
.....
.....
.....

..... Antenna.....

.....
.....
.....

.....
.....
.....
.....

..... Keys and parts

.....
.....
.....

.....
.....

.....
... *Key functions*

.....
.....
.....
.....

.....
... *Standby mode.*

.....
.....

.....
.....
.....
.....

... *Keypad lock (keyguard)*

.....
.....
.....

..... *Offline profile.*



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)

<http://yourpdfguides.com/dref/4210923>

.....
. 21 4. Navigate the menus...
.....

. 22 5. AT&T Navigator.....
.....
..... 22 6. Enter text.

.....
.....
.....
.....
..... 23 Traditional text input

.....
.....
.....

.....
23 Predictive text input

.....
.....
.....
..... 23 14. AT&T Social Net..
.....

.....
33 15. My Stuff

.....
.....
33 Visit Ovi.....
.....

.....
.....
.....
.....

.....
.....
. 33 Tones & Graphics

.....
.....
.....
..... 33 Games & Apps.

.....
.....
.....
.....

.....
.....
..... 34 Multimedia..
.....

.....

.....
.....
.....

.....
... 35 7. *Messaging.*

.....
.....

.....
.....
.... 24 *Text and multimedia messages.*

.....
.....
..... 24 16. *E-mail ..*

.....
.....
.....

.....
.....
. 38 *Start e-mail*

.....
.....
.....
.....
.....

..... 39 4 17.
Settings

.....
.....

.....
.....
. 39 *Set profiles...*

.....
.....
.....
.....
.....

.....
.....
. *Set theme...*

.....
.....
.....
.....
.....

..... *Tones ..*

.....
.....
.....
.....
.....
.....

.....
... *Main display..*

.....

.....

.....

.....

.....

..... *Mini display*.....

.....

.....

.....

.....

.....

.....

..... *Set time and date* ..

.....

.....

.....

.....

.....

My shortcuts

.....

.....

.....

.....

.....

Sync and backup.....

.....

.....

.....

.....

.....

Connectivity

.....

.....

.....

.....

..... *Call settings*..

.....

.....

.....

.....

.....

.....

Phone settings

.....

.....

.....

.....

.....

... *Accessories* ..

.....

.....
.....
.....
.....

.....
.. *Configuration...*

.....
.....
.....
.....
.....

.. *Security.....*

.....
.....
.....
.....
.....

... *Reset device*

.....
.....
.....
.....
.....

..... *PTT settings*

.....
.....
.....
.....
.....

... *Connection icons ..*

.....
.....
.....
.....
.....

. *Add contacts*

.....
.....
.....
.....
.....

.. *Make or receive a PTT call.....*

.....
.....
.....
.....
.....

.... *Change from PTT to mobile call .*

..... *Call Me Alerts*

.....

(for example, themes) to the phone (network service). 9 For the availability of different services and pricing, contact your service provider. Important: Use only services that you trust and that offer adequate security and protection against harmful software. Assisted Global Positioning System Your phone may have Assisted Global Positioning System (A-GPS), a positioning system that uses an assistance server and reference network to make measurements and determine location. A-GPS is dependent on your network service. Contact your provider for additional information.

A-GPS may also utilize cellular radio networks for aiding in positioning in some circumstances where standalone GPS positioning is unavailable. This feature requires network support and coverage. A-GPS should not be used for precise location measurement, and you should never rely solely on location data from the A-GPS module.



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)

<http://yourpdfguides.com/dref/4210923>

The location of speed/safety cameras can be shown on your route during navigation, if this feature is enabled. Some jurisdictions prohibit or regulate the use of speed/safety camera location data.

Nokia is not responsible for the accuracy, or the consequences of use speed/safety camera location data. Content such as satellite images, guides, weather and traffic information and related services are generated by third parties independent of Nokia. The content may be inaccurate and incomplete to some extent and is subject to availability. Never rely solely on the aforementioned content and related services. Nokia support Check www.nokia.com/support or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product. On the website, you can get information on the use of Nokia products and services. If you need to contact customer service, check the list of local Nokia Care contact centers at www.nokia.com/customerservice. For maintenance services, check your nearest Nokia service center at www.nokia.com/repair.

10 1.

Get started Insert SIM card and battery Always switch the device off and disconnect the charger before removing the battery. This device is intended for use with the BP-6MT battery. Always use original Nokia batteries. See "Nokia battery authentication guidelines", page 57. The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card. To remove the back cover of the phone, slide the back cover down, and lift the cover. Remove the battery. 11 Insert the SIM card properly into the holder. Gold contacts face you. Replace the battery. Insert and then push down. To replace the back cover, align the top edge of the cover to the back of the phone (1). Push the cover into place as shown (2). 12 Insert a microSD card Use only compatible microSD cards with this device. Other memory cards, such as reduced size MultiMedia cards, do not fit in the microSD card slot and are not compatible with this device.

Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted. 1. The device can be on or off. 2. Remove the back cover.

Pull up the plastic strip 3. Insert the card into the memory card holder with the gold-colored contacts facing down. 4. Push down the plastic strip. Replace the back cover. Memory card Keep all memory cards out of the reach of small children. You can use the microSD memory card to store your multimedia files such as video clips, songs, audio files, images, and messaging data, and to back up information from phone memory. You can store content from folders in Tones & Graphics. For example, Themes may be stored on a memory card. Format memory card To format a new memory card, select Menu > My Stuff > Tones & Graphics.

Scroll to the memory card folder, and select Options > Memory card options > Format memory card?. Tip: You can also set a password or rename a memory card from this menu. Charge the battery Your battery has been charged at the factory. When the device indicates a low charge, do the following: 13 1.

Connect the charger to a wall outlet. 2. Open the USB connector door. Connect the charger to the micro USB connector on your phone. 3. When the device indicates the battery is fully charged, disconnect the charger from the device, then from the wall outlet.

You may also charge the battery using a USB data cable with power from a computer. 1. Connect a USB data cable to the USB port of a computer and to your device. 2. When the battery is fully charged, disconnect the USB cable.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made. The charging time depends on the charger used. The phone must only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program. Connect a headset You can connect a universal 2.5 mm headset to your device.

Open the headset door, and then connect the headset to the device. 14 Antenna Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause the device to operate at a higher power level than otherwise needed and may reduce the battery life. 15 2. Your phone Keys and parts 1 Earpiece 2 Main display 3 NaviTM (scroll key) 4 Right selection key 5 GPS key 6 End/Power key 7 Camera/Video capture key 8 Keypad 9 Left selection key 10 Mobile Web key 11 Call key 12 Push to Talk (PTT) key 13 Volume up key 14 Volume down key 15 Universal headset connector 16 Micro USB connector 17 Camera 18 Mini display 19 Media keys 16 Switch the phone on and off Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger. To switch the phone on or off, press and hold the power key. See "Keys and parts", page 16. If the phone asks for a PIN or a UPIN code, enter the code (displayed as ****), and select OK. Set the time, time zone, and date Enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT), and enter the date.

See "Set time and date", page 41. Key functions The NaviTM key and selection keys have the following functions: · NaviTM key -- to scroll up, down, left, right; and to select with the center key · Right selection key -- to connect to Media menu · GPS key -- to connect to AT&T Navigator · Camera and video capture key -- to begin capturing images or recording · Left selection key -- to access the Go to menu · Mobile Web key -- to connect to AT&T Mobile Web wireless internet Standby mode When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode. Indicators You have unread messages. You have new voice mail. You have unsent, canceled, or failed messages. The keypad is locked. The phone does not ring for an incoming call or text message. 17 The alarm clock is activated. The countdown timer is running. The stopwatch is running.

The phone is registered with the GPRS or EGPRS network. A GPRS or EGPRS connection is established. The GPRS or EGPRS connection is suspended (on hold). A Bluetooth connection is active. · A push-to-talk connection is active or suspended.

All incoming calls are forwarded to another number. The loudspeaker is activated, or the music stand is connected to the phone. Calls are limited to a closed user group. The timed profile is selected. The offline profile is selected.

The network is active. The 3G network is active. A car kit is connected. , , , or A headset, handsfree, loopset, or music stand enhancement is connected to the phone.



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)
<http://yourpdfguides.com/dref/4210923>

18 Keypad lock (keyguard) With the fold open, select Menu or Unlock, and press * within 1.5 seconds to unlock the keypad. Repeat the sequence to lock the keypad. By default, the keypad is locked. With the fold closed, press Rewind, and press Fastforward within 1.5 seconds to unlock the media keys.

To set the automatic keyguard, select Menu > Settings > Phone settings > Automatic keyguard. To answer a call when the keyguard is on, press the call key, or open the phone. When you end or reject the call, the keypad automatically locks. Security keyguard The security keyguard requires a 5-10 digit code to protect against unauthorized use. To change the code and activate the security keyguard, select Menu > Settings > Phone settings > Security keyguard. When the security keyguard is activated, enter the security code if requested. For more information, see Security keyguard, in "Phone settings", page 45. When the automatic or security keyguard is on, calls still may be possible to the official emergency number programmed into your device. Offline profile Important: In the offline profile, you cannot make or receive any calls, or use other features that require cellular network coverage. Calls may still be possible to the official emergency number programed into your device.

In the Offline profile, you may need to unlock the device and change to the calling profile before making a call. If the device has been locked, enter the lock code. To activate the Offline (also known as flight or airplane mode) profile, select Menu > Settings > Set profile, and select Offline. When the Offline profile is active, the connection to the cellular network is closed, but you can listen to music using the music player with a wired or bluetooth headset; or the loud speaker. Remember to switch off your device when wireless phone use is prohibited.

19 To change profiles, select Settings > Set profile, and a profile. If your phone continues to ask if you want to go offline, select Menu > Settings > Phone settings > Offline mode query. Functions without a SIM card Several functions of your phone may be used without inserting a SIM card (for example, data transfer with a compatible PC or another compatible device). Without a SIM card, some functions appear dimmed in the menus and cannot be used. For an emergency call, some networks may require that a valid SIM card is properly inserted in the device.

3. Call functions Make a voice call 1. Enter the phone number, including the area code. For international calls, press * twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number. 2. To call the number, press the call key. To increase the volume in a call, press the volume up key and to decrease press the volume down key. 3. To end the call or to cancel the call attempt, press the end key. To search for a name or phone number that you have saved in Address Book, see "Find a contact", page 30.

Press the call key to call the number. To access the list of dialed numbers, press the call key once in the standby mode. To call the number, select a number or name, and press the call key. Speed dialing Assign a phone number to one of the speed-dialing keys, 2-9. See "Speed dial list", page 32. Call the number in either of the following ways: · Press a speed-dialing key, then the call key. · If Speed dialing is set to On, press and hold a speed-dialing key until the call begins. See Speed dialing in "Call settings", page 44. 20 Enhanced voice dialing You can say the name saved in the contact list of the phone to make a phone call. Voice commands are not language-dependent.

Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances. 1. In the standby mode, press and hold the right selection key or press and hold the volume down key. A short tone is played, and Speak after the tone is displayed. 2.

Say the voice command clearly. If the voice recognition was successful, the phone plays the voice command of the match on the top of the list. If the result is not the correct one, scroll to another entry. Using voice commands to carry out a selected phone function is similar to voice dialing. See Voice commands in "Phone settings", page 45.

Answer or end a call To answer an incoming call, press the call key, or open the phone. To end the call, press the end key, or close the phone. To reject an incoming call, press the end key, or close the phone. To reject an incoming call when the phone is closed, press and hold a volume key. To mute the ringing tone, press a volume key when the phone is closed, or select Silence when the phone is open. Call waiting To answer a waiting call during an active call, select Answer. The first call is put on hold. To end the active call, press the end key. To switch back to the first call without ending the second call, select Options > Swap. To activate the call waiting function, see "Call settings", page 44.

Options during a voice call Many of the options that you can use during a call are network services. For availability, contact AT&T. During a call, select Options and from the following: Call options are Mute or Unmute, Address Book, Menu, Lock keypad, Record, Loudspeaker or Handset. Network services options are Answer or Decline, Hold or Unhold, PTT Contacts, New call, Add to conference, End call, End all calls, and Touch tones. 21 Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud. During a call, you can also navigate the menus and access other features. 4. Navigate the menus The phone offers you a range of functions that are grouped into menus. The name of each menu item appears in the upper left corner of the main display. 1.

To access the main menu, select Menu by pressing the center key. To change the menu view, select Options > Main menu view and the desired option. To rearrange the menu, scroll to the menu you want to move, and select Options > Organize > Move. Scroll to where you want to move the menu, and select OK. To save the change, select Done > Yes.

2. Scroll through the menu, and select an option (for example, Call settings). 5. AT&T Navigator AT&T Navigator provides Global Positioning System (GPS) driving directions, color maps, and traffic alerts. Press the GPS key, or select Menu > AT&T GPS > AT&T Navigator.

Enter your login information and follow the instructions on the display. Tip: To optimize the standby time for your phone, close any applications not in use. For information about billing or accessing this website, please contact AT&T. Any GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)

<http://yourpdfguides.com/dref/4210923>

The trip meter has limited accuracy, and rounding errors may occur. Accuracy can also be affected by availability and quality of GPS signals. Assisted GPS (A-GPS) is used to retrieve assistance data over a packet data connection, which assists in calculating the coordinates of your current location when your device is receiving signals from satellites. Almost all digital cartography is inaccurate and incomplete to some extent. Never rely solely on the cartography that you download for use in this device. Note: Downloading content such as maps, satellite images, voice files, guides or traffic information, may involve transmission of large amounts of data (network service).

22 6. Enter text You can enter text (for example, when entering messages) using traditional or predictive text input. When you enter text, text input indicators appear at the top of the display. indicates traditional text input. indicates predictive text input. Predictive text input allows you to enter text quickly using the phone keypad and a built-in dictionary. You can enter a letter with a single keypress. , , or press #. indicates the character case. To change the character case, indicates number mode.

To switch between letter and number mode, press and hold #. To set the writing language while entering text, select Options > Writing Language. The default input is traditional text. Traditional text input To set traditional text input, select Options > Prediction options > Status > Off. Press a number key, 1-9, repeatedly until the desired character is displayed.

Not all characters available under a number key are printed on the key. The characters available depend on the selected language. If the next letter you want is located on the same key as the present one, wait until the cursor is displayed. The most common punctuation marks and special characters are available under the 1 key. For more characters, press *.

Predictive text input To set predictive text input while entering a message, select Options > Prediction options > Status > On. Tip: To quickly switch to number mode when entering text, press # twice, or select and hold Options. 1. Start entering a word using the 2-9 keys. Press each key once for each letter. The entered letters are displayed underlined. To insert a special character, press and hold *, or select Options > Insert symbol. Scroll to a character, and select Insert. 23 2. When you finish entering the word and it is correct, to confirm it, press 0 to add space.

If the word is not correct, press * repeatedly. To insert a number, press * until the number appears. To insert a period, press 1. To insert other characters, press *. If the word does not appear, you can add it to the dictionary. First, select Spell. Complete the word (traditional text input is used), and select Save. 7. Messaging You can read, create, send, and save your text, multimedia, and audio messages. Some types of messages may not be supported by your network provider.

When sending messages, your phone may display the words Message sent. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with AT&T. Text and multimedia messages You can create a message and optionally attach, for example, a picture.

Your phone automatically changes a text message to a multimedia message when a file is attached. Text messages Your device supports the sending of text messages beyond the character limit for a single message. Longer messages are sent as a series of two or more messages. AT&T may charge accordingly.

Characters that use accents or other marks and characters from some language options, such as Spanish, take up more space, which limits the number of characters that can be sent in a single message.

An indicator at the top of the display shows the total number of characters left and the number of messages needed for sending. Before you can send any text messages, you need to save your message center number. Select Menu > Messaging > Message settings > Text > Message center > Add center, enter a name, and the number from the service provider. 24 Multimedia messages A multimedia message can contain different types of media, such as text, pictures, sound clips, calendar notes, business cards, streaming links, and video clips. Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device. The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit the device may make it smaller so that it can be sent by MMS. Important: Exercise caution when opening messages.

Messages may contain malicious software or otherwise be harmful to your device or PC.

For availability and subscription to the multimedia service (MMS), contact AT&T. Create a text or multimedia message 1. Select Menu > Messaging > Create message > Message. 2. To add recipients, scroll to the To: field, and enter the recipient's number or e-mail address, or select Add to select recipients from the available options. If you are entering a new number or e-mail, press the number key until the desired character appears. Select Options to add recipients and subjects and to set sending options. 3. Scroll to the Text: field, and enter the message text. 4.

To attach content to the message, scroll to the attachment bar at the bottom of the display and select the desired type of content. 5. To send the message, press Send. If you press the End key before you send, the message is saved in the Drafts folder. The message type is indicated at the top of the display and changes automatically depending on the content of the message.

Service providers may charge differently depending on the message type. Check with AT&T for details. Read a message and reply Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC. Your phone displays a notification when you receive a message.

Select View to display the message. If more than one message was received, to display a message, select the message from the Inbox and Open. To create an answer message, select Reply. 25 Send messages To send the message, select Send. The phone saves the message in the Outbox folder and sending starts.

Note: The message sent icon or text on your device screen does not indicate that the message is received at the intended destination. If the message sending is interrupted, the phone tries to resend the message a few times. If these attempts fail, the message remains in the Outbox folder. To cancel the sending of the messages in the Outbox folder, select Options > Cancel sending. To save the sent messages in the Sent items folder, select Menu > Messaging > Message settings > General settings > Save sent messages.



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)
<http://yourpdfguides.com/dref/4210923>

Review messages The phone saves received messages in the Inbox folder. To add, rename, or delete a folder select Menu > Messaging > Saved items > Options. *SIM card messages* SIM card messages are text messages that are saved to your SIM card. You can copy or move those messages to the phone memory, but not vice versa. Received messages are saved to the phone memory. To read SIM card messages, select Menu > Messaging > Options > SIM Card messages. *Delete messages* To delete messages one by one, select Menu > Messaging > Delete messages > By message and the folder from which you want to delete messages. Scroll to the message you want to delete, and select Delete. To delete all messages from a folder, select Menu > Messaging > Delete messages > By folder and the folder from which you want to delete the messages. Depending on the folder, the phone asks if you want to delete the messages.

To delete, select Yes. Otherwise, if the folder contains unread messages or messages that are waiting to be sent, the phone asks whether you want to keep them. To keep these messages, select Yes. To delete all messages from all folders, select Menu > Messaging > Delete messages > All messages > Yes. 26

Voice mail If you subscribe to voice mail (network service), AT&T supplies a voice mailbox number to access your messages.

The number may appear in your phone's address book during the activation process. If not, you need to save this number to your phone to use voice mail. When you receive a voice message, a tone sounds, a message displays, or both. To call your voice mailbox, in the standby mode, press and hold 1, or select

Menu > Messaging > Voice mail > Listen to voice mails. To enter, find, or edit your voice mailbox number, select Voice mailbox no.

. If supported by the network, indicates new voice messages. Select Listen to call your voice mailbox number. *Service commands* Use the service commands editor to enter and send service requests (also known as USSD commands) to AT&T. Contact AT&T for information about specific service commands. Select Menu > Messaging > Serv. commands. *Message settings* Select Menu > Messaging > Message settings and from the following: General settings -- to save copies of sent messages in your phone, to overwrite old messages if the message memory becomes full, and to set up other preferences, such as font sizes. Text -- to allow delivery reports, to set up message centers for SMS, to select the type of character support, and to set up other preferences related to text messages. Multimedia -- to allow delivery reports, to set up the appearance of multimedia messages, to allow the reception of multimedia messages and advertisements, and to set up other preferences related to multimedia.

Service messages-- to activate service messages and to set up preferences related to service messages 8. *YPmobile* The YPmobile (Yellow Pages Mobile) website provides a directory of local and national businesses, search options, maps, and directions. In the standby mode, select Menu > YP mobile. If you have questions about billing or accessing this website, contact AT&T. 27 9. *Mobile Web* You can access various mobile internet services with your phone browser. Important: Use only services that you trust and that offer adequate security and protection against harmful software. For availability of these services, pricing, and instructions, contact AT&T. With the phone browser, you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. Appearance may vary due to screen size.

You may not be able to view all details of the internet pages. Configuration settings You may receive the configuration settings required for browsing as a configuration message from AT&T. See "Configuration settings service", page 8. You can also enter all the configuration settings manually. See "Configuration", page 46.

Connect to the web In the standby mode, select Menu > Mobile Web, or press the Mobile Web key on the keypad to connect to the web. Browse with phone keys To browse through the page, scroll in any direction. To select an item, press the call key, or select Select. To enter letters or numbers, press the 0-9 keys. To enter special characters, press *.

Bookmarks You can save web addresses as bookmarks in the phone memory. · While browsing, select Options > Add to Bookmarks to create or add a new bookmark; or to save the bookmark to a folder. · Select a bookmark. · From the Web homepage, scroll to Bookmarks or while browsing select Options > Go to Bookmarks to view or edit a list of saved bookmarks. · Select a bookmark. The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the 28 copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications. **BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW.**

YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS. *Settings* While browsing you can change web settings. Select Options > Settings. This menu allows you to change the font size, images, layout, and other features. *Security settings* Cookies A cookie is data that a site saves in the cache memory of your phone. While browsing, select Options > Settings > Clear cookies. *Browser security* Security features may be required for some services, such as online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact AT&T. *Security module* The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature.

The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider. 10. *MEdia Mall* In the standby mode, select Menu > MEdia Mall to access the AT&T Mall website. The MEdia™ Mall links to a variety of content such as tones, games, graphics, 29 multimedia, and applications that may be purchased and downloaded to your phone.

For information about billing, or about accessing this website, contact AT&T.



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)

<http://yourpdfguides.com/dref/4210923>

11. Mobile Video Mobile Video provides links to a variety of content such as video clips from TV shows, news, sports, and weather. Access the wireless internet with MEdiaTM Mall to purchase and download music, games, graphics, multimedia, and applications to your phone. In the standby mode, to access Mobile Video, select Menu > Mobile Video.

If you have questions about billing or accessing this website, contact AT&T or see www.wireless.att.com. 12. AT&T Music This menu provides access to the media player, various music-related tools, applications, and services. To open the media player from the standby mode, select Menu > AT&T Music > Media player, or press the right selection key. For more information on using the media player, See "Media player", page 36. 13. Address Book In the address book, you can store and manage contact information, such as names, phone numbers, and addresses.

You can save names and numbers in the phone memory, the SIM card memory, or in a combination of the two. Names and numbers saved on the SIM card memory, are indicated with . Find a contact Select Menu > Address Book > Names, and scroll through the list of contacts, or enter the first letter of the name you are trying to find to initiate a search. 30 Add a new contact Names and numbers are saved in the used memory. Select Menu > Address Book > Add new. Complete the fields with as much information as you want, and select Save. To add more detail, select Options. For example, to add a personalized ring tone, select Options > Add Detail > Multimedia > Tone or to add an image to display when the contact calls, Options > Add Detail > Multimedia > Image. The first number you save is automatically set as the default number for a contact and number type indicator is highlighted. When you select a name, the default number is used unless you select another number.

If you select a new default number, it moves to the top of the list for the contact. Make sure that the memory in use is either Phone or Phone and SIM. See "Settings", page 32. Copy contacts To copy a name and phone number from the phone memory to the SIM card memory, or vice versa, select Menu > Address Book > Names > Options > Copy contact. To move all contacts from the SIM card to phone memory, or vice versa, select Menu > Address Book > Move contacts > From phone to SIM or From SIM to phone.

To copy more than one contact, but not all contacts, select Menu > Address Book > Names > Options > Mark. Mark the contacts you want to move, and select Move marked or Copy marked. Edit contact details 1. Find the contact you want to edit, select Details; and scroll to the desired name, number, text item, or image. 2.

To edit a name, number, or text item, or to change image, select Options > Edit. You cannot edit an ID when it is on the IM contacts or subscribed names list. Delete contacts or details To delete all the contacts and the details attached to them from the phone or SIM card memory, select Menu > Address Book > Delete all contacts > From phone memory or From SIM card. Confirm with the security code. To delete a contact, find the desired contact, and select Options > Delete contact. To delete a number, text item, or an image attached to the contact, find the contact, and select Details. Scroll to the desired detail, and select Options > Delete > Delete number, Delete detail, or Delete image. If you delete an image from Address book, it does not delete it from the My Stuff folder. 31 Business cards You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, find the contact whose information you want to send, and select Details > Options > Send business card > Via multimedia, Via text message, or Via Bluetooth. When you have received a business card, select Show > Save to save the business card in the phone memory. To discard the business card, select Exit > Yes. Settings Select Menu > Address Book > Settings and the following: Memory in use -- to select the SIM card or phone memory for your contacts. Select Phone and SIM to recall names and number from both memories. In that case, when you save names and numbers, they are saved in the phone memory. Address book view -- to select how the names and numbers in the Address Book are displayed. Options are to display by normal name list, name and number, or name and image. Name display -- to select whether the contact's first or last name is displayed first Font size -- to set the font size for the list of contacts Check memory -- to view the free and used memory capacity Groups To arrange the names and phone numbers saved in the memory into caller groups with a different ringing tone and a group image, select Menu > Address Book > Groups > Add. Select a name, image, or ringing tone, and select Save.

To add contacts to the group, select View > Add. Scroll to a contact you want to add, and select Select. Repeat this until all group members are selected. To delete a member, select Options > Remove member. Speed dial list To assign a number to a speed dialing key, select Menu > Address Book > Speed dial list, and scroll to the desired speed-dialing number.

You can also press any number key (2-9) and then press the Call key to activate speed dialing. Select Assign or, if a number has already been assigned to the key, select Options > Change. Select Find and the contact you want to assign. If the speed dialing function is off, the phone asks whether you want to activate it. To make a call using speed dialing, see "Speed dialing", page 20.

32 Service and my numbers Select Menu > Address Book and from the following: Service numbers -- to call the service numbers of AT&T, if the numbers are included on your SIM card (network service) My numbers -- to view the phone numbers assigned to your SIM card. This option is only displayed if the numbers are included on your SIM card. 14. @@@@Receive replies, status updates, and much more. 15. @@@@ Visit Ovi Ovi contains services provided by Nokia. @@@@Select Menu > My Stuff > Tones & Graphics. A list of folders is displayed. @@2. Scroll to desired folder.

To view a list of files in the folder, select Open. For the available options, select Options. 3. Scroll to the desired file to view, and select Open. For the available options, select Options. @@You can use a compatible memory card to extend the memory capacity. @@@@Select Menu > My Stuff > Games & Apps > Games. @@Select Menu > My Stuff > Games & Apps > Application. @@@@downloads; the list of available bookmarks is shown. See "Bookmarks", page 28.

@@@You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them.



[You're reading an excerpt. Click here to read official NOKIA 6350 user guide](http://yourpdfguides.com/dref/4210923)
<http://yourpdfguides.com/dref/4210923>

If you choose to access such sites, you should take precautions for security or content. **Multimedia** In the standby mode, select Menu > My Stuff > Multimedia to access multimedia and entertainment features available in the phone. **Camera** When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others, including copyrights.

You can take photos or record video clips with the built-in 2 megapixel with 4x zoom camera. The camera saves pictures in JPEG format and video clips in 3gp format. The camera lens is on the front of the phone. The color display works as a viewfinder. Take a photo 1. Select Menu > My Stuff > Multimedia > Camera > Capture; or press the camera key on the keypad, and select Capture. The phone saves the photo in Menu > My Stuff > Tones & Graphics > Images unless you set the phone to use the memory card to save photos. 2. Select Send to add the photo via a message, Bluetooth connection, or to an online album; or to take another photo, select Back or wait until the Capture key appears. 3. To zoom in or out, use the volume or navigation keys. 4. The higher the resolution, the fewer photos you can take sequentially. 5. To set a timer to delay capturing a photo for 3, 5, or 10 seconds, select Options > Self-timer > Start.

A beep sounds while the self-timer is running. It beeps faster when the camera is about to capture the photo. After the time-out, the camera takes the photo and saves the photo in Menu > My Stuff > Tones & Graphics > Images. To take a photo when the lighting is dim, the camera adjusts the exposure time to increase the photo quality. This Nokia device supports an image capture resolution up to 1024 x 1280 pixels. **35 Self-portrait** To begin to take a self-portrait, select Menu > My Stuff > Multimedia > Camera, and close the fold. To take the picture, press the PTT key. To view the picture, open the fold. Tip: To activate self-portrait mode with the fold closed, press and hold the up volume key. Record a video clip Select Menu > My Stuff > Multimedia > Video recorder > Record or press and hold the camera key on the keypad.

To pause recording, select Pause; to resume recording, select Continue. To stop recording, select Stop. The phone saves the video clip in Menu > My Stuff > Tones & Graphics > Video clips or in a folder on the memory card. To view additional settings, select Options. Camera and video settings Select Menu > My Stuff > Multimedia > Camera or Video recorder > Options > Settings, and edit the available settings.

Camera and video effects Select Menu > My Stuff > Multimedia > Camera or Video recorder > Options > Effects. Tip: To take a self-portrait video with the fold closed, launch the video recorder, close the fold, use the PTT for play and pause. **Media player** Your phone includes a media player for listening to songs, recordings, or MP3, MP4, WMA (Windows Media Audio), AAC (Advanced Audio Coding), AAC+, SP-MIDI, WAV, AMR, QCELP, MIDI, 3GP, or EAAC+ (High Efficiency Advanced Audio Coding) sound files that you have transferred to the phone with the Nokia Music Manager application. Music files are automatically detected and added to the default playlist. Play songs 1.

Select Menu > My Stuff > Multimedia > Media player > Go to Media player. The details of the first song on the default playlist are displayed. 2. To play a song, scroll to the song, and select 3. To skip to the beginning of the next song, select of the previous song, select once. 36 . . To skip to the beginning 4. To rewind the current song, select and hold . To fast forward the current song, select and hold .

Release the key at the position you want. 5. To pause the playback, select . Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud. **Options in Media player** In the music player menu, music tracks can be saved in the following categories: All Music -- to view all songs Play Lists -- to create new playlists, check the currently playing music, view recently added playlists, find the songs played most often, and view all playlists Artists -- to view all songs by an artist's name Albums -- to view songs by albums Genres -- to view songs by genres Videos -- to view a list of music videos Settings To change settings, select Menu > My Stuff > Multimedia > Media player > Go to Media player > Options > Settings, and from the following: Shuffle -- to play songs in random order Repeat -- to repeat the current song, all songs, or to turn off repeat Equalizer -- to open the list of media equalizer sets. See "Equalizer", page 38. Other options Go to Media menu -- to go to the main media menu Now playing -- to view the song currently playing Add to playlist -- to add the current song to the favorites playlist Shop music -- to access music available to buy through MEdiaTM Mall Download status -- to check the status Downloads -- to download music through the web MEdia Mall page -- to go to MEdiaTM Mall Mute audio -- to mute the audio Play via Bluetooth -- to connect and play music through a Bluetooth enabled accessory using Bluetooth connectivity 37 **Voice recorder** You can record speech, sounds, or an active call. For example, you can record a phone number to enter later.

You can also record a message for a ringtone. Record sound 1. Select Menu > My Stuff > Multimedia > Voice recorder. 2. To start recording, select . To start recording during a call, select Options > Record. While recording a call, all parties to the call hear a faint beeping sound. When recording a call, hold the phone in the normal position near to your ear. 3. To stop recording, select . The recording is saved in Menu > My Stuff > Tones & Graphics > Audio. 4. To send a recording using Bluetooth connectivity or as a multimedia message, scroll to the recording, and select Options > Send. You can also transfer the recording to your PC using a USB data connection. List of recordings 1. Select Menu > My Stuff > Multimedia > Voice recorder > Options > Audio list. 2. Select Audio to view a list of recordings. 3. Select Options to view a list of options for files.

Define a storage folder To define a default folder in the Tones&Graphics folder, select Menu > My Stuff > Multimedia > Voice recorder > Options > Select memory and a folder from the list. **Equalizer** You can adjust the frequency bands. Your phone comes with pre-set equalizer bands for common music genres. Select Menu > My Stuff > Multimedia > Equalizer. To activate a set, scroll to one of the equalizer sets, and select Activate. 16. E-mail The actual terms and words seen when sending, replying, forwarding, or saving e-mail may be dependent on your e-mail service provider.



[You're reading an excerpt. Click here to read official NOKIA 6350](http://yourpdfguides.com/dref/4210923)

[user guide](http://yourpdfguides.com/dref/4210923)

<http://yourpdfguides.com/dref/4210923>

38 Important: Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your device or PC. E-mail provides access to certain common e-mail services.

If you have an e-mail account with one of the supported e-mail services, you can use this application to access your e-mail account. With this application you can view your inbox, compose and send e-mail, receive e-mail, receive notification of new e-mail, and delete e-mail. You may not be able to view or download attachments. This e-mail application is different from the SMS and MMS e-mail function. If you do not have an e-mail account already, visit the website of one of the e-mail service providers and register for an e-mail account.

If you have questions regarding the cost of e-mail service, contact AT&T. Start e-mail 1. Select Menu > Messaging > Mobile Email. 2. Highlight and select the provider with which you have an e-mail account.

3. Read and accept the terms of use, if you are presented with any. 4. Enter your user ID and password. Note that the password is case sensitive. 5. If you wish to have your login information remembered, highlight the checkbox option, and select Mark. After the account is successfully validated, it appears on the list. If you select to have your login information remembered, when you next select that account, the first page of your e-mail inbox view is automatically loaded. If the login information has not been remembered, you must login to start using your e-mail account.

17. Settings Set profiles Your phone has various settings groups called profiles, for which you can customize the phone tones for different events and environments. Select Menu > Settings > Set profile, the desired profile, and from the following: Activate -- to activate the selected profile 39 Customize -- to customize the profile. Select the setting you want to change, and make the changes. Timed -- to set the profile to be active until a specified time, up to 24 hours, and set the end time. When the time set for the profile expires, the previous profile that was not timed becomes active. Set theme A theme contains elements for personalizing your phone, such as the wallpaper and font color used in the main display. Select Menu > Settings > Set theme, and from the following: Select theme -- to select one of the themes that came with your device Themes -- to open a list of links to download more themes Tones You can change the tone settings of the selected active profile. Select Menu > Settings > Tones to find the current settings. To set the phone to ring only for calls from phone numbers that belong to a selected caller group, select Alert for.

Scroll to the desired caller group or All calls, and select Mark. For information on how to create a caller group, see "Groups", page 32. Select Save to save the settings or Back to leave the settings unchanged. If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds.

Main display The main display settings allow you to change the home screen appearance, which is defaulted to off.

Select Menu > Settings > Main display, and from the following: Wallpaper -- to add a background image to the home screen Home screen -- to customize the layout of the standby screen Home screen font col. -- to select the color for the text in the home screen mode Navigation key icons -- to display the navigation key shortcuts in the home screen mode Notification details -- to display contact information in missed calls and messages received. 40 Fold animation -- to set your phone to display an animation when you open and close the phone Font size -- to set the font size for messaging, address book, and Mobile Web web pages Mini display Select Menu > Settings > Mini display. You can change the settings for Wallpaper. Set time and date To change the time, time zone, and date settings, select Menu > Settings > Set time/date > Date & time settings, Date and time format, or Auto-update of time (network service).

When traveling to a different time zone, select Menu > Settings > Set time/date > Date and time format > Time zone and the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT) or Universal Time Coordinated (UTC). The time and date are set according to the time zone and enable your phone to display the correct sending time of received text or multimedia messages. For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich/London (UK). If set, the Auto-update feature performs this function. My shortcuts Set up personal shortcuts to quickly access frequently used functions of the phone. You can assign shortcuts to the following keys: Left selection key To select a function from the list, select Menu > Settings > My shortcuts > Left selection key. The default setting is Go to. In the home screen mode, select Go To > Options, and from the following: Select options -- to add a function to the shortcut list or to remove one Organize -- to rearrange the functions on your personal shortcut list Right selection key To select a function from the list, select Menu > Settings > My shortcuts > Right selection key. The default setting is Media player. 41 Navigation key To assign other phone functions from a predefined list to the navigation key (scroll key), select Menu > Settings > My shortcuts > Navigation key.

Home screen key To select a navigation key to activate the active home screen mode, select Menu > Settings > My shortcuts > Home screen key. The default setting is Nav. key up/ down. Sync and backup Create a backup of your personal data. Select Menu > Settings > Sync and backup, and from the following:

Phone switch -- to synchronize or copy data between two phones using bluetooth technology Create backup -- to create a backup of selected data Restore backup -- to restore a selected backup file to the phone Data transfer -- to synchronize or copy data between your phone and a selected device Connectivity You can connect the phone to a compatible device using Bluetooth wireless technology or a USB data cable connection. You can also define the settings for EGPRS or 3G dial-up connections. Bluetooth wireless technology This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: Advanced Audio Distribution Profile (A2DP), Audio/Visual Remote Control Profile (AVRCP), Basic Imaging Profile (BIP), Dial-Up Network Profile (DUN), File Transfer Profile (FTP), Generic Access Profile (GAP), Generic Audio/Video Distribution Profile (GAVDP), Generic Object Exchange Profile (GOEP), Hands-free Profile (HFP), Headset Profile (HSP), Object Push Profile (OPP), SIM Access Profile (SAP), and Service Discovery Application Profile (SDAP). To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model.



You're reading an excerpt. Click here to read official NOKIA 6350 user guide

<http://yourpdfguides.com/dref/4210923>