



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 650. You'll find the answers to all your questions on the NOKIA 650 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 650
User guide NOKIA 650
Operating instructions NOKIA 650
Instructions for use NOKIA 650
Instruction manual NOKIA 650

Electronic user's guide released subject to "Nokia User's Guides Terms and Conditions, 7th June, 1998".

User's Guide



9351905
Issue 3



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](#)

<http://yourpdfguides.com/dref/3958558>

Manual abstract:

Nokia Mobile Phones. All rights reserved. Nokia Mobile Phones operates a policy of continuous development. @@6 Quick start

.....
.....
.....

. 8 1. Your phone

.....
.....

... 10 List of keys.....

.....
.....
.....
.....

.... 10 The selection keys

.....
.....
.....

. 11 The display indicators

.....
.....

11 4. Phone Book.....

.....

.. @@Basic functions...

.....

..... 13 Charging a new battery...

.....

.... 13 Switching on/ off .

.....
.....

.....

.. 13 Making a call...

.....
.....

.....

.....

... 14 International calls ..

.....

.....

.....

14 Receiving a call.....

.....

.....

.....

.. 15 Last number redial ...

.....

.....

... 16 Adjusting the earpiece volume..

.. 17 Accessing the Phone Book...

..... 17 Call waiting and conference call services.

.....

.....

. 17 3. Other essential functions ...

.....

	31 Descriptions of the menu functions

..34	È1999 Nokia Mobile Phones. All Rights Reserved. 3 1 Messages (Menu 1)

...34	Inbox (Menu 1 1) Reading a text message
.....34	Outbox (Menu 1 2) Sending a message and Write messages (Menu 1 3) ...
...36	Message settings (Menu 1 4) ..

	37 Set specific settings.....
.....37	Set_1 - Set_3 (Menu 1 4 1-1 4 3) .

.....38	Retrieve messages (Menu 1 5) .

.....40	Voice messages (Menu 1 6)

...40	Listen to voice messages (Menu 1 6 1)..

40	Voice mailbox number (Menu 1 6 2).....

..41	2 Call register (Menu 2)..

....42	Missed calls (Menu 2 1)

..43	Received calls (Menu 2 2) ...
.....43	Dialled numbers (Menu 2 3)
.43	Erase recent call lists (Menu 2 4)

.....44	Show call duration (Menu 2 5) ..

.....
.....
44 3 Profiles (Menu 3)
.....
.....45 Accessing the profiles.
.....
.....
.....45 Changing profile settings (such as incoming call alert)....
.....
.....45 4 Settings (Menu 4)
.....
.....
.....49 Alarm clock (Menu 4 1).....
.....
.....49 Clock (Menu 4 2)..
.....
.....
.....
.....50 Call settings (Menu 4 3)
.....
.....50 Anykey answer (Menu 4 3 1)....
.....
.....
.....
.....51 Speed dialling (Menu 4 3 2)..
.....
.....
.....
.....
51 Call waiting options (Menu 4 3 3)
.....
.....
.....
.....51 Own number sending (Menu 4 3 4)
.....
.....
.....
.....51 Speech scrambling (Menu 4 3 5)
.....
.....
.....
.....52 Phone settings (Menu 4 4)
.....52 Language (Menu 4 4 1).....
.....
.....52 Country (Menu 4 4 2)...
.....
.....
.....53 Changing country code (Menu 4 4 3)
.....
.....
.....
.....53 Service codes (Menu 4 4 4)
54 Welcome note (Menu 4 4 5)
.....
.....
.....

..55 Display contrast (Menu 4 4 6) ...
.....
.....
.....
....55 Security settings (Menu 4 5).
....55 PIN code request (Menu 4 5 1) .
.....
.....
.....
.55 Change PIN code (Menu 4 5 2)
.....
.....
.....
...55 Call barring (Menu 4 5 3).....

..56 Phone information (Menu 4 6).....
.....
.....
.....
.....
57 Own number (Menu 4 6 1)
.57 Network ID (Menu 4 6 2)
.....57 SIS reference (Menu 4 6 3).....

.57 Restore factory settings (Menu 4 7).....
.....
.....
.....

.....57 5 Call divert (Menu 5) .
.....
.....
.....58 Divert all voice calls without ringing (Menu 5 1).

.....58 Divert when busy (Menu 5 2)...
.....
.....
.....

....58 Divert when not answered or not reachable (Menu 5 3) .
....58 Cancel all diverts (Menu 5 4).
...59 6 Games (Menu 6)

.....
.....
.....
60 7 Calculator (Menu 7)

.....63 4 È1999 Nokia Mobile Phones.
All Rights Reserved. 8 Calendar (Menu 8)
.....
.....

.. 65 9 FM Radio (Menu 9)
.....
.....
.. 68 Search (Menu 9 1/ Menu 9 2).....

.....
.....
.....

..... 68 Radio Off (Menu 9 1) .

.....
.....

69 Radio station names 1...5 (Menu 9 2..
.9 6)

.....
.....

.. 69 6. Additional information..
70 DTMF tones

.....
.....
.....

..... 70 Using the batteries .

.....
.....
.....

.... 71 Charging and discharging the battery.....

.....
.....
.....
.....

..... 71 Notes for using the batteries.. 72 Access codes.

.....
.....
.....

.....
.....

. 73 Security code

.....
.....
.....

... 73 PIN code ..

.....
.....
.....

..... 73 Care and maintenance.

.....
.....

... 74 Important safety information..

.... 75 Traffic safety.....

.....
.....
.....

..... 75 Operating environment

..... 75 Electronic devices ..

.....
.....
.....

75 Potentially explosive atmospheres

.....
.....
.....

.. 77 Vehicles.....

.....
.....
.....

... 77 Emergency calls..

.....
.....

..... 78 Index .

.....
.....
.....

.....
.....

79 È1999 Nokia Mobile Phones. All Rights Reserved. 5 For your safety Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

ROAD SAFETY COMES FIRST Don't use a hand-held phone while driving; park the vehicle first. **INTERFERENCE** All wireless phones may get interference which could affect performance. **SWITCH OFF IN HOSPITALS** Follow any regulations or rules. Switch the phone off near medical equipment. **SWITCH OFF IN AIRCRAFT** Wireless phones can cause interference. Using them on aircraft is illegal. **SWITCH OFF WHEN REFUELLING** Don't use phone at a refuelling point. Don't use near fuel or chemicals. **SWITCH OFF NEAR BLASTING** Don't use phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

USE SENSIBLY Use only in normal position (to ear). Don't touch the antenna unnecessarily. **USE QUALIFIED SERVICE** Only qualified service personnel must install or repair equipment. **ACCESSORIES AND BATTERIES** Use only approved accessories and batteries. Do not connect incompatible products. 6 È1999 Nokia Mobile Phones. All Rights Reserved. **MAKING CALLS** Ensure that the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call press .

To answer a call press . **EMERGENCY CALLS** Ensure that the phone is switched on and in service. Make sure the phone is ready for a new call. (If you are in a menu/ submenu, clear the display and return the phone to the standby mode.) Enter the emergency number, then press .

Give your location. Do not end the call until told to do so. Using this guide The wireless phone described in this guide is approved for use in a NMT 450 network. A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. Before you can take advantage of any of these Network Services, you must subscribe to these service(s) from your home service provider and obtain instructions for their use. Warning! Use only batteries, charger and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous. For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord. This apparatus is intended for use when supplied with power from ACP-7, ACP-9, LCH-9, HFU-2. Other usage will invalidate any approval given to this apparatus and may be dangerous. È1999 Nokia Mobile Phones. All Rights Reserved. 7 Quick start Before you can make a first phone call with your new Nokia 650 phone: 1 Attach the battery to your phone.

2 Charge the battery. Note: A new NiMH battery must be charged for at least 16 hours before you can use your phone. 3 To switch the phone on/ off, press . 4 To make a call: If your phone is within the network service area (if the symbol appears on the display), you can make a call. To make a call, key in the desired phone number (including the area code). Press to make a call. Press to end a call. 5 To receive a call: Press to answer a call. 8 È1999 Nokia Mobile Phones. All Rights Reserved.

6 To redial the last dialled number: Press Press twice. Clear. 7 To correct keypresses or to clear the entire display: 8 To adjust the earpiece volume: Use the keys on the side of the phone. To lock the keypad: Press Menu and . 9 To unlock the keypad: Press Unlock and . 10 Listening to voice messages: Press and hold to call your voice mailbox number.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)
<http://yourpdfguides.com/dref/3958558>

· Note: Make sure you have saved your voice mailbox number in the phone's memory with Menu 1 6 2 before you can call your voice mailbox with the key. Note: This function is operational only if the local network supports it. Check it with your service provider. 11 Reading and writing messages: · Press Menu, choose Messages, Select.

· To read: choose Inbox with Select, choose desired message, Read. · To write and send: choose Write messages with Select, key in message, press Options, choose OK, key in the recipient's phone number or Send, OK to send the search for it from the Phone Book, press message. · Note: This function is operational only if the local network supports it. Check it with your service provider. For more details about these and other functions, see the appropriate pages of this guide. ©1999 Nokia Mobile Phones. All Rights Reserved. 9 1. Your phone List of keys Power key Switches the phone on or off. When pressed briefly when the display is clear or during a call: Enters the list of profiles.

When pressed briefly while in the PhoneBook or menu functions: Turns the lights on for 15 seconds. Selection keys Each of these keys performs the function indicated by the text above it. Scroll keys Scroll through names, phone numbers, menus or setting options. Dials a phone number and answers a call. With display clear: Shows the most recently dialled number. Ends or rejects a call. Also exits from any function at any time and returns to display clear. Enter numbers and characters. Used for various purposes in different functions. The upper key increases and the lower key decreases the earpiece volume. - 10 ©1999 Nokia Mobile Phones. All Rights Reserved. Your phone The selection keys Below the display you will find two selection keys. Their functions depend on the guiding texts shown above the keys. For example, when the word Menu is shown above the key on the display.

The name of the person you are trying to call also appears on the display for 5 seconds, if it is stored in the phone's memory. When the number clears from the display and a tone is heard, the phone has transmitted the number. 4 Lift the phone to your ear, and wait until your call is answered, then speak. 5 When you have finished the call, press . International calls · Note: This function is operational only if the local network supports it.

Check it with your service provider. 14 ©1999 Nokia Mobile Phones. All Rights Reserved. Basic functions When calling abroad a + character can be inserted in front of the country code instead of the international access code. For example, if your international access code is 990, instead of dialling 990 44 81 123 456 + 44 81 123 456 can be used. 1 Press the key twice to insert a + character. If you also store all of your domestic phone numbers with the prefix +, you need not insert the phone number with the international access codes when you wish to call these numbers from abroad. Receiving a call When there is an incoming call, you may hear the ringing tone and the text Call appears on the display. It is possible to switch off the phone's ringing tones or to select a beep as an Incoming Call Alert, as it is possible to determine different Incoming Call Alert types for different situations. You can, for example, switch the ringing tone off - select the Silent option in certain profiles for privacy or other reasons.

Then only the lights will flash instead of a sound alert. (see Profiles, Ringing volume, Menu 3 1 2 3). An easy way to select different profiles is to press scroll through the list of profiles with the and select a suitable profile with OK. briefly and keys and If the caller can be identified (if the user and the network allow the caller's number to be identified), the caller's phone number (or the name, if it is stored in the memory) appears on the display together with the text Calling. · Note: This function, which enables the caller to be identified, is operational only if the local network supports it. Check the availability of the function with your service provider. If the call is diverted from another number, the > indicator appears on the right-hand side of the third display row. If the caller cannot be identified and the call is diverted, the message Diverted Call appears on the display. ©1999 Nokia Mobile Phones. All Rights Reserved.

15 · Note: The Call Divert function is operational only if the local network supports it. Check it with your service provider. 1 Press to answer a call. . 2 When you have finished the call, press If you don't answer the call, the message 1 Missed Call appears on the display.

Press List to check the number or a name of the missed call, which appears on the display, if the network supports caller identification. Press and hold Clear to clear the display. Last number redial The phone automatically stores the last 10 numbers (and associated names) that you have called or tried to call. To call the last called number: 1 Press and hold 2 Press to clear the display. twice to call the last called number.

To scroll through the 10 numbers last called: 1 Press and hold to clear the display. 2 Press to see the last number called or the name if it is stored with the number. 3 With the and numbers called and 4 with keys you can scroll through the last you can call the number which appears on the display. · Note: In Menu 2 4 you can select (Erase recent call lists) for the last numbers called to be cleared from the memory. 16 ©1999 Nokia Mobile Phones. All Rights Reserved.

Basic functions Adjusting the earpiece volume The volume of the earpiece can be adjusted during a call with the volume control keys on the side of the phone. Accessing the Phone Book You can access the stored names and phone numbers as well as the Phone Book functions in the following ways: · When the display is clear: Press Names. · During a call: Press Options, scroll with Names, and press Select. To exit from Phone Book while at its main level, press To quit a Phone Book function, press Back.

· or to Exit. To exit from Phone Book any time (except during a call), press Call waiting and conference call services The call waiting service allows you to make or answer a second call while you already have a call in progress. You can accept a second call or make a new call during a call with the and number keys. As the instructions for this vary from country to country, for more information about this, please, contact your service provider or network operator. The conference call service allows you to have a conversation with several callers at the same time. ©1999 Nokia Mobile Phones. All Rights Reserved. 17 3. Other essential functions Selecting a desired user profile It is possible to define different setting groups, so-called user profiles for different usage situations.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>

For more information on how to define user profiles, see Profiles, Menu 3. To select a different user profile: 1 Press briefly to enter the power-key menu. or . 2 Scroll through different user profiles with 3 Press OK to select a desired user profile or Exit if you wish to exit the power-key menu without changing the user profile. Voice messages · Note: This function is operational only if the local network supports it.

Check it with your service provider. Listening to voice messages 1 Press and hold to call your voice mailbox number. · Note: Make sure you have saved your voice mailbox number in the phone's memory with Menu 1 6 2 before you can call your voice mailbox with the key. 18 È1999 Nokia Mobile Phones. All Rights Reserved.

Other essential functions Text messages · Note: This function is operational only if the local network supports it. Check it with your service provider. Read messages 1 Press 2 Press 3 Press Menu to enter the Messages menu. Select to enter the Inbox submenu. Select again to view the Inbox submenu. 4 Use the and keys to scroll through messages you have received. Use Read to open a message. 5 With Options you can enter a list of options (Erase, Reply, Edit, Use number, Forward, Details). 6 With 7 Press 8 Press and keys you can scroll through those options. OK to select an option.

Back to go to the previous menu level. · Note: The Edit option may not be available if the message received was written using a keymap that does not exist in your phone. (The keymaps vary according to the languages available in your phone.) Writing and sending a message 1 Press 2 Press 4 Press Menu to enter the Messages menu. Select to enter the Write Messages submenu. Options. Send, OK if you wish to send the message. 3 After you have written the message, press 5 Or press Clear to erase the message letter by letter. If you press and hold Clear you can clear the whole display. 6 Key in the recipient's phone number or search for it from the Phone Book, press OK to send the message.

È1999 Nokia Mobile Phones. All Rights Reserved. 19 7 The message Message sent or Message sending failed appears on the display. 8 Press Back to go to the previous menu level or press Exit to leave the Messages menu. Keypad lock The phone's keypad can be locked to prevent accidental keypresses, e.g. when the phone is in your pocket. · Note: When the keypad is locked, calls may be possible to the emergency number pre-programmed into your phone (e.g. 112 or some other official emergency number).

To lock the keypad 1 Press Menu and . The Keypad locked message appears on the display. appears at the top of the display. When any key is pressed the Press Unlock and then * message is shown. To answer a call when the keypad is locked, press . During a call, the keypad is not locked, and you can operate the phone as usual. To unlock the keypad 1 Press Unlock and . When the keypad is unlocked, the Keypad Active message appears, and the phone operates in the usual way. 20 È1999 Nokia Mobile Phones. All Rights Reserved.

Other essential functions Adjusting phone tones: Profiles 1 Press Menu, choose Profiles. and OK. 2 Press Select, choose the desired profile with keys. 3 Press Options, choose Personalise, press 4 If you wish to change the Incoming call alert: Choose Incoming call alert, press Select, choose the desired alert type and press OK. 5 If you wish to change the Ringing tone or volume: Choose Ringing tone or Ringing volume, press Select, choose the desired setting, and press OK. È1999 Nokia Mobile Phones. All Rights Reserved. 21 4. Phone Book Keying in a name When you are asked for a name in Phone Book's "Add entry" function or in any other function: 1 Key in the name. Proceed as follows: · Press the key labelled with the character you want: once for the first character, twice for the second and so on.

· To switch between upper case and lower case, press quickly. ABC or abc at the top of the display indicates the selected case. · To insert a number, press and hold the key labelled with the desired number. To insert a space, press . · Pressing brings up a list of special characters.

Reach the desired character with or and press Use to insert it in the name. If the character list continues on the next screen, you can scroll between the screens with . 2 If you make a mistake, you can remove characters to the left by pressing Clear as many times as needed. Pressing and holding Clear clears the screen. and move the cursor left and right, respectively.

· Note: Different character sets are available in different languages. Keying in a phone number When you are asked for a phone number in Phone Book's "Add entry" function or in any other function: 1 Key in the digits of the phone number. 2 If you make a mistake, you can remove digits to the left by pressing Clear as many times as needed or press and hold Clear to clear the whole display. and move the cursor left and right, respectively. 22 È1999 Nokia Mobile Phones. All Rights Reserved. Phone Book Saving a phone number with a name (Add entry) You can save phone numbers with associated names in the Phone Book. 1 With the display clear, press 2 Scroll with or 3 Key in a name and press OK. OK. Names.

Select. to Add entry and press 4 Key in an area code and phone number, and press . If you want to use the phone number when abroad, add a + character (press twice) and the country code in front of the area code and phone number. TIP: Quick saving 1 With the display clear, key in the desired phone number and press Save. 2 Key in the associated name and press OK. Recalling a phone number and a name There are several ways to access the names and phone numbers stored in Phone Book. By Phone Book's search function 1 With the display clear, press 2 With Search highlighted, press Names. Select. for the last name 3 Key in the first character(s) of the desired name. for the first name, or 4 Press OK or beginning with the given character(s). 5 Press or until the desired name appears or is highlighted.

· Three periods (...) after the name or before the phone number mean that the name or number is not shown in full length. È1999 Nokia Mobile Phones. All Rights Reserved. 23 6 Press Detail and then or to see the name in full length and the phone number associated with the name. By scrolling when the display is clear 1 Press 3 Press or or . until the name appears. 2 Key in the first character of the name.

4 Press Detail and then or to see the name in full length and the phone number associated with the name. Deleting a name and a phone number (Erase) You can remove names and phone numbers from the Phone Book one by one or all at once. One by one 1 Recall the name and phone number that you want to remove. 2 Once you are in the Details of the given name or phone number: · Press Options.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>

· Scroll with or to Erase and press Select. · Press OK to confirm or Back to cancel the operation. Alternatively: With the display clear, press Names. Scroll to Erase and press Select. Scroll to One by one and press Select. Recall the desired name and/or phone number from Phone Book and press Erase.

Press OK to confirm. All at once 1 With the display clear, press 2 Scroll with or 3 Scroll to Erase all and press Names. Select. to Erase and press Select. 4 Scroll to the Phone Book to be cleared and press Select. 24 È1999 Nokia Mobile Phones. All Rights Reserved. Phone Book 5 At the prompt Are you sure?, press OK to clear the selected Phone Book or Back to cancel the operation. If you pressed OK, key in the security code and press OK. Caller groups You can set the phone to sound a specific ringing tone and flash the desired graphic on the display when you receive a call from a particular phone number.

For this, first include a phone number in the desired caller group. Then, define a ringing tone and graphic for this group. · Note: You can set the phone to ring only upon calls from phone numbers that belong to a specific caller group. See Menu 3, Profiles, Changing profile settings, Incoming call alert for details.

Including a phone number in a caller group 1 Recall the desired name and phone number.

2 Once you are in the Details of the given name or phone number: Press Options, scroll with or to Caller groups, and press Select. 3 Scroll to the desired caller group and press Select. Setting a ringing tone and graphic for a caller group 1 With the display clear, press 2 Scroll with Select. Names. or to Caller groups and press Select.

3 Scroll to one of the caller groups and press È1999 Nokia Mobile Phones. All Rights Reserved. 25 4 Scroll to one of the following functions and press Rename group Select. Key in the name and press Group ringing tone OK. Scroll to the desired tone and press OK. Preset is the tone selected for the currently selected profile. Group graphic: Scroll to On, Off, View graphic, Send graphic (send via Select. SMS), and press 5 If you selected Send graphic (network service), key in the recipient's phone number or recall it from Phone book and press OK. Speed dialling You can set any of the number keys speed dialling key. to to function as a For this, you need to assign a phone number to the desired number key.

Specifying a speed dialling key 1 With the display clear, press 2 Scroll with or Select. Names. to Speed dials and press 3 Scroll through the current speed dialling assignments. If a phone number is assigned to a key, the phone number (or name) and Options are shown. · If no phone number is assigned to a key, Assign is shown. Note: Assign is also shown when the phone has automatically assigned a phone number to a speed dialling key. 26 È1999 Nokia Mobile Phones. All Rights Reserved. Phone Book 4 Do one of the following: · To assign a phone number to an empty speed dialling key or change an assignment made by the phone: Press Assign, scroll to the desired name or phone number, and press OK. · To check or edit an existing speed dialling assignment: Press Options, scroll to one of the following functions and press Select.

View number Shows the phone number associated with the name. Change Allows you to change the assigned name and phone number. Scroll to the desired name or phone number and press OK. Erase Removes the speed dialling assignment that you have made. Press OK to confirm or Back to cancel the operation.

Using the speed dialling keys You can use the speed dialling keys in the following way: With the display clear, press the desired speed dialling key () and then · to Other Phone Book functions Editing name and phone number stored in Phone Book 1 Recall the name or phone number that you want to edit 2 Once you are in the Details of the given name or phone number: Press or for the phone number or name, press Options, scroll to Edit and press Select. 3 Edit the phone number (or name) and press OK. 4 If you edited the name, scroll to Replace (replaces original name) or Create entry and press Select. È1999 Nokia Mobile Phones.

All Rights Reserved. 27 Viewing the amount of free space (Memory status) You can check how many names and phone numbers are stored and can still be stored in the Phone Book. 1 With the display clear, press 2 Scroll with 4 Press Book: or or Names. Select. to Options and press 3 Scroll to Memory status and press Select. for the following information on the Phone · in use: number of currently stored names and phone numbers · free: number of names and phone numbers that still can be stored 28 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions 5. Menu functions The menu functions described in the following pages allow you to tailor the phone's functions to make them more suitable for your own use. With the menus and submenus you can check and change your phone's settings.

Most of the menu functions are provided with a brief help text. To view the help text, scroll to the desired menu function and wait for 10 seconds. Once the text appears, press More (or or) if you want to scroll the text manually. Pressing Back exits from the text. Accessing the menu functions To access a given menu function scroll through the menus with the keys until you reach the desired menu or enter the menu with its shortcut number. By scrolling 1 To enter the menu facility, press mode. 2 At the main menu level, press or menu, such as Settings, and press Menu in the standby to reach the desired Select to enter it. The menu number and sliding bar on the right side of the display shows the menu's position in respect to other menus at the same menu level. 3 If the menu contains submenus (such as Phone settings), reach the one you want with or and press Select. If the submenu contains a further set of submenus, repeat this step.

È1999 Nokia Mobile Phones. All Rights Reserved. 29 By shortcut Each menu, submenu and setting option is provided with a shortcut number. To enter any of the menus or submenus by its shortcut: 1 Press Menu in the standby mode. Menu and then the 2 Key in the menu shortcut number.

For example, to enter menu 3 2, press number keys 3 and 2. Exiting from the menu functions To exit from the menu facility while at the main menu level, press Exit. To return from a submenu to the previous menu level, press Back. To exit from the menu facility while in any menu or submenu, press Back. or press and hold 30 È1999 Nokia Mobile Phones.

All Rights Reserved. Menu functions List of menu functions 1 Messages (Menu 1) 1 Inbox 2 Outbox 3 Write messages 4 Message settings 1 Set_1 (set specific settings) 2 Set_2 (set specific settings) 3 Set_3 (set specific settings) 1 Message centre number 2 Messages sent as 3 Message validity 4 Message encoding 5 Rename this set 5 Retrieve messages 1 Set_1 2 Set_2 3 Set_3 6 Voice messages 1 Listen to voice messages 2 Voice mailbox number 2 Call register (Menu 2) 1 Missed calls 2 Received calls 3 Dialed numbers 4 Erase recent call lists 5 Show call duration 1 Last call duration 2 All calls' duration 3 Received calls' duration 4 Dialed calls' duration 5 Clear timers 3 Profiles (Menu 3) 1 General 1 Activate 2 Personalise 1 Incoming call alert 2 Ringing tone 3 Ringing volume Vibrating alert 1 Message alert tone Keypad tones Warning and game tones 8 Lights 2 9 Automatic answer 3 3 Rename 4 4 5 6 7 1 This profile setting is available only when the phone is used with a special battery BMS-2V.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>

2 This profile setting is available only in the Car profile when the phone is used with the car kit CARK-91. 3 This profile setting is available only in the Car or Headset profiles when the phone is used with the car kit CARK-91 or headset HDC-9. 4 This profile setting is not available in General, Car or Headset profiles. ©1999 Nokia Mobile Phones. All Rights Reserved. 31 2 3 4 5 6 7 Silent Meeting Outdoor Pager Car 1 Headset 2 4 Settings (Menu 4) 1 Alarm clock 2 Clock 1 Show/Hide clock 2 Set the time 3 Update options 1 Clock updated by phone 2 Clock updated by network 4 Time format 1 24-hour 2 12-hour 3 Call settings 1 Anykey answer 2 Speed dialling 3 Call waiting options 4 Own number sending 1 Preset 2 Own setting 5 Speech scrambling 1 This profile is shown only if the phone is or has been used with the car kit CARK-91. 2 This profile is shown only if the phone is or has been used with the headset HDC-9. 3 This menu option is not available if you have selected the clock to be updated by network (Menu 4 2 3 2) 4 Phone settings 1 Language 2 Country 3 Changing country code 1 Semi-autom.

2 Manual 4 Service codes 1 Call divert codes 2 Own number sending code 3 Call waiting code 5 Welcome note 6 Display contrast 5 Security settings 1 PIN code request 2 Change PIN code 3 Call barring 1 Barring on/off 2 Settings 3 Selected sets 6 Phone information 1 Own number 2 Network ID 3 SIS Reference 7 Restore factory settings 5 Call divert (Menu 5) 1 Divert all voice calls without ringing 2 Divert when busy 3 Divert when not answered or not reachable 4 Cancel all diverts 32 ©1999 Nokia Mobile Phones. All Rights Reserved. Menu functions 6 Games (Menu 6) 1 Memory 1 Level 2 Continue 3 Last view 4 New game 5 Top score 6 Instructions 2 Snake (submenus as above) 3 Logic 1 Level 2 Continue 3 Last view 4 New game 5 Instructions 4 React (submenus as in Memory and Snake) 7 Calculator (Menu 7) 1 2 3 4 5 6 7 8 Equals Add Subtract Multiply Divide To domestic To foreign Exchange rate 8 Calendar (Menu 8) 1 2 3 4 5 6 View day Make note Erase notes View all Go to date Set the date 9 FM Radio (Menu 9) 1 Search (if radio is turned on for the first time) 2 or 1 Radio Off (radio on and radio station names saved in the memory) 2 Search 3 88.8 MHz (max. of 5 radio station frequencies and/or names appear if saved in the phone's memory) 1 FM Radio operates only with the headset HDC-9. ©1999 Nokia Mobile Phones. All Rights Reserved. 33 Descriptions of the menu functions 1 Messages (Menu 1) · Note: This function is operational only if the local network supports it. Check it with your service provider. This menu enables you to use your phone's text (SMS) messages and voice messages functions.

To enter this menu: With the display clear, press then Select. Text messages The SMS network service allows you to send short text messages to phones provided with SMS capability. Message indicators When is displayed continuously, you have received a text message. When flashes there is no more space for new messages. Use the "Erase" function in the "Inbox" or "Outbox" submenu to make some space.

Voice messages The voice message service allows you to have an own voice mailbox held by your service provider. Menu (Messages appears) and 2 Submenu structure in Menu 9 varies depending on whether the radio is turned on (for the first time) and whether radio station information has been saved in the memory. 34 ©1999 Nokia Mobile Phones. All Rights Reserved. Menu functions Inbox (Menu 1 1) Reading a text message When you receive a text message, and the number of new messages followed by message(s) received will appear and a message alert tone will be heard.

Received messages can be viewed in the "Inbox" submenu. When a note of a new message appears on the display: Press Read to read the message immediately or Exit to view it later. Or you can view the message later: In the Messages menu, scroll with press Select. or to Inbox, and Use or to browse through the message and related information, such as sender's phone number and reception date and time. While reading the message, you can access the following functions by pressing Options. Scroll to the desired function and press OK. Erase Deletes the message. Press OK to confirm the operation. Reply Allows you to send a reply to the sender of the message. Key in your message, press Options, scroll to the desired function, and press OK.

You can select from the same options as in "Write messages" (Menu 1 3). Edit Allows you to change the message. Edit the message, press Options, scroll to the desired function, and press OK. You can select from the same options as in "Write messages" (Menu 1-3). · Note: The Edit option may not be available if the message received was written using a keymap that does not exist in your phone. (The keymaps vary according to the languages available in your phone.)

©1999 Nokia Mobile Phones. All Rights Reserved. 35 Use number Extracts a phone number from the message for calling or saving. If there are several numbers, scroll to the desired one and press OK.

Press Save to save the number in Phone Book or to call it. Forward Allows you to send the message further. When you have read the message and wish to forward it, select Forward option with OK, scroll with or through a list of send options. You can select from the same options as in "Write messages" (Menu 1-3). If you decide to send the message, enter the phone number or search it from the Phone Book with Search.

Press OK to send the message. Details Shows details of the message. Use or for some or all of the following: sender's name (if it is available) and phone number and time stamp (i.e. date and time when the message was sent).

) Outbox (Menu 1 2) Sending a message and Write messages (Menu 1 3) You can write and send text messages within the "Write messages" submenu. You can save your own messages in the "Outbox" submenu (Menu 1-2) for later use. · Note: When you save messages in the Outbox, the space for messages in the Inbox decreases. Send or erase messages for more space when necessary. To write and send a text message: 1 In the Messages menu, scroll with messages and press Select. or to Write 2 Key in a message of up to 160 characters. The number of remaining characters is shown at the top of the display. 36 ©1999 Nokia Mobile Phones. All Rights Reserved. Menu functions 3 When you have finished writing, press Options for the following functions.

Scroll to the desired function and press OK. Send Sends the message. Key in the recipient's phone number or recall it from Phone Book and press OK. Press OK to send the message. Send by set Allows to send the message by using a selected set. Scroll to the desired set and press Select. Select Numeric (for phone number) or Alphanumeric (for e-mail address, for example) and press OK.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>

Key in the desired phone number or alphanumeric address (if supported by your service provider) and press OK. Save The message is saved in the Outbox. Clear screen Removes from the display all the characters that you have keyed in.

To view the messages you have saved: In the Messages menu, scroll to Outbox and press Select. Scroll to the desired message. Pressing Read shows the message. Pressing Options while reading allows access to the same functions as in Inbox (Menu 1-1), except for Reply. Message settings (Menu 1 4) There are two kinds of message settings: those specific to each setting group ('set') and those common to all text messages.

To enter these settings: · In the Messages menu, scroll with settings and press Select. or to Message È1999 Nokia Mobile Phones. All Rights Reserved. 37 Set specific settings A setting group or a 'set' is a collection of settings needed for sending text messages. You can, for example, send a text message as a fax or an e-mail, if supported by your service provider, by simply selecting the set in which you have predefined the proper settings for fax transmissions.

Set_1 - Set_3 (Menu 1 4 1-1 4 3) Within these submenus you can change the settings of a particular set. To access these settings: 1 In the Message settings submenu, scroll with to the desired set and press Select. or · Note: The set can have any name that you can change with the "Rename this set" function. 2 Scroll to one of the following settings and press to enter it. Message centre number (Menu 1 4 1 1) Stores the phone number of the message centre needed for sending text messages. You obtain this number from your service provider. Key in or edit the phone number (or recall it from Phone Book) and press OK. · Note: the home service center saved with this submenu is the default service center number and it is automatically used for sending messages unless you use a different set of message settings. Messages sent as (Menu 1 4 1 2) You can request the network to convert you text messages into email, fax or paging format (if the local NMT 450 network supports that format). Scroll with and to the desired format and press OK.

Select 38 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions In order to receive a converted message, the recipient must have an appropriate terminal device available. Message validity (Menu 1 4 1 3) This network service allows you to set the length of time that your text messages are stored at the message centre while attempts are made to deliver them. Scroll with or to the desired time and press OK. Message encoding (Menu 1 4 1 4) This menu function allows you to set the messages encoding On or Off and to change the key used for encoding. You can either use the encoding key provided with your phone or use the phone's default encoding key. 1 Use the and keys to select the encoding On or Off. 2 If you select encoding to be On, the submenu Default key, New key (and Current key, if the key has been entered earlier) appear on the display. Use the and keys to select the desired option.

3 You can either accept the use of the default key or current key with OK or key in a new key and then press OK to accept it. Code error message appears on the display if you entered an incorrect code. (The code can be maximum of 10 digits and it cannot be all zeros.) · Note: Network support of message encoding may vary, which cannot guarantee message encoding in all conditions, even when this feature is enabled. · Note: Local laws may apply to encoding messages.

Do not use this feature illegally. Rename this set (Menu 1 4 1 5) Allows you to rename the set. Key in the new name (of up to 10 characters) and press OK. È1999 Nokia Mobile Phones. All Rights Reserved.

39 Retrieve messages (Menu 1 5) This menu function is needed only when you are in a country where the local network operator does not support the SMS function. It allows you to retrieve your SMS messages from your own operator's service centre or some other service center by placing a call to the particular service center. You can save different settings, according to the service center numbers in different sets. When you wish to retrieve messages, your phone suggests a list of saved sets. You can scroll the list with the and keys and select a suitable set with OK. After successful retrieval of a message, the on the display. indicator appears If the message Retrieval failed appears on the display, you can try to retrieve messages later. If there are no messages in the SMS service centre, the No Messages text appears on the display. Voice messages (Menu 1 6) To enter this submenu: In the Messages menu, scroll with messages and press Select. or to Voice Listen to voice messages (Menu 1 6 1) When you enter this submenu, the phone calls your voice mailbox at the phone number stored within Menu 1 6 2.

or to · In the Voice messages submenu, scroll with Listen to voice messages and press Select. TIP: Alternatively, press and hold when the display is clear. 40 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions Voice mailbox number (Menu 1 6 2) Within this submenu you can save the phone number of your voice mailbox. You obtain this number from your service provider. 1 In the Voice messages submenu, scroll with or Voice mailbox number and press Select. to 2 Key in the phone number or recall it from Phone Book (or edit the existing number) and press OK. È1999 Nokia Mobile Phones. All Rights Reserved.

41 2 Call register (Menu 2) To enter this menu: Press Menu, scroll with register, and press or to Call Select. Options within submenus 2 1 - 2 3 In these submenus, you can access the following functions by pressing Options. Scroll to the desired function and press Select. Time of call Shows the date and time when the call was registered by the phone. If the same number was registered several times, you can see each call time using or . Edit number Allows you to first edit the displayed name or phone number and then save it in Phone Book. Edit the number and press Save. Edit the name and press OK. Save Saves the displayed phone number in Phone Book. Key in the associated name and press OK.

Erase Deletes the displayed phone number from the list. Press to confirm or Back to cancel the operation. OK View number Shows the phone number associated with the displayed name. TIP: You can dial a listed phone number by pressing with the desired name or number on the display. 42 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions Missed calls (Menu 2 1) You can view the phone numbers for the last ten people who tried unsuccessfully to call you. 1 In the Call register menu, scroll with Missed calls and press Select. 2 Scroll with or through the list. or to Alternatively: When a note of missed calls is displayed, press List.

· Note: This function is operational only if the local network supports it.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>

Check it with your service provider. Received calls (Menu 2 2) You can view the ten phone numbers from which you have most recently accepted calls (network service). 1 In the Call register menu, scroll with Received calls and press Select. 2 Scroll with or through the list. or to . Note: The phone only registers missed and received calls when it is switched on and is used within the network's service area. Only those numbers that can be identified are registered i.e. if the user and the network allow the number to be sent. . Note: This function is operational only if the local network supports it.

Check it with your service provider. Dialed numbers (Menu 2 3) You can view the ten phone numbers that you have most recently dialed, i.e. called or tried to call. 1 In the Call register menu, scroll with or Dialed numbers and press Select.

2 Scroll with or through the list. and then scroll Alternatively: With the display clear, first press with or . to È1999 Nokia Mobile Phones. All Rights Reserved.

43 Erase recent call lists (Menu 2 4) You can delete all phone numbers appearing in Menus 2-1, 2-2 and 2-3.

1 In the Call register menu, scroll with Erase recent call lists and press 3 Press OK to delete the phone numbers or cancel the operation. or to Select. Back to 2 Scroll to All, Missed, Dialed, or Received. Show call duration (Menu 2 5) You can view the duration of your calls and clear the timers. 1 In the Call register menu, scroll with call duration and press Select. or to Show 2 Scroll to one of the following functions: Last call duration (Menu 2 5 1) Shows the duration of the last (or current) outgoing or incoming call in hours, minutes and seconds. All calls' duration (Menu 2 5 2) Shows the total duration of calls made and received. Received calls (Menu 2 5 3) Shows the total duration of calls received. Dialed calls (Menu 2 5 4) Shows the total duration of calls made. Clear timers (Menu 2 5 5) Resets all timers.

Press OK, key in the security code, and press OK. . Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, and so forth. 44 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions 3 Profiles (Menu 3) Within this menu you can set the phone tones and lights to function in the desired manner in different operating environments. All you need to do is select the desired user environment (profile). The phone comes with a pre-programmed set of profiles. You can rename the profiles and change the corresponding settings to suit your requirements. When the phone is in the standby mode, the name of the currently selected profile is shown (except when "General" is selected). Accessing the profiles You can set the desired profile on either within this menu or, when the display is clear, as follows: 1 Press quickly.

2 Scroll with or to the desired profile (e.g. Meeting). Or: Press quickly as many times as necessary. Switch off! turns off the phone.

3 Press OK (or press and hold) to select the profile. Changing profile settings (such as incoming call alert) 1 Press press Menu, scroll with Select. or to Profiles, and . 2 Scroll to the desired profile with General is the default setting. 3 Press Options for the following functions.

Scroll to the desired function and press OK. È1999 Nokia Mobile Phones. All Rights Reserved. 45 Activate Sets the selected profile on. This option is not available with Headset or Car profiles as they are automatically activated when the phone is connected to headset HDC-9 or to car kit CARK-91. Personalise Allows you to change the following settings of the selected profile. Scroll to the desired setting and press Select. Incoming call alert Defines how the phone notifies you of an incoming voice call. Scroll with or to one of the following options and press OK: Ringing The phone alerts by ringing. Ascending The phone starts ringing at a low volume and then gradually raises the volume to the selected volume level.

Ring once The phone rings once. Beep once The phone beeps once. Caller groups With this submenu you can select certain caller group, so that your phone will alert only upon calls from phone numbers belonging to those caller groups. Scroll with or through the list of caller groups and use Mark to mark or Unmark to unmark the desired caller groups. Press Back to exit the submenu. To save the changes you made to caller groups, press Yes. To ignore the changes, press No. Off The phone does not ring when a call comes in. 46 È1999 Nokia Mobile Phones. All Rights Reserved.

Menu functions Ringing tone Sets the phone's ringing tone. Scroll with or to the desired tone (a sample is sounded) and press OK. Ringing volume Sets the phone's ringing volume. Scroll with or to the desired level (a sample is sounded) and press Your phone has five different ringing volume levels available. to OK.

Vibrating alert Sets the phone (when provided with a special battery) to vibrate when a voice call comes in. The vibrator does not work when the phone is connected to a charger. Scroll with or to On or Off and press OK. Message alert tone Sets the ringing tone for text messages. Scroll with or to the desired tone (a sample of the sound is heard) and press OK.

Keypad tones Sets the volume level for keypad tones. Scroll with or to the desired level (a sample of the sound is heard) and press OK. Your phone has four different ringing tone levels available. Warning and game tones Sets the phone to sound tones, e.g. when the battery is running out of power or when you play one of the games in the phone. This setting has no effect on the tones related to network services. Scroll with or to On or Off and press OK. Lights The display and keypad lights can be set to be On or Automatic (the lights will be automatically turned off 15 seconds after the last key press or incoming call alert). Scroll with or to select either On or Automatic option and accept the desired option with OK.

@@@ Scroll with or to On or Off and press OK. Rename Allows you to edit the name of the selected profile. Key in the new name and press OK.

@@@ Silent Same Personalise options as referred to above. Meeting Same Personalise options as referred to above. Outdoor Same Personalise options as referred to above. Pager Same Personalise options as referred to above. Car Same Personalise options as above. @@@@ For setting the time format, see Clock (Menu 4 2). 1 In the Settings submenu, scroll with clock and press Select.

@@ Key in the time in hours and minutes and press OK. @@ Selecting Off turns off the alarm function. @@ and flashes its lights.

@@@@@ 1 In the Settings submenu, scroll with and press Select. Show/Hide clock Allows you to set the time display on or off.

@@@ Time format: Allows you to select the 12-hour or 24-hour time format. Scroll to either format and press OK. . Note: If the battery is removed from the phone for a long time, you may need to set the time again.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>

OK. or to Clock OK.

2 Scroll to one of the following functions and press Call settings (Menu 4 3) To enter this submenu: · In the Settings menu, scroll with settings and press Select. or to Call 50 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions Anykey answer (Menu 4 3 1) When this function is selected, you can answer an incoming call by pressing any key briefly, except and . 1 In the Call settings submenu, scroll with Anykey answer and press Select. 2 Scroll to On or Off and press OK. or to Speed dialling (Menu 4 3 2) When this function is selected, you can call a phone number assigned to a speed dialling key (any of 2 to 9) by pressing and holding the corresponding number key. 1 In the Call settings submenu, scroll with Speed dialling and press Select. 2 Scroll to On or Off and press OK. or to Call waiting options (Menu 4 3 3) With this menu function you can set the Call Waiting function to be either activated (Activate) or deactivated (Cancel).

With Status option you can check whether the Call waiting is activated or not. 1 Scroll with or to either Activate, Cancel or Status option and press Select. 2

Once you have selected this function to be either activated or cancelled, your phone will automatically make a call to a number provided by your local operator. From this number you will hear a message confirming that the Call waiting function for your phone is either selected to be activated or not. 3 Press to finish the call after you have heard the message. Own number sending (Menu 4 3 4) You can select whether your phone number is sent to the number you are calling or not. 1 In the Call settings submenu, scroll with or Own number sending and press Select. to È1999 Nokia Mobile Phones. All Rights Reserved.

51 2 Scroll to one of the following options Preset, Own setting and press OK.

Or press Back to exit the submenu. If you select Preset options, your phone number is shown in the number you are calling (unless you asked your number to be secret) and no service codes are needed. If you select Own setting option, a service code for activating this service is needed. (See Menu 4 4 4 2, Own number sending code.) Speech scrambling (Menu 4 3 5) When the Speech scrambling is activated, the phone scrambles the speech to increase calling security. · Note: this feature scrambles conversation only between your phone and the nearest base-station it interacts with. 1 In the Call settings submenu, scroll with or Speech scrambling and press Select. 2 Scroll to one of the following options On, Off and press OK. 3 During a call appears on the display if the scrambling is On, appears if the scrambling is Off. · Note: Network support of speech scrambling may vary, which cannot guarantee speech scrambling in all conditions, even when this feature is enabled.

· Note: Local laws may apply to scrambling conversations. Do not use this feature illegally. to Phone settings (Menu 4 4) To enter this submenu: In the Settings menu, scroll with settings and press Select. or to Phone Language (Menu 4 4 1) To enter this menu: Press Menu, scroll with Select. or to Settings, and press 52 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions You can select the language in which the display texts are shown. 1 In the Phone settings submenu, scroll with or to Language and press Select to change the language. Country (Menu 4 4 2) When you are abroad in a country where a NMT 450 network operates and you wish to use your phone, you have to change the phone's country code. 1 Use the scroll keys or available country codes.

to scroll through the list of 2 Press OK to select a country. The selected country code is displayed on the right hand side of the third display row. Changing country code (Menu 4 4 3) With this menu function you can choose the country code updating to be either semi-automatic or manual. The country code has to be updated when you go abroad if you wish to use your phone there. 1 Once you are in this menu, use the scroll keys or to scroll between available options Manual or Semi-autom. 2 Press Select to select either of the options. 3 If you select Manual, you can change the country code with Menu 4 4 2, Settings, Phone Settings, Country. 4 If you select Semi-autom., the phone will automatically suggest a new country code once your phone is registered to a network in a new country. · Note: if you had selected Semi-autom.

option and your phone can register to another network in a neighbouring country, a pop-up menu will automatically appear on the phone's display. With this menu the phone allows you to select a new country code, if necessary. To select a new country code, press Select. A list of available country codes appears.

Use the scroll keys or to scroll through the list of country codes and press Select to select a suitable code.

È1999 Nokia Mobile Phones. All Rights Reserved. 53 Service codes (Menu 4 4 4) Service codes are needed for activating telecommunication services such as Call diversion, Own number sending and Call waiting. · Note: codes vary between different NMT 450 networks. Please check the correct codes from your local network operator codes.

The phone will automatically add any special characters, such as * or # the codes may have. You need to enter only the numbers. For example, if your service provider gives you a code *21#, you need to key in only the numbers 2 and 1. 1 Scroll through the list of submenus with press Select to enter a submenu. Call divert codes (Menu 4 4 4 1) 1 Press Select to enter the different call divert code options. 2 Scroll through the list of different call divert code options with or keys and press Edit to view the different call divert codes. 3 You can check and edit a previously entered code for activating call diversion or to enter a new code. 4 Press OK to accept a correct code or erase the code with Clear. 5 Return to the previous menu level with Own number sending code (Menu 4 4 4 2) 1 Press Edit to check and edit a previously entered code for own number sending or to enter a new code. 2 Press OK to accept a correct code or erase the code with Clear.

3 Return to the previous menu level with Call waiting code (Menu 4 4 4 3) 1 Press Edit to check and edit a previously entered code for call waiting or to enter a new code. 2 Press OK to accept a correct code or erase the code with Clear. 3 Return to the previous menu level with Back. Back. Back. or keys and 54 È1999 Nokia Mobile Phones. All Rights Reserved. Menu functions Welcome note (Menu 4 4 5) You can compose a message (up to 36 characters) which appears on the display when the phone is switched on. 1 In the Phone settings submenu, scroll with keys to Welcome note and press Select. 2 Key in the message.

3 Press Options, scroll with Erase, and press OK. or keys to Save or or Display contrast (Menu 4 4 6) You can adjust the phone's display contrast with this menu.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)
<http://yourpdfguides.com/dref/3958558>

1 Press Select to adjust the display contrast. keys to either increase or decrease the 2 Use and contrast. 3 Press OK to accept the suitable contrast level. The phone returns to the previous menu level. 4 Press Back to return to the previous menu level without changing the contrast. Security settings (Menu 4 5) You can protect your phone against unauthorised use using the functions within this submenu. To enter this submenu: In the Settings menu, scroll with settings and press Select. or to Security PIN code request (Menu 4 5 1) With this menu function you can select whether the PIN code is required when the phone is switched on.

Change PIN code (Menu 4 5 2) With this menu function you can change the PIN code. 1 In the Security settings submenu, scroll with to Change PIN code and press Select. or È1999 Nokia Mobile Phones. All Rights Reserved. 55 2 Key in the current code and press 3 Key in the new code and press 4 Key in the new code again and press · Note: The default PIN code is 0000. OK. OK. OK. Call barring (Menu 4 5 3) This function allows you to restrict the making of calls with your phone. In the Security settings submenu, the phone requests for the PIN code.

After the correct PIN code is entered you can scroll with or to the following submenus and press Select. You can add, edit, delete, select or unselect and view phone numbers or phone number groups to be barred. Phone numbers to be barred can be determined in the number sets. You can determine a maximum of five number sets Barring on/off (Menu 4 5 3 1) With this menu function you can activate or deactivate Call Barring if you have activated (selected) at least one number set. Settings (Menu 4 5 3 2) This menu allows you to select, edit or delete number sets that determine the phone numbers to be barred. Select Sets (Menu 4 5 3 2 1) This menu has five different sets you can select or unselect. When you make modifications to settings, the phone prompts for confirmation of changes when you wish to exit the submenu. Edit Sets (Menu 4 5 3 2 2) This menu function allows you to add new numbers in the phone number sets or edit the already determined phone number sets. You can add several phone numbers or phone number prefixes in one set by separating the phone numbers/prefixes with *. For example, phone number 56 È1999 Nokia Mobile Phones.

All Rights Reserved. Menu functions 0912345 and prefix 990 are added into a set as follows: 0912345*990. You can key in a set a total of 30 digits, including * characters. Delete Set (Menu 4 5 3 2 3) With this menu function you can delete phone number sets. Selected sets (Menu 4 5 3 3) This menu allows you to view the list of all selected sets.

If you have not selected any set, the message No sets selected appears on the display. · Note: When calls are barred, calls may be possible to certain emergency numbers in some networks (e.g. 112 or other official emergency number). · When you make a call and a barring mode is selected, the phone may display a reminder of this.

Phone information (Menu 4 6) Own number (Menu 4 6 1) You can check the phone's own number with this menu. Network ID (Menu 4 6 2) The network identifier is displayed to the user. SIS reference (Menu 4 6 3) The phone's SIS security reference code is displayed to the user. The reference code is used by the NMT network to register the phone. Restore factory settings (Menu 4 7) Within this submenu you can return the menu functions to their factory settings. Note that this function has no effect on Phone Book functions. 1 In the Settings menu, scroll with factory settings and press 2 Key in the security code and press or to Restore Select. OK. È1999 Nokia Mobile Phones. All Rights Reserved.

57 5 Call divert (Menu 5) 1 The Call divert network service allows you to direct your incoming calls to another phone number. Press Menu, scroll with or to Call divert, and press Select. 2 Scroll to one of the following divert modes and press Select. 3 Once you have selected to activate/cancel a certain divert mode or wish to check its status (whether the divert is activated or not), your phone will automatically make a call to a number provided by your local operator. From this number you will hear a message confirming that the divert mode is either activated or cancelled. 4 Press to finish the call after you have heard the message. · Note: check with Menu 4 4 4 Setting, Phone Settings, Service codes that the codes for call divert are correct. Your local service provider can give you the correct codes. · Note: This function is operational only if the local network supports it. Check it with your service provider.

Divert all voice calls without ringing (Menu 5 1) All voice calls are diverted without phone alerting. Divert when busy (Menu 5 2) All voice calls are diverted when the phone is busy. Divert when not answered or not reachable (Menu 5 3) Voice calls are diverted when your phone is switched off or outside of the network service area. 58 È1999 Nokia Mobile Phones. All Rights Reserved.

Menu functions Cancel all diverts (Menu 5 4) All diverts are set to Off. · Note: If you selected Cancel all diverts, the following steps will not be available. 1 Scroll to one of the following functions and press OK: Activate, Cancel, Status (shows call types affected by selected divert mode). 2 Do one of the following: · If you selected Activate, select the phone number to which you wish to divert the calls. Scroll to either of the following options and press OK: Voice mailbox Voice calls are diverted to your voice mailbox.

Other number Calls will be diverted to the desired phone number. Key in the phone number or recall it from Phone Book, and press OK. Number (if available) shows the phone number Pressing Detail to which the calls are diverted. Pressing (available only in "Divert when not answered") and then selecting Delay shows the time after which calls are diverted. È1999 Nokia Mobile Phones. All Rights Reserved. 59 6 Games (Menu 6) Now you can use your phone not only for communication but also for fun, as your phone is equipped with four games. Remember! Your phone must be switched on to use this function. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger. 1 Press Menu, scroll with Select.

or to Games, and press Select. Select. 2 Scroll to the desired game and press 3 Scroll to one of the following options and press 4 All four games have either all or some of the following options: Level Allows you to set the difficulty level. Select the desired level with or and press OK. Continue Allows you to resume a paused game. Available only when there is a game paused. Last view Shows the final view of an ended game immediately after the game. New game Starts a new game session. Top score Shows the highest score of the game in your phone. Available only in the games which keep track of the score.



[You're reading an excerpt. Click here to read official NOKIA 650 user guide](http://yourpdfguides.com/dref/3958558)

<http://yourpdfguides.com/dref/3958558>