




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 7205 INTRIGUE. You'll find the answers to all your questions on the NOKIA 7205 INTRIGUE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 7205 INTRIGUE
User guide NOKIA 7205 INTRIGUE
Operating instructions NOKIA 7205 INTRIGUE
Instructions for use NOKIA 7205 INTRIGUE
Instruction manual NOKIA 7205 INTRIGUE

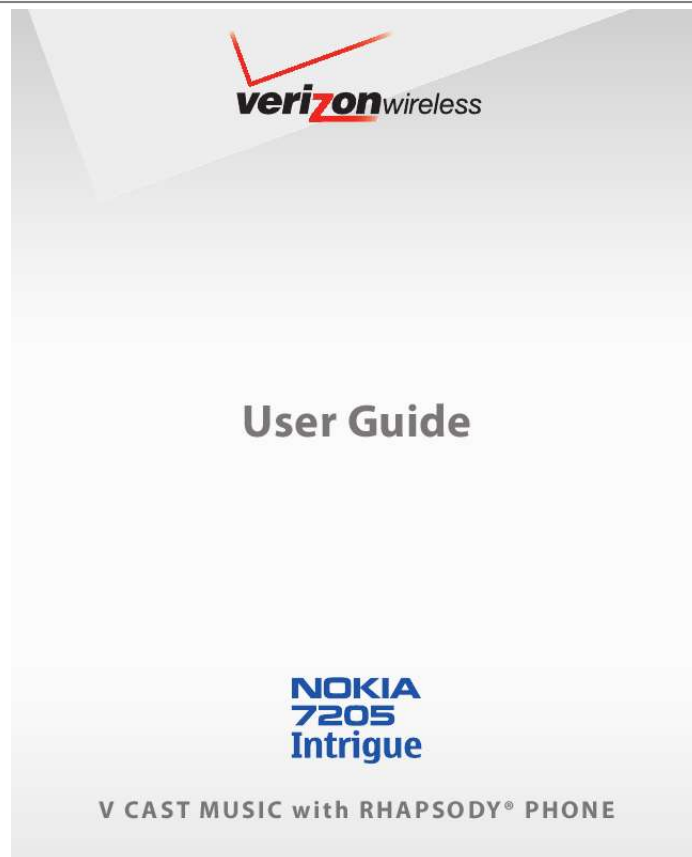

[You're reading an excerpt. Click here to read official NOKIA 7205 INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)
<http://yourpdfguides.com/dref/4210938>

Manual abstract:

@@Nokia tune is a sound mark of Nokia Corporation. @@@@cdma2000 is a registered certification mark of the Telecommunications Industry Association. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. microSD is a registered trademark of the SD Card Association, Inc. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT.**

NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details, and availability of language options. Export controls This device may contain commodities, technology, or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment. The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications.

BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS. Issue 1, 9213749 Table of Contents Safety

.....
.....
.....

..... 9 Section 1: Get Started...

.....
.....
.....

.... 13 Install or Remove the Battery .

.....
.....
.....

..... 14 Insert or Remove microSD Card.....

.....
.....
.....

.....
.....
.....
.....

..... *15 Switch Your Device On or Off* ..

.....
.....
.....
.....
.....
.....
.....
.....

.... *16 Charge the Battery*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

16 Antenna

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. *17 Connect the Headset*

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... *18 Wrist Strap* ..

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 18 Flow to Read This Guide .

.....

.....
.....
.....

.....
.....
.....

..... 19 Get Help.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 20 Section 2: Your Device

.....
.....
.....

.. 21 21 24 27 27 28 29 30 30 30 31 Keys and Parts ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
. *Display Screen*

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

Airplane Mode

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... *Find My Phone Number*

.....
.....
.....

.....
.....
.....

.....
. *Section 3: Call Functions*

.....
.....

.....
.....
.....

..... *28 Make a Call.*

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

..... *Answer or Reject a Call.*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *Options During a Call*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. *Mute Function ...*

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. *Speakerphone*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *Recent Calls....*

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *Section 4: Text Entry*

.....

.....

.....

.....

.....

.....

..... 33 33 34 34 35 35 36 39 41 43 45 46 *Entry Modes* .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *Abc and ABC Modes...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *. Word Mode.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
. Number Entry...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. Symbol Entry ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.... Section 5: Contacts

.....
.....
.....

.....
.....
.....

. 36 Habitat Mode.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... Create New Contacts...

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
..... *Contact List*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *Contact Groups* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

Speed Dials

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

Emergency Contacts

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... Section 6: Messaging.....

.....
.....
.....

..... 48 Text Messages...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 48 Picture or Video Message.....

.....
.....
.....
.....
.....
.....
.....
.....

. 49 Message Folders...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 51 Voicemail...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

. 52 Visual Voice Mail

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

52 Mobile Instant Messaging.....

.....
.....
.....

.....
.....
.....
.....

... 53 Email Message..

.....
.....

.....
.....
.....

.....
.....
.....
.....

.. 53 Chat ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

53 Blogs.....

.....

.....
.. *Sounds Settings*..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... *Display Settings*.

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. *Habitat*....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... *Phone Settings*.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *Call Settings* ..

.....

.....
.. *Section 9: Tools* ...

.....

.....

.....

.....

.....

.....

.....

.... *79 Voice Commands* .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... *Calculator*..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. *Calendar*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. *Calendar Preview*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Alarm Clock

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... Stopwatch.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... World Clock

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Notepad

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

. Section 10: Accessories.....

.....
.....
.....

.....
.....
.....

.... 86 Section 11: Battery and Charger Information.....

. 87 Charging and Discharging

.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 87 Nokia Battery Authentication Guidelines

.....
.....
.....
.....

..... 89 Care and Maintenance .

.....
.....
.....

.....
.....
.....
.....

..... 92 Additional Safety Information

.....
.....
.....

.....
.....
.....

... 94 Index..

.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

- . 104 8 Safety Safety Read these simple guidelines. Not following them may be dangerous or illegal. Read the costall the Battery Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached. 1. To remove the back cover, with the back of the device facing you, push down and slide the back cover toward the bottom of the device. 2. Insert the gold-colored contacts of the battery into the battery slot, and push down the other end of the battery to snap it into place.
3. To replace the back cover, align the cover tabs with the slots in the device, and slide the back cover toward the top of the device until the cover is securely in place. 14 Insert or Remove microSD Card Remove the Battery Always switch the device off and disconnect the charger before removing the battery. 1. Remove the back cover. 2. Insert your finger into the finger grip, and lift the battery from its compartment. 3. Replace the back cover. Insert or Remove microSD Card Use only compatible microSD cards (sold separately) approved for use with this device.

Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



[You're reading an excerpt. Click here to read official NOKIA 7205 INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)
<http://yourpdfguides.com/dref/4210938>

Insert the microSD Card 1. Lift open the microSD slot cover. 2. Insert the card firmly into the card slot with the gold-colored contacts facing up and towards the device. The card clicks into place. 3. Re-insert the microSD slot cover. Get Started 15 Remove the microSD Card 1.

Lift open the microSD slot cover. 2. Firmly press against the card until it releases from the card slot, and slide it out. Important: Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

Switch Your Device On or Off To switch your device on or off, press and hold the End key () for at least 3 seconds. Charge the Battery 1. Plug the charger transformer into a standard wall outlet. 2. Open the charging port on the left side of the device.

16 Antenna 3. Insert the charger output plug into the port. The battery strength indicator starts scrolling, showing the battery is charging. 4. When the device is completely charged, unplug the charger from the device, then from the wall outlet to save energy. Antenna Your device may have internal and external antennas. As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with such an antenna affects the communication quality and may cause the device to operate at a higher power than otherwise needed and may reduce the battery life. An internal GPS antenna is activated when you place an emergency call or select Location On from the Location menu. See "Location," p.

67. Any GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation. Get Started 17 Connect the Headset To allow hands-free operation, you can connect a compatible headset with a standard 2.5-mm plug to your device. Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. 1. Plug the headset connector into the 2.5-mm headset jack on the left side of the device. 2.

Place the headset in your ear. With the headset connected, you can make, answer, and end calls as usual. Wrist Strap The wrist strap does not come in the box. 1. Remove the back cover.

2. Thread the wrist strap, and tighten. 3. Replace the cover. 18 Flow to Read This Guide Flow to Read This Guide The following sections illustrate various functions of your device.

Familiarize yourself with these sections to understand the instructions that follow. This guide uses certain terms for the steps that you are asked to perform.

'Press' means to press and release a key quickly. 'Press and hold' means to press and hold a key for 23 seconds before releasing it. 'Scroll' means to highlight with the Directional key. 'Select' means to highlight with the Directional key and press the () key. Generally, the step-by-step instructions start from the idle screen except when specifically indicated. To go back to the idle screen from your current working screen, press the End key (). To return to the previous screen, press the Clear key (). In the idle screen, to select Message or Contacts, press the Left Soft key or the Right Soft key.

To access the main menus, press the () key (MENU), and scroll to the desired menu. When a menu is highlighted, to access a submenu, press the number of the submenu, or scroll to the desired item, and press the () key. Get Started 19 To provide a visual representation of your current position in the menu structure, a scroll bar may be displayed on the right side of the screen. Get Help Nokia Support and Contact Information Check www.nokia.com/support or your local Nokia website for the latest guides, additional information, downloads, and services related to your Nokia product. On the website, you can get information on the use of Nokia products and services. If you need to contact customer service, check the list of local Nokia Care contact centers at www.nokia.com/customerservice.

For maintenance services, check for the location of your nearest Nokia Care contact center at www.nokia.com/repair. Billing and Customer Service To reach Verizon Wireless' billing and customer service support, dial 1-800-256-4646. 20 Keys and Parts Section 2: Topics Covered . . . Your Device Keys and Parts Display Screen Airplane Mode Find My Phone Number This section describes basic mechanical components of your device, elements on the display screen, and how to activate Airplane Mode.

Keys and Parts Depending on the model, the Directional key will look like one of the following: The instructions listed in this guide are based upon the use of the following keypad: Your Device 21 1. Earpiece 2. Display screen 3. Directional key 4. Right Soft key 5.

End/Power key 6. Camera/Video key 7. Alphanumeric keypad 8. Vibration key 9. Voice Command key 10. Microphone 11. Voicemail key 12. Speakerphone key 13. Clear key 14. Call key 15.

Left Soft key 16. OK key 22 Keys and Parts To activate the external Media Player touchpad, press the Volume keys to unlock the keys when the flip is closed. 1. Charging/Data port 2. Volume keys 3. Headset jack 4. Speakerphone 5. Fast Forward key 6. Play/Pause key 7. Rewind key 8.

Front display 9. microSD card slot 10. Wrist strap eyelet 11. Camera lens 12. Camera flash Your Device 23 Display Screen Indicators and Icons Depending on your device settings and modes, some or all of the following indicators and icons may appear on the idle screen.

Signal strength indicator. You are in a digital network. Signal strength indicator. You are in an EV-only network. Signal strength indicator.

You are in a 1XRTT network. Signal strength indicator. You are in a 1X/EV network. EV D Signal strength indicator. You are in an EV/D-only network.

Airplane Mode is on. You are roaming outside your home network. SSL security is activated. Voice privacy is activated. Data Call: wireless data communication is in progress.

Dormant Mode: the device is in a dormant state during a data call. Your connection is still active. 24 Display Screen No service. TTY is enabled. Voice call: a call is in progress. Location information sharing is set to E911 Only. See "Location," p. 67. Location information sharing is set to Location On. See "Location," p.

67. Bluetooth wireless connectivity is on. Voice privacy is activated. Bluetooth wireless connectivity is connected. Battery level indicator.

All sounds are off. All sounds except the alarm are off. Vibrate Mode is on. Speakerphone is on. You have missed calls.

There are new messages in your Inbox. A calendar appointment is set. There are new voicemails.



[You're reading an excerpt. Click here to read official NOKIA 7205](http://yourpdfguides.com/dref/4210938)

[INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)

<http://yourpdfguides.com/dref/4210938>

Alarm clock is on. Your Device 25 Dialed calls. Received calls. Missed calls. The primary mobile phone number of the contact. The secondary mobile phone number of the contact. The home phone number of the contact.

The business phone number of the contact. The primary e-mail address of the contact. The secondary e-mail address of the contact. A caller group of the contact. A picture ID of the contact. A distinctive ringtone for the caller. The fax number of the contact. Set speed dial for a contact. There are new messages in your Inbox. There are read messages in your Inbox.

There are picture messages in your Inbox. Sent messages. Message is delivered successfully. Message is delivered incompletely. 26 Airplane Mode Sent message failed.

Message is locked. Draft text message. Draft picture message. Airplane Mode Use Airplane Mode in radio sensitive environments - on board aircraft or in hospitals. When Airplane Mode is active, is displayed.

1. Press the () key (MENU), and scroll to Settings & Tools.) 2. Press () Phone Settings, and then press (Airplane Mode. 3. Scroll to On or Off, and press the (Emergency Call in Airplane Mode Enter the emergency number, and press the Call key (). Your device deactivates Airplane Mode and attempts to make an emergency call.) key. Find My Phone Number To view the ten-digit number assigned to your device: 1. Press the (2.

Press () key (MENU), and scroll to Settings & Tools.) Phone Info, and then press () My Number. Your Device 27 Section 3: Topics Covered · Make a Call Call Functions · Answer or Reject a Call · Options During a Call · Mute Function · Speakerphone · Recent Calls This section describes how to make, answer and reject a call. It also describes how to use the speakerphone and view call logs. Make a Call Use the Keypad Enter the phone number (including the area code if necessary), and press the Call key (). Use the Contact List 1. Press the Right Soft key Contacts. 2. Scroll to the desired contact, and press the ((VIEW) to display the details of the contact.) key 28 Answer or Reject a Call 3.

If the entry contains more than one number, scroll to the desired number, and press the Call key () to call the number. For information on adding contacts, see "Contacts," p. 36. Use Speed Dial To dial a single-digit speed dial number (19), press and hold the corresponding key. To dial a multi-digit speed dial number (10-999), press the keys for the first numbers, and press and hold the last number.

For more information on, see "Speed Dials," p. 45. You can also press the assigned speed dial location, and then press the Call key (). Use Call Log 1. Press the Call key ().

2. Scroll to the desired number, and then press the Call key (). Answer or Reject a Call To answer a call, open the flip or, if it is already open, press the Call key (). To change settings for answering a call, see "Answer Options," p. 68. To mute an incoming call, press the Left Soft key (Quiet). To forward the call to your voicemail, press the Right Soft key (Ignore). To reject the call, press the End key (). Call Functions 29 Options During a Call During a call, select Options and from the following: Messaging -- Send or retrieve messages. Contact List -- Search your Contact List.

Recent Calls -- Check recent calls. Bluetooth Menu -- The following options are available if a Bluetooth headset is connected. Select Audio to Phone to hear the other party on the phone or Audio to Device to hear the other party on the Bluetooth headset. Main Menu -- Open the Main Menu. Voice Privacy On -- Protect the privacy of the conversation. Notepad -- Open the notepad. Voice Record -- Record the call. Mute Function During a call, to prevent the other party from hearing your voice, while allowing you to hear the other party, select Mute. To allow the other party to hear you again, select Unmute.

Speakerphone To use the speakerphone, press the Speakerphone key ().

To turn the speakerphone off, press the Speakerphone key () again. 30 Recent Calls Warning: Do not hold the device near your ear when the speakerphone is in use, because the volume may be extremely loud. Recent Calls Information on missed, received, or dialed calls is stored in the Recent Calls folder. When the number of calls exceeds the limit of call category folders, the oldest call is replaced. View Call Log 1.

Press the () key (MENU), scroll to Recent Calls. 2. Scroll to the call category folder (Missed, Received, Dialed, or All), and press the () key to view the call log. 3. In each call category folder, scroll to the desired call record, press the () key (Open) to view details, or press the Left Soft key (Message) to create a new message, or press the Right Soft key (Options) and select from the available options to perform the corresponding operations.

Call Timers Call timers record the time of incoming and outgoing calls as well as the volume of data transferred and received. 1. Press the (2. Press () key (MENU), scroll to Recent Calls.) View Timers. Call Functions 31 · To return to the previous screen, press the () key. · To reset a timer, scroll to the desired timer, and press the Left Soft key (Reset). · To reset all timers, press the Right Soft key (Reset All). Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth. Note: Some timers, including the life timer, may be reset during service or software upgrades.

32 Entry Modes Section 4: Topics Covered · Entry Modes Text Entry · Abc and ABC Modes · Word Mode · Number Entry · Symbol Entry This section describes how to select the desired entry modes and how to use predictive text entry mode. Entry Modes Your device offers five entry modes: Word, Abc, ABC, 123, and Symbols. The following rules apply: · To delete a character, press the Clear key (word, press and hold the Clear key ().); to delete a · To enter a space, or to accept a completed word in Word Mode, press the Vibration key (). · To change character case in Word, Abc or ABC Mode, press (). · To change the mode, press the Left Soft key. Text Entry 33 Abc and ABC Modes In Abc and ABC Modes, to enter a letter, repeatedly press a key until the desired letter appears. If you pause briefly, the last letter on the display is accepted, and your device awaits the next entry. To activate Abc Mode or ABC Mode, press the Left Soft key, scroll to Abc or ABC, and press the () key. Word Mode Word Mode is a predictive text entry method that is based on a built-in dictionary to quickly recognize the most commonly used words for a specific key sequence.

1. To activate Word Mode, press the Left Soft key, scroll to Word, and press the () key. 2. Enter your word with the keypad. In Word Mode, press a key once for each letter until the desired word appears.



[You're reading an excerpt. Click here to read official NOKIA 7205](http://yourpdfguides.com/dref/4210938)

[INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)

<http://yourpdfguides.com/dref/4210938>

· If the displayed word is not correct, press () repeatedly to select from other options. · If the desired word is not found in the dictionary, delete your entry, press the Left Soft key to switch to Abc or ABC Mode and re-enter your word. 3. When the correct word is displayed, press the Vibration key () to confirm, and insert a space. 34 Number Entry Number Entry · To enter a number in Abc, ABC, or Word Mode, press and hold the desired number key. · To switch to Number Mode, press the Left Soft key, scroll to 123, and press the () key. Symbol Entry · To scroll through some common punctuation marks and special characters, press () repeatedly in Abc or ABC Mode. · To insert special characters into your message, press the Left Soft key, scroll to Symbols, and press the () key. Text Entry 35 Section 5: Topics Covered · Habitat Mode Contacts · Create New Contacts · Contact List · Contact Groups · Speed Dials · Emergency Contacts This section describes how to manage your contacts by storing their names, numbers, and other information. It also describes how to view contacts and configure the appearance in Habitat Mode. Habitat Mode Your device features a unique, contact-centric interface for visualizing your social circle in a natural habitat-inspired design setting. This interface organizes call logs and messaging records per contact, and presents them in a chronological order, providing an engaging and intuitive way for you to track, visualize and connect with your social network. 36 Habitat Mode Basic Control 1. To activate Habitat Mode, press the Directional key down. 2.

Press UP or DOWN on the Directional key to the desired contact, and press the () key (VIEW) to view the history of calls and messages between you and the contact. · To call the contact, press the Call key (Call, and press the () key.), or scroll to · To send a message to the contact, scroll to Message, and press the () key. · To view the history between ALL, CALLS and MESSAGES, scroll left or right using the Directional key. Settings By default, the background colors will change on your device, depending on the time of day. You can select a non-cycling color theme or adjust the number of visible contacts by following the steps below. 1. To activate Habitat Mode, press the Directional key down. 2. Press the Right Soft key (Options). Scroll down to Settings, and press the () key. 3. Scroll to Contacts Shown or Color. 4. Scroll left or right to the desired number of contacts or color theme, and press the Right Soft key (Done).

Contacts 37 Using Photos or Icons to Represent a Contact If a contact has not been assigned a photo in the phone book, it is given one of 50 preloaded icons. The icon and the color shade are determined by the contact's phone number. You can replace the icon with a photo as follows: 1. To activate Habitat Mode, press the Directional key down. 2.

Scroll to the contact. 3. Press the Right Soft key (Options). Edit contact is highlighted. Press the () key. 4. Scroll to the Picture: field, and press the Left Soft key (Set). 5. Scroll to the desired picture, and press the () key, and then press the () key (SAVE) to update the contact. Hide a Contact 1.

To activate Habitat Mode, press the Directional key down. 2. Scroll to the contact you wish to hide, and press the Right Soft key (Options). 3. Scroll down to Hide, and press the () key. Unhide a Contact 1. To activate Habitat Mode, press the Directional key down. 2. Press the Right Soft key (Options). 3. Scroll down to Show Hidden, and press the () key.

) key. 38 Create New Contacts 4. Scroll to the desired contact, and press the Directional key right to Visible. 5. Press the () key (SAVE). Create New Contacts Create a New Contact 1. Press the () key (MENU). Contacts is highlighted.) New Contact. 2.

To enter the contact information, press (3. Scroll to the desired field, and enter the corresponding information. · To assign a picture ID to the contact, highlight the Picture: field, and press the Left Soft key (Set). To use an existing image as the picture ID for the contact, scroll to the desired image in the My Pictures folder, and press the () key. · To assign a ringtone to the contact, scroll to the Ringtone: field, and press the Left Soft key (Set). Scroll to the desired ringtone, and press the () key. · To add a contact to a group, scroll to the Group: field, and press the Left Soft key (Set). Scroll to the desired group, and press the () key. Contacts 39 · To assign a Speed Dial for a number, set a default number for a contact, or add pauses into a number, scroll to the desired number (Mobile 1, Mobile 2, Home, Work or Fax), press the Right Soft key (Options), and select from the available options. 4.

Press the () key (SAVE). Update a Number to a Contact You can add new numbers to contacts by entering the number in the idle screen. 1. Enter the number, press the Left Soft key (Save), and select Add New Contact or Update Existing by pressing the () key. 2. Complete the contact information or update an existing contact, and press the () key. Add Pauses Calls to automated systems often require a password or account number. Instead of manually entering numbers each time, store the numbers to your contacts along with special characters called pauses. You may add pauses after entering a number in the idle screen. 1.

Enter the phone number. 40 Contact List 2. To add pauses, press the Right Soft key (Options), and press () 2-Sec Pause or () Wait, then enter additional digits. 3. Press the Left Soft key (Save), and select Add New Contact or Update Existing by pressing the () key.

4. Complete the contact information or update the number to an existing contact, and press the () key. Contact List In the idle screen, to quickly access the contact list, press the Right Soft key (Contacts). Find a Contact Entry 1. Press the (2.

Press () key (MENU). Contacts is highlighted.) Contact List. 3. In the Go To field, enter the first letters of the name you wish to find, and select from the proposed matches, or scroll using the Directional key. View a Contact Entry 1. Press the (2. Press () key (MENU). Contacts is highlighted.) Contact List.

3. Scroll to the desired contact, and then press the () key (VIEW). The contact information is displayed. Select from the available options. Contacts 41 Edit a Contact Entry 1. Press the (2. Press () key (MENU). Contacts is highlighted.) Contact List. 3.

Scroll to the desired contact, and then press the Left Soft key (Edit). For editing options, see "Create a New Contact," p. 39. 4. To save the update, press the () key (SAVE). Contact List Options 1.

Press the () key (MENU). Contacts is highlighted. 2. Press () Contact List. 3.

Scroll to the desired contact, press the Right Soft key (Options), and select from the following: New Contact -- Create a new Contact List entry.



[You're reading an excerpt. Click here to read official NOKIA 7205 INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)
<http://yourpdfguides.com/dref/4210938>

Erase -- Delete the contact entry. New TXT Message -- Send the contact a text message (network service). New Picture Message -- Send the contact a picture message (network service). New Video Message -- Send the contact a video message (network service). Set As ICE Contact or Unassign ICE Contact -- Set your contact as an ICE (In Case of Emergency) contact or unassign your contact as an ICE contact.) key (SAVE). 42 Contact Groups Call -- Call the contact (network service). Send Name Card -- Send the contact information in vCard format to another device using Bluetooth connectivity. Erase All -- Delete all contacts.

Contact Groups Contact groups help organize contact entries into categories, and allow you to search your contacts faster and send a message to all contacts in one or more groups. Create a New Group 1. Press the (2. Press () key (MENU). Contacts is highlighted.) Groups. 3. To add a new group, press the Left Soft key (New), enter a name, and press the () key (SAVE). Rename a Group 1. Press the (2.

Press () key (MENU). Contacts is highlighted.) Groups. 3. Scroll to the desired group, press the Right Soft key (Options), and then press () Rename.

4. Enter a new name, and press the (Move a Contact Entry to a Group 1. Press the () key (MENU). Contacts is highlighted. Contacts) key (SAVE).

43 2. Press () Groups.) key (VIEW),) 3. Scroll to the desired group, and press the (and then press the () key (ADD). 4. Scroll to the desired contact, and then press the (key (MARK). 5. Repeat the previous step until all the desired contacts are marked, and then press the Left Soft key (Done). A contact can only be associated with one group at a time. Erase a Group 1.

Press the (2. Press () key (MENU). Contacts is highlighted.) Groups. 3. Scroll to the desired group, press the Right Soft key (Options), and then press ()

Erase. 4. To erase the group, highlight Yes, and then press the () key. Send a Group Message (Network Service) 1. Press the (2.

Press () key (MENU). Contacts is highlighted.) Groups. 3. Scroll to the desired group, and press the Right Soft key (Options), then () New TXT Message, () New Picture Message, or () New Video Message.

4. Create a message, and press the () key (SEND). 44 Speed Dials Speed Dials You can associate any mobile, home, or work phone number in the contact list with a speed dial location from 2 to 999 (network service). Voicemail is assigned to speed dial location 1. Speed dial location 95 (#Warranty Center) is used to contact Verizon Warranty Center.

Speed dial location 97 (#BAL) is used to check your billing balance. Speed dial location 98 (#MIN) is used to check your Verizon Wireless usage. Speed dial location 99 (#PMT) is used to make a bill payment. To use speed dials, you must first ensure the one touch dial feature is enabled. See "One Touch Dial," p. 70. Assign a Speed Dial Location 1. Press the (2. Press () key (MENU). Contacts is highlighted.

) Speed Dials. 3. Scroll to an unassigned speed dial location, and press the () key (SET). 4. To select a contact entry, scroll to the desired contact, and press the () key. 5. To select a number for speed dial for a contact with more than one number, scroll to the desired number, and press the () key. Contacts 45 Edit a Speed Dial Location 1. Press the (2. Press () key (MENU).

Contacts is highlighted.) Speed Dials. 3. Scroll to an assigned speed dial location, and press the () key (SET). 4.

To overwrite the existing speed dial location, highlight Yes, press the () key, scroll to a desired contact, and then press the () key. 5. To select a number for speed dial for a contact with more than one number, scroll to the desired number, and press the () key. Remove a Speed Dial Location 1. Press the (2.

Press () key (MENU). Contacts is highlighted.) Speed Dials. 3. Scroll to an assigned speed dial location, and press the Right Soft key (Remove). 4. Highlight Yes, press the () key. Emergency Contacts In Case of Emergency (ICE) allows you to store names, phone numbers and other information, which will be helpful in case of emergency. 46 Emergency Contacts Tip: When you have assigned ICE contacts and your device is locked, press the Left Soft key (ICE) to view the emergency information without unlocking the device. 1.

Press the (2. Press () key (MENU). Contacts is highlighted.) In Case of Emergency. 3. Complete the information for your emergency contacts. · Scroll to an unassigned contact, press the () key (ADD), and add an emergency contact from the existing contact list or by adding a new contact, and press the () key (SAVE). · Scroll to Personal Info, press the () key (VIEW), scroll to a note entry, press the () key (ADD), enter personal information in case of emergency, and press the () key (SAVE). Contacts 47 Section 6: Topics Covered Messaging · Text Messages · Picture or Video Messages · Message Folders · Delete Messages · Voicemail · Visual Voice Message · Mobile Instant Messaging · Email Message · Chat · Blogs · Message Settings This section describes how to send different types of messages. It also describes other messaging features.

Text Messages If you have subscribed to a message network service, you can send and receive messages between compatible devices that also subscribe to a message service. 48 Picture or Video Message Your device supports the sending of text messages beyond the character limit for a single message. Longer messages are sent as a series of two or more messages. Verizon Wireless may charge accordingly. Characters that use accents or other marks, and characters from some language options, take up more space, limiting the number of characters that can be sent in a single message.

Write and Send a Text Message 1. Press the () key (MENU), and scroll to Messaging.) New Message, 2. To write a new text message, press (and then press () TXT Message. 3.

Select a recipient from the contact list or enter the number. 4. To move to the Text: field, press the () key. Compose a message using the Alphanumeric keypad. 5. To send the message, press the () key (SEND). Picture or Video Message The wireless network may limit the size of picture and video messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent. A picture or video message can contain text and objects such as pictures, sound clips, or video clips. To check availability and to subscribe to the picture or video messaging service, contact Verizon Wireless.

Messaging 49 Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device. Write and Send a Picture or Video Message 1. Press the () key (MENU), and scroll to Messaging.) New Message,) Video Message. 2. To write a new text message, press (then press () Picture Message or (3. Select a recipient from the contact list or enter the number.



[You're reading an excerpt. Click here to read official NOKIA 7205](http://yourpdfguides.com/dref/4210938)

[INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)

<http://yourpdfguides.com/dref/4210938>

4. To move to the Text: field, press the () key.

Compose a message using the Alphanumeric keypad. 5. Add multimedia contents. · Picture message 1. To add a picture, scroll down to the Picture: field. Press the Left Soft key (My Pics), scroll to the desired picture, and press the () key. To add a new picture using the camera, press the Right Soft key (Options), press () Take Picture, press the () key (TAKE), and press the Left Soft key (Save). 50 Message Folders 2. To add a sound clip, scroll down to the Sound: field.

Press the Left Soft key (Sounds), scroll to the desired sound clip, and press the () key.

To record a new sound clip, press () Record New, press the () key to begin recording, and then press the () key (STOP) to end recording, and press the () key to select the new recording and return to the message. · Video message To add a video clip to a video message, scroll down to the Video: field. Press the Left Soft key (Videos), scroll to the desired video clip, and press the () key. To add a new video clip using the camcorder, press the Right Soft key (Options), press () Record Video, press the () key (REC) to begin recording, press the () key (STOP) to end recording, and then press the Left Soft key (Save). 6. To add a message title, scroll down to the Subject: field. Enter text (up to 80 characters) using the Alphanumeric keypad. 7. To send the message, press the () key (SEND).

Message Folders The device saves received messages in the Inbox folder.

The Sent folder is used to store messages that have been delivered to their recipients. The Drafts folder is used to store drafts of messages. Messaging 51 To open the Inbox, Sent, or Drafts folder, press the Left Soft key (Message), and then press () Inbox, () Sent, or () Drafts. The message list is displayed. Scroll to a message, and select from the available options. Voicemail Receive a Voicemail Message When you receive a new voicemail message, the device displays a voicemail notification. 1. Scroll to Listen Now or Listen Later. 2. Press the () key.

) Listen to a Voicemail Message 1. Press the Left Soft key (Message), and then press () Voicemail. 2. Press the () key (CALL) to dial your voicemail service and retrieve your message. Visual Voice Mail Your device features a visual interface to access and manage your voicemail messages.

With this, you do not need to listen through voice instructions, but can directly use onscreen options to listen to messages and archive them, call back or reply with text messages, and more. 1. Press the () key (MENU), and scroll to Messaging. 52 Mobile Instant Messaging 2. Press () Visual Voice Mail, and then select from the available options.

Mobile Instant Messaging 1. Press the () key (MENU), and scroll to Messaging. 2. Press () Mobile IM, and then select from the available options to download IM applications, or use one of the applications preloaded. Email Message 1. Press the () key (MENU), and scroll to Messaging. 2. To launch the internet browser and access the email messaging screen (network service), press () Email. Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your phone.

Chat 1. Press the () key (MENU), and scroll to Messaging. 2. To launch a browser and chat with IM users (network service), press () Chat. Blogs 1. Press the () key (MENU), and scroll to Messaging. 2. To access your personal blogs, press () Blogs. Messaging 53 Message Settings This menu allows you to define settings for messages sent or received on your device. 1.

Press the Left Soft key (Message), and then press the Left Soft key (Settings). 2. To define message settings, select from the following: Entry Mode -- Change the default entry mode for writing text. @@@@ -- Change the default voicemail speed dial number. Callback # -- Change the default callback number that is sent.

@@@For more information, see "Mobile Web," p. @@@@. 1. Press the () key MENU, and scroll to Settings & Tools. 2. Press () Bluetooth Menu.

@@@Press the () key (Yes). @@Press the () key. @@@@4. @@You should be able to find this in the headset's user guide. 5. Press the () key. Your phone will then pair with the headset. 6. Choose Always Ask or Always Connect and press the () key. Select Yes or No and press the () key.

@@Bluetooth Wizard will pop up the first time you go into the Bluetooth Menu. Note: Features using Bluetooth technology increase the demand on battery power and reduce the battery life. 1. Press the () key (MENU), and scroll to Settings & Tools.) Bluetooth Menu. 3. Press the Left Soft key to turn Bluetooth connectivity on or off. 58 Bluetooth Wireless Technology Bluetooth Settings 1. Press the () key (MENU), and scroll to Settings & Tools.

2. Press () Bluetooth Menu. @@Press the () key (Yes). A message will appear asking you to turn on the wireless device. Press the () key.

The program will automatically turn on Bluetooth technology and search for Bluetooth devices nearby and then display a list of available devices. 3. To configure the Bluetooth settings, press the Right Soft key (Options) and select from the following: · Bluetooth Wizard: To search for devices, pair and connect to a device. · My Phone Name: To enter a customized name for device recognition. · Discovery Mode: To allow other devices to see your device.

· Sharing: To allow you to enable sharing the My Pictures, My Videos, and Bluetooth Inbox folders. · Supported Profiles: To display a list of supported Bluetooth profiles. Highlight a profile and press the () key (VIEW) to see the details. · My Name Card: To display My Name Card details. · Bluetooth Inbox: To view files received via Bluetooth. Settings 59 Sounds Settings 1. Press the () key (MENU), and scroll to Settings & Tools.) Sound Settings., and select from the following: 2. Press () Call Sounds -- Set ringtones for incoming calls by selecting Call Ringtone, and then the desired ringtone.

Set the device to vibrate when a call is received by setting Call Vibrate on. Alert Sounds -- Select the alert type (Tone, Vibrate, or Reminder) for an incoming text message, picture message, or voicemail. Select Emergency Tone to set the alert type (Alert, Vibrate, or Off) for emergency dialing. Keypad Volume -- Set the volume for the keypad. Service Alerts -- Activate an alert. · Select ERI (Enhanced Roaming Indicator) to display the status of the mobile service (network service). The status can be "Verizon Network", "Extended Network", or "Roaming". See "Banner," p. 61. · Select Minute Beep to sound an alert every minute during a call.

· Select Call Connect to alert you when a call is connected. Power On/Off -- Enable or disable tones when your device is turned on or off. This option only works when the master volume is not set to All Sounds Off or Alarm Only.



[You're reading an excerpt. Click here to read official NOKIA 7205 INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)
<http://yourpdfguides.com/dref/4210938>

3. Press the () key.

60 Display Settings Turn Silent Mode On or Off To turn Silent Mode on, open the flip, and press the Volume keys down until All Sounds Off is displayed. To turn Silent Mode off, press the Volume keys up until the sound reaches the desired level. Turn Vibrate Mode On or Off To activate Vibrate Mode and mute all other sounds, open the flip, press and hold the Vibration key () until 'VIBRATE SET' is displayed. To deactivate Vibrate Mode, open the flip, press and hold the Vibration key () until 'VIBRATE CANCEL' is displayed. Display Settings The Display settings menu provides the possibilities to modify the look and feel of the phone display.

Scroll to the desired options, and press the () key, such as: Banner You can create your own personalized greeting that appears in the idle screen or choose the ERI Banner which displays the network to which you have subscribed. 1. Press the () key (MENU), and scroll to Settings & Tools.) Banner, and then 2. Press () Display Settings, press (select from the following: Settings 61 Personal Banner -- Enter your own banner text of up to 18 characters. To change the text color, select Color. The Color option is only available when Habitat Mode is disabled. See "Habitat," p. 64. ERI Banner -- Display ERI text over your personal banner, alerting you to the current cellular status (network service).

Backlight 1. Press the () key (MENU), and scroll to Settings & Tools.) Backlight, and 2. Press () Display Settings, press (then select from the following: Front Display, Main Display, Keypad -- Set how long the front display, main display, or the keypad backlight remains on before dimming. Wallpaper 1. Press the () key (MENU), and scroll to Settings & Tools.) 2. Press () Display Settings, and then press (Wallpaper. 3. Press () My Pictures or () My Videos, select an image or a video, and then press the () key.

The wallpaper will only be displayed if Habitat Mode is disabled, see "Habitat," p. 64. If Habitat Mode is activated, a prompt is displayed asking whether you want to turn it off. 62 Display Settings Display Themes 1. Press the () key (MENU), and scroll to Settings & Tools.

2. Press () Display Settings, and then press () Display Themes. 3. Scroll to the desired option, and press the () key SET. To set the theme, Habitat Mode (the default) must be disabled.

See "Habitat," p. 64. Main Menu Settings 1. Press the () key (MENU), and scroll to Settings & Tools. 2. Press () Display Settings, and then press () Main Menu Settings. 3. Scroll to the desired option, and press the () key. The default Main Menu setting is Tab. Dial Fonts 1.

Press the () key (MENU), and scroll to Settings & Tools. 2. Press () Display Settings, and then press () Dial Fonts. 3. Scroll to Normal or Large, and press the () key. Clock Format 1. Press the () key (MENU), and scroll to Settings & Tools. 2. Press () Display Settings, and then press () Clock Format. 3. Scroll to the desired option, and press the () key. Settings 63 Pulsing Alert Pulsing alert acts as a reminder. The front display flashes when there are missed calls or unread messages. 1. Press the () key (MENU), and scroll to Settings & Tools.

2. Press () Display Settings, and then press () Pulsing Alert. 3. Scroll to the desired option, and press the () key. Habitat Habitat Mode provides a unique and interactive way to connect with your social circle.

When you place or receive a call or a message, that interaction appears on the idle screen as a graphic. 1. Press the () key (MENU), and scroll to Settings & Tools. 2. Press () Habitat. 3. Scroll to On or Off, and press the () key. Phone Settings The Phone Settings menu allows you to designate specific network settings and operational modes for your device. Scroll to the desired options, and press the () key, such as: Airplane Mode When Airplane Mode is on, all features that use radio frequencies are disabled and you cannot place or receive phone calls. See "Airplane Mode," p.

27. 64 Phone Settings Set Shortcuts You can assign applications to the UP, LEFT or DOWN Directional keys. These can be opened by pressing the corresponding keys on the idle screen. The RIGHT Directional key is used to access My Shortcuts. The default shortcuts are listed as follow: · To open Dashboard, press the Directional key up. · To activate Habitat Mode, press the Directional key down. · To open My Verizon, press the Directional key left. · To open My Shortcuts, press the Directional key right. The default settings of My Shortcuts are: 1. New TXT Message 2.

Media Center 3. Picture & Video 4. Alarm Clock To change the shortcuts, do the following: 1. Press the () key (MENU), and scroll to Settings & Tools.) 2. Press () Phone Settings, and then press (Set Shortcuts. 3. Press () Set My Shortcuts, or () Set Directional Keys, scroll to the shortcut or the Directional key to be assigned, and press the () key (SET). 4. Scroll to the desired application, and press the (Settings) key.

65 Voice Command Settings 1. Press the () key (MENU), and scroll to Settings & Tools. 2. Press () Phone Settings, and then press () Voice Command Settings, the following options display. · Choice List: When voice recognition is not confident it has recognized a name or number correctly, it will show you a list of up to three choices. You can control when the choice list appears. · Sensitivity: The sensitivity setting controls how the voice recognition software determines when a spoken word is a match. If you frequently experience the message "Please Repeat ...

" or "No Match Found", adjust the sensitivity toward Reject Less. If you frequently experience false activations (when the phone recognizes a name you didn't say), adjust the sensitivity toward Reject More. · Digit Dialing: To adapt digit dialing to your voice. · Sound: You can customize the voice recognition tool by turning playback on or off for prompts, names, and numbers. You can also change the speed and volume of name playback. · About: To show the version, build number and device model type of the current voice recognition tool. 66 Phone Settings Language The display language can be set to English or Spanish.

1. Press the (2. Press () key (MENU), and scroll to Settings & Tools.

) Phone Settings, and then press () Language.) key. 3. Scroll to English or Español, and press the (Location The Location Global Positioning Service (GPS) setting identifies your location to the network. You can enable this setting or set GPS to work only if you call the emergency services.

1. Press the (2. Press () key (MENU), and scroll to Settings & Tools.) Phone Settings, and then press () Location.) key.

3. Scroll to Location On or E911 Only, and press the (Security The Security menu allows you to lock your device, set restrictions, and other security options.



[You're reading an excerpt. Click here to read official NOKIA 7205](http://yourpdfguides.com/dref/4210938)

[INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)

<http://yourpdfguides.com/dref/4210938>

1. Press the () key (MENU), and scroll to Settings & Tools.) Phone Settings, and then press () Security. 3. Enter the lock code (factory settings are the last four digits of your phone number), press the () key, and select from the available options. Settings 67 System Select 1. Press the () key (MENU), and scroll to Settings & Tools.

) System Select, 2. Press () Phone Settings, press (and then select from the following: Home Only -- Make and receive calls in your home area only. Automatic -- Search for service in another network. The roaming rate applies when you are not in the home service area. NAM Selection If your phone is registered with two phone numbers using number assignment modules (NAM) (for example, work and personal numbers), you can choose which number to use as your origination number. 1. Press the () key (MENU), and scroll to Settings & Tools.) Phone Settings, press () NAM Selection.) key. 3. Scroll to NAM 1 or NAM 2, and press the () key (MENU). Call Settings You can define how your device handles incoming and outgoing calls. Answer Options You can define how calls are answered on your device. 68 Call Settings The default Answer Options setting is Flip Open. 1. Press the () key (MENU), and scroll to Settings & Tools.) 2. Press () Call Settings, and then press () Answer Options. 3. Scroll to the method you wish to use for answering calls, and press the () key (MARK). 4. Press the Left Soft key (Done). Auto Retry 1. Press the () key (MENU), and scroll to Settings & Tools.) Call Settings, and then press () Auto Retry. 3. To automatically redial a number when the attempted call fails, scroll to On, and then press the () key (MENU), and scroll to Settings & Tools.

2. Press () Call Settings, and then press () TTY Mode. A prompt informs you that enabling TTY will disable headset audio. Press the () key, and then select from the following: TTY Full -- Turn on full TTY capability. TTY + Talk -- Turn on TTY in voice carry-over (VCO) mode. TTY + Hear -- Turn on TTY in hearing carry-over (HCO) mode. TTY Off -- Turn off TTY mode. Settings 69 HAC Mode 1. Press the () key (MENU), and scroll to Settings & Tools.) Call Settings, and then press () HAC Mode. 3. To turn on hearing aid compatibility (HAC) mode, scroll to On, and then press the () key (MENU). One Touch Dial You can use the one touch dial feature by pressing and holding the designated speed dial key. See "Speed Dials," p. 45. 1. Press the () key (MENU), and scroll to Settings & Tools.) Call Settings, and then press () Voice Privacy 1. Press the () key (MENU), and scroll to Settings & Tools.) Call Settings, and then press () Voice 3. To set the voice privacy feature for CDMA calls, scroll to On, and then press the () key (MENU), and scroll to Settings & Tools.) DTMF Tones 1. Press the () key (MENU), and scroll to Settings & Tools.

70 Memory 2. Press () Call Settings, and press () DTMF Tones, Normal -- To send out a tone for a fixed period no matter how long you press the key. Long -- To send out a continuous tone for as long as you press the key. Memory The Memory menu allows you to manage your Save Options (for Pictures, Videos, and Sounds) on your Phone Memory or Card Memory. 1. Press the () key (MENU), and scroll to Settings & Tools.) Memory, and then select from the following: Save Options -- To set your Pictures, Videos, and Sounds to be saved to either phone memory or card memory. Phone Memory -- To view the memory usage for everything stored on your phone. Card Memory -- To view memory usage of everything stored on your memory card.

Phone Info 1. Press the () key (MENU), and scroll to Settings & Tools.) Phone Info, and then select from the following: Settings 71 My number -- To display the Mobile Device and Identification numbers. SW/HW Version -- To view the version of software, PRL, ERI, Browser, Media Center, MSUI, Hardware, and ESN of your device.

Icon Glossary -- To view the list of icons with a brief description. Software Update -- To check the software update status and the availability of new software. 3. Highlight the desired item and Press the () key (MENU), and scroll to Settings & Tools.) Media Center Section 8: Topics Covered Media Center Media Center Music & Tones Picture & Video Mobile Web Browse & Download This section describes how to download music, tones, and video. It also describes how to take, record and store pictures and videos, sounds, and ringtones with your device. Media Center Media Center (network service) allows you to download ringtones, music, sounds, pictures, videos, games, news, information, tools, and other extras. You can also find information such as the location of restaurants or ATMs. With Media Center, you can personalize your device to your own preference and lifestyle. This feature shares memory space with other features. You can also view memory information to see how much memory is available. For additional information on Media Center services, see <http://products.vzw.com/>. Media Center 73 Music & Tones V CAST Music with Rhapsody® V CAST Music with Rhapsody is a digital music service that lets you listen to millions of songs from thousands of artists.

Discover new and old favorites in an extensive music catalog. Download V CAST Music with Rhapsody to sync tracks, albums, and playlists to your new compatible phone, while managing your existing PC music library all in one place. Purchase Songs on Your V Cast Music with Rhapsody Capable Device* When you purchase music from your wireless device, you also get a second copy that can be downloaded to your PC from the V CAST Music with Rhapsody software. *Per-song charges apply. 1. Press the () key (MENU), and scroll to Media Center.) V CAST 2. Press () Music & Tones, and then press () Music\Rhapsody. 3. Press the () key (MENU). 4. Scroll to a category, and press the () key (MENU). 5. Scroll to the music that you want to purchase, and press the () key (Buy). 74 Music & Tones 6. The CONFIRM PURCHASE screen displays the price and items you selected to purchase. Press the () key (Buy) to accept the terms. 7. You receive confirmation that your purchase was successful and your music is available for download. Press the () key (Buy) to download the song. You can then play your new song from the My Music menu. Sync Your Music from Your PC to Your V CAST Music Wireless Device 1. Open V CAST Music with Rhapsody. Don't have V CAST MUSIC with Rhapsody? Download it for free at www.verizonwireless.com/music. 2. Plug in the USB cable (purchased separately) to your phone and connect it to a USB port on your PC. 3. From the main screen on your phone, the SYNC MUSIC V CAST MOBILE PHONE display appears.



[You're reading an excerpt. Click here to read official NOKIA 7205 INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)
<http://yourpdfguides.com/dref/4210938>

Your phone should display the message: Connected. 4. Drag and drop the song(s) you want to sync from My Library, to your V CAST mobile phone, listed under the Sources tab. Once synchronization is complete, press the END/Power key and disconnect the USB cable (purchased separately). Note: A compatible USB cable (sold separately) is required for syncing. Media Center 75 Picture & Video Picture & Video (network service) allows you to view, take, and send digital pictures and video clips from your device and access the V CAST streaming multimedia service. Download a Video Clip 1. Press the () key (MENU), scroll to Media Center.) 2. Press () Picture & Video, and then press (V CAST Videos.

3. Scroll to the category you want and press the () key. Repeat until you find a video clip that you want to download. 4. Press the () key (SAVE).

5. Highlight Yes to accept charges, if applicable, and press the () key. The video download begins. Take a Picture 1. To activate the camera, press the Camera/Video key (located below the End Key().

2. To take a picture and save it to My Pictures, press the (key (TAKE), and the Left Soft key (Save). To view pictures saved in your device, press the Left Soft key (My Pics). To adjust the picture quality, press the Right Soft key (Options), and select from the available options.)) 76 Mobile Web Warning: Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture. Record a Video 1. To activate the camcorder, press and hold the Camera/Video key () located below the End Key (). 2.

To record a video clip and save it to My Videos, press the () key (REC), press the () key (STOP), and then press the Left Soft key (Save). To preview video clips saved in your device, press the Left Soft key (Videos). To define specific video recorder settings, press the Right Soft key (Options) and select from the available options. Mobile Web This feature is currently only available within certain areas. For more information, contact Verizon Wireless. Launch Verizon Wireless Mobile Web 1. Press the (2. Press () key (MENU), scroll to Media Center.) Mobile Web.) key.

Media Center 3. Select Mobile Web 2.0 and press the (77 Note: In the idle screen, to quickly access Mobile Web, press the Directional key up, and with Mobile Web 2.0 highlighted press the () key. Browse & Download VZ Navigator VZ Navigator supports the GPS-related service, helping you find your way. With VZ Navigator, you can get your current location, or get directions from the current location to a selected address. 1. To activate VZ Navigator, press the (scroll to Media Center. 2. Press (3.

Press () Browse & Download.)VZ Navigator, and then press the () key.) key (MENU), and To use this service, you must activate the location function. See "Location," p. 67. 78 Voice Commands Section 9: Topics Covered Tools Voice Commands Calculator Calendar Calendar Preview Alarm Clock Stopwatch World Clock Notepad This section describes how to perform some simple voice commands, calculations, and set an alarm. Voice Commands Call contacts and carry out device functions by giving a voice command. Voice commands are language-dependent, and you must set the recognition language. Before using voice commands, see "Language," p. 67.

In the idle screen, to quickly access the voice commands, press and hold () until the voice commands list displays. Tools 79 Voice Commands Settings 1. Press the (2. Press () key (MENU), and scroll to Settings & Tools.) Tools, and then press () Voice Commands. 3. Press the Right Soft key (Settings), and select from the available options. Voice Commands Some functions that you can perform using voice commands on your device are: Call <Name> <Loc>: To dial by saying a name in your contact list, a name and a location (home, work, mobile) or the phone number. Send <Msg Type>: To send a text, picture, or video message to a number or to someone in your Contact List. Lookup <Name>: To open the contact record for any name in your contact list. Play <Playlist>: To open a music playlist. Go To <Menu>: To open any application installed on your device. Check <Item>: To view details of your phone status, voicemail, messages, missed calls, time, signal strength, battery level, and volume level. 80 Calculator My Verizon: To view information about your Verizon Wireless account. Help: To read a tutorial on how to use Voice Commands.

Calculator Calculator allows you to perform simple mathematical calculations using your device. 1. Press the (2. Press () key (MENU), and scroll to Settings & Tools.) Tools, and then press () Calculator.

3. Enter the first number of the calculation using the Alphanumeric keypad. To change a number to a negative, press (. To insert a decimal point, press (.). 4. Use the Directional key to add (UP), subtract (DOWN), multiply (RIGHT), or divide (LEFT) values. To enter a parenthesis or power, press the Right Soft key (Operator) and select (,) , or Power by pressing the () key. 5. Enter the second number. 6.

Press the () key (equals) to solve your equation. Note: This calculator has limited accuracy and is designed for simple calculations. Tools 81 Calendar The calendar allows you to document your schedule and keep it convenient to access. You can schedule appointments in the calendar and set your device to alert you with a reminder. Schedule a New Appointment 1. Press the (2. Press () key (MENU), and scroll to Settings & Tools.) Tools, and then press () Calendar. 3. To add a new appointment, scroll to the desired date, and then press the Left Soft key (Add).

4. Enter the details and use the Directional key to navigate between information fields. 5. Press the (1. Press the (2. Press () key (SAVE).) key (MENU), and scroll to Settings & Tools.) Tools, and then press () Calendar. Update an Existing Appointment 3. Scroll to the date of the appointment to be modified, and then press the () key (VIEW).

4. Scroll to the desired appointment entry, press the (key (VIEW), and then press the () key (EDIT).) 5. Scroll to the fields to be updated, edit the corresponding information, and then press the () key (SAVE). 82 Calendar Preview Calendar Preview Calendar preview allows you to display the calendar appointments for the current date in the idle screen. 1. Press the (2. Press () key (MENU), and scroll to Settings & Tools.) Tools, and then press () Calendar Preview. 3.

Press () Main Screen, scroll to On, and then press the () key. The calendar preview will only be displayed if Habitat Mode (the default) is turned off, see "Habitat," p. 64. If Habitat Mode is turned on, a prompt is displayed asking whether you want to turn it off.



[You're reading an excerpt. Click here to read official NOKIA 7205](http://yourpdfguides.com/dref/4210938)

[INTRIGUE user guide](http://yourpdfguides.com/dref/4210938)

<http://yourpdfguides.com/dref/4210938>