



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA ASHA 203. You'll find the answers to all your questions on the NOKIA ASHA 203 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NOKIA ASHA 203**  
**User guide NOKIA ASHA 203**  
**Operating instructions NOKIA ASHA 203**  
**Instructions for use NOKIA ASHA 203**  
**Instruction manual NOKIA ASHA 203**

Nokia 203 User Guide



[You're reading an excerpt. Click here to read official NOKIA ASHA 203 user guide](http://yourpdfguides.com/dref/5574826)  
<http://yourpdfguides.com/dref/5574826>

**Manual abstract:**

14 Camera lens. @@See 4. 6 To switch on, press and hold the phone vibrates. @@locks into place. See 3 Battery full? @@See 3. 5 Go to Menu Names Tap and hold an item to see more options. 6 Options To swipe, steadily slide your finger to the desired direction. Cyan Magenta Yellow Black Swipe to open applications Favourites Apps and games Call divert Camera Change outg. Countd. timer Go to Menu 3 Create message Back Back Open your favourite app with a single swipe on the home screen.

Select which app to open when you swipe left. Create message Apps and games Log Mail Make a to-do Meeting 1 Options Back 4 Message inbox Back Back Select Menu > Settings. Select which app to open when you swipe right. Tones Display Date and time My shortcuts Left selection key Right selection key Names Go to Swipe gesture 2 Back Back Select My shortcuts > Swipe gesture. Cyan Magenta Yellow Black Copy content from your old phone Date and time My shortcuts Sync & backup Sync with server Phone switch Create backup Restore backup Back Back 3 Easily get your contacts, calendar, and other stuff to your new phone.

Connectivity Select Sync & backup > Phone switch. Synchronise Copy to this Copy from this Contacts Calendar Text messages Multimedia msg. 1 Back 4 Notes Back Options Done Switch Bluetooth on in both phones. Select Copy to this and what you want to copy, then select Done. New search Nokia XX 2 Options Back 5 Options Back Select Menu > Settings.

Select your old phone from the list of found devices. Cyan Magenta Yellow Black Indicators Enter passcode: \*\*\*\*\* 123 — You have unread messages. — You have unsent, cancelled, or failed messages. 6 Options OK Clear If asked, create a one-time passcode (such as 123), then select OK. — The touch screen and keys are locked. — The phone doesn't ring when somebody calls or sends a message. — An alarm is set. / — The phone is connected to a GPRS or EGPRS network. / — A GPRS or EGPRS connection is open. / — The GPRS or EGPRS connection is on hold.

— Bluetooth is on. Does code match with code on other device? 123456 7 Yes No Check that the codes match on both phones. 8 Follow the instructions on both phones. — All incoming calls are forwarded to another number. Cyan Magenta Yellow Black — The profile in use is timed. After a set amount of time, the phone changes back to the previously used profile. — A headset is connected to the phone. — The phone is connected to a device, such as a PC, with a USB cable. Cyan Magenta Yellow Black Make or answer a call 9876543210 Options Incoming call Silence 3 Call your friend. See 15.

When your phone rings, press 16. answer. See to Options 01 23456789 Save Clear 1 Type in the phone number, then press . 0123456789 Mute Options Loudsp. In call Contact 2 To end the call, press .

Cyan Magenta Yellow Black View your missed calls Change the volume 1 missed call Mike 1 View On the home screen, select View. See 5. Mike Today, 14:29 Call Send message Options Back 0123456789 Is the volume too loud during a call or when listening to the radio? Today, 14:29 2 Back 1 Use the volume keys. To call back, select the number, then . press Names Add new Log Synchronise all Options Exit Back 2 Better.

Tip: To view missed calls later, select Menu > Contacts > Log. Cyan Magenta Yellow Black Save a name and phone number Number: 123 9876543210 3 Add new contacts to your phone. OK Clear Type in the phone number, then select OK. First name: abc Jim 1 Options Back 4 Options OK Clear Select Menu > Contacts. Write the first name, then select OK. Names Add new Log Synchronise all Brown Last name: abc Jim Brown Call Send message Send mail 2 Select Add new. Back 5 Save Clear Options Done Write the last name, then select Save > Done. Cyan Magenta Yellow Black Send a message Log Synchronise all Jim Brown Mum Back Options Back 6 To edit details, select Names and a contact. Keep in touch with people through 7. messages.

See Jim Brown Call Send message Send mail Back View conversat. Add detail Add image Delete contact Back 7 Options 1 Hi Add new Dad Mi ke ! Names Anna Options Back Select Options > Add detail. Select Menu > Messaging. Create message Inbox Conversations 2 Sent items Options Back Select Create message. Cyan Magenta Yellow Black Hi Anna, how are you? abc Hi Anna, how are you? abc Edit text Insert object Continue Save as draft More 3 Write your message and select Continue. Contacts Mum Recently used Number or mail 123 Options Back Back Tip: To add an attachment, select 8, 9, Options > Insert object. See 10. To: Anna Hi Anna, how are you? Your message: 4 Log Options Back 6 Photo0001.jpg Image: Send To add a recipient, select Contacts. Select Send.

Contacts Mum Recently used Number or mail 123 5 Log Options Back To type in a number or mail address, select Number or mail. Cyan Magenta Yellow Black Write text Press a key repeatedly until the letter is shown. To type in a punctuation mark, press 1 repeatedly. To type in a special character, press \*, then select the character. To switch between character cases, press #.

To use number mode, press and hold #, then select Number mode. To go back to letter mode, press and hold #. If you want to quickly type in a single number, just press and hold the number key. To switch predictive text on or off, select Options > Prediction > Prediction on or Prediction off. Not all languages are supported.

To change the writing language, select Options > Writing language. Cyan Magenta Yellow Black Personalise your home screen 09:00 01-10 Sat 09:00 01-10 Sat Photos Open Gallery Slide set Open Camera Go to Menu Names Go to Menu Names 3 Graph. downlds. Back You can change the wallpaper, and rearrange items on the home screen. Select a folder and a photo. 1 Options Back Go to Menu Names Select Menu > Settings. Tip: You can also take a photo on your phone camera, and use that. Profiles Themes Tones Home screen Main menu view Font size Back Back Set by theme Wallpaper 2 Display Select Display > Wallpaper. Cyan Magenta Yellow Black Change your ringtone Alablaster.aac Mystique.

aac 01-01-11 192kB 01-01-11 115kB 01-01-11 148kB 01-01-11 10.0kB Nokia tune.aac Ring ring.aac 3 Set a different ringtone for each profile. Select Stop Browse to a ringtone. Alablaster.aac Mystique.aac 01-01-11 192kB 01-01-11 115kB 01-01-11 148kB 01-01-11 10.0kB Nokia tune.aac Ring ring. aac 1 Options Back 4 Select Stop Select Menu > Settings. Select the ringtone. Profiles Themes Tones Ringing Incoming call alert: Ringtone: Nokia tune Ringing volume: Vibrating alert: Save Back 2 Display Back On Select Tones > Ringtone:. Tip: To switch between the silent and normal profile, press and hold #. Cyan Magenta Yellow Black Set a song as your ringtone Song 1 00:42. 6 02:30.1 3 You can set a song from the music player as your ringtone.



[You're reading an excerpt. Click here to read official NOKIA ASHA 203 user guide](http://yourpdfguides.com/dref/5574826)  
<http://yourpdfguides.com/dref/5574826>

Song 1 01-10-11 1.9MB Play Done Drag and to the start and end points, then select Done. Incoming call alert: Tone downloads Open Gallery Nokia tune  
Song 2 Song 3 Ringing Song 1 Ringtone: Ringing volume: 01-10-11 2.

8MB 01-10-11 3.2MB 1 Back Select Stop 4 On Vibrating alert: Save Cancel When setting a ringtone, select Open Gallery, then browse to the song. Ringing  
Song 1 Incoming call alert: Select Save. See 11. Ringtone: Do you want to adjust start and end points of the tone? 2 Yes No You can mark a section of a song  
to use as a ringtone. Select Yes. Cyan Magenta Yellow Black Set an alarm 08:00 Alarm on On Alarm repeat Alarm tone Standard 10 minutes Snoozetime-out  
3 Settings Use your phone as an alarm clock. Back Back To repeat the alarm, select Settings > On and the days. Apps and games Alarm clock Calculator 1  
Options Gallery Exit Back Select Menu > Apps > Alarm clock. 08:00 Alarm on 2 Settings Back Set the alarm time, then select .

Cyan Magenta Yellow Black Add an appointment Listen to the radio 1 Options Back Select Menu > Calendar. Listen to your favourite radio stations on your  
phone. October 2 Mo 26 3 10 17 24 31 Tu 27 4 11 18 25 1 W 28 5 12 19 26 2 Th 29 6 13 20 27 3 Fr 30 7 14 21 28 4 Sa 1 8 15 22 29 5 Su 2 9 16 23 30 6 View  
Back 1 Connect a compatible headset. It acts as an antenna. Select a date and View > Add. Reminder Meeting Call Birthday Meet Mike Location: Start date:  
Subject: 31-10-2011 Back 3 Anniversary 10:03 Start time: Save Cancel 2 Options Back Select Meeting, fill in the fields, then select Save. Select Menu >  
Music. Cyan Magenta Yellow Black Find and save radio stations My music Radio XY Z F M 3 Select Radio. 87.50 MHz Back Search for your favourite radio  
stations 87.

50 108.00 4 Options Back 1 Options Back To change the volume, use the volume keys. 98.00 MHz Select Menu > Music. My music Radio 87.

80 108.00 Options Back 5 To close the radio, press and hold . 2 Select Radio. Back Cyan Magenta Yellow Black 98.00 MHz 87.

50 MHz Switch off Play in backgr. 87.50 108.00 Back Stations Search all stat. Back 87.80 108.00 3 Options 6 Options Back To search for all available  
stations, select Options > Search all stat.. 98.00 MHz To switch to a saved station, select or .

101.80 MHz 2 87.80 108.00 Back 87.80 108.00 Options 4 Options Back To search manually, select and hold or . 101.80 MHz Tip: To switch to a saved  
station, you can also press a number key. 01. 02.

03. 04. Switch off Play in backgr. 88.5 MHz 101.

8 MHz 106.6 MHz 107.3 MHz 01. 101.8 MHz Delete station 106.

6 MHz Rename 107.3 MHz Back 88.5 MHz 02. 87.50 108.00 Back Save station Stations Back 03. 04. 5 Options Back To save a station, select Options > Save  
station. Tip: To rename a station, select and hold it, then select Rename. Cyan Magenta Yellow Black Play a song Go to Media player All songs Playlists  
Artists Song 1 Song 2 Song 3 Song 4 Song 5 Exit Options Back 3 Options Listen to your favourite music on your phone.

Albums Select the song you want to play. Song 1 01.38 03.47 1 Options Back 4 Options Back Select Menu > Music. To pause or resume playing, select or .  
Song 1 My music Radio 00:29 03:47 Options Back 2 Select My music. Back 5 To close the music player, press . Cyan Magenta Yellow Black Take a photo 3  
There's a camera in your phone — just aim and snap! Select . The photos are saved in My photos. Camera My photos Timeline 1 Options My albums Exit  
Back To open the camera, select Menu > Photos > Camera.

2 Use the volume keys to zoom in or out. Cyan Magenta Yellow Black Record a video 00:30:00 3 Besides taking photos, you can also record videos with your  
phone. Use the volume keys to zoom in or ou have taken to your PC. Options Back Select the device to connect to. If asked, type in the passcode.  
See 14. Delete Send Use photo Edit photo 1 Back 4 The photo is sent to your PC. Select and hold the photo, then select Send. Delete Send Message Mail Use  
photo Via Bluetooth Edit photo Back 2 Select Via Bluetooth. Cyan Magenta Yellow Black Copy between your phone and PC Update phone software using  
your PC Copy content between your phone and a compatible computer.

Update your phone software with the Nokia Suite PC app. You can also back up the photos and other stuff in your phone to your computer. You need a  
compatible PC, a highspeed internet connection, and a compatible USB cable to connect your phone to the PC. 1 Connect your phone to a computer with a  
compatible USB cable. To get more info and to download the app, go to [www.nokia.com/support](http://www.nokia.com/support). USB mode: Nokia Ovi Suite Media transfer Mass storage 2  
Cancel Select Nokia Ovi Suite, then copy the content. Cyan Magenta Yellow Black Update phone software using your phone Your network service provider  
may send updates over the air directly to your phone. For more info on this network service, contact your network service provider.

You can update your phone software wirelessly. You can also set your phone to automatically check for updates. Select Menu > Settings and Device > Device  
updates. 1. To check if there is an update, select Current sw details. 2. To download and install an update, select Downl. device sw, then follow the  
instructions shown on the phone. The update may take several minutes. If you encounter problems, contact your network service provider.

Check for updates automatically Select Automatic SW update, then set how often to check. Cyan Magenta Yellow Black Back up content to a memory card  
Messages Bookmarks Calendar Gallery files Apps and games Options Done Want to make sure you won't lose any important files? You can back up your  
phone memory to a compatible memory card. 1. Select Menu > Settings > Sync & backup. 2.

Select Create backup. 3. Select what you want to back up, then select Done. Restore a backup Select Restore backup. Cyan Magenta Yellow Black Access  
codes PIN or PIN2 code (4-8 digits) You can set your phone to ask for the PIN code when you switch it on.

If not supplied with your card or you forget the codes, contact your service provider. If you type in the code incorrectly three times in a row, you need to  
unblock the code with the PUK or PUK2 code. PUK or PUK2 code These are required to unblock a PIN or PIN2 code. (8 digits) IMEI number (15 digits)  
This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. You may also need to give the number  
to Nokia Care services. To view your IMEI number, dial \*#06#. Lock code (security code) (min. 5 digits) This helps you protect your phone against  
unauthorised use. You can set your phone to ask for the lock code that you define.

The default lock code is 12345. Keep the code secret and in a safe place, separate from your phone. If you forget the code and your phone is locked, your  
phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted.



[You're reading an excerpt. Click here to read official NOKIA ASHA](#)

[203 user guide](#)

<http://yourpdfguides.com/dref/5574826>

Cyan Magenta Yellow Black For more information, contact Nokia Care or your phone dealer. Cyan Magenta Yellow Black Support • Update your phone software • Restore the original factory settings If your issue remains unsolved, contact Nokia for repair options. Go to [www.nokia.com/repair](http://www.nokia.com/repair). Before sending your phone for repair, always back up your data, as all personal data in your phone may be deleted.

When you want to learn more about how to use your phone, or if you're unsure how your phone should work, go to [www.nokia.com/support](http://www.nokia.com/support). Your questions may have been asked before. On the support web pages, select Frequently asked questions.

From the support pages, you can also find news on apps, downloads, and other useful info, such as: • User guides • Software update info • Further details about features and technologies, and the compatibility of devices and accessories If you have an issue, do the following: • Reboot your phone. Switch the phone off, then remove the battery. After about a minute, put the battery back in, then switch the phone on again. Cyan Magenta Yellow Black Protect the environment Save energy You do not need to charge your battery so often if you do the following: • Close applications and data connections, such as your Bluetooth connection, when not in use. • Deactivate unnecessary sounds, such as touch screen and key tones.

Recycle Recycle packaging and user guides at your local recycling scheme. When this phone has reached the end of its working life, all of its materials can be recovered as materials and energy. To guarantee the correct disposal and reuse, Nokia cooperates with its partners through a program called We:recycle. For information on how to recycle your old Nokia products and where to find collection sites, go to [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or call the Nokia Care contact centre. The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your phone, go to [www.nokia.com/ecoprofile](http://www.nokia.com/ecoprofile).

Cyan Magenta Yellow Black General information Read these simple guidelines. Not following them may be dangerous or illegal. For further information, read the complete user guide. SWITCH OFF IN RESTRICTED AREAS Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. QUALIFIED SERVICE Only qualified personnel may install or repair this product. BATTERIES, CHARGERS, AND OTHER ACCESSORIES Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products. KEEP YOUR DEVICE DRY Your device is not water-resistant.

Keep it dry. GLASS PARTS The device screen is made of glass. This glass can break if the device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch the glass parts of the device or attempt to remove the broken glass from the device. Stop using the device until the glass is replaced by qualified service personnel.

PROTECT YOUR HEARING Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Product and safety information Feature specific instructions 1 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation. 2 Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. 3 Important: Avoid scratching the touch screen. Never use an actual pen, pencil, or other sharp object on the touch screen. 4 Important: This device is designed to be used with a standard SIM card (see Cyan Magenta Yellow Black figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.

9 Only compatible devices can receive and display multimedia messages. Messages may look different in different devices. 10 Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your service provider. 11 The edited ringtone does not replace the original ringtone or sound clip. Preset ringtones cannot be modified, and not all formats of ringtones are supported. 12 Only those features that are supported by the social networking service are available. Using social networking services requires network support. This may involve the transmission of large amounts of data and related data traffic costs. For information about data transmission charges, contact your service provider.

13 The social networking services are third party services and not provided by Nokia. Check the privacy settings of the social networking service you are using as you may share information with a large group of people. The terms of use of the social networking service apply to sharing information on that service. Familiarise yourself with the terms of use and the privacy practices of that service. 5 Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area.

6 Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. 7 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message.

@@@You can also deactivate Bluetooth function when you are not using it. @@To make a call, activate another profile. @@To use the device, you need a subscription with a service provider. @@@@The following suggestions help you protect your warranty coverage. • Keep the device dry.

@@@• Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged. • Do not store the device in high temperatures. @@• Do not store the device in cold temperatures. @@@@• Do not drop, knock, or shake the device.



[You're reading an excerpt. Click here to read official NOKIA ASHA 203 user guide](http://yourpdfguides.com/dref/5574826)

<http://yourpdfguides.com/dref/5574826>

Rough handling can break internal circuit boards and mechanics. @@ • Do not paint the device. Paint can clog moving parts and prevent proper operation.

@@ • Keep your device away from magnets or magnetic fields. @@@@ Check how to recycle your Nokia products at [www.nokia.com/recycling](http://www.nokia.com/recycling).

@@Nokia may make additional battery models available for this device. Always use original Nokia batteries. @@@@The battery can be charged and discharged hundreds of times, but it will eventually wear out.

When the talk and standby times are noticeably shorter than normal, replace the battery. Battery safety Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime.

If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket.

Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a Cyan Magenta Yellow Black damaged battery or charger. Only use the charger indoors. Additional safety information Make an emergency call 1. Make sure the device is switched on. 2. Check for adequate signal strength. You may also need to do the following: •

Insert a SIM card.

• Deactivate call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group. • Make sure the flight profile is not activated. • If the device screen and keys are locked, unlock them. 3. Press the end key repeatedly, until the home screen is displayed.

4. Enter the official emergency number for your present location. Emergency call numbers vary by location. 5. Press the call key.

6. Give the necessary information as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies. Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should: • Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. • Not carry the wireless device in a breast pocket. • Hold the wireless device to the ear opposite the medical device. • Turn the wireless device off if there is any reason to suspect that interference is taking place. • Follow the manufacturer directions for the implanted medical device.

Cyan Magenta Yellow Black If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.

5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty.

Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere, for example near gas pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death.

Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders.



[You're reading an excerpt. Click here to read official NOKIA ASHA 203 user guide](http://yourpdfguides.com/dref/5574826)

<http://yourpdfguides.com/dref/5574826>

You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Cyan Magenta Yellow Black Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.

0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.

90 W/kg. Use of device accessories may result in different SAR values. @@@@© 2012 Nokia. All rights reserved. Nokia, Nokia Connecting People, and WE: logo are trademarks or registered trademarks of Nokia Corporation.

Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Cyan Magenta Yellow Black Includes RSA BSAFE cryptographic or security protocol software from RSA Security. Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors. The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device. By Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

To the maximum extent permitted by applicable law, under no circumstances shall Cyan Magenta Yellow Black using an application, you acknowledge that the application is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device. Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge.

Cyan Magenta Yellow Black .



[You're reading an excerpt. Click here to read official NOKIA ASHA 203 user guide](http://yourpdfguides.com/dref/5574826)  
<http://yourpdfguides.com/dref/5574826>