



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA ASHA 210. You'll find the answers to all your questions on the NOKIA ASHA 210 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NOKIA ASHA 210**  
**User guide NOKIA ASHA 210**  
**Operating instructions NOKIA ASHA 210**  
**Instructions for use NOKIA ASHA 210**  
**Instruction manual NOKIA ASHA 210**

**User Guide**  
Nokia Asha 210

**NOKIA**

Issue 1.0 (01)



[You're reading an excerpt. Click here to read official NOKIA ASHA 210 user guide](http://yourpdfguides.com/dref/5574825)  
<http://yourpdfguides.com/dref/5574825>

### Manual abstract:

For further info, read the complete user guide. **SWITCH OFF IN RESTRICTED AREAS** Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. **ROAD SAFETY COMES FIRST** Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. **INTERFERENCE** All wireless devices may be susceptible to interference, which could affect performance.

**QUALIFIED SERVICE** Only qualified personnel may install or repair this product. **BATTERIES, CHARGERS, AND OTHER ACCESSORIES** Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products.

**KEEP YOUR DEVICE DRY** Your device is not water-resistant. Keep it dry. **PROTECT YOUR HEARING** To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use. © 2013 Nokia.

All rights reserved. 4 Get started Get to grips with the basics, and have your phone up and running in no time. Keys and parts Explore the keys and parts of your phone. 1 Charger connector 1 2 Micro-USB connector 11 3 Headset connector (3.5 mm) 4 Screen 5 Scroll key 10 6 End/Power key 9 7 Keyboard 8 8

Shortcut keys 9 Call key 10 Selection keys 11 Earpiece 12 Camera lens.

Before using the camera, remove the protective tape from the lens. 13 Loudspeaker 14 Antenna area The antenna area is highlighted. Tip: Lock the keys when not using your phone. Select Menu, and press the function key. To unlock, select Unlock, and press the function key. Your phone uses S40 software. 2 3 12 4 5 6 7 13 14 Insert SIM card and battery Read on to learn how to insert a SIM card into your phone. 1. Switch the phone off, and remove the back cover. 2.

If the battery is in the phone, lift it out. © 2013 Nokia. All rights reserved. 5 3. Lift the SIM holder, and put the SIM in, contact area face down. 4. Line up the battery contacts, and put the battery in. 5. Press the back cover down until it locks into place. 6.

To switch on, press and hold until the phone vibrates. Insert a memory card Learn how to insert a memory card into your phone. 1. Switch the phone off, and remove the back cover. © 2013 Nokia.

All rights reserved. 6 2. If the battery is in the phone, lift it out. 3. Slide the memory card holder towards the top of the phone.

4. Lift the holder. 5. Put a compatible memory card in, contact area face down. 6. Lower the holder. © 2013 Nokia. All rights reserved. 7 7. Slide the holder to the original position.

8. Line up the battery contacts, and put the battery in. 9. Press the back cover down until it locks into place. Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone. 1. Plug the charger into a wall outlet. © 2013 Nokia. All rights reserved. 8 2.

Connect the charger to the phone. See 3 on page 31. When done, unplug the charger from the phone, then from the wall outlet. Tip: You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device.

The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Change the volume You can control the audio in several ways. 1. While in a call, scroll up or down to change the volume. 2.

You can also connect a compatible headset or other device to the headset connector. 3. To use the loudspeaker on your phone when calling, select Loudspeaker. You can also use the loudspeaker when listening to radio. 123456789 Loudspeaker. In call © 2013 Nokia. All rights reserved. 9 Copy content from your old phone Easily get your contacts, calendar entries, and other stuff to your new phone. 1.

Switch Bluetooth on in both phones. To switch Bluetooth on on your new phone, select Menu > Settings > Connectivity > Bluetooth. 2. On your new phone, select Menu > Settings > Sync and backup > Copy from device. 3. Select what you want to copy, then select Done. 4. Choose your old phone from the list of found devices. 5. If asked, create a one-time passcode (such as 123), and select OK.

6. Check that the codes match on both phones. 7. Follow the instructions shown on both phones. © 2013 Nokia.

All rights reserved. 10 Basics Learn how to get the most out of your new phone. Explore your phone Explore your phone with a simple key press. 1. To see the apps and features of your phone, press Menu.

... Menu ... 2. To go to an app or feature, press the scroll key up, down, left, or right. 3. To open the app or select the feature, press Select.

Select 4. To go back to the previous view, press Back. Back 5. To go back to the home screen, press . © 2013 Nokia. All rights reserved. 11 Display indicators

The display indicators on your phone tell you the current time, battery and signal strength, and much more. You have unread messages. You have unsent or failed messages. The keys are locked.

An alarm is set. Bluetooth is on. The phone is connected to a GSM network. All incoming calls are forwarded to another number. The phone is connected to a headset.

The phone is connected to a device, such as a PC, with a USB cable. The type of mobile network you're currently connected to may be shown with a single letter, a combination of letters, or a combination of letters and numbers. For example, , depending on your network service provider. The icons may vary depending on your region or network service provider. Prolong battery life Get the most out of your phone while getting the battery life you need.

There are steps you can take to save power on your phone. ••• Always charge the battery fully. Mute unnecessary sounds, such as key press sounds. Use wired headphones, rather than the loudspeaker. To save power, you can: Lower the backlight brightness Set the backlight to switch off after a short time Select Menu > Settings > Display > Backlight, and change the setting for Backlight intensity. Select Menu > Settings > Display > Backlight, and change the setting for Backlight time-out. © 2013 Nokia. All rights reserved. 12 Use network connections selectively ••• Switch Bluetooth on only when needed. To switch off automatic update of a mail account, select Menu > Mail > Options > Settings and an account, and switch Update my Inbox: to Manually.

If you're listening to music or otherwise using your phone, but don't want to make or receive calls, switch flight mode on. Select Menu > Settings > Profiles > Flight > Activate. Personalise your home screen Want to open your favourite apps straight from the home screen? You can add, remove, and rearrange items on your home screen. 1. Scroll down on the home screen, and select Options > Personalise view.



[You're reading an excerpt. Click here to read official NOKIA ASHA 210 user guide](http://yourpdfguides.com/dref/5574825)

<http://yourpdfguides.com/dref/5574825>

2. Select a bar and an item, such as Notifications. 3. Select Done > Yes. Tip: To add more apps, scroll to the shortcut bar on the home screen, and select Options > Change shortcut.

Change your ringtone Set a different ringtone for each profile. 1. Select Menu > Settings > Tones, and scroll to Ringtone:. 2. Select Open Gallery. 3. Select Tones > Ringtones. 4. Select the ringtone. Tip: To switch between the silent and normal profile, press and hold .

Nokia Store Download mobile games, apps, themes, wallpapers, and ringtones to your phone from Nokia Store. © 2013 Nokia. All rights reserved. 13 Select Menu > Store. Many items are free of charge; some you need to pay for with your credit card or on your phone bill. The availability of payment methods depends on your country of residence and your network service provider. To learn more about Nokia Store, go to store.ovi.com. Keys on the keyboard 1 8 7 2 3 4 5 6 1 2 3 4 5 6 7 8 Keyboard Function key Shift key Sym key Space key Ctrl key Enter key Backspace key To start writing, select a text box.

The keyboard layout can vary in different apps and languages. Write text With the keyboard you can write your messages in no time. Set the writing language Select Options > Writing language and the language you want. Switch to number mode Press the function key twice. To go back to letter mode, press the function key. Switch between character cases Press the shift key. Type in the number or character printed at the top right corner of a key Press and hold the key. This feature is not available for all languages. Type in a special character or symbol Press the sym key, and select the symbol. Type in an accented character While pressing and holding the sym key, press the character key repeatedly.

© 2013 Nokia. All rights reserved. 14 Copy and paste text Press and hold the shift key, and scroll to highlight text. Press and hold the ctrl key, and press C (copy), X (cut) or V (paste). Use predictive text To speed up your writing, your phone can guess what you are starting to write.

Predictive text is based on a built-in dictionary. This feature is not available for all languages. 1. Start writing a word. Your phone suggests possible words. 2. To see alternative word matches, scroll down. 3. To confirm a word, press the space key. Switch predictive text on or off Select Options > More > Prediction and select On or Off. Switch between predictive and traditional text While pressing and holding the ctrl key, press the space key. You can also select and hold Options. © 2013 Nokia. All rights reserved. 15 People & messaging Contact your friends and family, and share files, such as photos, using your phone.

Stay tuned with the latest updates to your social networking services even when on the go. Make or answer a call Learn how to make or answer a call with your new phone. 1. On the home screen, type in the phone number. To type in the + character, used for international calls, press +. . 2. Press 3. To end the call, press . 4.

When someone calls you, press to answer. Warning: When the flight profile is activated, you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make a call, switch to another profile. Call last dialled number On the home screen, press , select the number, and press . .

View your missed calls On the home screen, press View. To call back, select the number, and press Tip: To view missed calls later, select Menu > Contacts > Log > Missed calls. Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area. Save a name and phone number Add new contacts to your phone. 1.

Select Menu > Contacts. 2. Select Add new. 3. Type in the phone number, and select OK. 4. Write the name, and select Save. © 2013 Nokia. All rights reserved. 16 Send a message With text and multimedia messages, you can quickly contact your friends and family.

1. Select Menu > Messaging. 2. Select Create message. 3. Write your message. 4. To add an attachment, such as a photo or video, select Options > Insert object. 5. To add a contact as a recipient, select Send to > Contacts.

To type i have several conversations going on at the same time. To switch between conversations, select one in Conversations. Using services or downloading content may cause the transfer of large amounts of data, which may result in data costs. © 2013 Nokia. All rights reserved.

20 Camera Why carry a separate camera if your phone has all you need for capturing memories? With your phone camera, you can easily take photos or record videos. Take a photo Capture the best moments with your phone camera. 1. To switch the camera on, press the camera key. 2.

To zoom in or out, scroll up or down. 3. To take the photo, press the camera key. The photos are saved in Menu > Photos > My photos. Switch the camera off Select . Take a self-portrait It's easy to take a self-portrait with your phone camera. 1. To switch the camera on, press the camera key. 2. Select > .

3. Hold the phone with the camera facing you, and follow the instructions you hear. When ready, the phone takes the photo automatically. © 2013 Nokia. All rights reserved. 21 Send a photo or video Send your best shots to your friends and family in a multimedia message or mail, or using Bluetooth. 1. Select Menu > Photos > My photos. 2. Go to the photo, and select Options > Share and how you want to send.

Tip: To send a video, select Menu > Photos > My videos, the video you want to send, and Options > Share. Send several photos or videos at the same time Go to the folder where the photos or videos are, and select Options > Mark and an option. To send, select Options > Share marked and how you want to send. © 2013 Nokia. All rights reserved.

22 Internet Learn how to create wireless connections and browse the web while keeping your data costs down. Browse the web Catch up on the news, and visit your favourite websites on the go. Tip: If your network service provider doesn't charge you a fixed fee for data transfer, to save on data costs, use a Wi-Fi network to connect to the internet. 1. Select Menu > Internet.

2. Select the address bar. 3. Write a web address. Tip: To search the internet, write a search word in the address bar. If asked, select your default search engine. Zoom in Select a section of the page. Tip: To view the page in a single column of larger, readable text and pictures without having to zoom in, select Options > Settings, and switch Column view to On. Add a website to your favourites If you visit the same websites all the time, add them to your favourites, so you can easily access them. 1.

Select Menu > Internet. 2. Go to a website. 3. Select Options > Add to favourites. Go to a favourite website Open the Favourites tab, and select a favourite. © 2013 Nokia. All rights reserved. 23 Entertainment Having a spare moment and in need of entertainment? Learn how to listen to the radio on your phone.



[You're reading an excerpt. Click here to read official NOKIA ASHA 210 user guide](http://yourpdfguides.com/dref/5574825)  
<http://yourpdfguides.com/dref/5574825>

Listen to the radio You can listen to FM radio stations using your phone – just connect a headset, and select a station.

Select Menu > Music > Radio. Change the volume Scroll up or down. Close the radio Press the end key. Set the radio to play in the background Select Options > Play in background. Close the radio when it is playing in the background Press and hold the end key.

Play a song Play music stored in the phone memory or on the memory card. 1. Select Menu > Music > My music > All songs. 2. Select a song.

To pause or resume playing, press Skip to the beginning of the current song Scroll left. Skip to the previous song Scroll left twice. Skip to the next song Scroll right. © 2013 Nokia. All rights reserved. or . 24 Fast-forward or rewind Press and hold the scroll key to the right or left. Close the music player Press the end key. Set the music player to play in the background Select Options > Play in background. Close the music player when it is playing in the background Press and hold the end key.

© 2013 Nokia. All rights reserved. 25 Office Learn how to use the calendar to keep yourself organised. Add a calendar entry Need to remember an appointment? Add it to your calendar. 1. Select Menu > Calendar. 2. Select a date and View > Add. 3. Select an entry type.

4. Fill in the fields, and select Save. Tip: To delete an entry, go to the entry, and select Options > Delete. Change the time and date You can set your phone clock manually. Select Menu > Settings and Date and time.

Change the time zone when travelling Select Date & time settings > Time zone:, scroll left or right to select the time zone of your location, and select Save. © 2013 Nokia. All rights reserved. 26 Phone management & connectivity Take care of your phone and its contents. Learn how to connect to accessories and networks, transfer files, create backups, lock your phone, and keep the software up to date.

Share your content using Slam With Slam, sharing your content is now easier than ever. 1. Select Menu > Settings > Connectivity > Bluetooth > On. 2. Select Phone visibility > Always visible to make your phone visible to others. 3. Select, for example, a photo to share and Options > Share > Via Slam. 4. Move your phone close to the other phone. Slam searches for the nearest phone, and sends the item to it.

See 4 on page 31. Connect to a Wi-Fi network To help save on data costs, you can use a Wi-Fi network to connect to the internet, whether you're at home or at a library or internet café. 1. Select Menu > Settings > Connectivity > Wi-Fi. 2. Select the network you want. 3. If the connection is secured, type in the password. Add a new network Make sure Wi-Fi is on, select Options > Add new network, and type in the required info. Close the Wi-Fi connection Select Menu > Settings > Connectivity > Wi-Fi > Turn off.

Tip: To quickly open or close the Wi-Fi connection, on the home screen, press and hold the space key. © 2013 Nokia. All rights reserved. 27 Back up content to a memory card Want to make sure you won't lose any important files? You can back up your phone memory to a compatible memory card. 1.

Select Menu > Settings > Sync and backup. 2. Select Create backup. 3. Select what you want to back up, then press Done.

Restore a backup Select Restore backup and what you want to restore, then press Done. Restore original settings If your phone is not working properly, you can reset some settings to their original values. 1. End all calls and connections. 2. Select Menu > Settings > Restore factory sett. > Settings only. 3. Type in the security code. This does not affect documents or files stored on your phone.

After restoring the original settings, your phone switches off and then on again. This may take longer than usual. Update your phone software You can update your phone software wirelessly. You can also set your phone to automatically check for updates. 1. Select Menu > Settings > Phone > Device updates. 2. To check if there is an update available and to download it, select Downl. phone software. The update may take several minutes.

If you encounter problems, contact your network service provider. After the update, go to [www.nokia.com/support](http://www.nokia.com/support) to get your new user guide. © 2013 Nokia.

All rights reserved. 28 Your network service provider may send updates over the air directly to your phone. For more info on this network service, contact your network service provider. See 8 on page 31, 12 on page 31, 13 on page 31. Access codes Ever wondered what the different codes on your phone are for?

PIN or PIN2 code (4-8 digits) These protect your SIM card against unauthorised use or are required to access some features.

You can set your phone to ask for the PIN code when you switch it on. If not supplied with your card or you forget the codes, contact your network service provider. If you type in the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code. PUK or PUK2 These are required to unblock a PIN or PIN2 code. If not supplied with your SIM card, contact your network service provider. Security code (lock code, password) This helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define. Keep the code secret and in a safe place, separate from your phone. If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted.

For more information, contact Nokia Care or your phone dealer. IMEI This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. You may also need to give the number to Nokia Care services. To view your IMEI number, dial \*#06#. © 2013 Nokia. All rights reserved. 29 Help and support When you want to learn more about your phone, or if you're unsure how your phone should work, there are several support channels for you to check. To help you get the most out of your phone, you can explore [www.nokia.com/support](http://www.nokia.com/support).

There you can find: •••••Troubleshooting info Discussions News on apps and downloads Software update info Further details about features and technologies, and the compatibility of devices and accessories Troubleshooting and discussions may not be available in all languages. @@The phone restarts. Update your phone software. Reset your phone.

@@@@@@@2 Avoid touching the antenna area while the antenna is in use. @@@@@@@@@@@@@@6 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices. @Longer messages are sent as two or more messages. Your service provider may charge accordingly.

@@@@@@@@@@@@@@By using an app, you acknowledge that the app is provided as is. @@@@@@12 Before starting the update, connect a charger or make sure the device battery has enough power. 13 Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.



[You're reading an excerpt. Click here to read official NOKIA ASHA](http://yourpdfguides.com/dref/5574825)

[210 user guide](http://yourpdfguides.com/dref/5574825)

<http://yourpdfguides.com/dref/5574825>

14 Nokia may use personal data for certain uses relating to this service, as detailed in the Nokia privacy policy or other applicable terms. 15 Important: This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout. 16 Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

17 Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. 18 Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card. 19 Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. © 2013 Nokia. All rights reserved. 31 20 Important: Use encryption to increase the security of your Wi-Fi connection.

Using encryption reduces the risk of others accessing your data. 21 Some content is generated by third parties and not Nokia. The content may be inaccurate and is subject to availability. © 2013 Nokia. All rights reserved.

32 Product and safety information Network services and costs You can only use your device on the GSM 900, 1800 MHz networks. You need a subscription with a service provider. Using some features and downloading content require a network connection and may result in data costs. You may also need to subscribe to some features. Emergency calls 1.

Make sure the device is switched on. 2. Check for adequate signal strength. You may also need to do the following: ••••Put a SIM card in the device, if supported by your device. Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group. Make sure the flight profile is not activated. If the device keys are locked, unlock them. 3. Press the end key repeatedly, until the home screen is shown. 4.

Type in the official emergency number for your present location. Emergency call numbers vary by location. 5. Press the call key. 6. Give the necessary info as accurately as possible. Do not end the call until given permission to do so. When you switch your device on for the first time, you are asked to create your Nokia account. To make an emergency call during the account setup, press the call key. Important: Activate both cellular and internet calls, if your phone supports internet calls.

The phone may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies. Take care of your device Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

••••••••••Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and let the device dry. Do not use or store the device in dusty or dirty areas. Do not store the device in high temperatures.

High temperatures may damage the device or battery. Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it. Do not open the device other than as instructed in the user guide. Unauthorised modifications may damage the device and violate regulations governing radio devices. Do not drop, knock, or shake the device. Rough handling can break it. Only use a soft, clean, dry cloth to clean the surface of the device. Do not paint the device. Paint can prevent proper operation.

For optimal performance, switch the device off and remove the battery from time to time. Keep the device away from magnets or magnetic fields. To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info. Recycle © 2013 Nokia. All rights reserved. 33 Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia products at [www.nokia.com/recycle](http://www.nokia.com/recycle).

Crossed-out wheeled-bin symbol The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or go to [www.nokia.com/support](http://www.nokia.com/support). For more info on the environmental attributes of your device, see [www.nokia.com/ecoprofile](http://www.nokia.com/ecoprofile). About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. With this device you can access content protected with OMA DRM 2.0, or OMA DRM 2.1. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content. Battery and charger info Use your device only with an original BL-4U rechargeable battery. Nokia may make additional battery models available for this device.

Charge your device with AC-11 charger. Charger plug type may vary. Battery and charger safety Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery.



[You're reading an excerpt. Click here to read official NOKIA ASHA 210 user guide](http://yourpdfguides.com/dref/5574825)  
<http://yourpdfguides.com/dref/5574825>

*A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery.*

*This may damage the battery or the other object. Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.*

*Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.*

*Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children. © 2013 Nokia. All rights reserved.*

*34 Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy. Implanted medical devices To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should: ••••Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Switch the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device.*

*If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel The surface of this device is nickel-free.*

*Protect your device from harmful content Your device may be exposed to viruses and other harmful content. Take the following precautions: ••••Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.*

*Only install and use services and software from sources that you trust and that offer adequate security and protection. Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer. If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. The sending of data files or messages requires a quality network connection and may be delayed until such a connection is available.*

*Follow the separation distance instructions until the sending is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area. © 2013 Nokia. All rights reserved.*

*35 Potentially explosive environments Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles.*

*Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.*

*The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.62 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.*

*@@The messages contain tips and tricks and support. @@@@This information may be used as specified in the privacy policy, available at www.*



[You're reading an excerpt. Click here to read official NOKIA ASHA](#)

[210 user guide](#)

<http://yourpdfguides.com/dref/5574825>

nokia.com. Copyrights and other notices **DECLARATION OF CONFORMITY** Hereby, NOKIA CORPORATION declares that this RM-929 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [www.nokia.com/global/declaration/declaration-of-conformity](http://www.nokia.com/global/declaration/declaration-of-conformity). The availability of products, features, apps and services may vary by region. For more info, contact your Nokia dealer or your service provider.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. © 2013 Nokia.

All rights reserved. 36 Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. @@Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local Nokia dealer for further details and availability of language options. TM & © 2013 Nokia.

All rights reserved. Third party products/names may be TMs of their respective owners. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See [www.mpegla.com](http://www.mpegla.com). © 2013 Nokia. All rights reserved. 37.



[You're reading an excerpt. Click here to read official NOKIA ASHA 210 user guide](http://yourpdfguides.com/dref/5574825)  
<http://yourpdfguides.com/dref/5574825>