



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA ASHA 302. You'll find the answers to all your questions on the NOKIA ASHA 302 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NOKIA ASHA 302**  
**User guide NOKIA ASHA 302**  
**Operating instructions NOKIA ASHA 302**  
**Instructions for use NOKIA ASHA 302**  
**Instruction manual NOKIA ASHA 302**

Nokia Asha 302 User Guide

Issue 1.0



[You're reading an excerpt. Click here to read official NOKIA ASHA 302 user guide](http://yourpdfguides.com/dref/4232298)  
<http://yourpdfguides.com/dref/4232298>

### Manual abstract:

For further information, read the complete user guide. @ @ Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws.

Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. @ @ @ @ Keep it dry. PROTECT YOUR HEARING Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Get started 5 Get started Keys and parts 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 Charger connector Headset connector/Nokia AV connector (3.5 mm) Micro-USB connector Earpiece Screen Selection key Social key Call key Bluetooth key. Press and hold to access the Bluetooth settings.

WLAN key. Press and hold to access the WLAN settings. NaviTM key (scroll key) Selection key Messaging key End/Power key Keyboard 6 Get started 1 2 3 4 5 Camera lens. Before using the camera, remove the protective tape from the lens. Wrist strap hole Loudspeaker Memory card slot Back cover release latch Write with the keyboard Your phone has a full keyboard.

1 2 Function key. To insert special characters printed at the top of keys, press the function key, and then press the corresponding key. @ @ To return to normal mode, press the function key. Shift key. @ @ @ @ Sym key.

@ @ Backspace key. To delete a character, press the backspace key. To delete several characters, press and hold the backspace key. Enter key. To move the cursor to the next row or text input field, press the enter key. Additional functions are based on the current context. Ctrl key. To copy, cut, or paste selected text, while pressing and holding the ctrl key, press C, X, or V. To select all the text, while pressing and holding the ctrl key, press A. Insert a variation of a letter You can insert, for example, letters with accents.

To insert á, press and hold the sym key, and then press A repeatedly, until the desired letter is displayed. The order and availability of letters depends on the selected writing language. Messaging key To quickly write a mail or message, view your inbox, or start chatting, on the home . screen, press the messaging key Set what happens when you press the key Select Menu > Settings and My shortcuts > Messaging key, and select an option. Insert a SIM card and battery Important: This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout. This phone is intended for use with a BL-5J battery. Always use original Nokia batteries. 1 Pull the back cover release latch toward the bottom of the phone, and remove the cover.

8 Get started 2 3 If the battery is inserted, lift it out. Slide the SIM card holder to unlock it (1), and use your fingernail to lift it. Make sure the contact area would face down when the SIM card holder is lowered (2), insert the SIM card into the holder, and lower the holder (3). Slide the card holder to lock it (4). 4 Line up the contacts of the battery and the battery compartment, and insert the battery.

To replace the back cover, direct the top locking catches toward their slots, and press down until the cover locks into place. Insert a memory card Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. Your phone supports memory cards with a capacity of up to 32 GB. Get started 9 1 2 3 Open the cover of the memory card slot (1).

Make sure the contact area of the memory card is facing down, and insert the card (2). Push the card in, until it locks into place. Close the cover of the memory card slot (3). Remove the memory card Push the card in, until it is released, and pull the card out. Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your phone for the first time. If the phone indicates a low charge, do the following: 1 2 3 Connect the charger to a wall outlet. Connect the charger to the phone. When the phone indicates a full charge, disconnect the charger from the phone, then from the wall outlet. You do not need to charge the battery for a specific length of time, and you can use the phone while it is charging. 10 Get started If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it. Switch the phone on or off Press and hold the power key until the phone vibrates. You may be prompted to get the configuration settings from your network service provider.

For more information on this network service, contact your network service provider. Antenna locations The antenna area is highlighted. Basic use 11 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation. Attach a strap Remove the back cover, thread the strap through the hole, and loop the strap around the wrist strap peg. The strap may be available separately. Basic use Access codes PIN or PIN2 code (4-8 digits) These protect your SIM card against unauthorised use or are required to access some features.

You can set your phone to ask for the PIN code when you switch it on. If not supplied with your SIM card or you forget the codes, contact your service provider. If you enter the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code. PUK or PUK2 code (8 digits) IMEI number (15 digits) These are required to unblock a PIN or PIN2 code. If not supplied with your SIM card, contact your service provider.

This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. 12 Basic use To view your IMEI number, dial \*#06#. Lock code (security This helps you protect your phone against unauthorised use. code) You can set your phone to ask for the lock code that you (min.

5 digits) define. The default lock code is 12345. Keep the code secret and in a safe place, separate from your phone. If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted. For more information, contact a Nokia Care Point or your phone dealer. Lock the keys To avoid accidentally making a call when your phone is in your pocket or bag, lock the keys. Select Menu, and press the function key. Unlock the keys Select Unlock, and press the function key. Set the keys to lock automatically 1 Select Menu > Settings and Device > Automatic keyguard > On.

2 Define the length of time after which the keys are locked automatically.



[You're reading an excerpt. Click here to read official NOKIA ASHA 302 user guide](http://yourpdfguides.com/dref/4232298)  
<http://yourpdfguides.com/dref/4232298>

*Indicators You have unread messages. You have unsent, cancelled, or failed messages. The keypad is locked. The phone does not ring for incoming calls or text messages. An alarm is set. The phone is registered to the GPRS or EGPRS network. A GPRS or EGPRS connection is open. The GPRS or EGPRS connection is suspended (on hold). The phone is registered to a 3G (UMTS) network.*

*The phone is registered to a 3.5G (HSDPA) network. Bluetooth is activated. or or or Basic use WLAN is activated. All incoming calls are diverted to another number.*

*The currently active profile is timed. A headset is connected to the phone. The phone is connected to another device, using a USB data cable. 13 Copy contacts and other stuff from your old phone Want to copy your contacts, calendar, and other stuff from your old compatible Nokia phone, so you can start using your new phone without missing a beat? You can do that, free of charge. 1 2 3 4 5 6 7 Switch Bluetooth on in both phones.*

*Select Menu > Settings > Connectivity > Bluetooth > On. Select Menu > Settings > Sync and backup. Select Phone switch > Copy to this. Select what you want to copy, then select Done. Select your old phone from the list. If needed, make up a passcode for this connection, and type it into both phones. In some phones, the code may be fixed. For details, see the user guide of your old phone. If asked, allow connection and copying requests. Change the volume of a call, song, or video Scroll up or down.*

*The built-in loudspeaker allows you to speak and listen from a short distance without having to hold the phone to your ear. Activate the loudspeaker during a call Select Loudspeaker. 14 Calls Use your phone without a SIM card Do your children want to play with your phone, but you don't want them to accidentally make a call? Some features of your phone, such as games and the calendar, may be used without inserting a SIM card. Features that are dimmed in the menus cannot be used. Calls Make a call 1 On the home screen, enter the phone number. To delete a number, select Clear. To enter the + character, used for international calls, press +. 2 To make the call, press the call key. 3 To end the call, press the end key.*

*Call the last dialled number Trying to call someone, but they are not answering? It is easy to call them again. 1 2 On the home screen, press the call key. Go to the number, and press the call key. View your missed calls Want to see who made the call you missed? On the home screen, select View. The caller's name is displayed, if stored in the contacts list.*

*Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area. Call back the contact or number Go to the contact or number, and press the call key. View the missed calls later Select Menu > C number of characters that can be sent in a single message. If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size. Only compatible devices can receive and display multimedia messages.*

*Messages may look different in different devices. Listen to voice messages When you can't answer, you can divert calls to your voice mailbox and listen to your messages later. You may need a voice mailbox subscription. For more information on this network service, contact your service provider. 18 1 2 3 Personalise your phone Select Menu > Messaging > More > Voice messages and Voice mailbox number. Enter your voice mailbox number, and select OK. To call your voice mailbox, on the home screen, press and hold 1. Send an audio message Don't have time to write a text message? Record and send an audio message instead. Select Menu > Messaging. 1 2 3 4 Select More > Other messages > Audio message.*

*To record your message, select . To stop recording, select . Select Send to and a contact. Personalise your phone About the home screen On the home screen, you can: . . . . See notifications of missed calls and received messages Open your favourite applications Add shortcuts for different features, such as taking a picture or browsing the web View your favourite contacts, and quickly call, text, or send mail to them Add shortcuts to your home screen Want to open your favourite apps directly from your home screen? You can add shortcuts to your most used features. 1 2 On the home screen, select Options > Personalise view. Select a bar, then select an item, such as a widget, and Done. Tip: To remove an app or shortcut from the home screen, select Options > Set as empty. Change a shortcut on the shortcut widget 1 On the home screen, scroll to the shortcut you want to change, then select Options > Change shortcut. 2 Select the desired item from the list. Tip: To change all shortcuts at the same time, select Select shortcuts.*

*Time management 19 Personalise your home screen Want to see your favourite landscape or pictures of your family in the background of your home screen? You can change this wallpaper, and rearrange items on your home screen, to personalise it to your liking. Change the wallpaper 1 Select Menu > Settings and Display > Wallpaper. 2 Select a folder and a patible computer. 1 2 Use a USB data cable to connect your phone to a computer. Select from the following modes: 22 Connectivity Nokia Suite -- Nokia Suite is installed on your computer.*

*Media transfer -- Nokia Suite is not installed on your computer. If you want to connect your phone to a home entertainment system or printer, use this mode. Mass storage -- Nokia Suite is not installed on your computer. The phone is displayed as a portable device on your computer. Make sure a memory card is inserted.*

*If you want to connect your phone to other devices, such as a home or car stereo, use this mode. To copy the content, use the file manager of the computer. To copy your contacts, music files, videos, or pictures, use Nokia Suite. 3 Connect to a WLAN About WLAN connections Select Menu > Settings > Connectivity > WLAN. Connect to a wireless local area network (WLAN) and manage your WLAN connections. Important: Use encryption to increase the security of your WLAN connection. Using encryption reduces the risk of others accessing your data. Note: Using WLAN may be restricted in some countries. For example, in France, you are only allowed to use WLAN indoors. For more information, contact your local authorities.*

*Connect to a WLAN at home To help save data costs, connect to your home WLAN when you are at home and want to browse the web on your phone. Select Menu > Settings > Connectivity > WLAN. Connect for the first time 1 To search for your home WLAN, select Available WLANs. 2 To connect, select your home WLAN and Connect. 3 If the WLAN is secured, enter the password. 4 If you save your home WLAN, you do not always have to search for it in future. Select Options > Save. indicates a saved WLAN. Connect to your saved home WLAN 1 Select Saved WLANs.*



**[You're reading an excerpt. Click here to read official NOKIA ASHA 302 user guide](http://yourpdfguides.com/dref/4232298)**  
<http://yourpdfguides.com/dref/4232298>

2 Select your home WLAN and Options > Connect.

Music and audio Disconnect from a WLAN Select the connected WLAN 23 and Disconn.. Connect to a WLAN on the move Connecting to a WLAN is a handy way of accessing the internet when not at home. Connect to public WLANs in public places, such as a library or internet café. Select Menu > Settings > Connectivity > WLAN.

You need a password to connect to secured WLANs 1 2 3 . To search for available WLANs, select Available WLANs. Select a WLAN and Connect. If the WLAN is secured, enter the password. and Disconn.

. Disconnect from a WLAN Select the connected WLAN Connect to a hidden WLAN Select Menu > Settings > Connectivity > WLAN. You can connect to a hidden WLAN, if you know the name (SSID) and password. 1 2 3 To search for available WLANs, select Available WLANs. Select (Hidden network) > Connect. Enter the name (SSID) and the password. and Disconn.. Disconnect from a WLAN Select the connected WLAN Music and audio FM radio About the FM radio Select Menu > Music > Radio. You can listen to FM radio stations using your phone - just connect a headset, and select a station.

To listen to the radio, you need to connect a compatible headset to the device. The headset acts as an antenna. 24 Music and audio Listen to the radio Connect a compatible headset to your phone. The headset acts as an antenna. Select Menu > Music > Radio. Change the volume Scroll up or down. Close the radio Press the end key. Set the radio to play in the background Select Options > Play in background. Close the radio when it is playing in the background Press and hold the end key. Find and save radio stations Search for your favourite radio stations, and save them, so you can easily listen to them later.

Select Menu > Music > Radio. Search for the next available station Press and hold the scroll key left or right. Save a station Select Options > Save station.

Music and audio 25 Automatically search for radio stations Select Options > Search all stations. For best results, search when outdoors or near a window. Switch to a saved station Scroll left or right. Rename a station 1 Select Options > Stations. 2 Select the station and Options > Rename. Tip: To access a station directly from the saved station list, press the number key that corresponds to the number of the station. Media player Play a song Play music stored in the phone memory or on the memory card.

Select Menu > Music > My music and All songs. 1 2 3 Select a song. Select Play. To pause or resume playing, press the scroll key. Skip to the beginning of the current song Scroll left. Skip to the previous song Scroll left twice. Skip to the next song Scroll right. Fast-forward or rewind Press and hold the scroll key to the right or left. Mute or unmute the music player Press the ctrl key. Close the music player Press the end key.

26 Camera Set the music player to play in the background Select Options > Play in background. Close the music player when it is playing in the background Press and hold the end key. Play a video Play videos stored in the phone memory or on the memory card. Select Menu > Music > My music and Videos. 1 2 3 Select a video. Select Play. To pause or resume playing, press the scroll key. Fast-forward or rewind Press and hold the scroll key to the right or left. Close the media player Press the end key. Camera Take a picture 1 Select Menu > Photos > Camera.

2 To zoom in or out, scroll up or down. 3 Select . The pictures are saved in Menu > Photos > My photos. Close the camera Select Back. Record a video Besides taking pictures with your phone, you can also capture your special moments as videos.

Select Menu > Photos > Video camera. 1 2 To switch from image mode to video mode, if necessary, select To start recording, select . > Video c.. Web To zoom in or out, scroll up or down.

To stop the recording, select . 27 3 Videos are saved in Menu > Photos > My videos. Close the camera Press the end key. Send a picture or video Want to share your pictures and videos with friends and family? Send a multimedia message or send a picture using Bluetooth. Select Menu > Apps > Gallery. Send a picture 1 Select the folder containing the picture. 2 Select the picture to send. To send more than one picture, select Options > Mark, and mark the desired pictures. @@Send a video 1 Select the folder containing the video. 2 Select Options > Mark, and mark the video.

You can mark several videos to send. @@Catch up on the news, and visit your favourite websites. You can use the web browser to view web pages on the internet. @@To browse the web, you must be connected to the internet. @@@@Go to a website Select the address bar, and enter the address.

@@Zoom out Select Back. Search the internet Select the search field, and enter a search word. If prompted, select your default search engine. @@Tip: You can download web apps from Nokia Store. When you first open a web app, it is added as a bookmark.

For more information, go to [www.nokia.com](http://www.nokia.com). @@@@Select Menu > Internet. Select Options > Tools > Column view.

@@Sign in to the web page. Go to the main section of the web page. Search the web page. @@@@Select Menu > Internet. While browsing, select Options > Add to favourites.

@@Clear your browsing history Select Menu > Internet. Open the History tab, and select Options > Clear history. @@@@The application may not be available in all regions. @@Using social networking services requires network support. @@@@For more information, go to [www.nokia.com/support](http://www.nokia.com/support). Send a mail Select Menu > Mail and a mail account. 1 2 3 4 5 Select Options > Compose new. @@@@1 2 Select a mail.

@@You can exchange instant messages with your friends. Chat is a network service. @@@@Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. Nokia Services Chat with your friends Select Menu > Messaging > More > Chat. 31 You can sign in to and chat in several services at the same time. You must separately sign in to each service. You can have ongoing conversations with several contacts at the same time. 1 2 3 4 5 If several chat services are available, select the desired service. Sign in to the service. In your contacts list, select the contact you want to chat with.

Write your message in the text box at the bottom of the display. Select Send. Nokia Services Availability and costs of Nokia Services The availability of Nokia Services may vary by region. Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. To learn more, go to [www.nokia.com/support](http://www.nokia.com/support).

Access Nokia Services Select Menu > Apps > My apps and the desired service. Phone management Update phone software using your phone Want to improve the performance of your phone and get application updates and great new features? Update the software regularly to get the most out of your phone.



[You're reading an excerpt. Click here to read official NOKIA ASHA 302 user guide](http://yourpdfguides.com/dref/4232298)  
<http://yourpdfguides.com/dref/4232298>

You can also set your phone to automatically check for updates.

*Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. Before starting the update, connect a charger or make sure the device battery has enough power. 32 Phone management Select Menu > Settings. 1 2 3 4 Select Device > Device updates. To display the current software version and check whether an update is available, select Current sw details. To download and install a software update, select Downl. device software. Follow the displayed instructions. If the installation was cancelled after the download, select Install software update.*

*The software update may take several minutes. If there are problems with the installation, contact your network service provider. Check for software updates automatically Select Automatic SW update, and define how often to check for new software updates. Your network service provider may send phone software updates over the air directly to your phone. For more information on this network service, contact your network service provider. Update phone software using your PC You can use the Nokia Suite PC app to update your phone software. You need a compatible PC, a high-speed internet connection, and a compatible USB cable to connect your phone to the PC. To get more info and to download the Nokia Suite app, go to [www.nokia.com/support](http://www.nokia.com/support).*

*Protect the environment 33 Restore original settings If your phone is not working properly, you can reset some settings to their original values. 1 2 3 End all calls and connections. Select Menu > Settings and Restore factory sett. > Settings only. Enter the security code.*

*This does not affect documents or files stored on your phone. After restoring the original settings, your phone switches off and then on again. This may take longer than usual. Back up your pictures and other content to a memory card Want to make sure you will not lose any important files? You can back up your phone memory to a compatible memory card. Select Menu > Settings > Sync and backup.*

*Select Create backup. Restore a backup Select Restore backup. Protect the environment Save energy You do not need to charge your battery so often if you do the following: - - Close applications and data connections, such as your WLAN or Bluetooth connection, when not in use. @@@@ This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. @@To use the device, you need a subscription with a service provider. @@@@ The following suggestions help you protect your warranty coverage. @@@@ Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged. Do not store the device in high temperatures.*

*High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics. Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits. Do not attempt to open the device other than as instructed in the user guide. Unauthorised modifications may damage the device and violate regulations governing radio devices. Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics. Only use a soft, clean, dry cloth to clean the surface of the device. Do not paint the device. Paint can clog moving parts and prevent proper operation.*

*Switch off the device and remove the battery from time to time for optimum performance. Keep your device away from magnets or magnetic fields. To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.*

*During extended operation, the device may feel warm. In most cases, this is normal.*

*If you suspect the device is not working properly, take it to the nearest authorised service facility. Product and safety information 35 Recycle Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check how to recycle your Nokia products at [www.nokia.com/recycling](http://www.nokia.com/recycling).*

*About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring pictures, music, and other content. Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10 and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.*

*Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. If your device has WMDRM-protected content, both the licences and the content are lost if the device memory is formatted. You may also lose the licences and the content if the files on your device become corrupted. Losing the licences or the content may limit your ability to use the same content on your device again. For more information, contact your service provider. Batteries and chargers Battery and charger information Your device is intended for use with a BL-5J rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries. This device is intended for use when supplied with power from the following chargers: AC-11. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.*

*The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Battery safety Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it from the electrical plug and the device.*

*Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F).*



[You're reading an excerpt. Click here to read official NOKIA ASHA](http://yourpdfguides.com/dref/4232298)

[302 user guide](http://yourpdfguides.com/dref/4232298)

<http://yourpdfguides.com/dref/4232298>

*Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.*

*Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. 36 Product and safety information Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.*

*Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Make an emergency call 1 Make sure the device is switched on. 2 Check for adequate signal strength. You may also need to do the following: . . . 3 4 5 6 Insert a SIM card. Deactivate call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group.*

*Make sure the flight profile is not activated. Press the end key repeatedly, until the home screen is displayed. Enter the official emergency number for your present location. Emergency call numbers vary by location. Press the call key.*

*Give the necessary information as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed.*

*Never rely solely on any wireless device for essential communications like medical emergencies. Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children. Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should: . . . Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.*

*Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Turn the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Product and safety information Hearing 37 Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel The surface of this device is nickel-free. Protect your device from harmful content Your device may be exposed to viruses and other harmful content.*

*Take the following precautions: . . . Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust. Only install and use services and software from sources that you trust and that offer adequate security and protection.*

*Install antivirus and other security software on your device and any connected computer. Only use one antivirus application at a time. Using more may affect performance and operation of the device and/or computer. If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites.*

*Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty.*

*Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere, for example near gas pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders.*



[You're reading an excerpt. Click here to read official NOKIA ASHA](http://yourpdfguides.com/dref/4232298)

[302 user guide](http://yourpdfguides.com/dref/4232298)

<http://yourpdfguides.com/dref/4232298>

You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

38 Copyright and other notices Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. @@@@That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.11 W/kg. Use of device accessories may result in different SAR values.

SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

39 Nokia.com. Copyright and other notices DECLARATION OF CONFORMITY Hereby, NOKIA CORPORATION declares that this RM-813 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. @@@© 2011 Nokia. All rights reserved. @@Nokia tune is a sound mark of Nokia Corporation. @@@@Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

Oracle and Java are registered trademarks of Oracle and/or its affiliates.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. Copyright and other notices

39 This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which

has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is".

Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries.

Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of thirdparty applications provided with your device. By using an application, you acknowledge that the application is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party applications provided with your device. The availability of Nokia services may vary by region.

FCC/INDUSTRY CANADA NOTICE Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules and Industry Canada licence-exempt RSS standard(s). Operation is

subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment. Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge. /Issue 1.0 EN 40 Index D data connections -- Bluetooth -- WLAN date and

time E e-mail emergency calls environmental tips F factory settings, restoring FM radio H home screen I IM (instant messaging) IMEI number indicators internet See web browser K keyboard keyguard keys and parts L lock code locking -- keys loudspeaker M mail -- creating -- reading and replying to -- sending

Index A access codes alarm clock antennas B backing up data battery -- charging Bluetooth bookmarks browser See web browser business cards 11 20 10 33 7, 35 9 20, 21 29 21 20 22 19 30 36 33 33 23, 24 18, 19 30, 31 11 12 C cable connection 21 Calendar 20 calls -- emergency 36 -- log 14 -- making 14 camera

-- recording videos 26 -- sending pictures and videos 27 -- taking pictures 26 charging the battery 35 chat services (IM) 30, 31 clock 19 connectivity 22 contacts -- adding 14 -- copying 13 -- saving 14 copying content 13, 21 6, 15 12 5, 7 11 12 13 30 30 30 30 Index mailbox -- voice meeting entries memory

card messages -- audio -- sending messaging key MMS (multimedia message service) multimedia messages music N Nokia Services O offline profile P personalising your phone phone -- switching on/off Phone switch pictures -- copying -- sending -- taking PIN codes powering on/off predictive text input

profiles -- personalising PUK codes R radio recording -- videos recycling restoring data restoring settings ringtones S searching -- radio stations security code settings -- restoring shortcuts SIM card SMS (short message service) social networks software updates speed dialling strap switching on/off T taking

pictures See camera text input text messages themes time and date tones -- personalising transferring content turning on/off U updates -- phone software USB connection V videos -- copying -- playing -- recording -- sending voice messages 41 19 17 20 8 18 17 7 17 17 25 31 14 24 11 33 18 7, 14 17 29 31, 32 15 11

10 18, 19 10 13 21 21, 27 26 11 10 16 19 11 23, 24 26 33 33 33 6, 15, 16 17 19 19 19 13, 21 10 31, 32 21 21 26 26 21, 27 17 42 Index 13 volume W web browser 27 -- bookmarks 29 -- browsing pages 28 -- cookies 29 WLAN (wireless local area network)22, 23 .



[You're reading an excerpt. Click here to read official NOKIA ASHA 302 user guide](http://yourpdfguides.com/dref/4232298)

<http://yourpdfguides.com/dref/4232298>