



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA ASHA 306. You'll find the answers to all your questions on the NOKIA ASHA 306 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA ASHA 306
User guide NOKIA ASHA 306
Operating instructions NOKIA ASHA 306
Instructions for use NOKIA ASHA 306
Instruction manual NOKIA ASHA 306

Nokia 306 User Guide

Issue 1.0



[You're reading an excerpt. Click here to read official NOKIA ASHA 306 user guide](http://yourpdfguides.com/dref/5574823)
<http://yourpdfguides.com/dref/5574823>

Manual abstract:

For further info, read the complete user guide. @ @Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. @ @ @ @Do not connect incompatible products. KEEP YOUR DEVICE DRY Your device is not water-resistant. Keep it dry. PROTECT YOUR HEARING To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Get started 5 Get started Keys and parts 1 2 3 4 5 6 7 8 9 10 11 Earpiece Screen Call key Microphone Charger connector Micro-USB connector Headset connector (Nokia AV connector 3.5 mm) Volume up/Zoom in key Volume down/Zoom out key Lock key End/Power key 12 Camera lens. Before using the camera, remove the protective tape from the lens. 13 Memory card slot 14 Loudspeaker 6 Get started Insert a SIM card and battery Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached. Important: This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout. Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card. This phone is intended for use with a BL-4U battery. Always use original Nokia batteries. The SIM and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card. 1 Put your fingernail in the gap on the right edge of the phone, then carefully lift and remove the back cover (1). 2 If the battery is in the phone, lift it out (2). Get started 7 3 Slide the SIM under the metal tab (3). Make sure the contact area of the card is face down and the tab holds the SIM in place (4). 4 Line up the battery contacts, push the battery in (5), then replace the back cover (6). 8 Get started Insert or remove a memory card Use only compatible microSD cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your phone supports memory cards with a capacity of up to 32 GB. You can insert or remove the memory card without switching the phone off. Insert a memory card 1 2 3 Use your fingernail to open the cover of the memory card slot. Push the memory card in with the contact area face up until it locks into place. Close the cover of the memory card slot. Get started 9 Remove the memory card Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card. 1 2 Open the memory card slot cover. Push the card in until it's free, then pull it out. 3 Close the cover.

Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your phone for the first time. If the phone indicates a low charge, do the following: 1 2 3 Connect the charger to a wall outlet. Connect the charger to the phone. When the phone indicates a full charge, disconnect the charger from the phone, then from the wall outlet. You do not need to charge the battery for a specific length of time, and you can use the phone while it is charging.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made. 10 Get started If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then unplug and reconnect it. Charge the battery over USB Battery low, but you don't have a charger with you? You can use a compatible USB cable to connect to a compatible device, such as a computer. To avoid breaking the charger connector, be careful when connecting or disconnecting the charger cable. You can use USB charging when a wall outlet is not available.

Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Switch the phone on or off Press and hold the power key until the phone vibrates. You may be prompted to get the configuration settings from your network service provider. @ @GSM antenna The figure shows the GSM antenna area marked in grey. Basic use 11 Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation. Connect a headset Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the Nokia AV connector. If you connect an external device or headset, other than those approved by Nokia for use with this device, to the Nokia AV connector, pay special attention to volume levels.

Attach a strap Straps may be available separately. Basic use Your touch screen phone Change settings quickly Rather than going into the phone menus, in most views, you can quickly change some settings by swiping down from the top of the screen. 12 Basic use You can: ••••• See if you have missed calls or unread messages Change the profile, for example, to silence your phone Open the music player, for example, to pause the currently playing song Open or close mobile data internet connections Check for WLAN networks, and connect to them Switch Bluetooth on or off Use the touch screen To use your phone, tap or tap and hold the touch screen. Open an app or item Tap the app or item. Tap and hold to see more options Place your finger on an item until the menu opens. Basic use 13 Example: To edit or delete a calendar appointment, tap and hold the appointment, then select the option you want. Swipe Place your finger on the screen, then slide it in the direction you want. Example: Swipe left or right between the home screens, or when browsing photos. To quickly scroll through a long list or menu, slide your finger quickly up or down the screen, then lift your finger. To stop the scrolling, tap the screen.

Zoom in or out Place two fingers on an item, such as a map, photo, or web page, and slide your fingers apart or together. 14 Basic use Switch between screens Your phone has three home screens: one for apps, one for your favourite shortcuts, and one for your most used app, such as the dialler. Swipe left or right. ••• My screen is the place where you can add your favourite contacts and shortcuts. On the apps screen, you can open apps, and organise them to your liking.

On the dialler screen, you can make calls.



[You're reading an excerpt. Click here to read official NOKIA ASHA 306 user guide](http://yourpdfguides.com/dref/5574823)
<http://yourpdfguides.com/dref/5574823>

In place of the dialler, you can also have the music player or radio. Personalise the dialler screen If you don't need the dialler that often, you can personalise the dialler screen, and have the music player or radio there instead. 1 2 3 Tap and hold either my screen or the apps screen. Swipe to the dialler screen. Select the app you want. Support When you want to learn more about how to use your phone, or if you're unsure how your phone should work, read the user guide thoroughly. If you have an issue, do the following: ••• Reboot your phone. Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone. Update your phone software Restore the original factory settings Basic use 15 If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia.com/repair. Before sending your phone for repair, always back up your data, as all personal data in your phone may be deleted.

Access codes The security code helps to protect your phone against unauthorised use. You can create and change the code, and set the phone to request the code. The default security code is 12345. Keep the code secret and in a safe place separate from your phone. If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted. For more information, contact a Nokia Care point or your phone dealer. The PIN code supplied with the SIM card protects the card against unauthorised use. The PIN2 code supplied with some SIM cards is required to access certain services. If you enter the PIN or PIN2 code incorrectly three times in succession, you are asked for the PUK or PUK2 code.

If you do not have them, contact your service provider. The module PIN is required to access the information in the security module of your SIM card. The signing PIN may be required for the digital signature. The barring password is required when using the call barring service. To set how your phone uses the access codes and security settings, select settings > security.

Lock the keys and screen To avoid accidentally making a call when your phone is in your pocket or bag, lock the keys and screen of your phone. Press the lock key. Unlock the keys and screen Press the lock key, then swipe the screen left or right. Tip: You can answer or reject a call with the call or end key even if you have locked the keys and screen. Copy contacts and other stuff from your old phone Want to copy your contacts, calendar, and other stuff from your old compatible Nokia phone, so you can start using your new phone without missing a beat? You can do that, free of charge.

16 Calls 1 2 3 4 5 6 7 Switch Bluetooth on in both phones. Select settings > connectivity > Bluetooth. Select settings > sync & backup. Select phone switch > copy to this. Select what you want to copy, then select . Select your old phone from the list. If needed, make up a passcode for this connection, and type it into both phones. In some phones, the code may be fixed. For details, see the user guide of your old phone. If asked, allow connection and copying requests.

Use your phone without a SIM card Do your children want to play with your phone, but you don't want them to accidentally make a call? Some features of your phone, such as games and the calendar, may be used without inserting a SIM card. Features that are dimmed in the menus cannot be used. Calls Make a call 1 Select phone, or swipe left to open the dialler 2 Type in the phone number. 3 4 age When someone sends you a message, a notification is shown on the lock screen. Swipe left or right over the notification to see the message. Messages are combined into conversations, containing all the messages to and from a contact in a single view. To read a conversation, select it from the list in the conversations view. Reply to the message 1 In the conversation, select Tap to reply. . 2 Write your reply, then select Forward the message 1 In the conversation, select the message.

20 2 3 4 Write text Select > forward. To add a contact as a recipient, select . You can also type in a phone number. . Edit the message if you want, then select Save an attached photo or other file 1 In the conversation, select the message that contains the file.

> save, then select where to save the file. Files are saved 2 Select the file and to their respective apps, such as Gallery. Read your messages later Select messaging and a conversation. Write text Write text using the on-screen keypad Use the on-screen keypad To open the traditional alphanumeric keypad, turn the phone to portrait mode. 1 2 3 4 5 6 7 Close key Character keys Smiley key - This may not be available in all languages.

Space key Shift key - Change the character case. This may not be available in all languages. Input options key - Switch predictive text input on or off, change the writing language, or switch to the on-screen keyboard. Symbol key - Type in a special character. Write text 21 8 9 Character/number mode key - Switch between characters and numbers. Backspace key - Delete a character. Close the keypad Swipe down on the keypad. You can also select and hold the close key. Switch back to using the keyboard Turn the phone to landscape mode. Use the on-screen keypad To open the on-screen keypad when writing text, turn the phone to portrait mode.

Type in a character 1 Select a character key repeatedly until the character is shown. There are more characters available than are shown on the key. 2 If the next letter is on the same key, wait until the cursor is shown, then select the key again. Type in a space . Select Move the cursor to the next line When predictive text is off, select Type in a number , then select the number. Select Type in a special character Select the sym key, then select the special character.

Use the on-screen keyboard When holding the phone in landscape mode, select a text box. three times. 22 Write text 1 2 3 4 5 6 7 8 9 Close key Character keys Shift and caps lock key - To type in an upper case character when writing in lower case, or vice versa, select the key before typing in the character. To switch to caps lock mode, select the key twice.

In some languages, this key opens a new set of characters. Symbol key - Type in special characters or numbers. Input options key - Switch predictive text input on or off, change the writing language, or switch to the on-screen keypad. Space key Enter key - Move the cursor to the next row. Backspace key - Delete a character.

Done key Close the keyboard Swipe down on the keyboard. You can also select and hold the close key. Use predictive text Predictive text is not available in all languages. 1 2 3 > prediction > . Select Start writing a word.

Your phone suggests possible words as you write. When the correct word is shown, select the word. If the word is not in the dictionary, select the pop-up and , and add the new word to the dictionary. When using predictive text, you can set your phone to complete and type in words for you automatically.



[You're reading an excerpt. Click here to read official NOKIA ASHA 306 user guide](http://yourpdfguides.com/dref/5574823)

<http://yourpdfguides.com/dref/5574823>

Use word completion > word completion > Select . Connectivity 23 Connectivity Bluetooth About Bluetooth Select settings > connectivity > Bluetooth. You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits. You can use the connection to send items from your phone and copy files from your compatible PC. Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. However, they must be within 10 metres (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

When your phone is locked, it is only possible to connect to a paired device that has been set to auto-connect. Tip: To quickly switch Bluetooth on or off, swipe down from the top of the screen, then select or . Connect to a wireless headset Want to keep working at your computer during a call? Use a wireless headset.

You can also answer a call, even if your phone is not directly at hand. 1 2 3 4 Select settings > connectivity > Bluetooth. Make sure Bluetooth is on. Switch the headset on. To search for your headset, select . 2 4 5 6 Connectivity Select the headset. You may need to type in a passcode (such as 1234).

Send a photo or other content using Bluetooth Use Bluetooth to send photos, videos, and other content created by you to your computer or a friend's phone. 1 2 3 4 Select and hold the item to send. Select send > via Bluetooth. Select the compatible device to connect to. If you can't see the device, to search for it, select .

Bluetooth devices that are close by are listed. If asked, type in the passcode. Tip: You can also use Bluetooth to send business cards. Protect your phone Do you want to control who can find and connect to your phone when Bluetooth is on? Select settings > connectivity > Bluetooth. Prevent others from finding your phone Select my phone visibility > hidden.

When your phone is hidden, others can't find it. However, paired devices can still connect to your phone. Switch Bluetooth off Select Bluetooth > off. Tip: To quickly switch Bluetooth off, swipe down from the top of the screen, then select . Do not pair with or accept connection requests from an unknown device. This helps protect your phone from harmful content. USB data cable Copy content between your phone and a computer You can use a USB cable to copy your photos and other content between your phone and a computer. 1 2 Connect your phone to a compatible computer with a USB cable. Select a mode:

Connectivity 25 Nokia Suite — Use this mode if Nokia Suite is installed on your computer. media transfer — Use this mode if Nokia Suite is not installed on your computer.

You can also use this mode if you want to connect to a home entertainment system. mass storage — Use this mode if Nokia Suite is not installed on your computer. The phone is shown as a portable device on your computer. Make sure a memory card is in your phone. You can also use this mode if you want to connect your phone to other devices, such as a home or car stereo. To copy the content, use Nokia Suite or the file manager of the computer. 3 WLAN connections About WLAN connections Select settings > connectivity > WLAN. Connect to a wireless local area network (WLAN) and manage your WLAN connections. Tip: To quickly access the WLAN settings, swipe down from the top of the screen, . then select Important: Use encryption to increase the security of your WLAN connection.

Using encryption reduces the risk of others accessing your data. Connect to a WLAN To help save data costs, you can use a WLAN to connect to the internet, whether you're at home or at a library or internet café. Select settings > connectivity > WLAN. 1 2 3 Make sure WLAN is on. To connect, select the network and connect.

If the connection is secured , type in the password. Connect to a hidden WLAN You can connect to a hidden WLAN if you know the name (SSID) and password. 1 2 3 Select settings > connectivity > WLAN. Select (hidden network). Type in the name (SSID) and the password.

26 Clock and calendar Clock and calendar Change the time and date Select settings and date and time. Change the time zone when travelling 1 Select settings > time zone:. 2 Select the time zone of your location. 3 Select . The time and date on your phone are set according to the time zone. For example, GMT -5 is the time zone for New York (USA), 5 hours west of Greenwich, London (UK). Set an alarm Use your phone as an alarm clock. Select alarm. 1 2 Set the alarm time, then select SAVE. To set the alarm to go off at the same time on certain days, select repeat and the days.

> alarm Browse your calendar in different views Want to see all your calendar entries for a particular day? You can browse your calendar entries in different views. 1 2 3 Select calendar. To see the entries for a day or month, select To see your notes or to-do list, select or . or . Add a calendar entry 1 Select calendar. 2 Select . 3 Select an entry type. 4 Fill in the fields, then select . Photos and videos To use the camera, you must have a compatible memory card in your phone. Photos and videos Take a photo 1 To open the camera, select camera.

2 To zoom in or out, use the volume keys. 3 Select . Photos are saved in gallery. Close the camera . Select 27 Record a video Besides taking photos with your phone, you can also capture your special moments as videos.

To open the camera, select video. 1 2 3 To start recording, select . To zoom in or out, use the volume keys. To stop recording, select . Videos are saved in gallery.

Close the camera . Select Send a photo or video Want to share your photos and videos with friends and family? You can send photos and videos in a multimedia message or mail, or using Bluetooth. Select gallery. 1 2 Open the tab where the photo or video is. Select and hold the photo or video, then select send and how you want to send it. Send several photos or videos at the same time 1 Open the tab where the photos or videos are. , then mark what you want to send. 2 Select 3 Select and how you want to send them. 28 Music and audio Organise files You can create new folders in your phone memory or on the memory card. This can make it easier for you to find your files.

Within folders, you can copy, move, or delete files and subfolders. Select files. Create a new folder In the folder where you want to create a subfolder, select Copy or move a file to a folder 1 Select and hold the file, then select an option. 2 Select where you want to copy or move the file. > add folder. Music and audio Play a song Listen to your favourite music on your phone. Select music. 1 2 Select and the song or album you want to play. or . @@Select Fast-forward or rewind or Select and hold .

@@@The headset acts as an antenna. @@The headset acts as an antenna. Select radio. Change the volume Use the volume keys. Stop the radio Press the end key.

Set the radio to play in the background Select .



[You're reading an excerpt. Click here to read official NOKIA ASHA 306 user guide](http://yourpdfguides.com/dref/5574823)
<http://yourpdfguides.com/dref/5574823>

Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. Product and safety information 35 Batteries and chargers Battery and charger information Your device is intended for use with a BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries. This device is intended for use when supplied with power from the following chargers: AC-11.

The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, B, or N. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Battery safety Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery.

A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Make an emergency call 1 Make sure the phone is switched on. 2 Check for adequate signal strength. You may also need to do the following: •••• 3 4 5 6 Insert a SIM.

Deactivate call restrictions you have activated for your phone, such as call barring, fixed dialling, or closed user group. Make sure the flight profile is not activated. If the screen and keys are locked, unlock them. To open the dialler, select phone. Type in the official emergency number for your present location. Emergency call numbers vary by location. Press the call key. Give the necessary info as accurately as possible. Do not end the call until given permission to do so. 36 Product and safety information When you switch your phone on for the first time, you are asked to create your Nokia account.

To make an emergency call during the account setup, press the call key. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children. Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy.

Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should: •••• Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Do not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Turn the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected.

Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel The surface of this device is nickel-free. Protect your device from harmful content Your device may be exposed to viruses and other harmful content. Take the following precautions: •••• Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust. Only install and use services and software from sources that you trust and that offer adequate security and protection. Install antivirus and other security software on your device and any connected computer.

Only use one antivirus application at a time. Using more may affect performance and operation of the device and/or computer. Product and safety information • 37 If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.

5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.



[You're reading an excerpt. Click here to read official NOKIA ASHA 306 user guide](http://yourpdfguides.com/dref/5574823)
<http://yourpdfguides.com/dref/5574823>

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available.

Follow the separation distance instructions until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force.

Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere, for example near gas pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

@@@The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.05 W/kg. Use of device accessories may result in different SAR values.

SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com. 38 Copyright and other notices Copyright and other notices DECLARATION OF CONFORMITY Hereby, NOKIA CORPORATION declares that this RM-767 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the Declaration of Conformity can be found at <http://www.nokia.com/global/declaration>. © 2012 Nokia. All rights reserved. Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development.

Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. Java is a trademark of Sun Microsystems, Inc. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

Copyright and other notices 39 The availability of products, features, apps, and services may vary by region. For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of thirdparty apps provided with your device.

By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. /Issue 1.0 EN .



[You're reading an excerpt. Click here to read official NOKIA ASHA 306 user guide](http://yourpdfguides.com/dref/5574823)
<http://yourpdfguides.com/dref/5574823>