



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA ASHA 309. You'll find the answers to all your questions on the NOKIA ASHA 309 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA ASHA 309
User guide NOKIA ASHA 309
Operating instructions NOKIA ASHA 309
Instructions for use NOKIA ASHA 309
Instruction manual NOKIA ASHA 309

User Guide
Nokia 309

NOKIA

Issue 1.1 EN



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)
<http://yourpdfguides.com/dref/5574822>

Manual abstract:

5 If the battery is in the phone, lift it out. @@5 2 Put the memory card in with the contact area face up. 3 Pull the memory card out. Push the card in until it locks into place. Close the cover. 10 Charge the battery 1 Switch on 1 NOKIA Plug the charger into a wall outlet. Press and hold the power key. 2 2 date & time 31-10-2012 10:03 date time: daylight saving: +0 hours GMT London time zone: Connect the charger to the phone. See 2 in "Feature specific instructions". 3 Select the date field, and set the date.

3 date & time 31-10-2012 10:03 date time: daylight saving: +0 hours GMT London time zone: Battery full? Unplug from the phone, then from the wall outlet. Select the time field, and set the time. 11 4 date & time 31-10-2012 10:03 date time: daylight saving: +0 hours GMT London time zone: Select the time zone, and select if daylight saving time is used. 5 date & time 31-10-2012 10:03 date time: daylight saving: +0 hours GMT London time zone: Select . NOKIA Tip: To switch the phone off, press and hold the power key.

12 Copy content from your old phone Easily get your contacts, calendar, and other stuff to your new phone. 1. Switch Bluetooth on in both phones. 2. On your new phone, select settings and sync & backup > phone switch.

3. Select copy to this and what you want to copy, then select 4. Select your old phone from the list of found devices. 5. Follow the instructions shown on both phones. . 13 Lock the keys and screen Change the volume Lock the keys and screen when not using your phone. 1 Is the volume too loud during a call or when listening to the radio? 1 To lock, press the key lock button. Use the volume keys. 2 2 To unlock, press the key lock button, then swipe left or right.

Better. 14 Attach a strap 1 Switch the phone off, and remove the back cover. 2 Push the loop through the hole, and put it over the hook. 3 Replace the back cover. 15 Change settings quickly Rather than going into the phone menus, in most views, you can quickly change some settings by swiping down from the top of the screen. You can: • See if you have missed calls or unread messages • Chan the start marker 5. Drag the end marker to the start point. to the end point. .

6. To manually play the selection, select 7. Select . The edited ringtone does not replace the original ringtone or sound clip. Preset ringtones cannot be modified, and not all formats of ringtones are supported.

25 Tip: To fine-tune the start and end points of the selection, select or , and select and hold or . 26 Use your phone offline In places where you're not allowed to make or receive calls, you can still use your phone to play games or listen to music, if you switch to the flight profile . Select settings and connectivity > flight. See 1, 4. 27 Use the calculator 52 7 4 1 0 8 5 2 9 6 3 C = Stay within your budget wherever you are – your phone has a calculator.

1. Select calculator. 2. Type in your calculation, and select =. Tip: To view your calculation history, select and hold the calculator's result box. 28 About Nokia Store Download mobile games, apps, videos, themes, wallpapers, and ringtones to your phone from Nokia Store. Select store. Many items are free of charge; some you need to pay for with your credit card or on your phone bill. The availability of payment methods depends on your country of residence and your network service provider. To learn more about Nokia Store, go to www.nokia.com/support.

29 Calls Make a call 1. Select phone, or swipe left to open the dialler. 2. Type in the phone number. 3. Press . . 4. To end the call, press Answer a call Press . Decline a call Press . 30 0123456789 all calls View your missed calls Did you miss a call, but want to see who called? If you missed a call, a notification is shown on the lock screen. Swipe over the notification to open the all calls view. It lists the calls you have made , received , or missed .

To call back, select a number or contact. Missed and received calls are saved only if the network supports it, and your phone is switched on and within the network service area. View your missed calls later Select log. 31 12:10 all calls 0123456789 9876543210 01-10 Call the last dialled number Did you try to call someone, but nobody picked up? It's easy to call again. 1.

On the home screen, press 2. Select the phone number. . 32 Call several people at the same time Want to tell your great news to all your friends? With a conference call, you can easily call several people at the same time, saving you the trouble of calling each one separately. 1. Make the first call. 2. While in the call, select options > new call. 3. Type in the phone number, and select CALL, or select SEARCH and a contact.

The first call is put on hold until you connect the conference call. 4. When you're able to talk to the second caller, select options > conference. You can add more calls to the conference. Tip: To speak privately with a caller in the middle of the conference call, select options > private call and a number. The conference call is put on hold. To return to the conference call, select options > conference. 5. To end the conference call, press . 33 Forward calls to your voicemail or another phone number Your phone is ringing, but you can't answer? Let the call go to your voicemail, or forward it to another number.

Call forwarding is a network service. 1. Select settings > calls > call forwarding. 2. Select when to forward the incoming voice calls: all voice calls — Forward all calls.

if busy — Forward when busy. if not answered — Forward when not answered. if out of reach — Forward when the phone is switched off or out of network coverage for a certain length of time. if not available — Forward when busy, when not answered, when the phone is switched off, or when out of network coverage. 3.

Select activate > to voice mailbox or to other number. 4. If if not answered or if not available is selected, set the length of time after which a call is forwarded.

34 Prevent making or receiving calls Keep your phone bill under control by preventing certain types of calls. You can prevent, for example, incoming calls while you're abroad. Call barring is a network service. 1. Select settings. 2. Select security > call barring service and an option.

3. Type in the barring password you have received from your service provider. Tip: To check how long your calls have been, how much data you've used, or how many text messages you've sent, select counters. You can set the counters to be cleared automatically, for example, each month. 35 Contacts Save a name and phone number Add new contacts to your phone. Select contacts. Select , then write the name, number, and other details. Edit the details of a contact Select a contact and , then edit the details.



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)
<http://yourpdfguides.com/dref/5574822>

Add more details Select > add detail and a detail. 36 DIALLER Make calls quickly Call someone often? Set their number as a speed dial.

Select phone and > speed dials. Assign a phone number to a number key 1. Select a number key. 1 is reserved for the voice mailbox. 2.

Type in a number or search for a contact. Make a call In the dialler, press and hold a number key. 37 Copy contacts to your SIM card Want to use your SIM card in another phone, but still have access to your contacts? By default, contacts are stored in the phone memory, but you can copy your contacts to a SIM card. Select contacts. More contacts can be stored in the phone memory, and contacts saved on the SIM can only have one phone number.

means a contact is stored on the SIM. Choose the contacts to be copied 1. Select > copy contacts > select contacts. 2. Select the contacts, then select . Copy all contacts Select > copy contacts > select memory > from phone to SIM. 38 Write text Use the on-screen keypad To open the traditional alphanumeric keypad, turn the phone to portrait mode. 1 Close key 6 2 Character keys 7 Input options key - Switch predictive text input on or off, change the writing language, or switch to the on-screen keyboard. Symbol key - Type in a special character. 39 3 4 5 Smiley key - This may not be 8 available in all languages.

Space key Shift key - Change the character case. This may not be available in all languages. 9 Character/number mode key - Switch between characters and numbers. Backspace key - Delete a character. Close the keypad Swipe down on the keypad. You can also select and hold the close key. Switch back to using the keyboard Turn the phone to landscape mode. Use the on-screen keypad To open the on-screen keypad when writing text, turn the phone to portrait mode.

Type in a character 1. Select a character key repeatedly until the character is shown.

There are more characters available than are shown on the key. 2. If the next letter is on the same key, wait until the cursor is shown, then select the key again. Type in a space Select . Move the cursor to the next line When predictive text is off, select 40 three times.

Type in a number Select , then select the number. Type in a special character Select the sym key, then select the special character. Use the on-screen keyboard

When holding the phone in landscape mode, select a text box. 1 2 3 Close key Character keys 6 7 Shift and caps lock key - To 8 type in an upper case character when writing in lower case, or vice versa, select the key before typing in the character. To switch to caps lock mode, select the key twice.

In some languages, 41 Space key Enter key - Move the cursor to the next row. Backspace key - Delete a character. 4 5 this key opens a new set of characters.

Symbol key - Type in special 9 characters or numbers. Input options key - Switch predictive text input on or off, change the writing language, or switch to the on-screen keypad. Done key Close the keyboard Swipe down on the keyboard. You can also select and hold the close key. Use predictive text Predictive text is not available in all languages. 1. Select > prediction > .

2. Start writing a word. Your phone suggests possible words as you write. When the correct word is shown, select the word. 3. If the word is not in the dictionary, select the pop-up and add the new word to the dictionary. , and When using predictive text, you can set your phone to complete and type in words for you automatically. Use word completion Select > word completion > . 42 Messaging Send a message Keep in touch with your family and friends through messages. 1.

Select messaging and . . You can also type in a 2. To add a contact as a recipient, select phone number. 3.

Write your message in the text box. Tip: To include an attachment, such as a photo or video, select insert content. 4. Select . Sending a message with an attachment, such as a photo or video, may be more expensive than sending a normal text message.

For more info, contact your network service provider. See 6, 7, 8. > 43 Save an attachment Did someone send you a great photo? Save it to your phone. You can also save other types of attachments. Select messaging. Save a message attachment 1. Open the message. 2. Select the file and > save. 3.

Select where to save the file, such as images, then write a name for the file. Save a mail attachment 1. Open the mail. 2. Select the attachment. Your phone may ask you to download the file. 3. Select . Photos and videos are saved in files. 44 Check your voicemail Did you let your calls go to voicemail when you couldn't answer? Listen to the messages people have left you at a convenient time.

Set up your voicemail To use voicemail, you may need to subscribe to the service. For more info on this network service, contact your network service provider. Before using your voice mailbox, get your voice mailbox number from your network service provider. Check your order confirmation or your network service provider's support website. 1.

Select settings > calls > more settings > voicemails and voice mailbox no.. 2. Type in your voice mailbox number, then select OK. Listen to your voicemail when you just missed a call 1.

Select the notification of a new message on the home screen. 2. Select options > call sender. Listen to your voicemail later Select phone, then press and hold 1. 45 Mail and chat mail Set up your mail account Do you use more than one mail address? You can have several mailboxes in your phone. Mail is a network service. 1. Select mail. 2. Select your mail service provider.

3. Type in your username and password. Tip: If you don't want to type in your password every time you use your mail account, select save password. 4. Select Sign in. Add a mailbox later 1. Select mail. 2. Select > add account. 3.

Follow the instructions shown on the phone. Your phone updates your inbox at certain intervals to show your new mails when they have arrived. This may cause transfer of large amounts of data, which may result in data traffic costs. To save costs, you can switch the automatic update feature off and update the inbox manually. 46 Switch off the automatic update of the inbox 1.

Select mail. 2. Select > settings and your mailbox. 3. Select update my inbox > manual.

47 Mike Hello Anna! Anna Hi Mike! Send a mail Would you like to send a mail while on the go? With your phone, you can read and send mail, even when not sitting at your desk. 1. Select mail and a mail account. Tip: If you have more than one mail account, your phone automatically opens the mail account you used last time. To open another mail account, select . 2. Select . 3. To add a recipient, select , or manually write the address in the to field. 4.

Write the subject and your message. Tip: To include an attachment, such as a photo, select 5. Select . . 48 Time management Change the time and date Select settings and date and time. Change the time zone when travelling 1.



[You're reading an excerpt. Click here to read official NOKIA ASHA](http://yourpdfguides.com/dref/5574822)

[309 user guide](http://yourpdfguides.com/dref/5574822)

<http://yourpdfguides.com/dref/5574822>

Select settings > time zone:. 2. Select the time zone of your location. 3. Select . The time and date on your phone are set according to the time zone. For example, GMT -5:00 is the time zone for New York (USA), 5 hours west of Greenwich, London (UK). 49 Set an alarm Use your phone as an alarm clock. 1. Select alarm. 2. Set the alarm time, then select SAVE. 3. To set the alarm to go off at the same time on certain days, select > alarm repeat and the days. 50 subject location meeting Add a calendar entry Need to remember an appointment? Add it to your calendar. 1. Select calendar. 2. Select . . 3. Select an entry type. 4. Fill in the fields, then select Tip: To delete an entry, select and hold the entry, then select delete.

51 Photos and videos Take a photo 1. To open the camera, select camera. 2. To zoom in or out, use the volume keys. 3. Select . Photos are saved in gallery. Close the camera Select . 52 Record a video Besides taking photos with your phone, you can also capture your special moments as videos. To open the video camera, select video. 1. To start recording, select 3. To stop recording, select Videos are saved in gallery. Tip: You can send your video in a multimedia or mail message. To limit the video length for sending, select > settings > video length > for MMS. Close the camera Select . . . 2. To zoom in or out, use the volume keys.

53 Organise your photos You can organise your photos into albums, to make it easier to find a particular photo. 1. Select gallery, then open the 2. Select tab. . , then write a name for the album. 3. Select the photos to add to the album, then select 54 Edit a photo Is the photo you took too dark or not ideally framed? With your phone, you can easily do simple edits to the photos you've taken. 1. Select gallery and a photo. 2. Select > edit photo and an effect. 3. To save the edited photo, select > > YES. The edited photo does not replace the original photo. 55 Send a photo or video Send your photos and videos to your family and friends in a multimedia message or mail, or using Bluetooth. Select gallery. 1. Open the tab where the photo or video is. 2. Select and hold the photo or video, then select send and how you want to send it. Send several photos or videos at the same time 1. Open the tab where the photos or videos are. 2. Select 3. Select , then mark what you want to send. and how you want to send them. 56 Music and audio Copy music from your PC Do you have music on your PC that you want to listen on your phone? Use Nokia Suite and a USB cable to manage and sync your music collection. 1. Connect your phone to your computer with a compatible USB cable. Make sure a compatible memory card is in your phone. 2. Select media transfer as the connection mode. 3. On your computer, open Nokia Suite. For more info, see the Nokia Suite help. Some music files can be protected by digital rights management (DRM) and cannot be played on more than one phone. 57 Play a song You can use your phone's music player to listen to music and podcasts while on the move. Select music. 1. Select and a song. or . 2. To pause or resume playing, select Skip to the previous or next song Select or . Close the music player Press the end key. 58 Listen to the radio Connect a compatible headset to your phone. The headset acts as an antenna. Select radio. Change the volume Use the volume keys. Set the radio to play in the background Select . Close the radio Press the end key. Tip: To close the radio when it is playing in the background, press and hold the end key. 59 Find and save radio stations Search for your favourite radio stations, and save them, so you can easily listen to them later. Select radio. Connect a compatible headset to your phone. The headset acts as an antenna. Search for all available stations Select > search all stations. Set a frequency manually Tap the frequency, then scroll to a frequency. Save a station Select . Go to the next or previous saved station Select or . Automatically switch to a frequency with better reception 1. Select . > RDS > on. 2. Select auto-frequency > on. 60 Record sound clips You can record voice memos or phone conversations. Select voice rec.. 1. Select . 2. To stop recording, select Record a phone conversation During a call, select > record. Both parties hear a tone at regular intervals during the recording. Listen to your recordings Select > recordings list. 61 Web Paris Browse the web Catch up on the news, and visit your favourite websites on the go. Select internet. Tip: If you don't have a flat-rate data plan from your network service provider, to save data costs in your phone bill, you can use a Wi-Fi network to connect to the internet. Go to a website Write the web address in the address bar. Move on the web page Drag the page with your finger. Zoom in Tap the section of the web page you want to see better. Zoom out Double-tap the screen. Tip: To zoom in or out, you can also place two fingers on the screen, and slide your fingers apart or together. Search the internet Write a search word in the address bar. If asked, select your default search engine. 62 Go back to a previously visited web page Select > history and the web page. Tip: To show the address bar and toolbar when browsing, select Tip: You can download web apps from Nokia Store. When you first open a web app, it is added as a bookmark. For more info, go to www.nokia.com/support. . 63 travel Paris www.nokia.com Add a bookmark If you visit the same websites all the time, add them as bookmarks, so you can easily access them. Select internet. While browsing, select > add to favourites. Go to a bookmarked website Select and a bookmark. 64 Clear your browsing history Select internet. Select > > clear history. Clear stored cookies or text saved in web forms Select > > settings > clear cookies or clear auto-fill. 65 Connectivity Connect to a wireless headset Want to keep working at your computer during a call? Use a wireless headset. You can also answer a call, even if your phone's not directly at hand. Select settings > connectivity > Bluetooth. 1. Make sure Bluetooth is on. 2. Switch the headset on. 3. To search for your headset, select 4. Select the headset. 5. You may need to type in a passcode (such as 1234). . 66 Protect your phone Do you want to control who can find and connect to your phone when Bluetooth is on? Select settings > connectivity > Bluetooth. Prevent others from finding your phone Select my phone visibility > hidden. When your phone is hidden, others can't find it. However, paired devices can still connect to your phone. Switch Bluetooth off Swipe down from the top of the screen, then select . Do not pair with or accept connection requests from an unknown device. This helps protect your phone from harmful content. 67 Copy content between your phone and a computer You can use a USB cable to copy your photos and other content between your phone and a compatible computer.



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)
<http://yourpdfguides.com/dref/5574822>

1. Connect your phone to a computer with a compatible USB cable. 2. Select a mode: Nokia Suite — Nokia Suite is installed on your computer. media transfer — Nokia Suite is not installed on your computer. If you want to connect to a home entertainment system or printer, use this mode. mass storage — Nokia Suite is not installed on your computer. The phone is displayed as a portable device on your computer.

Make sure a memory card is in your phone. If you want to connect to other devices, such as a home or car stereo, use this mode. 3. To copy the content, use the file manager of the computer. To copy your contacts, music files, videos, or photos, use Nokia Suite. To get more info and to download the Nokia Suite PC app, go to www.nokia.com/support. 68 Connect to a Wi-Fi network To help save data costs, you can use a Wi-Fi network to connect to the internet, whether you're at home or at a library or internet café. 1.

Select settings > connectivity > Wi-Fi. 2. Make sure Wi-Fi is on. 3. To connect, select the network and CONNECT.

4. If the connection is secured, type in the password. Close the Wi-Fi connection Swipe down from the top of the screen, then select . 69 Maps About Maps Maps shows you what is nearby and helps you plan your route. Select maps.

You can: • See where you are on a map • Plan a route to a nearby place • Search for a place or an address, and save it • Send your location or a place to a friend in a text message Your phone may have a memory card with preloaded maps for your country. Make sure the memory card is in your phone before using Maps. Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. This service may not be available in all countries or regions, and may be provided only in selected languages. The service may be network dependent. For more information, contact your network service provider. 70 Contents of digital maps may sometimes be inaccurate and incomplete. Never rely solely on the content or the service for essential communications, such as in emergencies. 71 See where you are on the map To help get your bearings, check where you are on the map. Select maps.

You are shown on the map if your phone can find your location. Update your location Select . Save your current location Select your location and > . Tip: When you're shown on the map, to see nearby places, select to see the toolbar, and select > . 72 N Search for a place You can search for locations, such as street addresses, and places, such as restaurants. 1. Select maps. 2. Select to see the toolbar, then select . 3.

Write the name of the place or the address. 73 Download maps If you browse to an area of the map which is not saved on your memory card, and you have an active data connection to the internet, a map for the area is automatically downloaded. See 5. Tip: If you don't have a flat-rate data plan from your network service provider, to save data costs in your phone bill, you can use a Wi-Fi network to connect to the internet. Tip: Save new street maps to your phone before a journey, so you can browse the maps without an internet connection when travelling.

Use the Nokia Suite PC app to download the latest maps, and copy them to your phone. To download and install Nokia Suite, go to www.nokia.com/support. 74 Create a walking route Plan a walking route to a place nearby.

You can see the entire route and all the turnings on the map before setting off. 1. Select maps. 2. Select to see the toolbar, then select > . 3. Select starting location and a place, address, saved favourite, or a point on the map as the start point of your walking route. To start from where you are now, select my position. 4. Select destination and the end point of the walking route.

Using ferries and some special tunnels for walking routes is restricted. 5. Select . 6. When you're ready to get going, select Tip: To read a list of each turn along the route, select the next turn info area at the top of the screen. 75 Save a place Before a trip, you might find it handy to save info about hotels, attractions, or petrol stations to your phone. Select maps. 1. To search for an address or place, select select . 2. Write the name of the place or the address, then select from the matches. 3. On the map, select the place marker and View a saved place In the main view, select > > . and the place.

Edit or remove a saved place 1. In the favourites view, select the place. 2. Select , then select edit favourite or delete favourite. 76 Explore places around you Want to see what there is to see and do around you? You can select what sort of businesses or public places, such as restaurants, are shown on the map. 1. Select maps. 2. Select to show the toolbar, then select and the places to see. 77 Protect your phone Password protect your memory card Want to protect your memory card against unauthorised use? You can set a password to protect the content. 1. Select files. 2. Select and hold the memory card, then select mem. card options.

3. Select set password, then type in a password. @@When you format a memory card, all the data on it is deleted. 1. Select files. 2. Select and hold the memory card, then select mem. card options. 3. Select format mem.

@@Beforehand, remove all personal info and content from your phone. Remove all content and restore settings to the original values 1. @@2. End all calls and connections. 3.

Select settings and restore factory sett. > all. 4. Type in the security code. 5.

Your phone switches off and then on again. @@@@You can back up your phone memory to a compatible memory card. Select settings > sync & backup. 1. Select create backup. 2. Select what you want to back up, then select . . @@Updating the software may also improve your phone performance. @@@@You can also set your phone to automatically check for updates.

Select settings and phone > device updates. 1. To check if there is an update, select downl. phone sw. 2. To download and install an update, select downl. phone sw, and follow the instructions shown on the phone. The update may take several minutes. If you encounter problems, contact your network service provider. @@@@1.

End all calls and connections. 2. Select settings and restore factory sett. > settings only. 3.

Type in the security code. This does not affect documents or files stored on your phone. After restoring the original settings, your phone switches off and then on again. This may take longer than usual. 86 Access codes PIN or PIN2 code (4-8 digits) These protect your SIM against unauthorised use or are required to access some features.

You can set your phone to ask for the PIN code when you switch it on. If not supplied with your card or you forget the codes, contact your service provider. If you type in the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code. PUK or PUK2 code (8 digits) IMEI number (15 digits) These are required to unblock a PIN or PIN2 code.



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)

<http://yourpdfguides.com/dref/5574822>

If not supplied with your SIM, contact your service provider. This is used to identify valid phones in the network. The number can also be used to block, for example, stolen phones. You may also need to give the number to Nokia Care services. To view your IMEI number, dial *#06#. Lock code (security code) (min.

5 digits) This helps you protect your phone against unauthorised use. You can set your phone to ask for the lock code that you define. The default lock code is 12345. 87 Keep the code secret and in a safe place, separate from your phone. If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted. For more information, contact Nokia Care or your phone dealer. 88 Product and safety information Safety Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide.

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas. SWITCH OFF IN RESTRICTED AREAS To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

PROTECT YOUR HEARING Feature specific instructions 1 Remember to comply with any applicable safety requirements.

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. Important: This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. All wireless devices may be susceptible to interference, which could affect performance. Only qualified personnel may install or repair this product. Your device is not waterresistant. Keep it dry. ROAD SAFETY COMES FIRST INTERFERENCE QUALIFIED SERVICE KEEP YOUR DEVICE DRY 2 If the battery is completely discharged, it may take several minutes before the charging indicator 89 is displayed or before any calls can be made. Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

3 Important: Avoid scratching the touch screen. Never use an actual pen, pencil, or other sharp object on the touch screen. To enter the + character, used for international calls, select * twice. 4 Warning: When the flight profile is activated, you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make a call, activate another profile. Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area. 5 Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs. 6 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message. 7 If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size. 8 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices. Sending a message with an attachment may be more expensive than sending a normal text message.

For more information, contact your service provider. Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch 90 the Bluetooth function off when you are not using it. Restoring settings does not affect documents or files stored on your phone.

To turn off notifications from social networking applications, on the apps screen, select Notifications > > settings. ••electronic circuits. If your device gets wet, remove the battery, and allow the device to dry. Do not use or store the device in dusty or dirty areas. Do not store the device in high temperatures. High temperatures may damage the device or battery. Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it. Do not open the device other than as instructed in the user guide. Unauthorised modifications may damage the device and violate regulations governing radio devices.

Do not drop, knock, or shake the device. Rough handling can break it. Only use a soft, clean, dry cloth to clean the surface of the device. Network services and costs Your device is approved for use on the EGSM 900 and 1800 MHz networks. To use the device, you need a subscription with a service provider. Using some features and downloading content to your device requires a network connection and may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them. •••Take care of your device Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational. •Keep the device dry.

Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode ••91 ••Do not paint the device. Paint can prevent proper operation. For optimal performance, switch the device off and remove the battery from time to time. Keep your device away from magnets or magnetic fields.

To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info. Crossed-out wheeled-bin symbol ••Recycle The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or go to www.nokia.com/support.

For more info on the environmental attributes of your device, see www.nokia.com/ecoprofile. Always return your used electronic products, batteries, and packaging materials to dedicated collection points.



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)
<http://yourpdfguides.com/dref/5574822>

This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia products at www.nokia.com/recycling. When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content. Content owners may use different types of digital rights management About Digital Rights Management 92 (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRMprotected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRMprotected content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. If your device has OMA DRMprotected content, to back up both the licences and the content, use the backup feature of Nokia Suite.

Other transfer methods may not transfer the licences which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licences if the files on your device become corrupted. To help you take maximum advantage of your phone and services, you receive free customised text messages from Nokia. The messages contain tips and tricks and support. To stop receiving the messages, select settings > Nokia account > Tips and Offers.

To provide the service described above, your mobile phone number, the serial number of your phone, and some identifiers of the mobile subscription are sent to Nokia when you use the phone for the first time. Some or all information may also be sent to Nokia when updating software. This information may be used as specified in the privacy policy, available at www.nokia.com.

Tips and Offers Batteries and chargers info Your device is intended for use with a BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries. 93 This device is intended for use when supplied with power from the following chargers: AC-11. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, B, or N. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Always switch the device off and unplug the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it from the electrical plug and the device.

Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery.

A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Shortcircuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible.

Do not dispose as household waste. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, Battery safety 94 and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger.

Only use the charger indoors. 6 7 Press the call key. Give the necessary info as accurately as possible. Do not end the call until given permission to do so. Additional safety information Make an emergency call 1 2 Make sure the device is switched on. Check for adequate signal strength. You may also need to do the following: • Put a SIM card in the device. • Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group. • Make sure the flight profile is not activated. • If the device screen and keys are locked, unlock them.

3 4 5 Press the end key repeatedly, until the home screen is shown. To open the dialler, select . Type in the official emergency number for your present location. Emergency call numbers vary by location. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies. Your device and its accessories are not toys.

They may contain small parts.

Keep them out of the reach of small children. Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy. Small children Medical devices 95 Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should: • Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Switch the wireless device off if there is any reason to suspect that interference is taking place.



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)
<http://yourpdfguides.com/dref/5574822>

Follow the manufacturer directions for the implanted medical device. Implanted medical devices Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. The surface of this device is nickel-free. Nickel ••• Your device may be exposed to viruses and other harmful content. Take the following precautions: • Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer. Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.

Only install and use services and software from sources that you Protect your device from harmful content •• If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. • 96 trust and that offer adequate security and protection. • Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer. If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions.

Nokia does not endorse or assume liability for such sites. distance instructions until the transmission is completed. Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more info, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force.

Do not place your device or accessories in the air bag deployment area. Vehicles • Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device at the above-stated distance from your body. To send data files or messages requires a quality connection to the network.

Data files or messages may be delayed until such a connection is available. Follow the separation Potentially explosive environments Switch your device off in any area with a potentially explosive atmosphere, for example near petrol pumps at 97 service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to switch your vehicle engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. This mobile device meets guidelines for exposure to radio waves. include safety margins designed to assure the protection of all persons, regardless of age and health. @@@@ That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.93 W/kg. Use of device accessories may result in different SAR values.

SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com. Certification information (SAR) Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and 98 Copyright and other notices DECLARATION OF CONFORMITY Oracle and Java are registered trademarks of Oracle and/ or its affiliates. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com>. To the maximum extent permitted by applicable law, under no Hereby, NOKIA CORPORATION declares that this RM-843 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at <http://www>.

nokia.com/global/declaration/ declaration-of-conformity. TM © 2013 Nokia. All rights reserved. Third party product/names may be TM of respective owner. Reproduction, transfer, or distribution of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. 99 circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, apps, and services may vary by region.



[You're reading an excerpt. Click here to read official NOKIA ASHA](#)

[309 user guide](#)

<http://yourpdfguides.com/dref/5574822>

For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

100 Index A access codes accounts alarm clock alarms 87 making voicemail 46 camera 50 recording videos 50 sending photos and videos taking photos charging the battery 82 clock 9, 93, 94 contacts 11 66, 67 64 adding copying 30, 32 34 53 56 52 11, 93 49, 50 36 13, 38 36, 38 13, 57, 68 B backing up data battery charging Bluetooth bookmarks browser saving 62 copying content 68 data connections 28 Bluetooth 51 date and time C cable connection calculator calendar calls answering call barring conference emergency forwarding log D 66 49 30 E 35 emergency calls 33 95 34 31, 32 95 F factory settings, restoring file management flight profile 86 78, 79 27 101 FM radio 59, 60 sending setup mailbox voicemail Maps current location downloading places routes searching memory memory card menu messages sending MMS (multimedia messages) 48 46 45 70, 77 72 74 76 75 73 80 10, 78, 79 20 44 43 43 43 58 57 H home screen 17, 21 I IMEI number internet 87 62 K keyboard keyguard keypad keys and parts 41 14 39 7 L lock code locking keys screen 87 14 multimedia messages 14 music copying M mail accounts attachments creating mailbox N 46 Nokia Store 44 Nokia support information 48 46 29 81 102 O offline profile on-screen keyboard on-screen keypad 27 41 39 recording calls sounds videos restoring data 61 61 53 82 86 24, 25 P restoring settings personalising your phone 20, ringtones 21, 22, 24, 25 13 13, 68 Phone switch photos copying editing organising sending taking PIN codes powering on/off profiles changing flight personalising PUK codes S searching 60 87 16 86 16, 21 9 43 83, 84, 85 37 16 15 81 11 radio stations 55 security code 54 settings 56 restoring 52 shortcuts 87 SIM card 11 SMS software updates 23, 27 speed dialling 27 status area 24, 25 strap 87 support switching on/off 59, 60 R radio 103 T taking photos W wallpaper web 39, 40, 41, 42 web browser 43 49 bookmarks browsing pages cookies 24, 25 Wi-Fi 18, 39, 41 13, 57, 68 11 64 62 65 69 22 62 See camera text input text messages time and date tones personalising touch screen transferring content turning on/off U updates phone software USB connection 83, 84, 85 68 V videos copying recording sending voicemail volume 13, 68 53 56 45 14 104 .



[You're reading an excerpt. Click here to read official NOKIA ASHA 309 user guide](http://yourpdfguides.com/dref/5574822)

<http://yourpdfguides.com/dref/5574822>