



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA ASHA-501. You'll find the answers to all your questions on the NOKIA ASHA-501 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA ASHA-501
User guide NOKIA ASHA-501
Operating instructions NOKIA ASHA-501
Instructions for use NOKIA ASHA-501
Instruction manual NOKIA ASHA-501

User Guide
Nokia Asha 501 Dual SIM

NOKIA

Issue 1.0 (01)



[You're reading an excerpt. Click here to read official NOKIA ASHA-501 user guide](http://yourpdfguides.com/dref/5329828)
<http://yourpdfguides.com/dref/5329828>

Manual abstract:

• Beautiful design and vibrant colours – The seamless design ensures your new Asha is built to last, and you can choose a colour that suits your personality. • Notifications tab – Get instant access to your notifications with a single swipe down, and immediately reply to your missed calls and messages. • Smart choice – Choose how you wish to connect, be it with a SIM card, Wi-Fi, or Slam. @@@@Not following them may be dangerous or illegal. For further info, read the complete user guide. @@Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance.

QUALIFIED SERVICE Only qualified personnel may install or repair this product. **BATTERIES, CHARGERS, AND OTHER ACCESSORIES** Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products. **KEEP YOUR DEVICE DRY** Your device is not water-resistant. Keep it dry.

PROTECT YOUR HEARING To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use. © 2013 Nokia. All rights reserved. 5 Get started Get to grips with the basics, and have your phone up and running in no time.

Keys and parts Explore the keys and parts of your new phone. 1 2 3 4 5 6 7 8 9 10 11 Charger connector Micro-USB connector Headset connector (3.5 mm) Volume/Zoom keys Lock/Power key Microphone Back key Touch screen Camera lens Back cover release button Antenna area The antenna area is highlighted. Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation. Insert SIM and battery Read on to learn how to insert a SIM card and the battery. 1. Press the release button at the back of the phone, and carefully lift and remove the back cover. See 15 on page 31. 1 2 2.

If the battery is in the phone, lift it out. See 14 on page 31. © 2013 Nokia. All rights reserved. 6 3. Open the SIM holder, and place the SIM in the holder. Make sure the contact area is face down. See 13 on page 31. 4. Line up the battery contacts, and push the battery in.

5. Replace the back cover. 6. To switch on, press and hold the power key until the phone vibrates. Insert a second SIM card (dual SIM only) You can easily add a second SIM card (SIM2) without removing the battery.

1. Press the release button at the back of the phone, and carefully lift and remove the back cover. 1 2 2. Push the SIM in with the contact area face down until it locks into place. © 2013 Nokia.

All rights reserved. 7 3. To remove the SIM, push the card in until it's released, then pull it out. Insert a memory card Read on to learn how to insert a memory card into your phone. 1. Remove the back cover. 1 2 2. Push the card in with the contact area face down until it locks into place. See 6 on page 31. 3.

To remove the card, push the card in until it's released. See 7 on page 31. © 2013 Nokia. All rights reserved. 8 Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone. 1. Plug the charger into a wall outlet. 2. Connect the charger to the phone. See 2 on page 31.

When done, unplug the charger from the phone, then from the wall outlet. Lock the keys and screen Lock the keys and screen when not using your phone. 1. Press the power key. 2.

To unlock, press the power key, then swipe in from the left or right of the screen. Tip: To wake up the screen, you can also press the back key. If there's a notification from an app on the lock screen, you can swipe over the notification to unlock the phone and open the app. © 2013 Nokia. All rights reserved.

9 Set which SIM card to use (dual SIM only) By default, your phone asks you which SIM to use for the connection. You can also set the default SIM for calls or messaging. If you name your SIMs, you can see at a glance which is, for example, for work or personal use. Tap > Dual SIM. 1. Switch Always ask to Off. 2. Select which SIM to use for which connection. Availability of SIMs ••• If you only have one SIM, put it into the SIM1 holder. Some features may only be available with the SIM in the SIM1 holder.

When you set one SIM to be used for outgoing calls or messages, or for data connections, the other SIM can still receive calls or messages. When one SIM is having an active connection, the other SIM is not available. Rename SIM Tap SIM settings, and type in the new name under the card you want to name. Copy contacts from your old phone Get all your contacts to your new phone in one go. Your old phone must have Bluetooth, and the contacts must be stored in the phone memory, not on the SIM. 1. On both your new and old phone, switch Bluetooth on, and make sure both phones are visible to others. 2. On your new phone, tap . 3.

If you don't have any contacts on your phone yet, tap Copy contacts > Another device. 4. If you already have contacts on your phone, swipe up from the bottom of the screen, and tap Copy contacts > Copy from > Another device. 5. Move the phones close to each other.

When the phones are connected via Bluetooth, the contacts transfer starts. © 2013 Nokia. All rights reserved. 10 If your contacts are written in a language that is not supported by your new phone, the contact info may not show correctly. © 2013 Nokia.

All rights reserved. 11 Basics Learn how to get the most out of your new phone. Display indicators The display indicators on your phone tell you the current time, battery and signal strength, and much more. An alarm is set. The silent profile is on. Battery power level You have new notifications. Swipe down from the top of the screen to see the details. A call is active. Your calls are diverted to another number or your voice mailbox. You have a GSM data connection.

You have an EGPRS data connection. Wi-Fi is on. Signal strength Flight mode is on. Bluetooth is on. The type of mobile network you're currently connected to may be shown with a single letter, a , depending on combination of letters, or a combination of letters and numbers. For example, your network service provider. The icons may vary depending on your region or network service provider. Touch screen actions Explore your phone with a tap or swipe. 1. To open an app or other item, tap the app or item.

See 17 on page 31. 2. To switch a setting on or off, tap the switch. © 2013 Nokia. All rights reserved.

12 3. To see more options, tap and hold an item. 4. To swipe, for example, to another home screen, steadily slide your finger left or right. 5.

To see more options, swipe up from the bottom of the screen if you can see three lines there.



[You're reading an excerpt. Click here to read official NOKIA](#)

[ASHA-501 user guide](#)

<http://yourpdfguides.com/dref/5329828>

6. To close an app and go back to the home screen, swipe in from the left or right of the screen. 7. To see notifications and change settings, swipe down from the top of the screen. To close the menu, swipe up, or tap an empty area. © 2013 Nokia. All rights reserved. 13 8. To scroll through a long list or menu, slide your finger quickly up or down, and lift your finger.

9. To zoom, slide two fingers apart or together on an item. Tip: For more info on touch screen actions, see Tutorial. Switch between views Your phone has two home screens: one for keeping up with your activities, and another one for apps. Swipe left or right to switch between the home screens. ••Easily see what you've been doing lately, and check what's happening next in your calendar. In the apps menu, you can open apps. You can rearrange your apps and shortcuts as you like. Check your activity Your phone makes it easy for you to always keep up with what's happening. In the apps menu, swipe left or right to view your activities.

Here, you can see the following: •Apps you've opened recently, grouped by date © 2013 Nokia. All rights reserved. 14 ••Your upcoming calendar events. Swipe down at the top of the activity list to see what you've got planned next. Your latest messages, missed calls, recent music, and more Tip: You can easily pause or resume the currently-playing song directly from the list.

Tip: If you've set up a social networking account, you can post your status update in this screen when you're signed in. Clear all activity Tap and hold an item, and tap Clear all. Change settings quickly Need to quickly switch your phone to silent mode? Rather than going into the phone menus, in most views, you can quickly change some settings and check notifications in the menu that opens from the top of the screen. 1. Swipe down from the top of the screen.

In this screen, you can: •••See your missed calls or unread messages Switch all sounds on or off Check for Wi-Fi networks, and connect to them Switch Bluetooth on or off 2. To close the menu, tap anywhere else on the screen. Reorganise the apps menu You can organise your apps as you like. Move your favourite apps and shortcuts to the top, or remove shortcuts. You can also uninstall apps you don't need. 1. Tap and hold an item in the apps menu. 2. Drag and drop the item you want to move to a new location. You can move as many items as you like.

3. When you're done, tap the apps menu. © 2013 Nokia. All rights reserved. 15 Remove a shortcut Tap and hold the shortcut, and tap Uninstall an app Tap and hold the app, and tap . . You may not be able to uninstall some apps. Change your ringtone Set a different ringtone for each SIM card. 1. Tap > Sounds and vibra.

2. Tap SIM1 ringtone or SIM2 ringtone. 3. Select a ringtone from a list of preloaded tones or from your downloaded music. The ringtone plays so you can see if you like it.

4. When you've found a ringtone you like, tap Set. Tip: Download more ringtones from Nokia Store. To learn more about Nokia Store, go to www.nokia.com/support. Tip: You can also change the message alert tone. Tap Message tone, and select a tone. Add a full keyboard or phone keypad You can use either the full keyboard or phone keypad when writing. Tap > Writing settings > Add keyboards, and tap the keyboards or keypads you want to use. Switch between the keyboard and keypad Swipe left or right on the spe the call info. Tap to call back. Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area. Tip: To view missed calls later, tap > > Missed. Save a name and phone number Add new contacts to your phone.

© 2013 Nokia. All rights reserved. 19 1. Tap . 2. Swipe up from the bottom of the screen, n see on the activity screen when you've received new mail. Swipe down from the top of the screen, and tap the mail notification. > > , take a photo, and Chat with your friends Do you like chatting online with your friends? If you are out, you can send instant messages with your phone no matter where you are. You must be connected to the internet to chat. You need a Nokia account to chat.

If you don't have one, you can create a new account during setup. Tap , type in your username and password, and sign in. © 2013 Nokia. All rights reserved. 22 If you have added friends to your chat contacts, they are automatically included in your contacts.

If you have no contacts yet, you are asked to invite friends to chat. You can also chat with others than just your chat contacts. 1. Tap . 2.

To start a chat, tap a contact. Green colour indicates that your friend is online. 3. Write your message. Tip: To add a smiley, tap 4. Tap . . @@All rights reserved. 23 Internet Learn how to create wireless connections and browse the web while keeping your data costs down. Browse the web Catch up on the news, and visit your favourite websites on the go.

Tip: If your network service provider doesn't charge you a fixed fee for data transfer, to save on data costs, use a Wi-Fi network to connect to the internet. 1. Tap . 2. Write the web address in the address bar, and tap . Tip: To search the internet, write a search word in the address bar. If asked, select your default search engine. Zoom in or out Place two fingers on the screen, and slide your fingers apart or together. Tip: To view the page in a single column of larger, readable text and pictures without having to zoom in, swipe up from the bottom of the screen, tap More > Settings, and switch Column view to On . Share a web page When browsing, swipe up from the bottom of the screen, and tap Share and how you want to share.

Tip: Follow your data usage with the Counters app. Add a website to your favourites If you visit the same websites all the time, add them to your favourites so you can easily access them. 1. Tap . 2.

While browsing, swipe up from the bottom of the screen, and tap Add to favourites. Go to a favourite website Swipe up from the bottom of the screen, tap Favourites and a favourite. © 2013 Nokia. All rights reserved. 24 Tip: You can also pin your favourite websites to the apps menu.

While browsing, swipe up from the bottom of the screen, and tap Add to Home. © 2013 Nokia. All rights reserved. 25 Camera Why carry a separate camera if your phone has all you need for capturing memories? With your phone camera, you can easily take photos or record videos. Take a photo Capture the best moments with your phone camera. 1. To switch the camera on, tap . 2. To zoom in or out, place two fingers on the screen, and slide them apart or together. You can also use the volume keys.

3. To take a photo, tap . The photos are saved in . Record a video Besides taking photos, you can also record videos with your phone. 1. To switch the video camera on, tap 2. You can also use the volume keys. 3. To start recording, tap . 4. To stop recording, tap . Videos are saved in .



[You're reading an excerpt. Click here to read official NOKIA ASHA-501 user guide](http://yourpdfguides.com/dref/5329828)
<http://yourpdfguides.com/dref/5329828>

> .. Tip: You can send your video in a multimedia or mail message.

To limit the video size for sending, in video camera, before recording, tap the settings area, and switch Video quality to Low. Share your photo or video Let others admire your great shots. Send them to your friends or share them on a social networking service. 1. Tap .

2. Tap the photo or video and © 2013 Nokia. All rights reserved. . 26 3. Select how to share, and follow the instructions shown on the screen. Tip: You can also share photos or videos directly from the camera, right after taking them. Tap > . @@@@1. Switch Bluetooth on in both phones.

2. Make sure the phones are visible to other phones. 3. Tap, for example, a photo, and > Slam via Bluetooth. 4. Move your phone close to the other phone. Slam searches for the nearest phone, and sends the item to it. @@1. Swipe down from the top of the screen, and tap . 2.

Tap Wi-Fi and the network you want. 3. If the connection is secured, type in the password. @@@@1. @@2.

Tap Mass storage. 3. @@You can see the content stored on the memory card. 4. @@You can also set your phone to automatically check for updates.

@@1. Tap > Phone update. @@2. @@The update may take several minutes. If you encounter problems, contact your network service provider.

@@@1. Tap > PUK2 These are required to unblock a PIN or PIN2 code. @@@@You can set your phone to ask for the lock code that you define. Keep the code secret and in a safe place, separate from your phone. @@@@For more information, contact Nokia Care or your phone dealer. IMEI This is used to identify valid phones in the network.

The number can also be used to block, for example, stolen phones. You may also need to give the number to Nokia Care services. To view your IMEI number, dial *#06#. © 2013 Nokia. @@@@5 Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. 6 Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. 7 Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card. 8 Using services or downloading content may cause the transfer of large amounts of data, which may result in data costs.

9 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message. 10 If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size.

11 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices. 12 Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

13 Important: This device is designed to be used with a mini-UICC SIM card, also known as a micro-SIM card only. A microSIM card is smaller than the standard SIM card. Use of incompatible SIM cards, or use of SIM card adapters, may damage the card or the device, and may corrupt data stored on the card. Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card. Only applies to SIM1. Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached. 14 15 16 The social networking services are third-party services and not provided by Nokia. Check the privacy settings of the social networking service you are using as you may share info with a large group of people.

The terms of use of the social networking service apply to sharing info on that service. Familiarise yourself with the terms of use and the privacy practices of that service. 17 Important: Avoid scratching the touch screen. 18 Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of thirdparty apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. 19 Important: Use encryption to increase the security of your Wi-Fi connection. Using encryption reduces the risk of others accessing your data.

© 2013 Nokia. All rights reserved.

31 Product and safety information Network services and costs You can only use your device on the GSM 900 and 1800 MHz networks. You need a subscription with a service provider. Using some features and downloading content require a network connection and may result in data costs. You may also need to subscribe to some features. Emergency calls 1.

Make sure the device is switched on. 2. Check for adequate signal strength. @@@@Make sure the flight profile is not activated. If the device screen and/or keys are locked, unlock them.

3. Press the back key repeatedly, until the home screen is shown. 4. To open the dialler, select 5. Type in the official emergency number for your present location. Emergency call numbers vary by location. 6. Select . 7. Give the necessary info as accurately as possible.

Do not end the call until given permission to do so. @@@@Connections in all conditions cannot be guaranteed. @@The following suggestions help you keep your device operational. @@@@If your device gets wet, remove the battery, and let the device dry. Do not use or store the device in dusty or dirty areas. Do not store the device in high temperatures. High temperatures may damage the device or battery. Do not store the device in cold temperatures.

@@@Do not open the device other than as instructed in the user guide. @@Do not drop, knock, or shake the device.

Rough handling can break it. Only use a soft, clean, dry cloth to clean the surface of the device. Do not paint the device. Paint can prevent proper operation.

For optimal performance, switch the device off and remove the battery from time to time.

Keep the device away from magnets or magnetic fields. To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info. Recycle © 2013 Nokia. All rights reserved. 32 Always return your used electronic products, batteries, and packaging materials to dedicated collection points.

This way you help prevent uncontrolled waste disposal and promote the recycling of materials.



[You're reading an excerpt. Click here to read official NOKIA](http://yourpdfguides.com/dref/5329828)

[ASHA-501 user guide](http://yourpdfguides.com/dref/5329828)

<http://yourpdfguides.com/dref/5329828>

All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia products at www.nokia.com/recycle. About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content. Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. With this device you can access content protected with OMA DRM 1.0.

If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content. Battery and charger info Use your device only with an original BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Charge your device with AC-11 charger. Charger plug type may vary. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Important: Talk and standby times are estimates only.

Actual times are affected by, for example, network conditions, device settings, features being used, battery condition, and temperature. Battery and charger safety Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste. Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use the battery and charger for their intended purposes only.

Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children. © 2013 Nokia. All rights reserved. 33 Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function.

Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy. Implanted medical devices To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should: •••• Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.

Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Switch the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Accessibility solutions Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information, visit the Nokia website at www.nokiaaccessibility.com. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel The surface of this device is nickel-free. Protect your device from harmful content Your device may be exposed to viruses and other harmful content. Take the following precautions: •••• Be cautious when opening messages.

They may contain malicious software or otherwise be harmful to your device or computer. Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust. Only install and use services and software from sources that you trust and that offer adequate security and protection. Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer. If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites. Operating environment This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.

5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. The sending of data files or messages requires a quality network connection and may be delayed until such a connection is available. Follow the separation distance instructions until the sending is completed. Parts of the device are magnetic.

Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased. © 2013 Nokia. All rights reserved. 34 Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles.

For more info, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly.



[You're reading an excerpt. Click here to read official NOKIA ASHA-501 user guide](http://yourpdfguides.com/dref/5329828)
<http://yourpdfguides.com/dref/5329828>

Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area. Potentially explosive environments Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked.

These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.96 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com. Nokia original accessories For availability of approved accessories, check with your dealer.

An extensive range of accessories is available for your device. For more details, see www.nokia.com/accessories. Practical rules about accessories ••••• Keep all accessories out of the reach of small children. @@@@Standby: Up to 26 days. @@Actual battery talk and standby times depend on SIM cards, features used, battery age and condition, temperatures to which battery is exposed, network conditions, and many other factors, and may be significantly shorter than those specified above. Ringing tones, hands free call handling, use in digital mode, and other features will also consume the battery, and © 2013 Nokia. All rights reserved. 35 the amount of time a device is used for calls will affect its stand-by time.

Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time. Nokia support messages To help you take maximum advantage of your phone and services, you receive free customised text messages from Nokia. The messages contain tips and tricks and support. @@@@A copy of the Declaration of Conformity can be found at www.nokia.com/global/declaration/declaration-of-conformity. The availability of products, features, apps and services may vary by region. For more info, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local Nokia dealer for further details and availability of language options. TM & © 2013 Nokia. All rights reserved. Third party products/names may be TMs of their respective owners. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc.

and any use of such marks by Nokia is under license. Oracle and Java are registered trademarks of Oracle and/or its affiliates. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal © 2013 Nokia. All rights reserved. 36 and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See www.mpegla.com. © 2013 Nokia. All rights reserved. 37.



[You're reading an excerpt. Click here to read official NOKIA](http://yourpdfguides.com/dref/5329828)

[ASHA-501 user guide](http://yourpdfguides.com/dref/5329828)

<http://yourpdfguides.com/dref/5329828>