




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA BLUETOOTH STEREO HEADSET BH-216. You'll find the answers to all your questions on the NOKIA BLUETOOTH STEREO HEADSET BH-216 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA BLUETOOTH STEREO HEADSET BH-216
User guide NOKIA BLUETOOTH STEREO HEADSET BH-216
Operating instructions NOKIA BLUETOOTH STEREO HEADSET BH-216
Instructions for use NOKIA BLUETOOTH STEREO HEADSET BH-216
Instruction manual NOKIA BLUETOOTH STEREO HEADSET BH-216

Nokia Bluetooth Headset BH-216

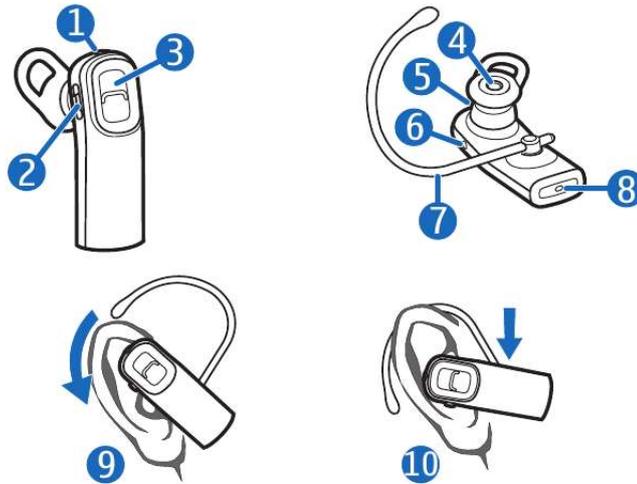

9215309/2



[You're reading an excerpt. Click here to read official NOKIA BLUETOOTH STEREO HEADSET BH-216 user guide](http://yourpdfguides.com/dref/2737781)
<http://yourpdfguides.com/dref/2737781>

Manual abstract:

A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region.

Please check with your Nokia dealer for details. Export controls This device may contain commodities, technology or software subject to export © 2009 Nokia. All rights reserved. Nokia, Nokia Connecting People and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation.

Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. @@@@Read this user guide carefully before using the headset. @@This product may contain small parts. Keep them out of the reach of small children.

The surface of this device is nickel-free. @@Connections may be subject to interference from obstructions, such as walls, or other electronic devices. The headset is compliant with the Bluetooth Specification 2.1 + EDR supporting the following profiles: Headset Profile 1.1 and Hands-Free Profile (HFP) 1.5. Check with the manufacturers of other devices to determine their compatibility with this device. Bluetooth wireless technology Bluetooth wireless technology allows you to connect compatible devices without cables. The headset and the other device do not need to be in line ENGLISH Get started The headset contains the following parts shown on the title page: power key (1), volume key (2), answer/end key (3), earpiece (4), indicator light (5), charger connector (6), earloop (7), and microphone (8). Before using the headset, you must charge the battery and pair the headset with a compatible device.

with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord. 1. Connect the charger to a wall outlet. 2. Connect the charger cable to the charger connector. The red Parts of the device are magnetic. Metallic indicator light is displayed during materials may be attracted to the device. Do not place credit cards or other charging.

Charging the battery magnetic storage media near the device, fully may take up to 1 hour and 15 because information stored on them may minutes. be erased. 3. When the battery is fully charged, the green indicator light is Charge the battery displayed. Disconnect the charger Before charging the battery, carefully from the headset, then from the read "Battery and charger wall outlet.

information". Warning: Use only chargers approved by Nokia for use ENGLISH The fully charged battery has power for up to 6 hours of talk time or up to 160 hours of standby time. To check the battery charge when the headset is not connected to a charger, press the power key when the headset is switched on.

If the indicator light is green, the charge level is sufficient. If the light is orange, you may need to recharge the battery soon.

If the light is red, recharge the battery. When the battery charge is low, the headset beeps every 5 minutes and the red indicator light flashes. headset beeps, and the red indicator light is briefly displayed. If the headset is not connected to a device within about 30 minutes, it switches off automatically. Pair and connect the headset 1. Ensure that your mobile device is switched on and the headset is off. 2. Press and hold the power key (for about 6 seconds) until the green indicator light starts to flash quickly. 3. @@key for about 4 seconds.

The headset 4. @@displayed. The headset tries to 5. @@@@In some power key for about 2 seconds. @@@@To use the headset with the earloop, attach the earloop to it (11). To detach the earloop, gently pull it from the headset. @@Push or pull the earloop to set its length. about 2 seconds. Proceed as described in the user guide of your device. To answer or end a call, press the answer/end key.

To reject a call, press this key twice. To adjust the volume, press the volume key up or down. To mute or unmute the microphone, press the middle of the volume key. @@To switch a call from the headset to a connected to it. @@@@seconds, or switch on the headset.

@@@Turning the lights off increases the standby time. until the red and green indicator lights start to alternate. @@The reset does not clear the pairing settings. Troubleshooting If you cannot connect the headset to your compatible device, check that the headset is charged, switched on, and paired with your device. Clear settings or reset To delete the pairings from the headset when it is switched off, press and hold the power key and the answer/end key (for about 8 seconds) Battery and charger information This device has an internal, nonremovable, rechargeable battery.

Do not attempt to remove the battery from the device as you may damage the device. This device is intended for use when supplied with power from the following chargers: AC-3, AC-4, AC-5, AC-8, and DC-4. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, or UB. The battery can be charged and ENGLISH discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved charger may present a risk of fire, explosion, leakage, or other hazard. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator light is displayed. Unplug the charger from the electrical plug and the device when not in use.

Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.



**[You're reading an excerpt. Click here to read official NOKIA
BLUETOOTH STEREO HEADSET BH-216 user guide
http://yourpdfguides.com/dref/2737781](http://yourpdfguides.com/dref/2737781)**

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Never use any charger that is damaged. @@@@ - Keep the device dry.

Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely. · Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged. · Do not store the device in hot areas.

High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. · Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards. · Do not attempt to open the device. · Do not drop, knock, or shake the device.

Rough handling can break internal circuit boards and fine mechanics. · Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. · Do not paint the device. Paint can clog the moving parts and prevent proper operation. These suggestions apply equally to your device, charger, or any accessory. If any device is not working properly, take it to the nearest authorised service facility.



**[You're reading an excerpt. Click here to read official NOKIA
BLUETOOTH STEREO HEADSET BH-216 user guide](http://yourpdfguides.com/dref/2737781)**

<http://yourpdfguides.com/dref/2737781>