



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA C2-01. You'll find the answers to all your questions on the NOKIA C2-01 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NOKIA C2-01**  
**User guide NOKIA C2-01**  
**Operating instructions NOKIA C2-01**  
**Instructions for use NOKIA C2-01**  
**Instruction manual NOKIA C2-01**

**Nokia C1-01/C1-02 User Guide**

Issue 1.1



[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)  
<http://yourpdfguides.com/dref/3242946>

**Manual abstract:**

Read the complete user guide for further information. @ @ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. @ @ @ @Keep it dry. PROTECT YOUR HEARING Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Support 5 Support When you want to learn more about how to use your product or you are unsure how your device should function, go to [www.nokia.com/support](http://www.nokia.com/support), or using a mobile device, [nokia.mobi/support](http://nokia.mobi/support).

If this does not resolve your issue, do one of the following: . . . Reboot your device. Switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device. Restore the original factory settings. Update your device software.

If your issue remains unsolved, contact Nokia for repair options. Go to [www.nokia.com/repair](http://www.nokia.com/repair). Before sending your device for repair, always back up the data in your device.

Get started Insert the SIM card and battery The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card. 1 2 3 4 Place your finger in the recess at the bottom of the device, and carefully lift and remove the back cover (1). If the battery is inserted, lift the battery out (2). Insert the SIM card. Make sure the contact area of the card is facing down (3, 4). Line up the contacts of the battery and the battery compartment, and insert the battery (5). To replace the back cover, direct the top locking catches toward their slots (6), and press down until the cover locks into place (7). Safe removal. Always switch the device off and disconnect the charger before removing the battery. 6 Get started Keys and parts 1 2 3 4 5 6 7 8 9 10 11 12 13 Headset connector (3.

5 mm) Earpiece Display Selection keys Navi™ key (scroll key) Call key End/Power key Keypad Charger connector Micro USB connector Loudspeaker Camera lens (Nokia C101 only) Microphone Switch on or off Press and hold the power key. Charge the battery Your battery has been partially charged at the factory. If the device indicates a low charge, do the following: 1 2 3 Connect the charger to a wall outlet. Connect the charger to the device. When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet. Get started 7 You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made. Antennas Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

Headset Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV Connector, pay special attention to volume levels. Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.

8 Get started Insert a memory card Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. Your phone supports microSD cards with a capacity of up to 32 GB. A compatible memory card may be supplied with the device, and may already be inserted in the device.

If not, do the following: 1 2 3 Open the back cover. Make sure the contact area of the card is facing down. Push the card in, until you hear a click. Replace the back cover. Remove the microSD card Important: Do not remove the memory card during an operation when the card is being accessed. Doing so may damage the memory card and the device, and corrupt data stored on the card. You can remove or replace the memory card during phone operation without switching the device off, but you need to ensure that no application is currently accessing the memory card. Get started 9 Connect a USB data cable Connect a compatible USB data cable to the USB connector. You may need to purchase a USB data cable separately. To modify the USB settings, select Menu > Settings > Connectivity > USB data cable and the desired mode.

Attach the wrist strap Thread the wrist strap, and tighten it. Nokia C101: Nokia C102: Access codes The security code helps to protect your device against unauthorised use. The preset code is 12345. You can create and change the code, and set the device to request the code. Keep the code secret and in a safe place separate from your device. If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care point or your device dealer. 10 Get started The PIN code supplied with the SIM card protects the card against unauthorised use. The PIN2 code supplied with some SIM cards is required to access certain services.

If you enter the PIN or PIN2 code incorrectly three times in succession, you are asked for the PUK or PUK2 code. If you do not have them, contact your service provider. The module PIN is required to access the information in the security module of your SIM card. The signing PIN may be required for the digital signature. The barring password is required when using the call barring service.

To set how your device uses the access codes and security settings, select Menu > Settings > Security. Keypad lock To prevent accidental keypresses, select Menu, and press \* within 3.5 seconds to lock the keypad. To unlock the keypad, select Unlock, and press \* within 1.5 seconds.

If the security keyguard is activated, enter the security code when requested. To set the keypad to lock automatically after a defined length of time when the device is not being used, select Menu > Settings > Phone > Automatic keyguard > On. To answer a call when the keypad is locked, press the call key. When you end or reject a call, the keypad locks automatically. When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device. Use your device without a SIM card Some features of your device may be used without inserting a SIM card, such as games.

Features that are unavailable in the offline profile cannot be selected in menus.



**[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)**

<http://yourpdfguides.com/dref/3242946>

*Applications running in background* Leaving applications running in the background increases the demand on battery power and reduces the battery life. Applications that usually run in the background are, for example, the Radio and Music player applications. **Calls** 11 **Calls Make and answer a call** Make a call Enter the phone number, including the country and area code if necessary, and press the call key.

**Answer an incoming call** Press the call key. **Reject a call** Press the end key. **Adjust the volume** During a phone call, scroll up or down. **Loudspeaker** If available, you may select Loudsp. or Normal to use the loudspeaker or the earpiece of the phone during a call. **Warning:** Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. **Dialling shortcuts** Assign a phone number to a number key **Select Menu > Contacts > More > Speed dials**, scroll to a desired number (2-9), and select Assign. Enter the desired phone number, or select Search and a saved contact. **Activate speed dialling** **Select Menu > Settings > Call > Speed dialling > On**.

**Make a call using speed dialling** In the home screen, press and hold the desired number key. 12 **Write text** Write text Text modes To enter text (for example, when writing messages) you can use traditional or predictive text input. When you write text, press and hold Options to switch between traditional text input, and predictive text input, indicated by . Not all languages are indicated by supported by predictive text input. The character cases are indicated by , , and . To change the character case, press #. To change from the letter to number mode, indicated by , press and hold #, and select Number mode. To change from the number to the letter mode, press and hold #. To set the writing language, select **Options > Writing language**. **Traditional text input** Press a number key, 2-9, repeatedly until the desired character appears.

The available characters depend on the selected writing language. If the next letter you want is located on the same key as the present one, wait until the cursor appears, and enter the letter. To access the most common punctuation marks and special characters, press 1 repeatedly. To access the list of special characters, press \*. To insert a space, press 0. **Predictive text input** Predictive text input is based on a built-in dictionary to which you can also add new words. 1 2 Start writing a word, using the keys 2 to 9. Press each key only once for one letter. To confirm a word, scroll right or add a space. . . If the word is not correct, press \* repeatedly, and select the word from the list.

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select Spell. Enter the word using traditional text input, and select Save. . To write compound words, enter the first part of the word, and scroll right to confirm it. Write the last part of the word, and confirm the word. Start writing the next word. 3 **Navigate the menus** 13 **Navigate the menus** The device functions are grouped into menus. Not all menu functions or option items are described here. In the home screen, select Menu and the desired menu and submenu. Exit the current menu level **Select Exit or Back**.

**Return to the home screen** Press the end key. **Change the menu view** **Select Menu > Options > Main menu view**. **Messaging** Create and receive messages, such as text and multimedia, with your device. The messaging services can only be used if your network or service provider supports them. Text and multimedia messages You can create a message and optionally attach, for example, a picture.

Your phone automatically changes a text message to a multimedia message when a file is attached. **Text messages** Your device supports text messages media messages. 16 **Contacts** Service messages -- Activate service messages, and set up preferences related to service messages. **Contacts** You can save names and phone numbers in the device memory and on the SIM card. In the device memory, you can save contacts with numbers and text items.

Names and numbers saved on the SIM card are indicated with . **Select Menu > Contacts > Names**. Add a contact **Select Options > Add new contact**. Add details to a contact Make sure that the memory in use is either Phone or Phone and SIM. Scroll to a contact, and select **Select > Options > Add detail**. Search for a contact Scroll through the list of contacts, or enter the first characters of the contact's name. Copy a contact between the device memory and SIM card Scroll to the contact, and select **Options > More > Copy contact**. On the SIM card, you can save only one phone number for each name. To select the SIM card or device memory for your contacts, to select how the names and numbers in the contacts list are displayed, and to view the memory capacity for contacts, select **Menu > Contacts and More > Settings** and the appropriate option. You can send and receive a person's contact information as a business card from a compatible device that supports the vCard standard.

**Send a business card** Select a contact, **Options > More > Business card**, and the sending type. **Photos** Capture images and record video clips The camera is available only for the Nokia C101. Your device supports an image capture resolution of 480x640 pixels. **Music** Camera mode Use the still image function **Select Menu > Photos > Camera**. Zoom in or out Scroll up or down. Capture an image **Select Capture**. Set the preview mode and time **Select Options > Settings > Photo preview time**. Activate the self-timer **Select Options** and the desired option. **Video mode** Use the video function **Select Menu > Photos > Video camera**. Start recording a video clip **Select Record**.

**Switch between camera and video mode** In camera or video mode, scroll left or right. **View your images and video clips** View your images **Select Menu > Photos > My photos**. Watch your video clips **Select Menu > Photos > My videos**. 17 **Music** Music player Your device includes a music player for listening to songs or other MP3 or AAC sound files. 18 **Music** **Select Menu > Music > My music**.

**Start or pause playing** Press the scroll key. Skip to the beginning of the current song Scroll left. Skip to the previous song Scroll left twice. Skip to the next song Scroll right. Rewind the current song Press and hold the scroll key to the left.

**Fast-forward the current song** Press and hold the scroll key to the right. **Change the volume** Scroll up or down. **Mute or unmute the music player** Press #. **Close the music player** Press the end key. Set the music player to play in the background **Select Options > Play in backgr.**. Close the music player when it is playing in the background Press and hold the end key. **Warning:** Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.



[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)

<http://yourpdfguides.com/dref/3242946>

FM radio Select Menu > Music > Radio.

Call log 19 Automatically search for available stations Select Options > Search stations. For best results, search when outdoors or near a window. Search for a neighbouring station Press and hold the scroll key to the left or right. Save a station Tune to the desired station, and select Options > Save station. Switch between saved stations Scroll left or right to switch between stations, or press the corresponding number key of the memory location of a desired station.

Change the volume Scroll up or down. Close the radio Press the end key. Set the radio to play in the background Select Hide. Close the radio when it is playing in the background Press and hold the end key. Warning: Continuous exposure to high volume may damage your hearing.

Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Call log To view the information on your calls, messages, data, and synchronisation, select Menu > Log and from the available options. Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth. 20 Web or Internet Web or Internet You can access various internet services with your phone browser. The appearance of the web pages may vary due to screen size.

You may not be able to see all the details on the web pages. Depending on your phone, the web browsing function may be displayed as Web or Internet in the menu, hereafter referred to as Web. Important: Use only services that you trust and that offer adequate security and protection against harmful software. For the availability of these services, pricing, and instructions, contact your service provider. You may receive the configuration settings required for browsing as a configuration message from your service provider.

Connect to a web service Select Menu > Internet > Home. Or, in the standby mode, press and hold 0. After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider. Settings Profiles Waiting for a call, but can't let your device ring? There are various settings groups called profiles, which you can customise with ringing tones for different events and environments. Select Menu > Settings > Profiles. Select the desired profile and from the following: Activate -- Activate the profile. Personalise -- Modify the profile settings.

Timed -- Set the profile to be active until a certain time. When the time set for the profile expires, the previous profile that was not timed becomes active.

Tones You can modify the tone settings of the selected active profile. Settings 21 Select Menu > Settings > Tones. You can find the same settings in the Profiles menu. Display To view or adjust the wallpaper, font size, or other features related to the device display, select Menu > Settings > Display. Date and time Select Menu > Settings > Date and time. Set the date and time Select Date and time settings. Set the date and time format Select Date and time format settings. Update the time automatically according to the current time zone Select Auto-update of date & time (network service).

Shortcuts With personal shortcuts, you can get quick access to frequently used phone functions. Select Menu > Settings > My shortcuts. Assign phone functions to the selection keys Select Right selection key or Left selection key and a function from the list. Select shortcut functions for the scroll key Select Navigation key. Scroll to the desired direction, and select Change or Assign and a function from the list.

Synchronisation and backup Select Menu > Settings > Sync and backup. Select from the following: Phone switch -- Synchronise or copy selected data, such as your contacts, calendar entries, notes, or messages, between your device and another device. Create backup -- Back up selected data. Restore from backup -- Restore data from a backup. To view the details of a backup file, select Options > Details.

22 Settings Sync with server -- Synchronise or copy selected data between your device and a PC or network server (network service). Connectivity Your phone has several features that allow you to connect to other devices to transmit and receive data. Bluetooth wireless technology Bluetooth technology allows you to connect your device, using radio waves, to a compatible Bluetooth device or accessory that is within 10 metres (32 feet). Select Menu > Settings > Connectivity > Bluetooth. Set up a Bluetooth connection 1 Select My phone's name, and enter a name for your device. 2 Select Bluetooth > On. indicates that Bluetooth connectivity is active. 3 To connect your device to an audio accessory, select Connect to audio accessories and the device that you want to connect to. 4 To pair your device with any Bluetooth device in range, select Paired devices > Add new device. Scroll to a found device, and select Add.

Enter a passcode (up to 16 characters) on your device, and allow the connection on the other Bluetooth device. If you are concerned about security, deactivate the Bluetooth function, or set My phone's visibility to Hidden. Accept Bluetooth communication only from those you trust. Connect your PC to the internet You can use Bluetooth technology to connect your compatible PC to the internet without the PC Suite software. Your device must be able to connect to the internet (network service), and your PC must support Bluetooth technology. After connecting to the network access point (NAP) service of the device, and pairing with your PC, your device automatically opens a packet data connection to the internet. This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: generic access, hands-free, headset, object push, file transfer, dial-up networking, serial port, SIM access, and generic object exchange. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model.

Check with the manufacturers of other devices to determine their compatibility with this device.

Settings 23 Features using Bluetooth technology increase the demand on battery power and reduce the battery life. Packet data General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an internet protocol (IP)-based network. To define how to use the service, select Menu > Settings > Connectivity > Packet data > Packet data connection and from the following options: When needed -- to establish the packet data connection when an application needs it. The connection is closed when the application is terminated. Always online -- to automatically connect to a packet data network when you switch the phone on Call and phone Select Menu > Settings > Call.



[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)

<http://yourpdfguides.com/dref/3242946>

*Divert incoming calls Select Call divert (network service). For details, contact your service provider. Automatically redial ten times after an unsuccessful attempt Select Automatic redial > On. Get a notification of incoming calls while you are in a call Select Call waiting > Activate (network service). Display or hide your number to the person you are calling Select Send my caller ID (network service).*

*For details, contact your service provider. Select Menu > Settings > Phone. Set the display language Select Language settings > Phone language. Accessories This menu is only available if the device is or has been connected to a compatible accessory. Select Menu > Settings > Accessories. Select an accessory and an option, depending on the accessory. 24 Applications Configuration You can configure your device with settings that are required for certain services. Your service provider may also send you these settings. Select Menu > Settings and Configuration. Select from the following: Default conf.*

*sett. -- View the service providers saved in the device, and set a default service provider. Default in all apps. -- Activate the default configuration settings for supported applications. Preferred access point -- View the saved access points. Personal configuration settings -- Add new personal accounts for various services, and activate or delete them. To add a new personal account, select Add new or Options > Add new. Select the service type, and enter the required information. To activate a personal account, scroll to the account, and select Options > Activate. Restore factory settings To restore the phone back to factory conditions, select Menu > Settings > Restore factory sett.*

*and from the following: Restore sett. only -- Reset all preference settings without deleting any personal data. Restore all -- Reset all preference settings and delete all personal data, such as contacts, messages, media files, and activation keys. Applications Alarm clock You can set an alarm to sound at a desired time. Set the alarm 1 Select Menu > Applications > Alarm clock.*

*2 To activate the alarm, scroll left or right. 3 Enter the alarm time. 4 To repeat an alarm on selected days of the week, select Options > Repeat days and the days. 5 To select the alarm tone, select Options > Alarm tone. @@@@7 Select Save.*

*Applications 25 Stop the alarm Select Stop. @@@@View the Gallery contents Select Menu > Applications > Gallery. @@Select Menu > Applications > Extras. @@@@@@@downloads. Your device supports J2METM Java applications. @@@@@@@Voice recorder Select Menu > Applications > Recorder. @@@@To-do list Select Menu > Applications > To-do list. The to-do list is displayed and sorted by priority. @@For more information, contact your network operator. @@You can access this menu only if it is supported by your SIM card.*

*@@Decrease the brightness of the screen. @@@@@@@This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. @@Contact your service provider for more information about networks. Your device may have preinstalled bookmarks and links for third-party internet sites and may allow you to access third-party sites. These are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you access such sites, take precautions for security or content. Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger. When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.*

*Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred. Make back-up copies or keep a written record of all important information stored in your device. When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products. The images in this guide may differ from your device display.*

*Refer to the user guide for other important information about your device. Network services To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Network services involve transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks.*

*Your service provider can explain what charges will apply. Some networks may have limitations that affect how you 28 Product and safety information can use some features of this device requiring network support such as support for specific technologies like WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols and language-dependent characters. Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons.*

*Shared memory The following features in this device may share memory: multimedia messaging (MMS). Use of one or more of these features may reduce the memory available for the remaining features. If your device displays a message that the memory is full, delete some of the information stored in the shared memory. About device software updates With device software updates, you can get new features and enhanced functions for your device.*

*Updating the software may also improve your device performance. It is recommended that you back up your personal data before updating your device software. Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. Be sure to back up data before accepting installation of an update. After the update, the instructions in the user guide may no longer be up to date. Accessories Warning: Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. In particular, use of unapproved chargers or batteries may present a risk of fire, explosion, leakage, or other hazard. For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.*

*Battery Battery and charger information Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-5CB. Nokia may make additional battery models available for this device. This device is intended for use when supplied with power from the following chargers: AC-3.*

*The exact charger model number may vary depending on the type of plug.*

*The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, K, or UB.*



**[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)**

**<http://yourpdfguides.com/dref/3242946>**

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery.

If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made. Safe removal. Always switch the device off and disconnect the charger before removing the battery. Proper charging. Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Product and safety information 29 Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery.

A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing. Do not short-circuit. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object. Disposal. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations.

Please recycle when possible. Do not dispose as household waste. Leak. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes.

If this happens, flush the affected areas immediately with water, or seek medical help. Damage. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Correct use.

Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children. Nokia battery authentication guidelines Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from a Nokia authorised service centre or dealer, and inspect the hologram label using the following steps: Authenticate hologram 1 When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle. 2 When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively. 30 Product and safety information Successful completion of the steps is not a total assurance of the authenticity of the battery. If you cannot confirm authenticity or if you have any reason to believe that your Nokia battery with the hologram on the label is not an authentic Nokia battery, you should refrain from using it, and take it to the nearest Nokia authorised service centre or dealer for assistance.

To find out more about original Nokia batteries, see [www.nokia.com/battery](http://www.nokia.com/battery). Take care of your device · Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry. . . . . Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged. Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.

Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits. Do not attempt to open the device other than as instructed in the user guide. Unauthorised modifications may damage the device and violate regulations governing radio devices. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics. Do not paint the device. Paint can clog the moving parts and prevent proper operation. Keep your device away from magnets or magnetic fields.

Switch off the device and remove the battery from time to time for optimum performance. To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information. Recycle Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or with a mobile device, [nokia.mobi/werecycle](http://nokia.mobi/werecycle).

Additional safety information The surface of this device is nickel-free. Small children Your device and its accessories are not toys.

They may contain small parts. Keep them out of the reach of small children. Operating environment This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device.

Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased. Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy.



[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)

<http://yourpdfguides.com/dref/3242946>

Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy. Product and safety information 31 Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should: . . . . Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket.

Hold the wireless device to the ear opposite the medical device. Turn the wireless device off if there is any reason to suspect that interference is taking place. Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing aids Some digital wireless devices may interfere with some hearing aids. Vehicles RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Emergency calls Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device may attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies. To make an emergency call: 1 If the device is not on, switch it on. Check for adequate signal strength.

Depending on your device, you may also need to complete the following: . . . Insert a SIM card if your device uses one. Remove certain call restrictions you have activated in your device. 32 · 2 3 4 Copyright and other notices Press the end key as many times as needed to clear the display and ready the device for calls. Press the call key. Change your profile from Offline or Flight profile to an active profile. Enter the official emergency number for your present location. Emergency numbers vary by location. When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. @@@@ Use of device accessories may result in different SAR values. @@Additional SAR information may be provided under product information at www.

nokia.com. Copyright and other notices DECLARATION OF CONFORMITY Hereby, NOKIA CORPORATION declares that this RM-607/RM-643 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

© 2010 Nokia. All rights reserved. Nokia, Nokia Connecting People, and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation.

Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Includes RSA BSAFE cryptographic or security protocol software from RSA Security. Copyright and other notices 33 Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider.



[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](http://yourpdfguides.com/dref/3242946)  
<http://yourpdfguides.com/dref/3242946>

No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

*mpegla.com. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.*

*The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications. BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW.*

*YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS. /Issue 1.1 EN 34 Index games H headset I image mode images internet K keyguard keypad lock keys and parts M memory card menus message centre number message settings messages Music player N Nokia Messaging Service Nokia support information number mode O offline profile operator menu P passwords PIN code powering device on/off predictive text input profiles R radio 25 7 16 17 20 10 10 6 8 13 13 15 14 17 15 5 12 10 26 9 9 6 12 20 18 Index A access codes accessories alarm clock antennas audio messages B backing up data battery -- charging Bluetooth browser business cards C cable connection call log call settings -- phone settings calls camera configuration contacts D date and time display settings E extras F factory settings flash messages G Gallery 9 23 24 7 14 21 5 6 22 20 16 9 19 23 11 16 24 16 21 21 25 24 14 25 Index S security code settings settings, display shortcuts SIM card software updates speed dialling support switching device on/off synchronisation T text messages text modes to-do notes tones traditional text input turning device on/off U updates -- device software USB connection V video clips video mode voice messages voice recorder W web wrist strap write text 35 9 20 21 21 5, 10 28 11 5 6 21 13 12 26 20 12 6 28 9 17 16 15 25 20 9 12 .*



[You're reading an excerpt. Click here to read official NOKIA C2-01 user guide](#)

<http://yourpdfguides.com/dref/3242946>