



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA C2-03. You'll find the answers to all your questions on the NOKIA C2-03 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA C2-03
User guide NOKIA C2-03
Operating instructions NOKIA C2-03
Instructions for use NOKIA C2-03
Instruction manual NOKIA C2-03

Nokia C2-03/C2-06 User Guide

Issue 1.1



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)
<http://yourpdfguides.com/dref/4211967>

Manual abstract:

For further information, read the complete user guide. @ @ Obey all instructions in restricted areas. ROAD SAFETY COMES FIRST Obey all local laws.

Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. @ @ @ @ Keep it dry. PROTECT YOUR HEARING Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Get started 5 Get started Your dual SIM phone You can insert two SIM cards. Some benefits of a dual SIM phone · You can make savings when you use services from different service providers. · Use one phone number for personal calls and another for work, but carry only one phone.

· Avoid network coverage variation between service providers. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other is unavailable. If you only have one SIM card, insert the card into the SIM1 card holder. Some features and services may only be available when using the SIM card in the SIM1 card holder. If there is a SIM card only in the SIM2 card holder, you can only make emergency calls.

A GPRS connection cannot be open in the background. If an application is using a GPRS connection, and you return to the home screen or switch to another application, menu, or other view, the connection is automatically closed. Keys and parts 1 Display 6 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 Get started Call key Keypad Earpiece Wrist strap hole Volume up/Zoom in key Volume down/Zoom out key Key lock switch End/Power key Microphone Nokia AV Connector (3.5 mm) Micro-USB connector Charger connector Camera lens. Before using the camera, remove the protective tape from the lens.

Loudspeaker SIM card slot (SIM 2) To switch between SIM cards, on the home screen, press and hold *. Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached. Important: Do not use a mini-UICC SIM card, also known as a micro-SIM card, a microSIM card with an adapter, or a SIM card that has a mini-UICC cutout (see figure) in this device. A micro SIM card is smaller than the standard SIM card. This device does not support the use of micro-SIM cards and use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Insert a SIM card and battery Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card. This phone is intended for use with a BL-5C battery. Always use original Nokia batteries.

If you only have one SIM card, insert the card into the internal SIM card holder. The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card. Get started 1 7 Place your finger in the recess at the top of the phone, and carefully lift and remove the back cover (1). If the battery is inserted, lift it out (2). 2 Open the SIM card holder (3), and insert or remove the SIM card (4 or 5). Make sure the contact area of the card is facing down. 3 Line up the contacts of the battery and the battery compartment, and insert the battery (6). To replace the back cover, direct the bottom locking catches toward their slots (7), and press down until the cover locks into place (8). Insert a second SIM card Have a second SIM card, but want to keep using your main SIM card? You can insert or remove a second SIM card without switching the phone off. 8 Get started 1 2 Open the cover of the external SIM card slot, marked with .

Make sure the contact area of the card is facing up, and insert the SIM card. Push the card in, until it locks into place. Close the cover. Remove the second SIM card Insert a memory card Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your phone supports memory cards with a capacity of up to 32 GB. Get started 9 1 2 3 4 5 Switch the phone off, and remove the back cover and battery. To release the memory card holder, slide the holder in the direction indicated by the arrow on the holder. Lift the memory card holder (1). Insert a compatible memory card.

Make sure the contact area of the card is facing down (2). Lower the memory card holder (3). To lock the memory card holder, slide the holder to its original position (4). Remove the memory card 1 Switch the phone off. 2 Remove the back cover and battery. 3 To release the memory card holder, slide the holder in the direction indicated by the arrow on the holder. Lift the memory card holder, and remove the memory card. Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your phone for the first time. If the phone indicates a low charge, do the following: 10 1 2 3 Get started Connect the charger to a wall outlet. Connect the charger to the phone.

When the phone indicates a full charge, disconnect the charger from the phone, then from the wall outlet. You do not need to charge the battery for a specific length of time, and you can use the phone while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made. If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it. Attach a strap Straps may be available separately. Switch the phone on or off Press and hold the power key . Basic use 11 You may be prompted to get the configuration settings from your network service provider. For more information on this network service, contact your network service provider. GSM antenna The antenna area is highlighted. Avoid touching the antenna area while the antenna is in use.

Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation. Basic use Access codes PIN or PIN2 code (4-8 digits) These protect your SIM card against unauthorised use or are required to access some features. You can set your device to ask for the PIN code when you switch it on. If not supplied with your SIM card or you forget the codes, contact your service provider. If you enter the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code.

PUK or PUK2 code (8 digits) These are required to unblock a PIN or PIN2 code. If not supplied with your SIM card, contact your service provider. 12 Basic use This is used to identify valid devices in the network. The number can also be used to block, for example, stolen devices. To view your IMEI number, dial *#06#.

This helps you protect your device against unauthorised use.



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)
<http://yourpdfguides.com/dref/4211967>

You can set your device to ask for the lock code that you define. The default lock code is 12345. Keep the code secret and in a safe place, separate from your device. If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care Point or your device dealer. IMEI number (15 digits) Lock code (security code) (min. 4 digits or characters) Set which SIM card to use You can set which SIM card to use for outgoing calls, messages, and mobile data. If you name your SIM cards, you can see at a glance which is, for example, for work and which is for personal use.

Select Menu > SIM manager. Select from the following: Ask every time -- Select the SIM card to use every time you make a call, send a message, or transfer mobile data. SIM1 -- Use the SIM card in the internal SIM card holder as the default SIM card to make a call, send a message, or transfer mobile data. SIM2 -- Use the SIM card in the external SIM card slot as the default SIM card to make a call, send a message, or transfer mobile data. Rename a SIM card Select and hold SIM1 or SIM2, and from the pop-up menu, select Rename. Tip: To open the SIM manager from the home screen, press and hold *. Lock or unlock the keys and screen To avoid accidentally making a call when your phone is in your pocket or bag, lock the keys and screen of your phone. Basic use Slide the key lock switch. 13 Tip: If the key lock switch is out of reach, to unlock the keys and screen, press the end key, and select Unlock. Touch screen actions To interact with the touch screen user interface, tap or tap and hold the touch screen.

Open an application or other screen element Tap the application or element. Access item-specific options Tap and hold the item. A pop-up menu with available options opens. Scroll in a list or menu Place your finger on the screen, slide it quickly up or down the screen, and then lift your finger. The content of the screen scrolls with the speed and direction it had at the moment of release.

To select an item from a scrolling list and to stop the movement, tap the item. Swipe Place a finger on the screen, and steadily slide your finger in the desired direction. 14 Basic use Swipe to open an application or activate a feature You can open applications or activate features when you swipe left or right on the home screen. Assign a function or feature to a swipe action Select Menu > Settings > My shortcuts > Swipe gesture, and select the swipe direction and desired function or feature. Indicators You have unread messages sent to SIM1.

You have unread messages sent to SIM2. You have unread messages sent to SIM1 and SIM2. You have unsent, cancelled, or failed messages in SIM1. You have unsent, cancelled, or failed messages in SIM2. You have unsent, cancelled, or failed messages in SIM1 and SIM2. The keypad is locked. The phone does not ring for incoming calls or text messages. An alarm is set. The phone is registered to the GPRS or EGPRS network using SIM1. The phone is registered number key Select and hold the number key, and from the pop-up menu, select Delete or Change.

Make a call On the home screen, press and hold a number key. Deactivate speed dialling Select Menu > Settings and Call > Speed dialling. Write text Switch between text input modes When writing text, you can use traditional or predictive text input. 18 Write text indicate the character cases. indicates that number mode is , , and activated. Activate or deactivate predictive text input mode Select Options > Prediction > Prediction on or Prediction off. Not all languages are supported by predictive text input. Switch between character cases Press #. Activate number mode Press and hold #, and select Number mode. To return to letter mode, press and hold #.

Tip: To quickly enter an individual number, press and hold the number key. Set the writing language Select Options > Writing language. Tip: To activate number mode, activate or deactivate predictive text input mode, or set the writing language, you can also press and hold #, and select the appropriate option.

Write using traditional text input 1 Press a number key (2-9) repeatedly, until the desired character is displayed. 2 Insert the next character.

If it is located on the same key, wait until the cursor is displayed, or move the cursor forward. The available characters depend on the selected writing language. Move the cursor Select or , or tap where you want to place the cursor. Insert a common punctuation mark Press 1 repeatedly. Insert a special character Select and the desired character.

Insert a space Press 0. Messaging Use predictive text input Write using predictive text input The built-in dictionary suggests words as you select the number keys. 1 2 3 Select each number key (29) once for each character. To find the desired word, select * repeatedly. To confirm the word, select . 19 Add a missing word to the dictionary If ? is displayed when you enter a word using predictive text input, the word is not in the dictionary. You can add it to the built-in dictionary. 1 2 3 Select Spell. Write the word using traditional text input. Select Save.

Write a compound word 1 Write the first part of the word. To confirm the word, move the cursor forward. 2 Write the next part of the word, and confirm again. Messaging Send a message Keep in touch with your family and friends with text and multimedia messages. You can attach your pictures, videos, and business cards to your message. Select Menu > Messaging. 1 2 3 4 5 Select Create message. To add an attachment , select Options > Insert object. Write your message, and select Continue. To enter a phone number or mail address manually, select Number or mail.

Enter a phone number, or select Mail, and enter a mail address. Select Send. If prompted, select the SIM card to use. Tip: To insert a special character or smiley, select Options > Insert symbol. Sending a message with an attachment may be more expensive than sending a normal text message.

For more information, contact your service provider. 20 Messaging You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message.

If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size. Only compatible devices can receive and display multimedia messages. Messages may look different in different devices. Retrieve a multimedia message To check your current settings of multimedia message retrieval, select Menu > Messaging and Msg. settings > MMS > SIM1 or SIM2, and select MMS reception. Tip: Outside your home network, sending and receiving multimedia messages may cost you more.



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)

<http://yourpdfguides.com/dref/4211967>

To save costs, you can stop your phone from retrieving multimedia messages automatically. For more information on the costs, contact your network service provider. @Modify settings for multimedia message retrieval 1 Select Menu > Messaging and Msg. settings > MMS.

2 Select SIM1 or SIM2. The multimedia message settings apply to both SIM cards. 3 Select MMS reception and from the following: Automatic -- Multimedia messages are always retrieved automatically. Manual -- You receive notifications about multimedia messages that you have received in your messaging centre, and you can retrieve the multimedia messages manually. Off -- Multimedia message retrieval is deactivated. You do not get notifications about multimedia messages. If you select MMS reception > Manual, you can retrieve multimedia messages manually. Retrieve a multimedia message manually 1 Select Menu > Messaging > Inbox. 2 Open the multimedia message notification, and select Retrieve. The multimedia message is downloaded to your phone. Personalise your phone 21 Listen to voice messages When you can't answer, you can divert calls to your voice mailbox and listen to your messages later. You may need a voice mailbox subscription. For more information on this network service, contact your service provider. You can only use the voice mailbox with the SIM card in the internal SIM card holder. 1 2 3 Select Menu > Messaging > Voice messages and Voice mailbox no.

. Enter your voice mailbox number, and select OK. To call your voice mailbox, on the home screen, press and hold 1. Send an audio message Don't have time to write a text message? Record and send an audio message instead. Select Menu > Messaging.

1 2 Select Other messages > Audio message. To record your message, select . 3 4 To stop recording, select . Select Continue and a contact. Personalise your phone About the home screen On the home screen, you can: See notifications of missed calls and received messages Open your favourite applications Control applications, such as the radio Add shortcuts for different features, such as writing a message View your favourite contacts, and quickly call or send messages to them Personalise the home screen Want to see your favourite landscape or pictures of your family in the background of the home screen? You can change this wallpaper, and rearrange items on the home screen, to personalise it to your liking. Change the wallpaper 1 Select Menu > Settings and Display > Wallpaper. 2 Select a folder and a picture. 22 Personalise your phone You can also take a picture with your phone camera, and use that picture.

Tip: Download more wallpapers from Ovi Store. Add an application or shortcut 1 Tap and hold the home screen, and from the pop-up menu, select Personalise view.

2 Select the bar, an item from the list, and Back. Change a shortcut 1 Tap and hold the shortcut you want to change, and from the pop-up menu, select Change shortcut. 2 Select an item from the list and Back. Tip: To remove an application or shortcut bar from the home screen, replace it with another one, or select (empty). Tip: To increase the font size in the Messaging and Contacts applications, when browsing the web, or in the main menu, select Menu > Settings and Display > Font size. Personalise your phone tones You can personalise the ringtones and key and warning tones for each profile. Select Menu > Settings and Tones. Change the ringtone Select Ringtone: and a ringtone. Tip: Download more ringtones from Nokia's Ovi Store. To learn more about Ovi Store, go to

www.

ovi.com. After selecting a ringtone, you can mark a section of the ringtone, and set the section as your ringtone. The original ringtone or sound clip is not copied or modified. Preset ringtones cannot be modified, and not all formats of ringtones are supported.

Mark the section to use 1 Select a ringtone. When prompted, select Yes. to the start point. 2 Drag the start marker 3 4 5 Drag the end marker to the end point. When a marker is moved to a new point, the selection plays.

To manually play the selection, select Play. Select Done. Time management 23 Tip: To fine-tune the start and end points of the selection, select or . and hold Change the volume of the keypad tones Select Keypad tones:, and drag the volume bar. or , and select Time management Change the time and date Select Menu > Settings and Date and time. Change the time zone when travelling 1 Select Date & time settings > Time zone:. 2 Select the time zone of your location. 3 Select Save. The time and date are set according to the time zone. This makes sure that your phone displays the correct sending time of received text or multimedia messages.

For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK). Set an alarm You can use your phone as an alarm clock. Select Menu > Applications > Alarm clock. 1 2 3 Set the alarm time. to set the alarm. Select To set the alarm to sound, for example, at the same time every day, select Settings > Alarm repeat > On and the days. 24 Connectivity Add an appointment Save your important appointments to your calendar as meeting entries. Select Menu > Calendar. 1 2 Go to the desired date, and select Options > Add new entry. Select the entry type field Meeting, and fill in the fields.

Connectivity Bluetooth About Bluetooth connectivity Select Menu > Settings > Connectivity > Bluetooth. You can connect wirelessly to other compatible devices, such as phones, computers, headsets, and car kits. You can use the connection to send items from your phone, copy files from your compatible PC, and print files with a compatible printer. Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. However, they must be within 10 metres (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

When your phone is locked, only connections to authorised devices are possible. Tip: To access Bluetooth settings from the home screen, add a shortcut to the shortcut widget. Send a picture or other content to another device using Bluetooth Use Bluetooth to send pictures, videos, business cards, and other content created by you to your computer or a friend's compatible phone or device. Music and audio 1 2 3 25 Select and hold the item to send, and from the pop-up menu, select Send > Via Bluetooth. Select the device to connect to.

If the desired device is not displayed, to search for it, select Options > New search. Bluetooth devices within range are displayed. If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device. The passcode is valid only for the current connection.



You're reading an excerpt. Click here to read official NOKIA C2-03 user guide

<http://yourpdfguides.com/dref/4211967>

The available options may vary. USB data cable Copy content between your phone and a computer You can use a USB data cable to copy your pictures and other content between your phone and a compatible computer. 1 2 Use a compatible USB cable to connect your phone to a computer.

Select from the following modes: Nokia Ovi Suite -- Nokia Ovi Suite is installed on your computer. Media transfer -- Nokia Ovi Suite is not installed on your computer. If you want to connect your phone to a home entertainment system or printer, use this mode. Mass storage -- Nokia Ovi Suite is not installed on your computer. The phone is displayed as a portable device on your computer. If you want to connect your phone to other devices, such as a home or car stereo, use this mode. To copy the content, use the file manager of the computer. To copy your contacts, music files, videos, or pictures, use Nokia Ovi Suite. 3 Music and audio FM radio About the FM radio Select Menu > Music > Radio. You can listen to FM radio stations using your phone - just connect a headset, and select a station.

To listen to the radio, you need to connect a compatible headset to the device. The headset acts as an antenna. 26 Music and audio Listen to the radio Select Menu > Music > Radio. Change the volume Use the volume keys. Close the radio Press and hold the end key.

Set the radio to play in the background Select Options > Play in backgr.. Close the radio when it is playing in the background Press and hold the end key. Find and save radio stations Search for your favourite radio stations, and save them, so you can easily listen to them later. Select Menu > Music > Radio. Search for the next available station or . Select and hold Save a station Select Options > Save station. Automatically search for radio stations Select Options > Search all stat.. For best results, search when outdoors or near a window. Pictures and videos Switch to a saved station Select or . Rename a station 1 Select Options > Stations. 2 Select and hold the station, and from the pop-up menu, select Rename. 27 Tip: To access a station directly from the saved station list, press the number key that corresponds to the number of the station. Media player Play a song Play music stored in the phone memory or on the memory card.

Select Menu > Music > My music and All songs. 1 2 Select a song. To pause playing, select ; to resume, select . Play a video Play videos stored in the phone memory or on the memory card. Select Menu > Music > My music and Videos. 1 2 Select a video. To pause playback, select ; to resume, select . Pictures and videos Take a picture 1 Select Menu > Photos > Camera. 2 To zoom in or out, use the volume keys. .

3 Select The pictures are saved in Menu > Photos > My photos. Close the camera Press the end key. Record a video Besides taking pictures with your phone, you can also capture your special moments as videos. 28 Web Select Menu > Photos > Video camera. 1 2 3 To switch from image mode to video mode, if necessary, select To start recording, select .

To zoom in or out, use the volume keys. To stop the recording, select . > Video c.. Videos are saved in Menu > Photos > My videos.

Close the camera Press the end key. Send a picture or video Want to share your pictures and videos with friends and family? Send a multimedia message or send a picture using Bluetooth. Select Menu > Applications > Gallery. Send a picture 1 Select the folder containing the picture. 2 Select and hold the picture to send. To send more than one picture, select Options > Mark, and mark the desired pictures. 3 Select Send or Options > Send marked and the desired sending method. Send a video 1 Select the folder containing the video. 2 Select Options > Mark, and mark the video. You can mark several videos to send.

3 Select Options > Send marked and the desired sending method. Web About the web browser Select Menu > Internet. You can view web pages on the internet with the web browser on your phone. To browse the web, you must be connected to the internet. If prompted, select the SIM card to use. Web 29 For the availability of these services, pricing, and instructions, contact your network service provider. You may receive the configuration settings required for browsing as a configuration message from your network service provider. Music and videos cannot be streamed in the phone web browser. Browse the web Select Menu > Internet. View your browsing history, featured sites, or your bookmarks To switch between the History, Featured, and Favourites tabs, swipe left or right.

Go to a website Select the address bar, and enter the address. Move on the web page Drag the page with your finger. Zoom in Select the desired section of the web page. Zoom out Double-tap the screen. Search the internet Select the search field, and enter a search word.

If prompted, select your default search engine. Return to a previously visited web page Open the History tab, and select the web page. Tip: You can download web apps from Nokia's Ovi Store. When you first open a web app, it is added as a bookmark. To learn more about Ovi Store, go to www.

ovi.com. Fit a web page to your phone display Your web browser can optimise web pages for your phone display. Instead of having to zoom in, the web page is arranged into a single column of larger, readable text and pictures. Select Menu > Internet. Select > Tools > Column view. 30 Keep in touch with your online friends To quickly go to different sections of a web page, select from the following: / Go to the previous or next section of the web page. Sign in to the web page. Go to the main section of the web page. Search the web page.

Read RSS feeds. The available options may vary. This view is not available for web sites designed for mobile use. Add a bookmark If you visit the same websites all the time, add them as bookmarks, so you can easily access them. Select Menu > Internet. While browsing, select > Add to favourites. Go to a bookmarked website Open the Favourites tab, and select a bookmark. Clear your browsing history Select Menu > Internet. Open the History tab, and select > Clear history. Clear stored cookies or text saved in web forms > Tools > Settings > Clear cookies or Clear auto-fill.

Select Keep in touch with your online friends About Communities Select Menu > Applications > Apps and games > Communities, and sign in to your relevant social networking services. With the Communities application, you can enhance your social networking experience. The application may not be available in all regions. When signed in to social networking services, such as Facebook or Twitter, you can do the following: · · See your friends' status updates Post your own status update Mail and chat · Instantly share pictures you take with the camera 31 Only those features that are supported by the social networking service are available.



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)

<http://yourpdfguides.com/dref/4211967>

Using social networking services requires network support.

This may involve the transmission of large amounts of data and related data traffic costs. @@The social networking services are third party services and not provided by Nokia. Check the privacy settings of the social networking service you are using as you may share information with a large group of people. The terms of use of the social networking service apply to sharing information on that service. @@@@For more information, go to www.ovi.com. @@Send a mail Select Menu > Messaging > Mail and a mail account. 1 2 3 4 5 Select Options > Compose new. @@@@1 2 Select a mail. @@You can exchange instant messages with your friends. Chat is a network service. @@Chat with your friends Select Menu > Messaging > Chat. You can sign in to and chat in several services at the same time. You must separately sign in to each service.

@@@Sign in to the service. In your contacts list, select the contact you want to chat with. Write your message in the text box at the bottom of the display.

@@Insert the memory card into the phone before using Maps. @@Select Menu > Maps. You can browse maps of different cities in your country.

@@@@You can also use the Nokia Ovi Suite application to download maps. @@Network access may be required to find your current location. You may be prompted to select an internet access point. @@Contents of digital maps may sometimes be inaccurate and incomplete.

@@@@Update your current location Select Options > Update position. Save your current location Select Options > Save as favourite. Find a place Select Menu > Maps. 1 2 3 Select Search. Enter the name of the place or address.

Select Go. A list of matching places or addresses is displayed. Refine your search 1 Select Advanced > Find place or Find address. 2 Define more details for your search, and follow the instructions. Tip: To search from the entire category of places, leave all name fields blank.

Tip: If you can't find the place you are looking for, try to search from an online database. Select Search online for. Additional charges may apply. For details, contact your service provider. Share your location or a place You can send your current location or a place on the map to a friend in a text message. 34 Nokia's Ovi services Select Menu > Maps. 1 2 3 4 Select My position or a place on the map and Options > Send this place. Write your message. The address and a link to the location are automatically added. Enter the recipient's phone number, or select Search and a contact.

Select Send. When your friend receives the message containing the address details and link, to view the place on the map in the phone web browser, they can select the link. Create a walking route Create a walking route to a nearby place. You can view the route and all the turnings on the map before setting off.

Select Menu > Maps. 1 2 3 Select Plan route. Select Starting location and a saved or recent location, a place from the map, or a specific address as the start point of your walking route. To start from your current position, select My position. Select Destination and the end point of the walking route. The maximum distance between the start and end points is 10 kilometres, measured in a straight line.

Using ferries and some special tunnels for walking routes is restricted. Select Go > Start. To cancel the route, select Options > Cancel route. 4 5 Nokia's Ovi services Availability and costs of Nokia's Ovi services The availability of Nokia's Ovi services may vary by region. Using the services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

For information about data transmission charges, contact your network service provider. To learn more about Ovi, go to www.ovi.com. Access Nokia's Ovi services Select Menu > Applications > Apps and games and the desired Ovi service.

Find help 35 Find help Support When you want to learn more about how to use your product or you are unsure how your phone should function, read the user guide thoroughly. If this does not resolve your issue, do one of the following: · · · Reboot your phone. Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone. Update your phone software Restore the original factory settings If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia.com/repair. Before sending your phone for repair, always back up your data. Subscribe to the Tips and Offers service Tips and Offers is a convenient service to help you get the most out of your phone, providing you with tips and support messages, as well as updates for your games and applications.

Select Menu > Applications > Apps and games > Tips and offers. Text message charges may apply when you subscribe or unsubscribe. For terms and conditions, see your phone user guide, or go to www.nokia.com/mynokia. Keep your phone up to date Update phone software using your phone Want to improve the performance of your phone and get application updates and great new features? Update the software regularly to get the most out of your phone. You can also set your phone to automatically check for updates. Warning: If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. @@You can only update your software when using the SIM card in the internal SIM card holder. Before starting the update, connect a charger or make sure the device battery has enough power.

36 Find help Select Menu > Settings. 1 2 3 4 Select Device > Device updates. To display the current software version and check whether an update is available, select Current sw details. To download and install a software update, select Downl. device sw.

Follow the displayed instructions. If the installation was cancelled after the download, select Install sw update. The software update may take several minutes. If there are problems with the installation, contact your network service provider. Check for software updates automatically Select Automatic SW update, and define how often to check for new software updates.

Your network service provider may send phone software updates over the air directly to your phone. For more information on this network service, contact your network service provider. Update phone software using your PC You can use the Nokia Ovi Suite PC application to update your phone software. You need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your phone to the PC. To get more information and to download the Nokia Ovi Suite application, go to www.ovi.com/suite. Protect the environment Restore original settings If your phone is not working properly, you can reset some settings to their original values. 1 2 3 End all calls and connections. Select Menu > Settings and Rest.



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)

<http://yourpdfguides.com/dref/4211967>

fact. sett. > Settings only. Enter the security code. 37 This does not affect documents or files stored on your phone. After restoring the original settings, your phone switches off and then on again. This may take longer than usual. Organise files You can move, copy, and delete files and folders, or create new folders in your phone memory or on the memory card. If you organise your files into their own folders, it might help you find the files in future. Select Menu > Applications > Gallery.

Create a new folder In the folder where you want to create a sub-folder, select Options > Add folder. Copy or move a file to a folder Select and hold the file, and from the pop-up menu, select the appropriate option. Tip: You can also play music or videos, or view pictures in Gallery. Back up your pictures and other content to a memory card Want to make sure you will not lose any important files? You can back up your phone memory to a compatible memory card. Select Menu > Settings > Sync & backup.

Select Create backup. Restore a backup Select Restore backup. Protect the environment Save energy You do not need to charge your battery so often if you do the following: 38 · · Product and safety information Close applications and data connections, such as your Bluetooth connection, when not in use. Deactivate unnecessary sounds, such as touch screen and key tones. Recycle When this phone has reached the end of its working life, all of its materials can be recovered as materials and energy.

To guarantee the correct disposal and reuse, Nokia co-operates with its partners through a program called We:recycle. For information on how to recycle your old Nokia products and where to find collection sites, go to www.nokia.com/werecycle, or call the Nokia Contact Center. Recycle packaging and user guides at your local recycling scheme. The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your phone, go to www.nokia.com/ecoprofile.

Product and safety information Network services and costs Your device is approved for use on the (E)GSM 900, 1800 MHz networks. To use the device, you need a subscription with a service provider. Using network services and downloading content to your device requires a network connection and may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them. Take care of your device Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage. · · Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.

Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged. Product and safety information · · · · · 39 Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics. Do not store the device in cold temperatures.

When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits. Do not attempt to open the device other than as instructed in the user guide. Unauthorised modifications may damage the device and violate regulations governing radio devices. Only use a soft, clean, dry cloth to clean the surface of the device. Do not drop, knock, or shake the device.

Rough handling can break internal circuit boards and mechanics. Do not paint the device. Paint can clog moving parts and prevent proper operation. Keep your device away from magnets or magnetic fields. Switch off the device and remove the battery from time to time for optimum performance. To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information. Recycle Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check how to recycle your Nokia products at www.nokia.com/recycling.

About Digital Rights Management When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring images, music, and other content. Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10 and OMA DRM 1.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content. If your device has OMA DRM-protected content, to back up both the licences and the content, use the backup feature of Nokia Ovi Suite. Other transfer methods may not transfer the licences which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licences in case the files on your device get corrupted. If your device has WMDRM-protected content, both the licences and the content will be lost if the device memory is formatted.

You may also lose the licences and the content if the files on your device get corrupted. Losing the licences or the content may limit your ability to use the same content on your device again. For more information, contact your service provider. Some licences may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device. Batteries and chargers Battery and charger information Your device is intended for use with a BL-5C rechargeable battery.

Nokia may make additional battery models available for this device. Always use original Nokia batteries. This device is intended for use when supplied with power from the following chargers: AC-3.



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)
<http://yourpdfguides.com/dref/4211967>

The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B. 40 Product and safety information The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Battery safety Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord. When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime.

If left unused, a fully charged battery will lose its charge over time. Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

Additional safety information Make an emergency call 1 Make sure the device is switched on. 2 Insert a SIM card. Check for adequate signal strength. You may also need to do the following: Deactivate call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group. Make sure the flight profile is not activated. If the device screen and keys are locked, unlock them. . . . 3 5 4 6 7 Press the end key repeatedly, until the home screen is displayed. Open the slide. Enter the official emergency number for your present location. Emergency call numbers vary by location.

Press the call key. Give the necessary information as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies. Product and safety information Small children Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

41 Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so, for example, in hospitals. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should: Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Turn the wireless device off if there is any reason to suspect that interference is taking place.

Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Nickel Note: The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel. Protect your device from harmful content Your device may be exposed to viruses and other harmful content. Take the following precautions: Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.

Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust. Install antivirus and other security software on your device and any connected computer. Only use one antivirus application at a time. Using more may affect performance and operation of the device and/or computer. Only install and use services and software from sources that you trust and that offer adequate security and protection. If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites. Operating environment This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body.

Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. 42 Copyright and other notices To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems.

For more information, check with the manufacturer of your vehicle or its equipment.



[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](http://yourpdfguides.com/dref/4211967)

<http://yourpdfguides.com/dref/4211967>

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft and may be illegal. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity. Certification information (SAR) This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. @@@@ Use of device accessories may result in different SAR values. @@@@A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

© 2011 Nokia. All rights reserved. Nokia, Nokia Connecting People, Ovi, and WE: logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Includes RSA BSAFE cryptographic or security protocol software from RSA Security. Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. Portions of the Nokia Maps software are ©1996-2011 The FreeType Project. All rights reserved. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license. This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider.

No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, applications and services may vary by region.

For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of thirdparty applications provided with your device. By using an application, you acknowledge that the application is provided as is.

Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or enduser support of third-party applications provided with your device. The availability of Ovi services may vary by region. Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge. 44 Copyright and other notices /Issue 1.

I EN Index 45 23 19 31 40 37 Index A access codes alarm clock alarms antennas B backing up data battery -- charging Bluetooth bookmarks browser business cards C cable connection Calendar calls -- emergency -- log -- making camera -- recording videos -- sending pictures and videos -- taking pictures charging the battery chat services (IM) clock contacts -- adding -- copying -- saving copying content D data connections -- Bluetooth 11 23 23 11 37 6, 39, 40 9 24 30 28 24 25 24 40 16 16 27 28 27 39 32 23 17 15 17 15, 25 date and time dictionary E e-mail emergency calls environmental tips F factory settings, restoring file management FM radio H home screen I IM (instant messaging) IMEI number indicators internet K keyguard keys and parts L lock code locking -- keys -- screen loudspeaker M mail -- creating -- reading and replying to -- sending mailbox -- voice 37 37 25, 26 14, 21 32 11 14 28 12 5 11 12 12 15 31 31 31 31 21 24 46 Index recording -- videos recycling restoring data restoring settings ringtones S searching -- radio stations security code settings -- restoring SIM card SMS (short message service) social networks software updates speed dialling strap support switching on/off T taking pictures See camera text input text messages themes time and date Tips and offers service tones -- personalising touch screen transferring content turning on/off U updates -- phone software USB connection 27 37 37 37 22 Maps 32 -- creating routes 34 -- current location 33 -- searching 33 -- sharing 33 meeting entries 24 memory card 8 messages -- audio 21 -- copying 15 -- sending 19 MMS (multimedia message service) 19, 20 multimedia messages 19, 20 music 27 N Nokia support information Nokia's Ovi services O Ovi by Nokia P personalising your phone phone -- switching on/off Phone switch pictures -- copying -- sending -- taking PIN codes powering on/off predictive text input profiles -- personalising PUK codes R radio 35 34 34 21, 22 10 15 25 24, 28 27 11 10 17, 19 22 11 25, 26 26 11 37 5, 6, 7, 12 19 30 35, 36 17 10 35 10 17, 18, 19 19 21 23 35 22 13 15, 25 10 35, 36 25 Index V videos -- copying -- playing -- recording -- sending voice messages volume W web web browser -- bookmarks -- browsing pages -- cookies 47 25 27 27 24, 28 21 15 28 28 30 29 30.

[You're reading an excerpt. Click here to read official NOKIA C2-03 user guide](#)



<http://yourpdfguides.com/dref/4211967>