




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA SPEAKERPHONE HF-210. You'll find the answers to all your questions on the NOKIA SPEAKERPHONE HF-210 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA SPEAKERPHONE HF-210
User guide NOKIA SPEAKERPHONE HF-210
Operating instructions NOKIA SPEAKERPHONE HF-210
Instructions for use NOKIA SPEAKERPHONE HF-210
Instruction manual NOKIA SPEAKERPHONE HF-210

Nokia Speakerphone HF-210

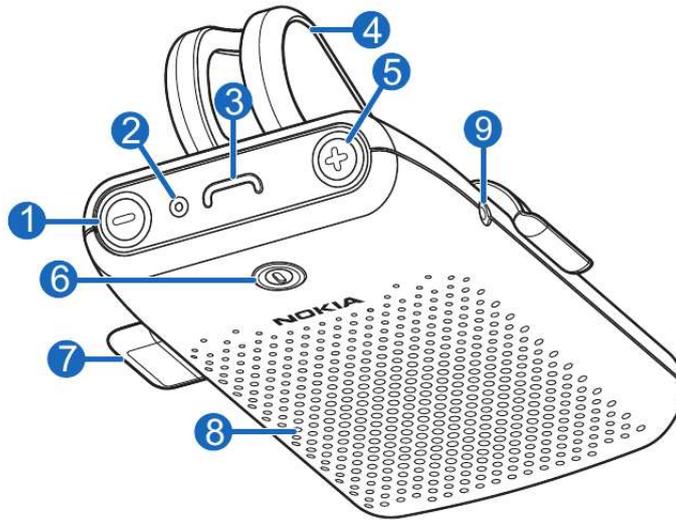

Issue 1.2



[You're reading an excerpt. Click here to read official NOKIA SPEAKERPHONE HF-210 user guide](http://yourpdfguides.com/dref/2839682)
<http://yourpdfguides.com/dref/2839682>

a mobile device), press and hold the To activate voice dialling (if your answer/end key and the volume down mobile device supports this feature key for about 5 seconds when the with the speakerphone), when no call speakerphone is connected to is in progress, press and hold the a device. The speakerphone beeps, and answer/end key for about 2 seconds. the yellow indicator light flashes once. Proceed as described in the user guide of the mobile device. Calls ENGLISH To activate the lights, press and hold the answer/end key and the volume up key for about 5 seconds. The speakerphone beeps, and the green indicator light flashes once. To reset the speakerphone if it stops functioning, even though it is charged, connect the speakerphone to a charger while you press and hold the power key. Clear settings or reset To clear the pairing settings from the speakerphone, switch off the speakerphone, and press and hold the power key and the answer/end key at the same time for over 8 seconds. When the settings are cleared, the red and green indicator lights alternate.

Troubleshooting If you cannot connect the speakerphone to your compatible device, check that the speakerphone is charged, switched on, and paired with your device. *Battery information* This device has an internal, nonremovable, rechargeable battery. @@@@The battery can be charged and discharged hundreds of times, but it will eventually wear out. ENGLISH Talk and standby times are estimates only. Actual times are affected by, for example, device settings, features being used, battery condition, and temperature.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it. If the battery is completely discharged, it may take several minutes before the charging indicator is displayed. When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, .



[You're reading an excerpt. Click here to read official NOKIA
SPEAKERPHONE HF-210 user guide](http://yourpdfguides.com/dref/2839682)

<http://yourpdfguides.com/dref/2839682>