




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA SPEAKERPHONE HF-310. You'll find the answers to all your questions on the NOKIA SPEAKERPHONE HF-310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA SPEAKERPHONE HF-310
User guide NOKIA SPEAKERPHONE HF-310
Operating instructions NOKIA SPEAKERPHONE HF-310
Instructions for use NOKIA SPEAKERPHONE HF-310
Instruction manual NOKIA SPEAKERPHONE HF-310

Nokia Speakerphone HF-310 User Guide

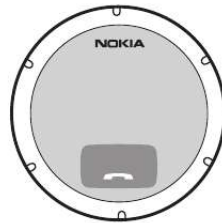

9213540
Issue 1 EN



[You're reading an excerpt. Click here to read official NOKIA
SPEAKERPHONE HF-310 user guide
http://yourpdfguides.com/dref/2751793](http://yourpdfguides.com/dref/2751793)

Manual abstract:

The product is in conformity with the limits defined in Directive 2004/104/EC (amending Directive 72/245/EEC), Annex I, paragraph 6.5, 6.6, 6.8 and 6.9. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity. © 2009 Nokia. All rights reserved. Nokia, Nokia Connecting People and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT.**

NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. The availability of particular products may vary by region. Please check with your Nokia dealer for details. @@Diversion contrary to law is prohibited. @@4 1. Introduction

.....

.....

.....

.....

5 Bluetooth wireless technology

5 Attach to a windscreen

.....

.....

. 11 Attach to a dashboard

.....

.... 12 4.

Basic use

.....

.....

.... 14 Make or end a call .

.....

.....

.....

.... Answer or reject a call .

.....

.....

..... Adjust volume...

.....

.....

.....

.....

.....

. @@Clear settings or reset....

.....

.....

Troubleshooting

.....

.....

.....

.....

14 14 14 14 15 15 2. Get started...

.....

.....

.... 6 Charge the battery .

.....

.....
.....
.....
. Switch on or off....

.....
.....
.....
... Switch on

.....
.....
.....
.....

..... Switch off..
.....
.....
.....

.....
.....
.....
... @@Disconnect the speakerphone

. Connect the speakerphone manually.....
.....
.....
.....

.....
.....
... 6 7 7 7 8 8 9 5. Battery and charger information.
.....

.....
.....
... 16 Care and maintenance ..
..... 17 Additional safety information.

.....
.....
.....
..... 19 3. Mount in a car .

.....
.....
... 10 General safety instructions..
.....

... 10 Attach to a sunvisor

10 3 For your safety For your safety Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. 4 Introduction 1. Introduction With the Nokia Speakerphone HF-310, you can make and answer calls hands free. You can connect the speakerphone to a compatible mobile device that supports Bluetooth wireless technology.

Read this user guide carefully before using the speakerphone. Also, read the user guide for the device that you connect to the speakerphone. For the latest version of the user guide and additional information related to your Nokia product, see www.nokia.com/support or your local Nokia website.

This product may contain small parts. Keep them out of the reach of small children. The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel. Bluetooth wireless technology In a Bluetooth connection, the mobile device and the speakerphone should be within 10 meters (33 feet) of each other.

Connections can be subject to interference from other electronic devices. The speakerphone is compliant with the Bluetooth Specification 2.1 supporting the Hands-Free Profile (HFP) 1.5. Check with the manufacturers of other devices to determine their compatibility with this device. 5 Get started 2. Get started The speakerphone contains the following parts: 1. Power key 2. Microphone 3. Speaker 4.

Volume wheel 5. Indicator light 6. Answer/end key 7. Charger connector Before using the speakerphone, you must charge the battery and pair the speakerphone with a compatible device. 2 3 1 4 5 7 6 Parts of the speakerphone are magnetic. Metallic materials may be attracted to the speakerphone. Do not place credit cards or other magnetic storage media near the speakerphone, because information stored on them may be erased. Charge the battery Before charging the battery, carefully read "Battery and charger information", p. 16. Warning: Use only chargers approved by Nokia for use with this particular model.

The use of any other types may invalidate any approval or warranty, and may be dangerous. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord. 1. Connect the charger cable to the charger connector. 2.

Connect the charger to the power source. For example, connect the DC-4 charger to the cigarette lighter socket of your car or the AC-5 charger to a wall outlet. During charging, the red indicator light is 6 Get started displayed. Charging the battery fully may take up to 2 hours and 10 minutes. If you use a charger that is connected to the cigarette lighter socket, power must be supplied by a 12-volt car battery.

Ensure that the charger is properly inserted in the cigarette lighter socket and does not interfere with the normal operation of the car. In some car models, the cigarette lighter socket is powered by the car battery even when you remove the ignition key. In those cases, the car battery might be discharged even if the speakerphone is not in use. For more information, contact the vehicle manufacturer. 3. When the battery is fully charged, the speakerphone beeps. Disconnect the charger from the speakerphone, then from the power source. The fully charged battery has power for up to 30 hours of talk time or up to 40 days of standby time. When the battery charge is low, the red indicator light flashes slowly and the speakerphone beeps about every 5 minutes. Recharge the battery.

Switch on or off Switch on To switch on, press the power key. The speakerphone plays an ascending sequence of beeps, and the green indicator light flashes once. The speakerphone tries to connect to the device that was last connected to it. Switch off To switch off, press and hold the power key for about 2 seconds.

The speakerphone plays a descending sequence of beeps, and the red indicator light flashes once. 7 Get started If the speakerphone is not connected to a device within about 30 minutes, it switches off automatically. Pair and connect with another device 1. Ensure that the speakerphone is switched off and your mobile device is switched on. 2. If you have not previously paired the speakerphone with a device, switch on the speakerphone.

The speakerphone enters pairing mode, and the green indicator light flashes quickly.



[You're reading an excerpt. Click here to read official NOKIA SPEAKERPHONE HF-310 user guide](http://yourpdfguides.com/dref/2751793)
<http://yourpdfguides.com/dref/2751793>

If you have previously paired the speakerphone with another device, switch off the device, and switch on the speakerphone. 3. Within about 5 minutes, activate the Bluetooth feature on the mobile device, and set the device to search for Bluetooth devices. For details, see the user guide of your device.

4. Alternatively, switch the speakerphone off and back on. Rotating the speakerphone clockwise until it locks into place (2). (To detach the speakerphone, rotate it anticlockwise.)

2. Thread the strap through the slot on the clip (4). Insert the catch on the mounting device into the slot at the back of the speakerphone (1). Rotate the speakerphone clockwise until it locks into place (2). 2. Locate a safe mounting surface on the windscreen, and clean the surface thoroughly with a glass cleaner and a clean towel. If the ambient temperature is below +15°C (60°F), carefully warm the surface and the suction cup with a hair dryer to ensure a firm grip on the windscreen. Ensure that you do not heat the windscreen excessively to avoid damage to it.

3. Press the suction cup of the mounting device against the windscreen (3), and rotate the mounting device clockwise (4) to create a vacuum between the suction cup and the windscreen. Check that the suction cup is firmly attached. 4. Turn the speakerphone to the desired position. 5. Battery and charger information This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device. This device is intended for use when supplied with power from the following chargers: AC-3, AC-4, AC-5, and DC-4. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved charger may present a risk of fire, explosion, leakage, or other hazard. If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator light is displayed.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery.

A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Never use any charger that is damaged. Important: Battery talk and standby times are estimates only and depend on network conditions, features used, battery age and condition, temperatures to which battery is exposed, and many other factors. The amount of time a device is used for calls will affect its standby time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time. 16 Care and maintenance Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

· Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely. · Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged. · Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. · Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards. · Do not attempt to open the device.

· Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics. · Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. · Do not paint the device. Paint can clog the moving parts, microphone, or speaker and prevent proper operation.

These suggestions apply equally to your device, charger, or any accessory. If any device is not working properly, take it to the nearest authorized service facility for service. Recycle The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste.

For more environmental information, see the product Eco-Declarations at www.nokia.com/environment. Always return your used electronic products, batteries, and packaging materials to a dedicated collection point. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

