



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA WIRELESS LOOPSET LPS-5. You'll find the answers to all your questions on the NOKIA WIRELESS LOOPSET LPS-5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA WIRELESS LOOPSET LPS-5


User guide NOKIA WIRELESS LOOPSET LPS-5

Operating instructions NOKIA WIRELESS LOOPSET LPS-5

Instructions for use NOKIA WIRELESS LOOPSET LPS-5

Instruction manual NOKIA WIRELESS LOOPSET LPS-5

Nokia Wireless Loopset LPS-5 User Guide

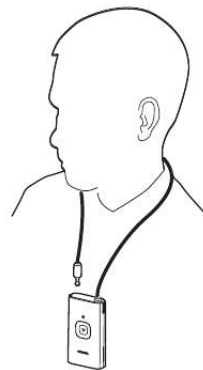

9212931
Issue 2 EN



[You're reading an excerpt. Click here to read official NOKIA WIRELESS LOOPSET LPS-5 user guide](http://yourpdfguides.com/dref/2737845)
<http://yourpdfguides.com/dref/2737845>

Manual abstract:

A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/. © 2009 Nokia. All rights reserved. Nokia, Nokia Connecting People and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Bluetooth is a registered trademark of Bluetooth SIG, Inc. Nokia operates a policy of ongoing development.

Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.**

The availability of particular products may vary by region. Please check with your Nokia dealer for details. Export controls This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

9212931/Issue 2 EN Contents 1.

Introduction

.....

.....

5 Bluetooth wireless technology.....

..... 6 3. Basic use ...

.....

.....

.....

..... 12 Set up

.....

.....

.....

.....

.....

.....

... Adjust the loopset volume.

.....

..... Adjust the sidetone volume

.....

... Select vibration mode..

.....

.....

.. Calls ...

.....

.....

.....

.....

.....

.....

..... Manage two calls..

.....

.....

.....

.....

Listen to music.....

.....

.....

.....

.....

.. Clear settings or reset...

.....

.....

. Troubleshooting....

.....

.....

.....

.....

.....

. 12 12 12 13 13 14 14 15 15 2. Get started ...

.....

.....

.....

.... 7 Keys and parts.

.....

.....

.....

.....

.....

.....

..... 7 Charge the battery

.....

.....

.....

..... 8 Switch the loopset on or off...

.....

.....

.. 9 Switch on...

.....

.....

.....

.....

..... 9 Switch off ..

.....

.....

.....

.....

.....

.....

... @9 Disconnect the loopset ..

.....

.....

.....

. 11 Reconnect the loopset

.....

.....

11 4. Battery and charger information

.....

.....

..... 16 Care and maintenance.

.....

18 4 Introduction 1. @@@@The loopset wirelessly transmits sound from the phone to a hearing aid that is in T mode. The quality of sound depends on the type of hearing aid used and is affected by electromagnetic disturbances from the surroundings. Read this user guide carefully before using the loopset. Also, read the user guide for the device that you connect to the loopset. For the latest version of the user guide and additional information related to your Nokia product, see www.nokia.com/support or your local Nokia website. For more information about loopsets and other accessibility solutions, see www.nokiaaccessibility.com

(in English). The product may contain small parts. Keep them out of the reach of small children. The surface of this device is nickel-free. 5 Introduction Bluetooth wireless technology Bluetooth wireless technology allows you to connect compatible devices without cables.

<10m The loopset and the other device do not need to be in line of sight, but they should be within 10 metres (33 feet) of each other. The closer the loopset and the other device are to each other, the better the performance. The optimal operating range is shown in dark grey in the picture. The connection is subject to interference from distance and obstructions (shown in light grey) or other electronic devices. The loopset is compliant with the Bluetooth Specification 2.

1 + EDR supporting the Headset Profile 1.1, the Hands-Free Profile (HFP) 1.5, and the Advanced Audio Distribution Profile (A2DP) 1.0. Check with the manufacturers of other devices to determine their compatibility with this device. 6 Get started 2. Get started Keys and parts The loopset contains the following parts: 1. Neck loop 2. Indicator light (inside the rubber sleeve at the top) 3. Volume keys 4.

Microphone 5. Multifunction key 6. Charger connector Before using the loopset, you must charge the battery and pair the loopset with a compatible device. 1 3 1 2 4 5 6 Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased. 7 Get started Charge the battery Before charging the battery, carefully read "Battery and charger information", p. 16. Warning: Use only chargers approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord. 1. Connect the charger to a wall outlet. 2. Connect the charger cable to the charger connector.

The indicator light is red during charging. Charging the battery fully may take up to 1 hour. 3. When the battery is fully charged, the indicator light turns green. Disconnect the charger from the loopset, then from the wall outlet.

The fully charged battery has power for up to 6 hours of talk time or up to 110 hours of standby time. When the battery is discharged, the loopset beeps about every 5 minutes, and the indicator light slowly flashes red. 8 Get started Switch the loopset on or off Switch on To switch on, press and hold the multifunction key for about 2 seconds. The loopset vibrates once and plays an ascending sequence of beeps, and the green indicator light is displayed. The loopset tries to connect to the last used device. @@@@1. Ensure that your phone or music player is switched on. 2. @@@@3. @@For details, see the user guide of your device.

@@4. @@5. @@@@@@@You may be able to set your device so that the loopset connects to it automatically. To activate this feature in a Nokia device, change the paired device settings in the Bluetooth menu. 11 Basic use 3. Basic use Set up Ensure that the loopset is paired and connected to your phone or music player. Detach one end of the loop from the loopset, place the loop around your neck, and plug the loop end back into the loopset. Switch your hearing aid to T mode. Wear the loopset around your neck when you use it with your hearing aid. Adjust the loopset volume To adjust the strength of the magnetic field that the loopset produces for the hearing aid, press a volume key during a call or while you listen to music.

The loopset vibrates (if vibration is enabled) and beeps at the selected volume level, and the hearing aid changes the audio volume accordingly. Adjust the sidetone volume Sidetone is the sound that is picked up by the loopset microphone and routed to the hearing aid during a call. To adjust the sidetone volume, press the multifunction key twice during a call, and press a volume key within 15 seconds. 12 Basic use Select vibration mode You can set the loopset to vibrate in different situations.



[You're reading an excerpt. Click here to read official NOKIA WIRELESS LOOPSET LPS-5 user guide](http://yourpdfguides.com/dref/2737845)
<http://yourpdfguides.com/dref/2737845>

To select the desired vibration mode during a call (when there is no other call waiting or on hold), press and hold the multifunction key for about 2 seconds one or more times: · If the loopset beeps once, the loopset vibrates when you press a key or receive a call.

· If the loopset beeps twice, the loopset vibrates when you press a key. · If the loopset beeps three times, the loopset vibrates when you receive a call. This is the default setting. · If the loopset beeps four times, the vibration is turned off. Calls To make a call, use your mobile phone in the normal way when the loopset is connected to it.

To answer or end a call, press the multifunction key, or use the phone keys. To reject a call, press the multifunction key twice. When you receive a call, the loopset vibrates and plays a ringing tone, and the indicator light quickly flashes blue. To switch a call from the loopset to the connected device, switch the loopset off, or use the related feature of your device (the loopset remains switched on). To switch the call back to the loopset, switch the loopset on (and connect it to your device), or if the loopset is switched on, press and hold the multifunction key for about 2 seconds. 13 Basic use Manage two calls To use these features, your mobile device must be in the standby mode will affect its talk time. 17 Care and maintenance Care and maintenance Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage. · Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.

If your device does get wet, allow it to dry completely. · Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged. · Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. · Do not store the device in cold areas. @@ · Do not attempt to open the device. · Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics. @@ · Do not paint the device.

Paint can clog the moving parts and prevent proper operation. @@@@This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco-Declarations at www.nokia.com/environment.

Always return your used electronic products, batteries, and packaging materials to a dedicated collection point. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organisations, or your local Nokia representative. Check how to recycle your Nokia products at www.nokia.com/werecycle, or if browsing on a mobile device, www.nokia.mobi/werecycle. 19.



[You're reading an excerpt. Click here to read official NOKIA](http://yourpdfguides.com/dref/2737845)

[WIRELESS LOOPSET LPS-5 user guide](http://yourpdfguides.com/dref/2737845)

<http://yourpdfguides.com/dref/2737845>