



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA X1-01. You'll find the answers to all your questions on the NOKIA X1-01 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA X1-01
User guide NOKIA X1-01
Operating instructions NOKIA X1-01
Instructions for use NOKIA X1-01
Instruction manual NOKIA X1-01

Nokia X1-01 User Guide

Issue 1.1



[You're reading an excerpt. Click here to read official NOKIA X1-01 user guide](http://yourpdfguides.com/dref/3956269)
<http://yourpdfguides.com/dref/3956269>

Manual abstract:

Read the complete user guide for further information. @@ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. @@@@Do not connect incompatible products. KEEP YOUR DEVICE DRY Your device is not water-resistant. Keep it dry. PROTECT YOUR HEARING Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. 4 Get started Get started Your dual SIM device You can insert two SIM cards. Some benefits of a dual SIM device . You can make savings when you use services from different service providers.

· Use one phone number for personal calls and another for work, but carry only one device. · Avoid network coverage variation between service providers. Both SIM cards can be connected to the network at the same time, but while one SIM card is active, for example, making a call, sending or receiving a message, or transferring data, the other is unavailable. Insert the SIM card and battery Note: Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers.

Always store and use the device with any covers attached. Important: Do not use a mini-UICC SIM card, also known as a micro-SIM card, a micro-SIM card with an adapter, or a SIM card that has a mini-UICC cutout (see figure) in this device. A micro SIM card is smaller than the standard SIM card. This device does not support the use of micro-SIM cards and use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card. You can use your phone with one or two SIM cards inserted. 1 2 Place your finger in the recess at the bottom of the phone, and carefully lift and remove the back cover (1). If the battery is inserted, lift the battery out (2). Get started 5 3 If inserting only one SIM card, open the SIM 1 card holder (3). Make sure the contact area is facing down, and insert the SIM card (4). Close the holder. 4 To insert a second SIM card, open the SIM 2 card holder (5). Make sure the contact area is facing down, and insert the SIM card (6). Close the holder.

5 Line up the contacts of the battery and the battery compartment, and insert the battery (7). To replace the back cover, direct the top locking catches toward their slots (8), and press down until the cover locks into place (9). This phone is intended for use with the BL-5J battery. 6 Get started Insert or remove a memory card Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card. Memory cards may be available separately. Your device supports microSD cards with a capacity of up to 16 GB. Insert a memory card 1 2 3 Open the cover of the memory card slot. Insert the memory card. Push the card in, until it locks into place.

Make sure the contact area is facing up. Close the slot cover. You can remove or replace the memory card without switching the device off. Remove the memory card Important: Do not remove the memory card when an application is using it. Doing so may damage the memory card and the device, and corrupt data stored on the card.

1 2 3 Open the cover of the memory card slot. Push the card in gently, until it is released, and pull the card out. Close the slot cover. Charge the battery Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your device for the first time. Get started If the device indicates a low charge, do the following: 7 1 2 3 Connect the charger to a wall outlet.

Connect the charger to the device. When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet. Tip: To save energy, unplug the charger when the battery is fully charged. You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made. If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it. It may take longer than expected before the device is fully charged, due to the large capacity of the BL-5J battery. Switch on or off Press and hold the end key.

Use the phone only in its normal operating position. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving.

Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life. 8 Your phone Your phone Keys and parts 1 2 3 4 5 6 7 8 End/Power key Earpiece Display Selection keys NaviTM key (scroll key) Call key Keypad Microphone Your phone 9 9 10 11 12 13 14 15 Wrist strap hole Music keys Charger connector Flashlight Headset connector/Nokia AV Connector (3.5 mm) Memory card slot

Loudspeaker Set which SIM card to use You can set which SIM card to use for outgoing calls or messages. If you name your SIM cards, you can see at a glance which is, for example, for work and which is for personal use. Select Menu > Settings > Dual SIM settings. 1 Select from the following: Default SIM for calls -- Set which SIM card to use for outgoing calls. Default SIM for msgs -- Set which SIM card to use for outgoing messages. Standby mode -- Set which SIM card to be active for all incoming and outgoing communications. 10 2 Your phone Select SIM1 or SIM2. To be prompted to select a SIM card before, for example, making a call or sending a text message, select Ask every time.

Rename a SIM card Select SIM name. Tip: To quickly change the default SIM card, on the home screen, press and hold *. Make a call 1 Enter the phone number, including the country code and area code, if necessary. 2 Press the call key. 3 If prompted, select the SIM card to use.

4 To end the call, press the end key. Tip: If you have set the default SIM card used for making calls, you can still select which SIM card to use. After entering the phone number, instead of pressing the call key, select Options > Call. When you receive a call, the SIM card in use is indicated. Use the loudspeaker or earpiece During a call, select Loudsp.

or Hands.. Change the volume During a call, scroll left or right. Text input Write text To enter text, you can use traditional or predictive text input. Not all languages are supported by predictive text input. Use traditional text input Press a key repeatedly until the desired letter is displayed.



[You're reading an excerpt. Click here to read official NOKIA X1-01 user guide](http://yourpdfguides.com/dref/3956269)

<http://yourpdfguides.com/dref/3956269>

Activate predictive text input Select Options > Dictionary and the desired language. Deactivate predictive text input Select Options > Dictionary > Dictionary off. Your phone 11 When using predictive text input, press each key once for a single letter. If the desired word is displayed, press 0, and start writing the next word.

If ? is displayed after the word, the word is not in the dictionary. Change a word Press * repeatedly until the desired word is displayed. Add a word Select Spell, enter the word using traditional text input, and select OK. Add a space Press 0. Change text input method Press # repeatedly, and check the indicator at the top of the display. Add a number Press and hold the desired number key. Add a special character Press * when using traditional text input; press and hold * when using predictive text input. Clear a whole message Select Options > Clear text. You can undo the clearing of a whole message, but only right after you have selected Clear text. Undo clearing of a whole message Select Options > Undo clear.

Send a message Keep in touch with your family and friends with text messages. Select Menu > Messages. 1 2 3 4 Select Create message. Write the message.

The message length indicator shows how many characters you can enter in the message.

Select Options > Send. If prompted, select the SIM card to use. 12 5 Your phone Enter the recipient's phone number, or select it from the contacts list, and select OK. Tip: If you have set the default SIM card used for sending messages, after writing your message, instead of selecting Options > Send, you can press the call key. Delete a message Select Delete messages, the appropriate folder, and the message.

Delete all messages Select Delete messages > All read. You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message. Save a name and phone number You can save names and phone numbers on the SIM card and in the phone memory. Up to 500 contacts can be stored in the phone memory. Select Menu > Contacts. 1 2 3 Select Add contact.

Select where to save the contact.

Enter the name and phone number. You can also select a picture for the contact. Tip: To quickly view your contacts, on the home screen, scroll down. Save numbers in five separate phonebooks Want to share a phone with your family members or friends? You can separate your contacts using up to five separate phonebooks. Select Menu > Contacts > Settings > Multi-Phonebook. You can only assign the contacts saved in the phone memory to Multi-phonebook. A contact can belong to one or several phonebooks. 1 Select Phonebook style > Multi-Phonebook. Your phone 2 3 4 5 13 Select Current phonebook and a phonebook. The phonebook is set as the current phonebook.

Select Manage contacts and a contact. Mark the current phonebook. If you mark Shared contacts, this contact is shared by all phonebooks. Select Done. To open Contacts, on the home screen, press down.

Only the contacts in the current phonebook are visible. Rename a phonebook Select Rename phonebooks. Turn off Multi-phonebook Select Phonebook style > Normal. @@Select Menu > Music > Mp3 Music player. To play music, you need to store the music files on a memory card.

Your device supports standard MP3 formats from 32kbps up. Start or pause playback Press . Skip to the previous song . Press Skip to the next song . Press Change the volume Scroll left or right. Set the music player to play in the background Press the end key. @@1 2 Attach a compatible headset to the device. @@@@Close the radio Select Options > Switch off. Set the radio to play in the background Press the end key. @@@@Select Menu > Music > Radio.

1 2 3 Select Options > Auto tuning. To change the frequency manually, scroll with a mobile device, nokia.mobi/wecycle. @@This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. @@@@Nokia may make additional battery models available for this device. Always use original Nokia batteries. @@@@Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. @@Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste. @@If a battery leaks, do not let battery liquid touch skin or eyes.

@@Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it.

Never use a damaged battery or charger. Only use the charger indoors. Additional safety information Emergency calls Make an emergency call 1 Ensure the device is switched on. 2 Insert a SIM card. Check for adequate signal strength. You may also need to do the following: Remove call restrictions you have activated for your device, such as call barring, fixed dialling, or closed user group. Ensure your device is not in an offline or flight profile. . . . 3 4 6 5 To clear the display, press the end key as many times as needed. Press the call key. Enter the official emergency number for your present location.

Emergency call numbers vary by location. Give the necessary information as accurately as possible. Do not end the call until given permission to do so. Important: Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies. Small children Your device, its battery and accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so, for example, in hospitals. Implanted medical devices Manufacturers of medical devices recommend a minimum separation of 15.



[You're reading an excerpt. Click here to read official NOKIA X1-01 user guide](http://yourpdfguides.com/dref/3956269)

<http://yourpdfguides.com/dref/3956269>

3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device.

Persons who have such devices should: 18 Product and safety information Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device. Not carry the wireless device in a breast pocket. Hold the wireless device to the ear opposite the medical device. Turn the wireless device off if there is any reason to suspect that interference is taking place.

Follow the manufacturer directions for the implanted medical device. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider. Hearing Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety. Some wireless devices may interfere with some hearing aids. Operating environment This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body. To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available.

Follow the separation distance instructions until the transmission is completed. Vehicles Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment. Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area. Switch off your device before boarding an aircraft.

The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft and may be illegal. Potentially explosive environments Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations.

Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. @@@@The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.

0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.28 W/kg. Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

com. Copyright and other notices DECLARATION OF CONFORMITY Hereby, NOKIA CORPORATION declares that this RM-713 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/. © 2011 Nokia. All rights reserved. Nokia and Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are provided "as is".

Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of products, features, applications and services may vary by region. For more information, contact your Nokia dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries.

Diversion contrary to law is prohibited. Issue 1.1 EN 20 Index T Text input text input text messages turning device on/off Index A alarm clock B battery -- charging C calls clock radio contacts F flashlight FM radio K keys and parts M memory card messages multi-phonebook music N Nokia support information P powering device on/off R radio S SIM card support switching device on/off 14 4 6 10 14 12 15 14 8 6 11 12 13 15 7 14 4, 9 15 7 10 10 11 7.



[You're reading an excerpt. Click here to read official NOKIA X1-01 user guide](http://yourpdfguides.com/dref/3956269)
<http://yourpdfguides.com/dref/3956269>