



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for OKI B4400. You'll find the answers to all your questions on the OKI B4400 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OKI B4400
User guide OKI B4400
Operating instructions OKI B4400
Instructions for use OKI B4400
Instruction manual OKI B4400

Installation Instructions, Second Paper Tray (500 Sheet)
 Directives d'installation, Deuxième bac à papier (500 feuilles)
 Instrucciones de Instalación, Segunda Bandeja de Papel (500 hojas)
 Instruções de instalação, Segunda bandeja para papel (500 folhas)

<p>English 1 Français 3 Español 5 Português 7</p>	<div style="border: 1px solid black; padding: 5px;"> <p>Install the Tray</p> <ol style="list-style-type: none"> Unpack the tray and remove the shipping materials. Turn off the printer and unplug the power cord. Remove the interface cable. Note the location of the pins (1), connector (2) and tray opening (3).  <ol style="list-style-type: none"> Pull down the printer's manual feed tray.  <ol style="list-style-type: none"> Lower the printer onto the auxiliary tray, aligning the holes/plug on the bottom of the printer on the pins/connector on the tray. You should feel the printer seating and locking in place.  </div> <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p>7. Attach the connection cable.</p>  <ol style="list-style-type: none"> Reattach the interface cable. Plug in the power cord and turn on the printer. <p>Verify installation</p> <p>Models with Operator Panel</p>  <ol style="list-style-type: none"> Press the Menu button one or more times until INFO MENU appears on the display. Press SELECT twice. <p><i>The MenuMap prints.</i></p> <p>Models with Control Button</p>  <ol style="list-style-type: none"> Press the Control Button to take the printer off-line. Press and hold down the control button for at least 2 seconds, but less than 5 seconds. <p><i>The MenuMap prints.</i></p> <ol style="list-style-type: none"> Look for TRAY2 on the first page of the MenuMap under the MEDIA MENU listing. If it isn't there, check to be sure that the connection between the printer and Tray 2 is secure, then reprint and recheck the MenuMap. </div> <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p>Load Paper</p> <ol style="list-style-type: none"> Pull out the tray.   </div>
--	--

1


[You're reading an excerpt. Click here to read official OKI B4400 user guide](http://yourpdfguides.com/dref/4287217)
<http://yourpdfguides.com/dref/4287217>

Manual abstract:

Plug in the power cord and turn on the printer. Check the MEDIA MENU settings shown on the MenuMap and make any needed changes for · TRAY2 MEDIAWEIGHT to match the print media you will normally use in Tray 2. @@Pull down the printer's manual feed tray. Press the Menu button one or more times until INFO. @@You should feel the printer seating and locking in place. @@@@Lift the paper bar (1) and load paper (up to 500 sheets 20-lb. uS Bond). Keep the stack below the full line (2). Lower the paper bar and push the tray back into the printer. .



[You're reading an excerpt. Click here to read official OKI B4400 user guide](http://yourpdfguides.com/dref/4287217)

<http://yourpdfguides.com/dref/4287217>