



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OKI B721DN. You'll find the answers to all your questions on the OKI B721DN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OKI B721DN
User guide OKI B721DN
Operating instructions OKI B721DN
Instructions for use OKI B721DN
Instruction manual OKI B721DN

B721dn/B731dn/MP55501 - Installing Additional RAM

Install additional RAM to increase the memory capacity of your printer in cases such as if memory overflow or the collate print errors occur. Your printer supports 512 MB RAM.



(Read)

- Use only genuine OKI Data products. The performance cannot be guaranteed when other products are used.
- The static electricity may cause damage to the parts. Discharge the static electricity in your body by touching grounded metallic parts, etc. before you start.

(Notes)

 
- For banner printing, installing additional memory is recommended.

1 Turn off your printer, and then unplug all the cables from the printer.


(Warning)

- "Turning Off the Power" 229


2 Open the access cover (1) on the right side of a printer.

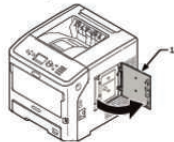

 3 Loosen the screw to remove the metal plate (2).

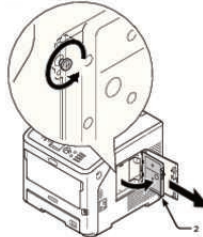

 
4 Make sure the LED (3) indicated by the arrow is unlit. If it is lit, wait until it turns off.

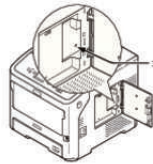


5 Insert the additional RAM (4) into the slot and fix it by pushing it toward the printer.

(Read)

 - Be careful of the orientation of the additional RAM. The additional RAM has small dents on its connector, which are to be fitted with a connector of a slot.

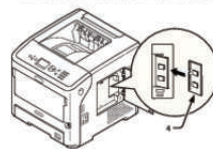

 6 Insert the right side of the metal plate (2) into the printer, close it, then secure it by tightening the screw.

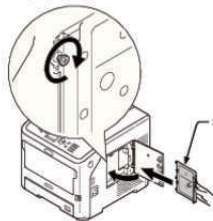

ENGLISH - 1



[You're reading an excerpt. Click here to read official OKI B721DN user guide](http://yourpdfguides.com/dref/5314846)

<http://yourpdfguides.com/dref/5314846>

Manual abstract:

4 Make sure the LED (3) indicated by the arrow is unlit. If it is lit, wait until it turns off. 3 Note: Use only genuine Oki Data products. The performance cannot be guaranteed when other products are used. The static electricity may cause damage to the parts. Before work. Memo 5 Insert the additional RAM (4) into the printer. 1 Turn off your printer, and then unplug all the cables from the printer. 2 Open the access cover (1) on the right side of a printer. 1 4 6 3 Loosen the screw to remove the metal plate (2).

2 ENGLISH - 1 7 Close the access cover (1). Press the scroll button panel. On the operator 9 - For memory expanded to 512 MB, it is [768 MB]. Note: If the value of [RAM] has not increased, turn off your printer and unplug the AC cable and all the cables, and then reinstall the additional RAM. 10 Check that [] is selected then press the <ENTER> button.

@@@.



[You're reading an excerpt. Click here to read official OKI B721DN user guide](#)

<http://yourpdfguides.com/dref/5314846>