



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OKI B930N. You'll find the answers to all your questions on the OKI B930N in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OKI B930N
User guide OKI B930N
Operating instructions OKI B930N
Instructions for use OKI B930N
Instruction manual OKI B930N

B930n

OKI
PRINTING SOLUTIONS

**Handy Reference Guide
Guide de référence pratique
Guía de referencia rápida
Guia de referència rápida**

59391801

my.okidata.com



[You're reading an excerpt. Click here to read official OKI B930N user guide](http://yourpdfguides.com/dref/4289080)

<http://yourpdfguides.com/dref/4289080>

Manual abstract:

@@ READY light Off: printer is idle On: printer is active Blinking: printer is waiting, processing ATTENTION light Off: no error On: there is an error requiring user intervention CANCEL Button Cancel a print job. You may be prompted to enter a password. Note that pages that are printing at the moment will finish printing.) and Previous (") to scroll through the menus until the one you want is displayed. Press Forward (#) and Back (\$) to cycle through the submenus for the selected menu until the one you want is displayed. @@@@You are prompted to enter a pin number. @@ 4. Repeat step 3 until all digits are entered. Slide the paper tray back into the machine. @@If necessary, adjust the paper guides to the size of the paper.

Short edge feed--aim the top into the printer: Flap side up, aimed into the printer: 1 = Short edge feed 2 = Long edge feed If loading paper with a different width or length, adjust the paper guides. Long edge feed--face down, top toward the front of the printer. Short edge feed-- face down, top to the left: If you are experiencing frequent paper jams, check the following items: Â· Is the media you are using within specification? Media that is too light or too heavy will often cause jams. â· Are the settings (printer and driver) appropriate for the media being used? @@@@Switch off the machine immediately and contact your service provider. Components inside doors may be hot.

@@Specify the size of the paper in the Operator Panel. Sure that all paper fragments are removed. Pull the jammed paper out of the printer. Press the green handle to make paper easier to remove. Verify that the width guides are pressed against the paper.

2. @@@@Pull the jammed paper out of the printer. Press the green handle to make the paper easier to remove. Be sure that all paper fragments are removed. Verify that the paper guides are set correctly. Push the tray back in. 6. Pull jammed paper out of the printer. Press the green handle to make paper easier to remove. Be sure that all paper fragments are removed.

@@@@@@Be sure that all paper fragments are removed. Pull the jammed paper out of the printer. @@ 3. Pull the jammed paper out of the printer. Be sure that all paper fragments are removed. @@If your printer has the optional HCF (Tray 6), slide it away from the printer. 3. Pull the jammed paper out of the printer. Be sure that all paper fragments are removed. If your printer has the optional HCF, slide it back in the printer until it latches with the printer. Pull the jammed paper out of the printer. Be sure that all paper fragments are removed. Pull the jammed paper out of the printer. Press the green handle to make paper easier to remove. Be sure that all paper fragments are removed.

Pull the jammed paper out of the printer. Be sure that all paper fragments are removed. If visible, pull the jammed paper out of the stacker upper tray 3. Note: If the stapler is in the way, slide the stapler toward you, then to the right. Pull the jammed paper out of the printer.

Be sure that all paper fragments are removed. 7. Close the handles that were opened 8. Pull the jammed paper out of the printer. Be sure that all paper fragments are removed. Pull the jammed paper out of the stacker upper tray. 2. Open Door G and pull the jammed paper out of the printer. Note Applies only to units equipped with the optional finisher. Slide the stacker toward you, then to the right.

@@@@@Some common print problems and possible causes are described below. @@@@ 2. Multiple sheets may have been fed from the paper tray at the same time. 3. Printable data may not have been received from the computer. You may be using Draft mode. Printable data from the computer may be corrupted. (there are black lines that appear vertically on the page) 1. The paper path may be contaminated with toner. 2.

The drum cartridge may be defective or at the end of its life. (there are areas of print deletions that appear across the paper; there are areas of print deletions that form narrow lines) 1. The drum cartridge may be defective or at the end of its life. The paper path may be contaminated with toner. (there are black lines that appear horizontally on the page) 1.

The drum cartridge may be defective or at the end of its life. 2. The paper path may be contaminated with toner. The paper may be in poor condition.

@@Heavy or unusual paper may be in the tray.

3. The printer may be located in an environment with extreme temperature or humidity. (areas of the print are extremely light or missing) 1. The paper may be in poor condition. The drum cartridge may be defective or at the end of its life. The paper is not loaded correctly in the appropriate tray. 2. The paper may be in poor condition. The fuser may be at the end of its life. @@Consult the store where you purchased your printer.

@@.



[You're reading an excerpt. Click here to read official OKI B930N user guide](http://yourpdfguides.com/dref/4289080)

<http://yourpdfguides.com/dref/4289080>