



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OKI ML 490N. You'll find the answers to all your questions on the OKI ML 490N in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OKI ML 490N
User guide OKI ML 490N
Operating instructions OKI ML 490N
Instructions for use OKI ML 490N
Instruction manual OKI ML 490N

OKI® Microline®420/421 & 490/491



**Setup
Guide**

OKI / Network Solutions
for a Global Society



[You're reading an excerpt. Click here to read official OKI ML 490N user guide](http://yourpdfguides.com/dref/4288321)
<http://yourpdfguides.com/dref/4288321>

Manual abstract:

Printer 2. Ribbon cartridge 3. Power Cable 4. CD with drivers and online User Guide 5. Setup Guide 2 Microline 420/421 & 490/491 1. 2. 1. Grasp tabs (1) and open access cover (2). 2. Remove printhead shipping retainer.

3 Microline 420/421 & 490/491 1. 2. 3. 1. Grasp tabs (1) and remove the paper separator.

2. Remove protective material. Replace the paper separator. 3. @@With access cover open, grasp printhead (1) and slide to center.

2. Remove ribbon cartridge from packaging. ! Important! Leave the clear plastic ribbon shield (2) on the cartridge. 5 Microline 420/421 & 490/491 1. @@2. @@Lower front of cartridge over printhead (1) until it snaps into place. 2. Turn knob (2) clockwise to take up ribbon slack. 7 Microline 420/421 & 490/491 Set the headgap lever (1) for the number of sheets in the forms you are using from 1-4. Use setting 5 for envelopes or extra-thick paper.

Adjust setting for the best print quality. 8 Microline 420/421 & 490/491 Parallel USB 1. Make sure both printer and computer are OFF. 2. Plug interface cable into printer port. Plug other end into computer. ! Parallel cable must be shielded, no longer than 6 ft (1.8m), and IEEE 1284-compatible. 9 Microline 420/421 & 490/491 1. 2.

1. Plug power cord into printer. Plug other end into a grounded outlet. 2. Turn the printer on.

POWER light (1) comes on and ALARM light (2) comes on because paper is not loaded. 10 Microline 420/421 & 490/491 1. 3. 2. 1.

Move the paper lever (1) to "REAR" position. 2. Grasp the paper separator (2). Lift slightly then slide back. 3. @@Above view is from rear. Locate tractors. Pull up on tractor lock levers (1) to release tractors. 2. Position right-hand tractor for width of paper.

See paper size reference marks on printer. 3. Open the tractor covers (2). @@Close right tractor cover (1). 2. @@@@Close tractor cover (1). 2. Push down on lock lever (2) to lock tractor. 15 Microline 420/421 & 490/491 1. Replace the paper separator.

Make sure the marks (1) are aligned. 2. Swing over the wire paper feed guide (2) to rest on roller assembly. 16 Microline 420/421 & 490/491 Push FF/LOAD button. Paper feeds into printer and ALARM light goes out.

! For instructions on loading single sheet paper, see the User's Guide on the CD. 17 Microline 420/421 & 490/491 Setting the Top of Form (TOF) Position The factory default setting for the Top of Form (TOF) (where the printing should begin) is one inch down from the top of the page. @@@@ Forms Tear-Off is factory set to OFF. Setting Top of Form with Forms Tear-Off set OFF 1. Press SEL/MENU to take the printer off line.

The SEL light goes out. 2. @@@@ Turn the printer on. 2. Insert the CD into your CD-ROM drive. The CD will AutoPlay. (If AutoPlay is set off, click StartRunBrowse. @@Select your printer model. 4. License Agreement appears.

Click Next. 5. The Menu Installer appears, click the Printer Software button. 6. @@2. 3. 4. 5. @@Insert the CD-ROM provided with your printer. Add New Hardware Wizard appears.

Click Next. Select Search for a better driver... Click Next.

Select CD-ROM and specify the location. Click Next. Windows finds the OKI USB Driver. Click Next. @@The printer is detected.

Click Next. 8. Select Search for the best driver... Click Next. 9. Select Specify a location and click Browse. 10. @@Click OK.

11. Click Next. 12. Follow the on-screen instructions to finish the installation. Windows® 2000 ! Before you start the install, be sure the USB cable is connected to your printer and PC, and your printer is powered off. 1. Turn on the printer. 2. The Found New Hardware Wizard appears. Click Next.

3. Insert the CD-ROM provided with your printer. If the OKI Menu Installer displays, click Cancel to close it and continue the installation using Add Printer Wizard. 4. Select Search for a suitable driver.

.. Click Next. 5. Select CD-ROM drive and Specify a location.

Click Next. 6. Browse to your CD-ROM drive, Drivers, [Printer Model], Win2K, [Language], oemprint.inf. Click Open. Click OK. 7. Windows indicates the driver is found for this device. Click Next. If Digital Signature Not Found displays, click Yes.

8. @@2. 3. 4. 5. @@Insert the CD-ROM provided with your printer. The Add New Hardware Wizard appears. Click Next. Oki USB port driver is installed. Click Finish.

Add New Hardware Wizard appears. Click Automatic Search... Click Next.

@@@@2. 3. 4. 5. Turn on the printer.

The Found New Hardware Wizard appears. Insert the CD-ROM provided with your printer. Select Install the software automatically... Click Next. Select [Printer Model] / Xp / [Language] / oemprint.inf. Click Next. If a warning message appears, select Continue Anyway.

6. Follow the on-screen instruction to finish the installation. 21 Microline 420/421 & 490/491 See the On-Line User's Guide The complete on-line User's Guide is provided on the CD. You can view the User's Guide on the CD, or, to load in on your hard drive: 1. Insert the CD into your CD-ROM drive. The CD will AutoPlay. (If AutoPlay is set off, click StartRunBrowse. Browse to your CD-ROM drive and double-click Install.exe, then click OK.) 2.

Select your printer model. 3. The Menu Installer appears. Click the Documentation button. 4.

Click the Install User's Guides button. 5. Follow the on-screen instructions. To open the User's Guide from your hard drive, click StartProgramsOki DataML User's Guide. @@@@ Laurel, NJ 08054-4620 Tel: (856) 235-2600 Fax: (856) 222-5320, www.

okidata.com 59348501 .



[You're reading an excerpt. Click here to read official OKI ML 490N user guide](http://yourpdfguides.com/dref/4288321)

<http://yourpdfguides.com/dref/4288321>