



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OKI ML 591. You'll find the answers to all your questions on the OKI ML 591 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OKI ML 591  
User guide OKI ML 591  
Operating instructions OKI ML 591  
Instructions for use OKI ML 591  
Instruction manual OKI ML 591

## Quick Start: OKI® MICROLINE® 500 Series\*

### Customizing the Installation

This document tells you how to perform a typical installation, using the factory settings of the printer.

You may need to adjust settings to fit your requirements, such as:

Item	Factory Setting	To Change, see
Top of Form (TOF)	1" from top	Page 2 of this document
Form Tear-Off	OFF	On-Line User's Guide: <i>ML520 Series</i> ; page 32 <i>ML590 Series</i> ; page 21
Printhead Gap	Automatic	Head_Gap.pdf on the CD

### The User's Guide

The User's Guide is provided as an Adobe® Acrobat® PDF file on the CD shipped with your printer. It requires Adobe Acrobat Reader for viewing. To view the User's Guide, browse to it in your product line folder on the CD and double click the file name.


If you do not have Adobe Acrobat Reader, it is provided on the CD or you may download it from the Adobe web site, [www.adobe.com](http://www.adobe.com).

! Documentation is also available via OKI Data's web site, [www.okidata.com](http://www.okidata.com).


### Installation

#### Getting Started

- 1 Unpack your machine. Keep the packing materials and carton in case you ever need to ship or transport your printer.
- 2 Remove shipping restraints (1, 2) and protective film (3, 4).

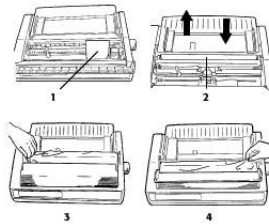

- 3 Open the access cover, center the printhead (1), and install the ribbon, rotating the knob (3) to take up any slack.

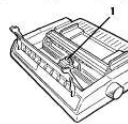

- 4 Install any accessories you purchased. Refer to the instructions provided with each accessory.
- 5 Connect to the computer and the power outlet (computer and printer both OFF).



- 6 Turn the computer and printer on.

\* Models ML520, ML521, ML590 and ML591



[You're reading an excerpt. Click here to read official OKI ML 591 user guide](http://yourpdfguides.com/dref/4288232)  
<http://yourpdfguides.com/dref/4288232>

**Manual abstract:**

pdf on the CD 3 Open the access cover, center the printhead (1), and install the ribbon, rotating the knob (3) to take up any slack. @@It requires Adobe Acrobat Reader for viewing. To view the User's Guide, browse to it in your product line folder on the CD and double click the file name. If you do not have Adobe Acrobat Reader, it is provided on the CD or you may download it from the Adobe web site, [www.adobe.com](http://www.adobe.com). ! Leave the ribbon shield (2) on the cartridge! 2 3 ! Documentation is also available via Oki Data's web site, [www.okidata.com](http://www.okidata.com). Installation Getting Started 1 Unpack your machine. Keep the packing materials and carton in case you ever need to ship or transport your printer. @@Refer to the instructions provided with each accessory. @@@@1 2 6 Press FF/LOAD (1). 1 SEL SEL MENU SHIFT Loading Rear Feed Paper 1 Move the paper lever (1) to the REAR position. 1 LF Micro Feed Down FF/LOAD Micro Feed Up TEAR PARK QUIET TOF EXIT POWER ALARM GROUP ITEM SET PRINT MENU 7 Check the Top of Form (see below). Important Notes Regarding the Top of Form (TOF) Setting 2 Lift up the paper separator. The Top of Form is where the printing begins on the page. The factory setting is 1 inch down from the top of the page. !! 3 Load the paper on the tractors: pull levers (1) to unlock, open covers (2), place paper holes on pins (3), close covers, adjust distance between tractors and push levers back to lock. If you turn the platen knob when the printer is on, you will cause the Top of Form to mis-align. Always shut the printer off before turning the platen knob. @@@@Press SEL to take the printer offline. 2. @@3. @@· Forms Tear-Off set to ON: 1. @@2. @@3. @@@@If this happens, adjust the TOF so that it is correct for your software. 1 3 2 4 Close the paper separator. ! 2 Running the Font Test Caution! Wide Models ML521 & ML591: If you are using 8½"-wide paper, switch to wide paper or make sure the paper width for the path you are using is set to 8".

@@To change the setting: Hold SHIFT and press SEL. Press LF/GROUP until you see the paper path you are using. Press FF/LOAD/ITEM until Page Width appears. Press TEAR/SET to change the setting to 13.6". Hold SHIFT and press SEL to exit the Menu. @@1 Make sure paper is loaded. 2 Turn the printer off. 3 Press and hold the LF key while turning the printer back on. @@If you select the wrong driver, you will see strange characters, incorrect fonts, etc. Printer Drivers for ML520 Series Emulation IBM Proprinter III (factory setting) Select Driver\* Okidata ML 520/1 IBM IBM Proprinter III IBM Proprinter II IBM Proprinter Okidata ML 520/1 Epson Epson FX850/1050 Epson FX86/286 Epson FX Okidata Microline 520/521 Okidata Microline 320/321 Okidata Microline 292/293 Epson FX Setting the Emulation Your printer has three emulations: Models ML520, ML51 Emulations · IBM® Proprinter III--factory setting · Epson® FX · Okidata MICROLINE Standard · Epson LQ--factory setting · IBM Proprinter · IBM AGM ® Okidata MICROLINE Standard \* Select a driver from as close to the top of the list as possible. Printer Drivers for ML590 Series Emulation Epson LQ (factory setting) Select Driver\* Okidata ML 590/1 Epson Epson LQ 870/1170 Epson LQ 800/1000 Epson LQ 2500 Okidata ML 590/1 IBM IBM Proprinter X24e/XL24e IBM Proprinter X24/XL24 IBM Proprinter Use only when you've selected an IBM Proprinter X24e/SL24e driver and you need to use Epson LQ high density graphics. ML590, ML591 IBM Proprinter To set your printer to the appropriate emulation: 1 Make sure paper is loaded. 2 Press SHIFT + SEL to enter the Menu mode. 3 Press TEAR repeatedly until the emulation you wish to select prints in the right-hand column, e. g.: Printer Control Emulation Mode IBM Proprinter IBM X24e AGM/ XL24e AGM `4 Press SHIFT + SEL to save your setting and exit the Menu mode. \* Select a driver from as close to the top of the list as possible. ! You can obtain the Oki Data drivers by downloading them from the web site at <http://www.okidata.com>. 3 OKI and MICROLINE are registered trademarks of Oki Electric Industry Company, Ltd. @@Epson is a registered trademark of Epson America, Inc. IBM is a registered trademark of International Business Machines Corporation. .



[You're reading an excerpt. Click here to read official OKI ML 591 user guide](http://yourpdfguides.com/dref/4288232)  
<http://yourpdfguides.com/dref/4288232>