



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OKI MPS4242MCF. You'll find the answers to all your questions on the OKI MPS4242MCF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OKI MPS4242MCF
User guide OKI MPS4242MCF
Operating instructions OKI MPS4242MCF
Instructions for use OKI MPS4242MCF
Instruction manual OKI MPS4242MCF

OKI

GD-1340

for MC760/MC770/MC780/ES7460/ES7470/ES7480/MPS3537/MPS4242

SET-UP GUIDE

⚠ Warnings Points

- The unpacking and setup procedure shall be done by a qualified service technician.
- Be sure to unplug the power cable of the equipment before installing and setting up the product.
- Disconnect the ground wire after unplugging the power cable. In addition, be sure to connect the ground wire before plugging the power cable.

⚠ Cautionary Points

- Install the equipment near an outlet. Be sure to wire the power cable securely so as to unplug it easily and not to trip over it.
- According to the equipment model, these illustrations may differ.
- The covers of this equipment have been designed so as not to be easily removed. Therefore, when using tools, be sure not to put your face and hands in the direction in which force will be applied; otherwise this could result in injury. In addition, pay attention not to deform parts by using too much force.
- When unpacking and setting up the product, be sure to wear gloves to avoid injury.

■ Accessories



[You're reading an excerpt. Click here to read official OKI MPS4242MCF user guide](http://yourpdfguides.com/dref/5109504)
<http://yourpdfguides.com/dref/5109504>

Manual abstract:

@@In addition, be sure to connect the ground wire before plugging the power cable. Cautionary Points ☞ Install the equipment near an outlet. Be sure to wire the power cable securely so as to unplug it easily and not to trip over it. @@@@In addition, pay attention not to deform parts by using too much force. ☞ When unpacking and setting up the product, be sure to wear gloves to avoid injury. @@Take out the FAX unit and the accessories. 2. Take off the covers. @@Take off the cover. * You must wear gloves for this procedure.

E 6) Open the covers in the order of (A) and (B). a B 7) Close [G]. G GD-1340 3 / 11 8) Release the latches (A) of the cover. @@@@A 9) Release the latches (B) of the cover. @@@@B 10) Release the latch (D) of the cover.

@@@ gD-1340 4 / 11 11) Closer [F]. F 12) Take off the upper side of the cover, release the latch (E) and then take off the cover. ☞ E: 1 place E 4. Loosen the screws and take off the cover. ☞ Screws: 15 places GD-1340 5 / 11 5.

Connect the connectors of [D] and [B] to the board. d B 6. Place [A] into the attaching position and secure it with [a]. ☞ a: 4 When installing [A], be careful not to catch the rear side cables. a A a 7. Connect the cable of [A] to the board. Attach the cover and tighten the screws. ☞ Screws: 15 places 10. @@Perform this operation with care to avoid injury. In addition, be sure not to damage the cover.

e 11. Insert the latches (A) and (B) of the cover. Insert the latch (D) of the cover. d 14. Close the covers in the order of (A) and (B). Close in the order of [G] and [F]. Connect the cable from the telephone. @@ ☞ J: 1 J 24. The operation is now completed. @@(3) [9001] ☞ [START] button (4) Key in the destination number shown below and then press the [OK] button.

@@ gD-1340 10 / 11 ☞ Initializing Memory 2. Memory Initialization (1) Press the [ON/OFF] button while pressing [1] and [*]. @@.



[You're reading an excerpt. Click here to read official OKI
MPS4242MCF user guide
http://yourpdfguides.com/dref/5109504](http://yourpdfguides.com/dref/5109504)